


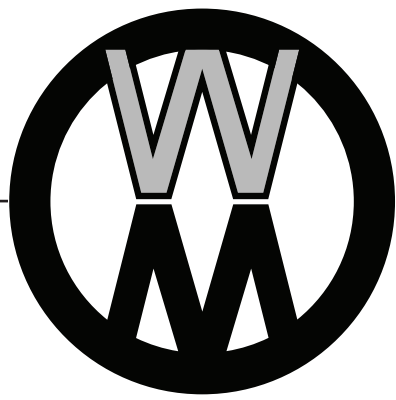

WALKER

Illustrated Parts Manual

H38i



Beginning S/N: 176649
P/N 2000-43

KEY TO ABBREVIATIONS USED IN THIS MANUAL

<i>Abbreviation</i>	<i>What it Represents</i>
° (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
-1 (as deck style designation)	Standard (Aluminum) Gear Drive Deck
-2 (as deck style designation)	Heavy Duty (Cast Iron) Gear Drive Deck
-3 (as deck style designation)	Belt Drive Deck
AT	All-Terrain
CCW	Counter-clockwise
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SD	Side Discharge
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
V	Volts
VLR	Very Low Restriction

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

Model H38i Beginning S/N 176649
Use only genuine **Walker®** replacement parts.

ILLUSTRATED PARTS LIST

<i>Section of Tractor Covered</i>	<i>Page</i>
Decals	
Tractor Decals	2
Body / Chassis Assemblies	
Front & Rear Body Assemblies	4
Chassis Assembly.....	6
Tractor Components	
Main Component Power Transmission	8
Engine Group.....	10
Hydrostatic Ground Drive Assemblies.....	12
Steering Control Assemblies.....	14


<i>Section of Tractor Covered</i>	<i>Page</i>
Electrical Components	
Electrical Assembly.....	16
Maintenance	
Lubrication Points	18
Wiring Schematic.....	20
Warranty	
Limited Warranty	21

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQ'D SD
Walker Product and Operation Decals				
1	2802-4	RH Fender	Body, RH near Seat	1
2	5800	Decal, Walker Round (4")	Rear Body (one on each side)	2
3	5800-7	Decal, Walker (8")	Rear Body	1
4	2010-16	Fuel Transfer	Transfer Mount, LH	1
5	2802-5	LH Fender	Body, LH near Seat	1
6	9804-1	Axle Lockout	Hydro Mount Plate	2
7	8821-20	Decal, H38i	Body	1
8	5856-1	Made in USA	Body	1
Danger Decals Warning Decals Caution Decals				
9	8600-12	Danger, Engine Exhaust	Rear Body, Underside	1
10	8600-5	Caution, Engine Exhaust	Rear Body	1
11	2107-5	Decal, Belt Routing	Rear Body, Underside	1
12	8600-2	Danger, Rotating Components	Coupling Guard	1
Maintenance Decals				
13	5855	Important, Engine Cooling	Engine	1
14	6895-103	Kohler 300 Hour Oil	Engine	1
15	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1
16	2807-7	Decal, System Warning	Body	1
17	8600-54	Decal, Ignition Switch	Body	1


NOTE: All parts requiring decals are shipped with decals applied.

TRACTOR DECALS

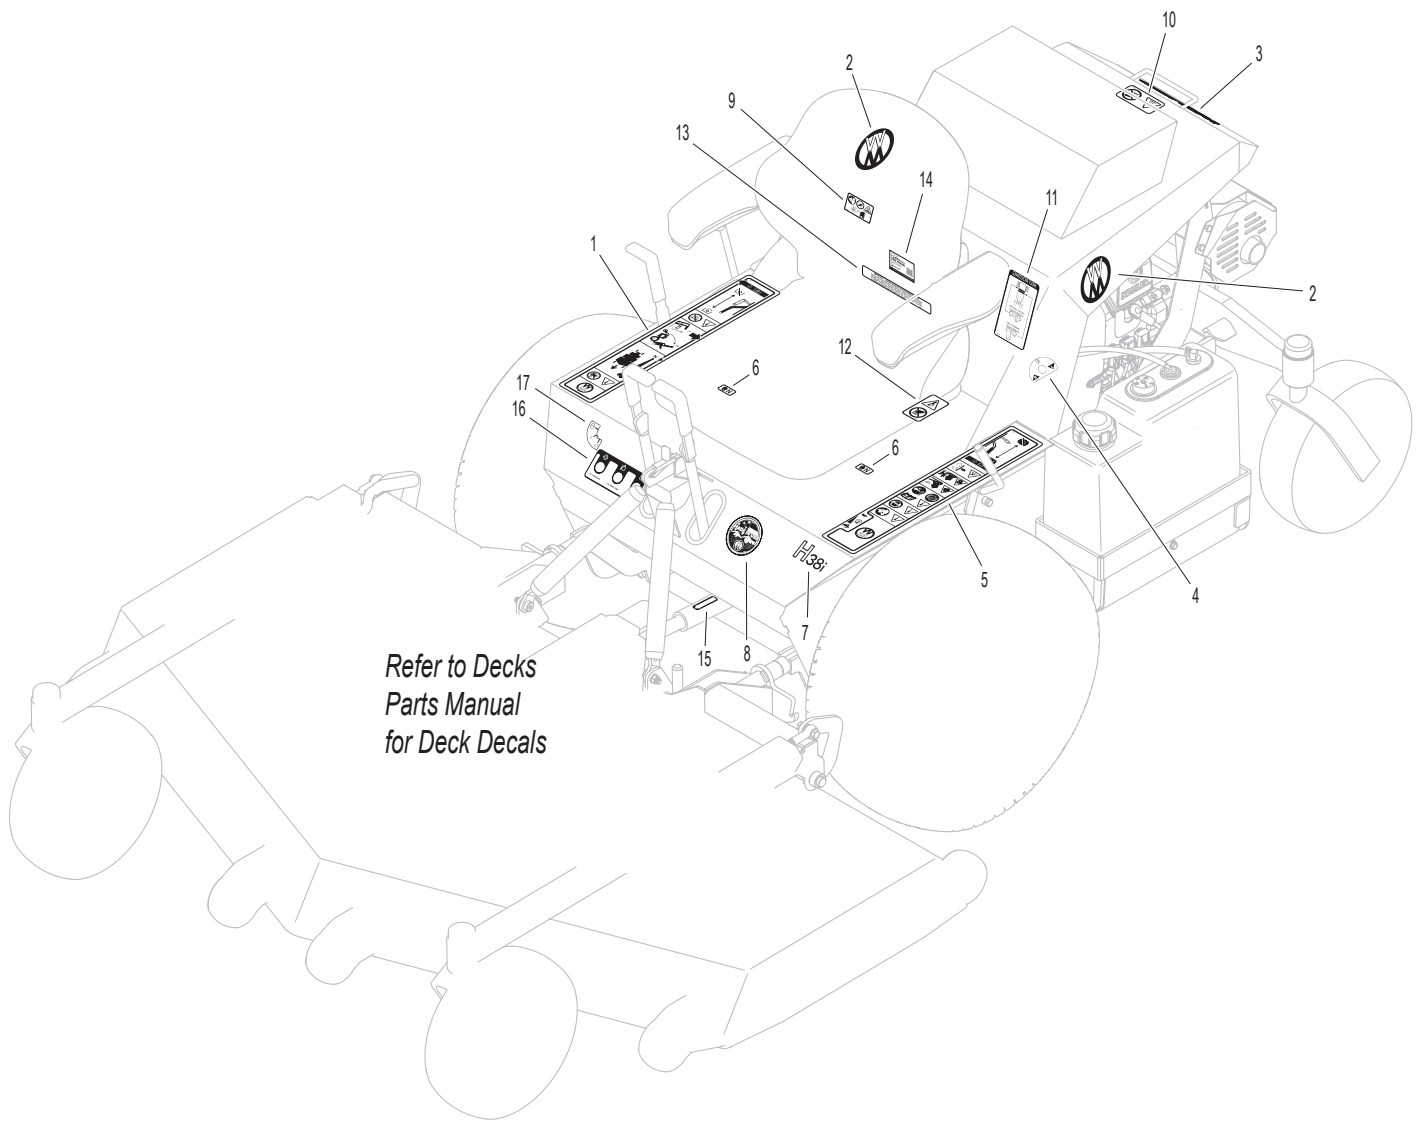

FRONT & REAR BODY ASSEMBLIES


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Body & Seat Assembly				Fasteners			
1	6103-14	Suspension Seat	1	F004	1/4-20 Keps Nut		13
2	2106-6	Hood Scoop	1	F005	1/4-20 ESNA Nut		2
3	2106-35	Rear Body	1	F009	5/16-18 Whiz Locknut		12
4	7844	Rubber Bumper (1.25 x .250)	2	F020	5/16-18 ESNA Nut		1
5	5146	10mm Ball Stud	2	F023	10-24 ESNA Nut		12
6	2145	Gas Spring	1	F029	1/4-20 x 1/2 Hex Bolt		4
7	5180	Edge Molding, Lever Opening	2	F034	5/16-18 x 3/4 Hex Bolt		4
8	2504-4	Hinge (22.5)	1	F049	5/16 SAE Washer		4
9	2100-8	Front Body	1*	F060	AN960516 Washer		2
10	5989-5	Dome Plug (7/16)	1	F091	5/16-18 X 5/8 Hex Bolt		4
11	7854	Plastic Tip, Red	1	F093	5/16-18 x 1 Hex Bolt		1
12	2383	Body Latch Hook	1	F236	1/4-20 x 1-3/4 Hex Bolt		2
13	7222	Extension Spring (1/4 x 3)	1	F246	1/4-20 x 1/2 PTHMS		4
14	6103-44	Grammer Seat Mount Channel, RH	1	F341	Coil Roll Pin (7/64 x 9/16)		1
15	6103-45	Grammer Seat Mount Channel, LH	1	F342	5/16 Conical Washer		2
16	5989-4	Dome Plug (3/8)	2	F442	1/4-20 x 5/8 PTHMS		5
17	5989-3	Dome Plug (5/16)	2	F613	10-24 x 1/2 Truss Head Torx		12
18	4102-1	Body Guide, Upper	1				
Tilt-Up Latch Assembly**				* Decal H38i is available by ordering P/N 8821-20. ** Complete Tilt-Up Latch Assembly Kit available by ordering kit #5747.			
19	5847	Plastic Tip	1				
20	5744-20	Spring Arm, Tilt-Up Latch	1				
21	5744-10	Spring Pivot Bushing	1				
22	5744-15	Compression Spring (3/8 x 5/8)	1				
23	5744-13	Mount Angle, LH	1				
24	5744-12	Hook, Tilt-Up Latch	1				
25	5744-14	Mount Angle, RH	1				

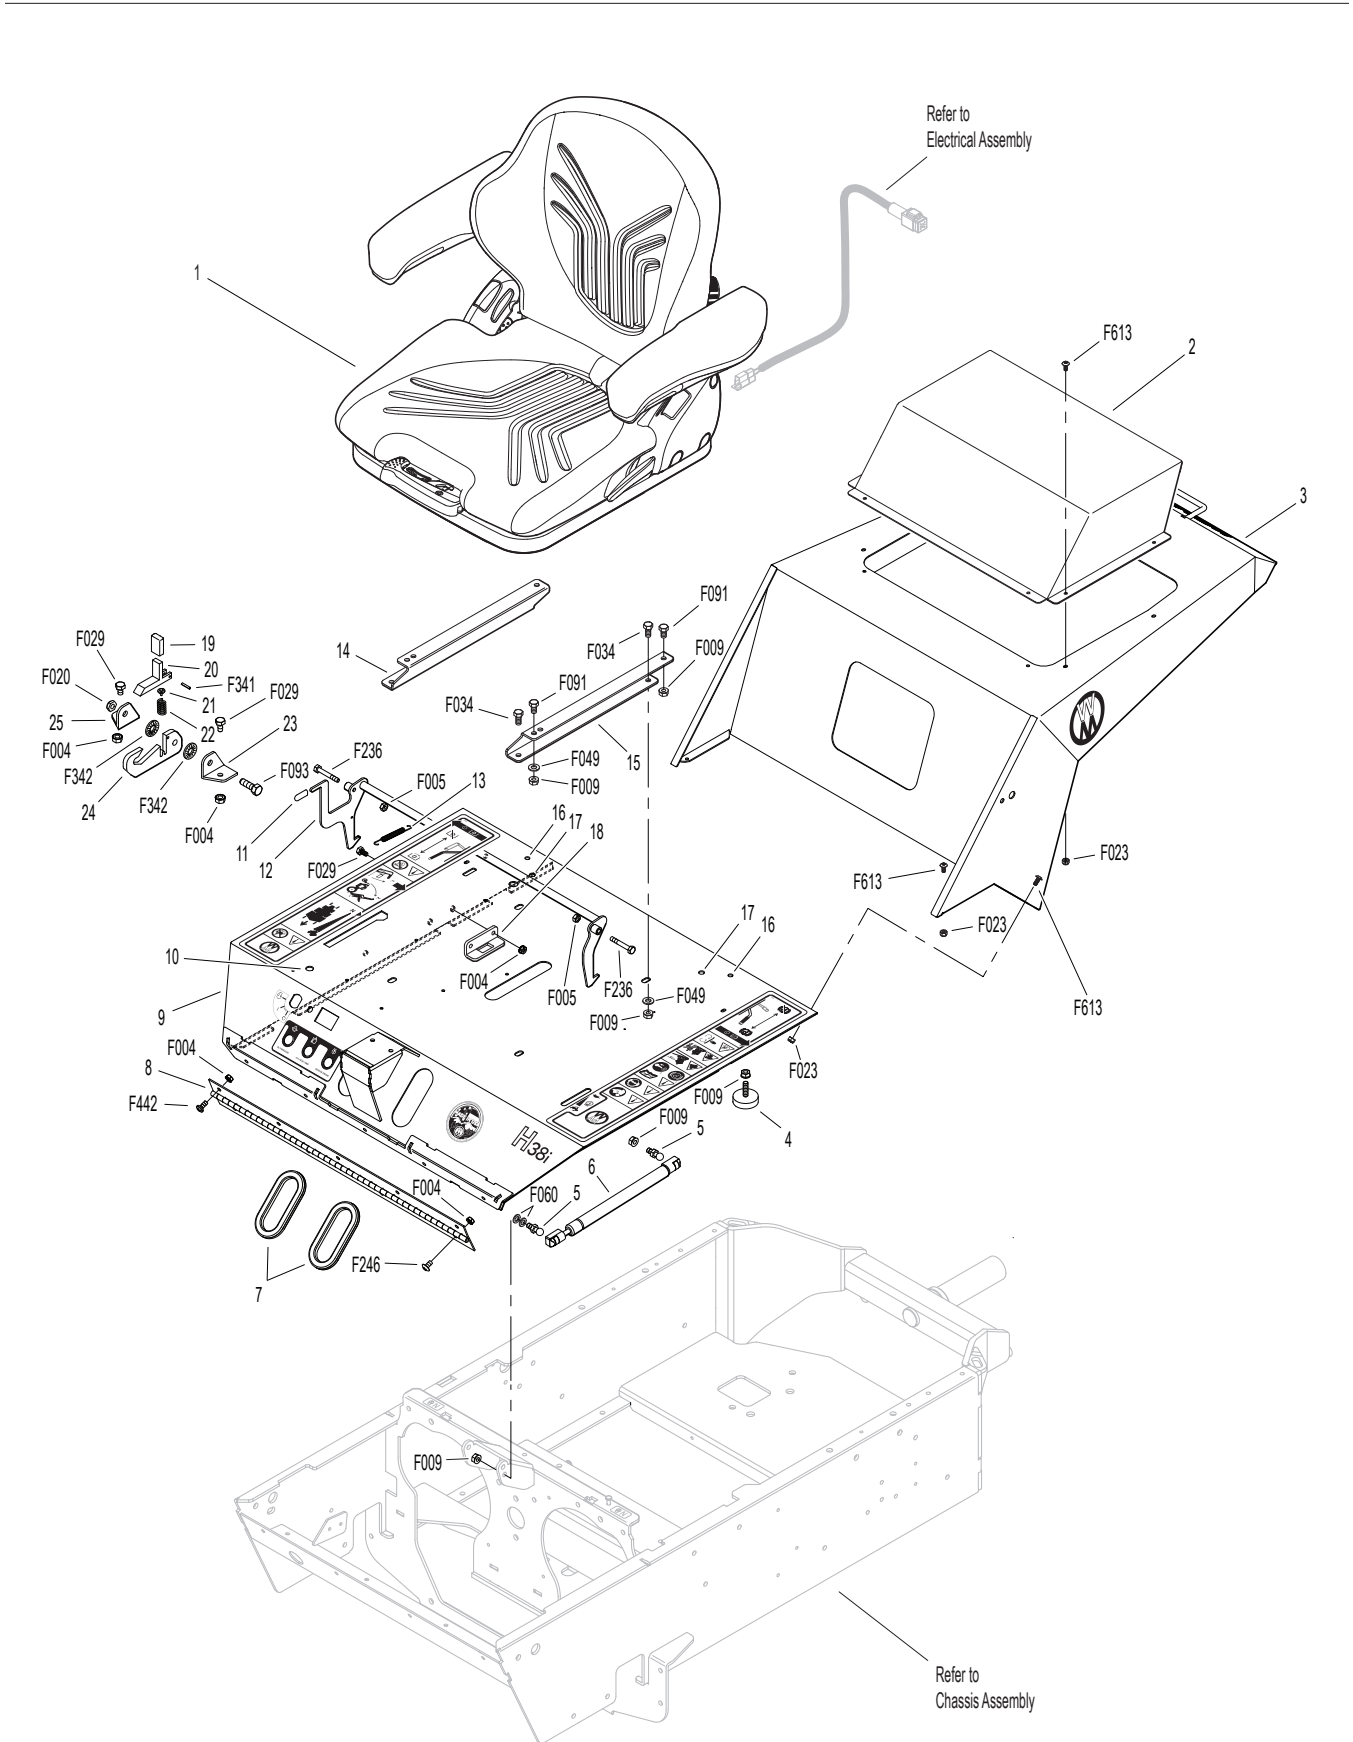

Model H38i Beginning S/N 176649
Use only genuine **Walker®** replacement parts.

CHASSIS ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Chassis Assembly				Deck Support Arm & Hitch Assemblies			
1	4845	Rubber Bumper (1.0 x .625)	2	28	2300-9	Deck Arm Support Mount	1
2	2104-3	Rear Body Support	1	29	6840-1	Support Arm Bushing (2-1/16)	2
3	2046-1	Gas Tank Mount, LH	1	30	5830-1	5/16-24 4" Grease Fitting	2
4	2301	Debris Shield (Includes Items # F004 & F029)	1	31	2775	Lynch Pin (5/16 x 1-1/4)	2
5	2301-8	Debris Guard	1	32	2431-2	Deck Support Arm, LH (Includes Item # 30)	1
6	2301-9	Back Up Plate	1	33	2430-2	Deck Support Arm, RH (Includes Item # 30)	1
7	2300-11	Chassis Frame	1	Fasteners			
8	2046	Gas Tank Mount	1		F004	1/4-20 Keps Nut	16
9	4102-2	Body Guide, Lower	1		F009	5/16-18 Whiz Locknut	10
10	2325-8	Belt Guide	1		F029	1/4-20 x 1/2 Hex Bolt	4
Tail Wheel Assembly					F031	1/4-20 x 5/8 Hex Bolt	6
11	5830	Grease Fitting	2		F032	1/4-20 x 3/4 Hex Bolt	4
12	2201-2	Fiberglide Thrust Washer	2		F034	5/16-18 x 3/4 Hex Bolt	8
13	2201-3	Fiberglide Bearing (1-5/8)	2		F205	5/16-18 x 1/4 Set Screw (Knurl Point)	2
14	2300-10	Tail Wheel Pivot (Includes Items # 11, 13 & 15)	1		F218	7/16 Split Lock Washer	5
15	5830-4	Grease Fitting (90 Deg.)	1		F219	7/16-14 x 1-1/4 Hex Bolt	5
16	2201-4	Washer (2-1/4 x 7/16 x 1/4 Thk)	1		F256	7/16 SAE Washer	1
17	8769-8	Dust Cap, Deck Caster	2		F344	3/4-16 Slotted Hex Nut	2
18	8769-6	Bearing Cone (1" ID)	4		F348	1/8 x 1-1/2 Cotter Pin	2
19	8769-5	Bearing Cup (2 x 1-5/8)	4		F430	7/16-20 ESNA Nut	2
20	8769-7	Seal	2		F446	7/16-20 x 3-1/2 GR 8 Bolt	2
21	2770	Caster Wheel Fork	2		F477	1/4-20 x 5/8 Carriage Bolt	2
22	8039	Nut, Tail Wheel Axle	2		F639	Belleville Washer (1.5 x .755 x .072)	2
23	8038-1	Spacer, Wheel Axle (.750 ID x 1.125 OD)	2	* Service Part Only			
24	8768-2	Seal, Reverse Lip	4				
25	8037	Bearing Cone (3/4 ID)	4				
26	8035-1	Wheel & Tire (13 x 4.50-6) (W/Bearing Race)	2				
	8035-3	Tail Wheel Tire (13 x 4.5-6 Ply)	*				
27	7038	Wheel Axle (3/4 x 5-9/16)	2				

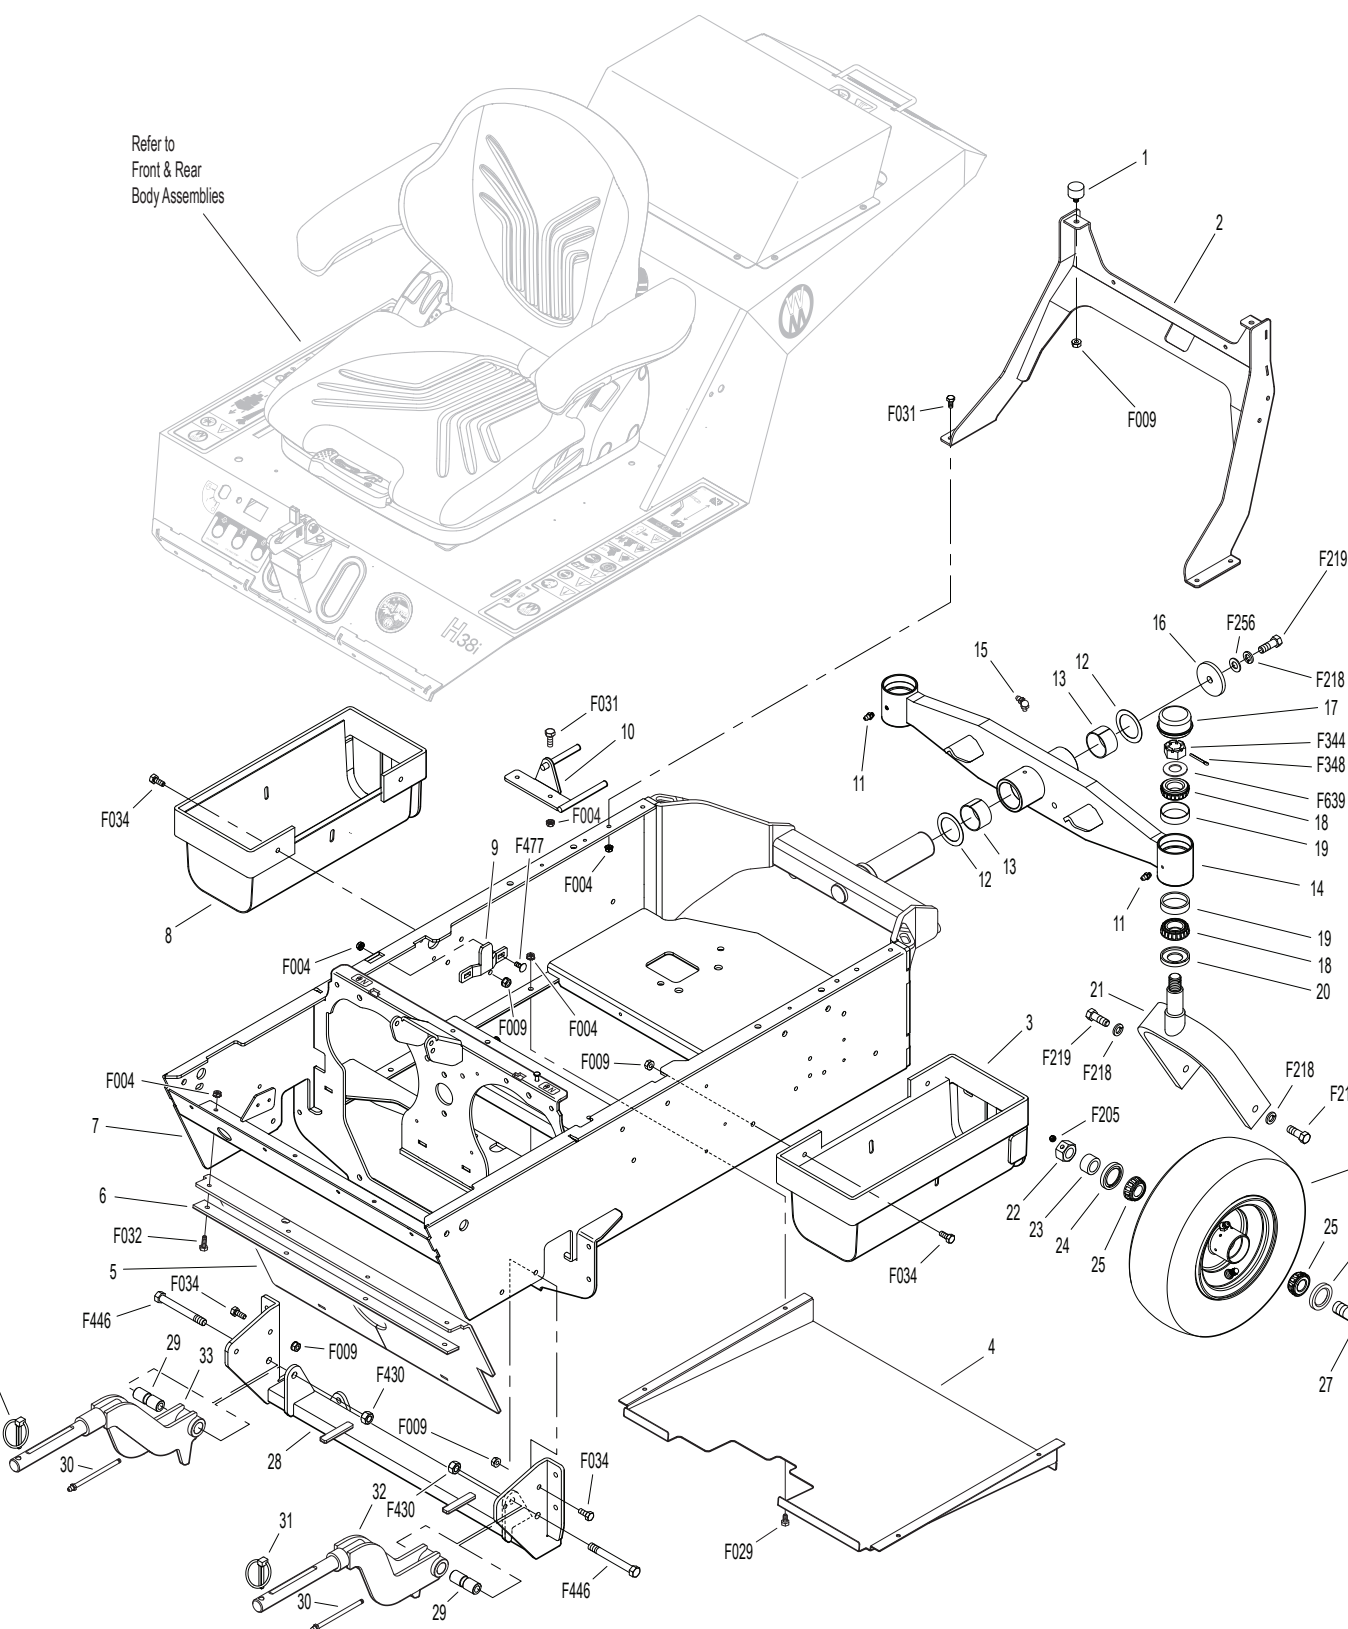


Model H38i Beginning S/N 176649
Use only genuine **Walker®** replacement parts.

MAIN COMPONENT POWER TRANSMISSION

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
PTO Drive Assembly				Fasteners			
1	4850	Handle Grip, Black	1	F004	1/4-20 Keps Nut		5
2	2358-1	Clutch Lever (Includes Items # 1 & 3)	1	F005	1/4-20 ESNA Nut		1
3	5830-3	Grease Fitting (45 Deg.)	3	F009	5/16-18 Whiz Locknut		14
4	4303-7	Clutch Actuator Bolt (5/16)	1	F010	5/16-24 ESNA Nut		1
5	2306-2	Oilite Flanged Bushing	2	F012	3/8-16 Keps Nut		1
6	5830	Grease Fitting	2	F013	3/8-16 Whiz Locknut		2
7	2325-7	Clutch Arm (Includes Items # 5 & 6)	1	F014	3/8-16 ESNA Nut		1
8	5221-1	Extension Spring (3/4 x 5)	1	F019	1/4-20 ESNA Wing Nut		1
9	2358-11	Clutch Actuator	1	F020	5/16-18 ESNA Nut		1
10	5214-13	Ball Joint (3/8)	2	F029	1/4-20 x 1/2 Hex Bolt		1
11	2011-12	Flex Coupling Guard	1	F031	1/4-20 x 5/8 Hex Bolt		6
12	2358-9	Clutch Pivot Base	1	F034	5/16-18 x 3/4 Hex Bolt		9
13	2358-8	Adjustor Brace	1	F035	5/16-18 x 1-1/4 Hex Bolt		6
14	2302-16	Right Hand Shoe	1	F039	3/8-16 x 1-1/4 Hex Bolt		1
15	2302-3	Left Hand Shoe	1	F051	3/8 SAE Washer		2
16	7775-6	Wire Lock Pin (2-1/2")	1	F060	AN960516 Washer		2
17	2349-17	Bearing Mount	1	F061	1/4 Star Lock Washer		1
18	2406-5	Spacer	1	F069	3/32 x 1/2 Cotter Pin		1
19	2236-5	PTO Pulley (4.5/AAA)	1	F091	5/16-18 x 5/8 Hex Bolt		1
20	2359-1	Brake Band / Guard Mount	1	F104	1/4-20 x 3/4 PFH Bolt		1
21	7775-8	Wire Lock Pin (4")	1	F120	AN960416 Washer		4
22	2302-5	PTO Shoe	1	F146	1/4-20 Jam Nut		1
23	7275-16	Universal Joint Tube Assembly / Spline	1	F149	1/4 x 1/4 x 1-1/2 Key		1
24	2274-10	PTO Drive Shaft Assembly	*	F168	5/16 Split Lock Washer		1
25	2302-6	Shoe Mount, LH	1	F170	5/16 x 1 x 7/64 Flat Washer (Zinc Plate)		1
26	2302-17	Upper Shoe, LH	1	F171	5/16-18 x 3/8 Set Screw		1
27	2358-7	Clutch / Pivot Stop	1	F178	1/4 x 1 Fender Washer		1
28	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1	F182	1/4 x 5/8 x 1/8 Washer		1
29	4359-2	Brake Band Link, Rear	1	F183	.312 x .700 x .074 Washer		4
30	8304	Brake Band (14-1/2)	1	F211	1/4-20 x 7/8 Hex Bolt		2
31	4359-1	Brake Band Link, Front	1	F217	7/16-14 Hex Nut		2
32	2410-2	Drive Shaft	1	F218	7/16 Split Lock Washer		2
33	2265	Bearing (20mm)	4	F219	7/16-14 x 1-1/4 Hex Bolt		2
34	2406-7	Pivot Shaft Spacer	1	F241	.375 x .875 x .10 Washer		1
35	2236-1	Idler Pulley (4.5/AAA)	2	F298	3/8-24 Jam Nut		2
36	2230	Engine PTO Belt / Set (3)	1	F350	1/4-20 LP Nylock		5
37	2236-6	Pulley (Includes Items # F149 & F171)	1	F389	3/8-16 x 2-3/4 Hex Bolt		1
38	2236-4	Idler Pulley Shaft	1	F431	1/4-20 x 3-1/2 Hex Bolt		1
39	7201-3	Fiberglide Bearing	2	F435	1/4 x 1/4 x 1-1/4 Key		2
40	7201-9	Inner Race	1	F450	Washer 5/8 x 1-3/4 x 1/4		1
41	2359-3	Clutch Engagement (Includes Items # 3 & 39)	1	F452	5/8-18 Nylon Locknut		1
42	2349-6	Flanged Bearing	1	F473	5/16-18 x 5 Hex Bolt		1
43	2358-12	Fiberglide Bushing	1	F476	3/8-16 x 6-1/2 Hex Bolt		1
44	7201-2	Fiberglide Bearing 1/2"	1	F484	Washer .380 ID x 1.0 OD x .120		2
45	7377	Plastic Washer (1 x .438 x .025)	2	F551	5/16-18 Flange Top Lock Nut		4
46	7378	Pivot Bearing (7/16 x 9/16)	1	F576	3/8-16 ESNA Wing Nut		1
47	5214-2	Ball Joint (5/16-24) (Nylon Lined)	1	F581	1/4-20 x 1-1/4" Carriage Bolt		1
48	7226	Compression Spring (3/4 x 2-1/2)	1	F642	1/4 x .042 Belleville Washer		2
49	7380	Knuckle Joint	1	F651	5/16-18 x 5/8 Carriage Bolt GR 2		4

* Service Part Only

MAIN COMPONENT POWER TRANSMISSION

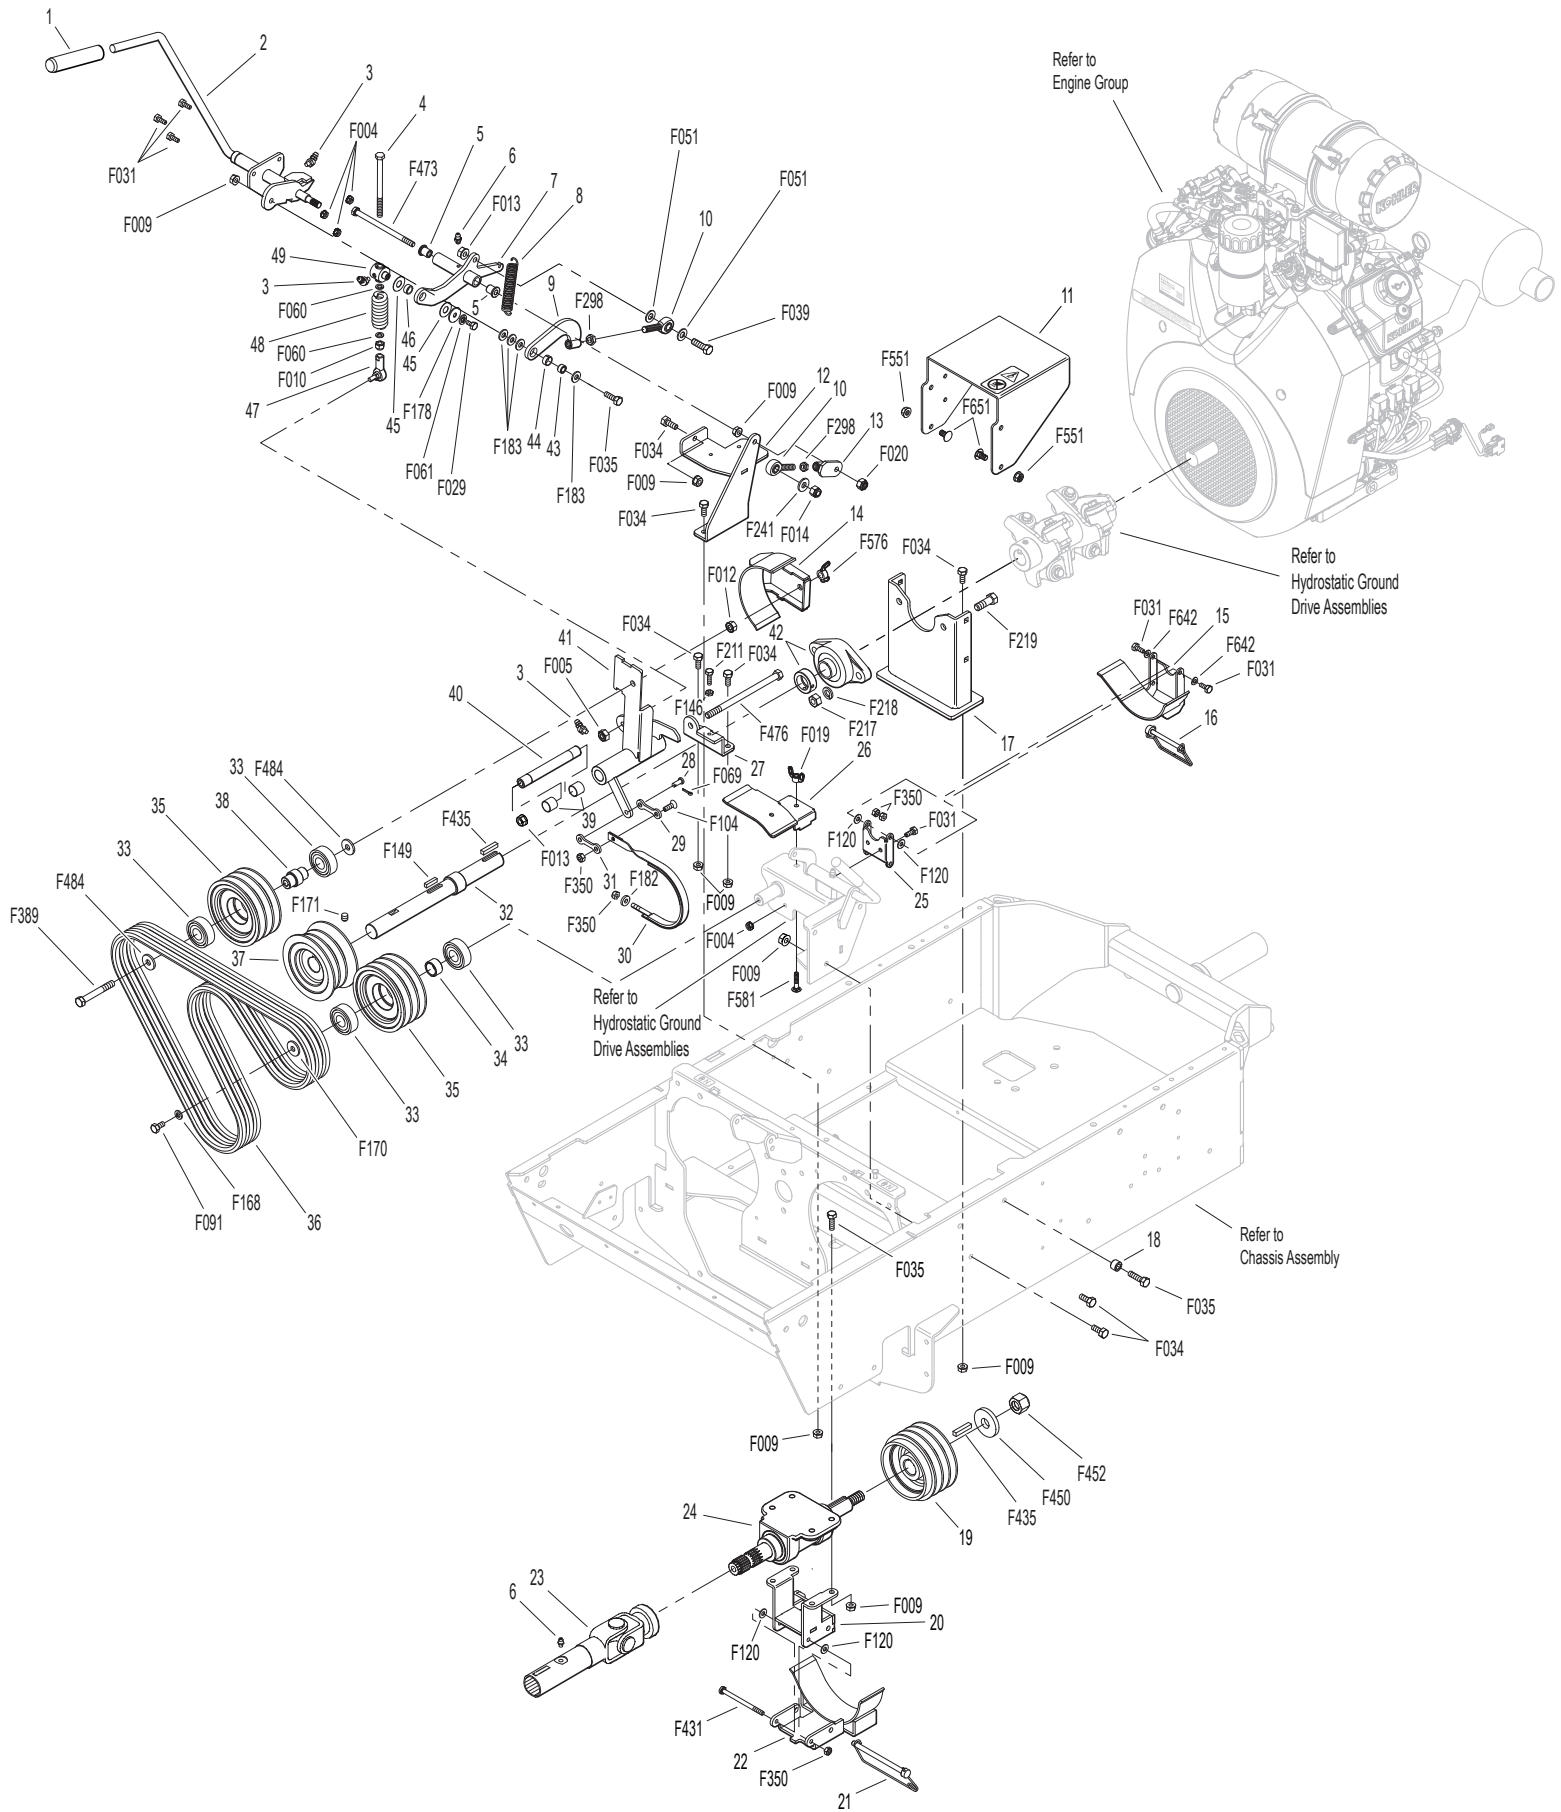

Model H38i Beginning S/N 176649
Use only genuine **Walker®** replacement parts.

ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fuel Tank Assembly				Throttle Assembly			
1	5082-4	2-1/4 Ratchet Fuel Cap (EPA)	2	25	4109-5	Control Cable (71")	1
2	8055-2	Fuel Tank Gauge	2	26	5108-1	Control Lever, Throttle / Choke	1
3	8043-8	Roll Over Valve	2	27	5108-5	Throttle Control Knob, Red	1
4	5977-7	Roll Over Grommet (.900 x 1-1/2)	2	28	5108-11	Friction Washer (.062)	1
5	5083-8	Tank Tube (13")	2	29	7108	Control Assembly	1
6	5879-3	Hose Clamp (1/2)	7			(Includes Items # 26, 28, 30-32 & F201)	
7	M111	Fuel Line (1/4 x 32")	1**		4108-5	Throttle Control and Cable Assembly	*
8	M113	Fuel Line (3/16 x 6-1/2")	1**			(Includes Items # 25-28, 30-33, F002, F005, F050, F164 & F201)	
9	5083-1	Bushing, Rubber (Fits 5083)	2	30	5108-8	Control Bracket	1
10	NS	Fuel Filter (Kohler)	1	31	5108-10	Friction Washer (.125)	1
11	M111	Fuel Line (1/4 x 22")	1**	32	5108-7	Control Lock Tab	1
12	8043-6	Connector "Y"	1	33	5172	Bearing, Delrin (.250 ID x .375 OD x .250)	1
13	4011-5	1/2 NPT Street L	1	Fasteners			
14	M111	Fuel Line (1/4 x 11")	1**		F002	10-24 Keps Nut	7
15	M113	Fuel Line (3/16 x 31")	1**		F004	1/4-20 Keps Nut	4
16	8055-1	Fuel Tank, 4.7 Gallon, Gas (Black) (Includes Items # 2-5, 9, 17 & 18)	2		F005	1/4-20 ESNA Nut	1
17	5086-7	Hose (1/4 x 6)	2		F013	3/8-16 Whiz Locknut	4
18	5020-2	Fuel Filter, In Tank	2		F025	10-24 x 3/8 PPHMS	6
19	2010-3	Fuel Valve	1		F029	1/4-20 x 1/2 Hex Bolt	6
20	5975-3	Cable Tie (50# x 7")	4		F042	3/8-16 x 2-1/4 Hex Bolt	4
Engine Assembly					F050	1/4 SAE Washer	1
21	NS	38 HP Engine, EFI (Kohler)	*		F051	3/8 SAE Washer	4
22	2013-22	Muffler Heat Shield Side, RH	1		F164	10-24 x 1/4 x 3/8 SHL Bolt	1
23	2013-8	Muffler Heat Shield	1		F184	1/4-20 x 1/2 Hex Bolt, SS	4
24	2013-23	Muffler Heat Shield Side, LH	1		F185	1/4 Internal Star Lock Washer, SS	4
					F642	1/4 x .042 Belleville Washer	1


* Service Part Only

**** Required hose specifications:**

M111 - 1/4" ID fuel/oil/vapor hose (Gates 4219-0103 or equivalent)

M113 - 3/16" ID fuel/oil/vapor hose (Gates 4219-0093 or equivalent)


ENGINE GROUP

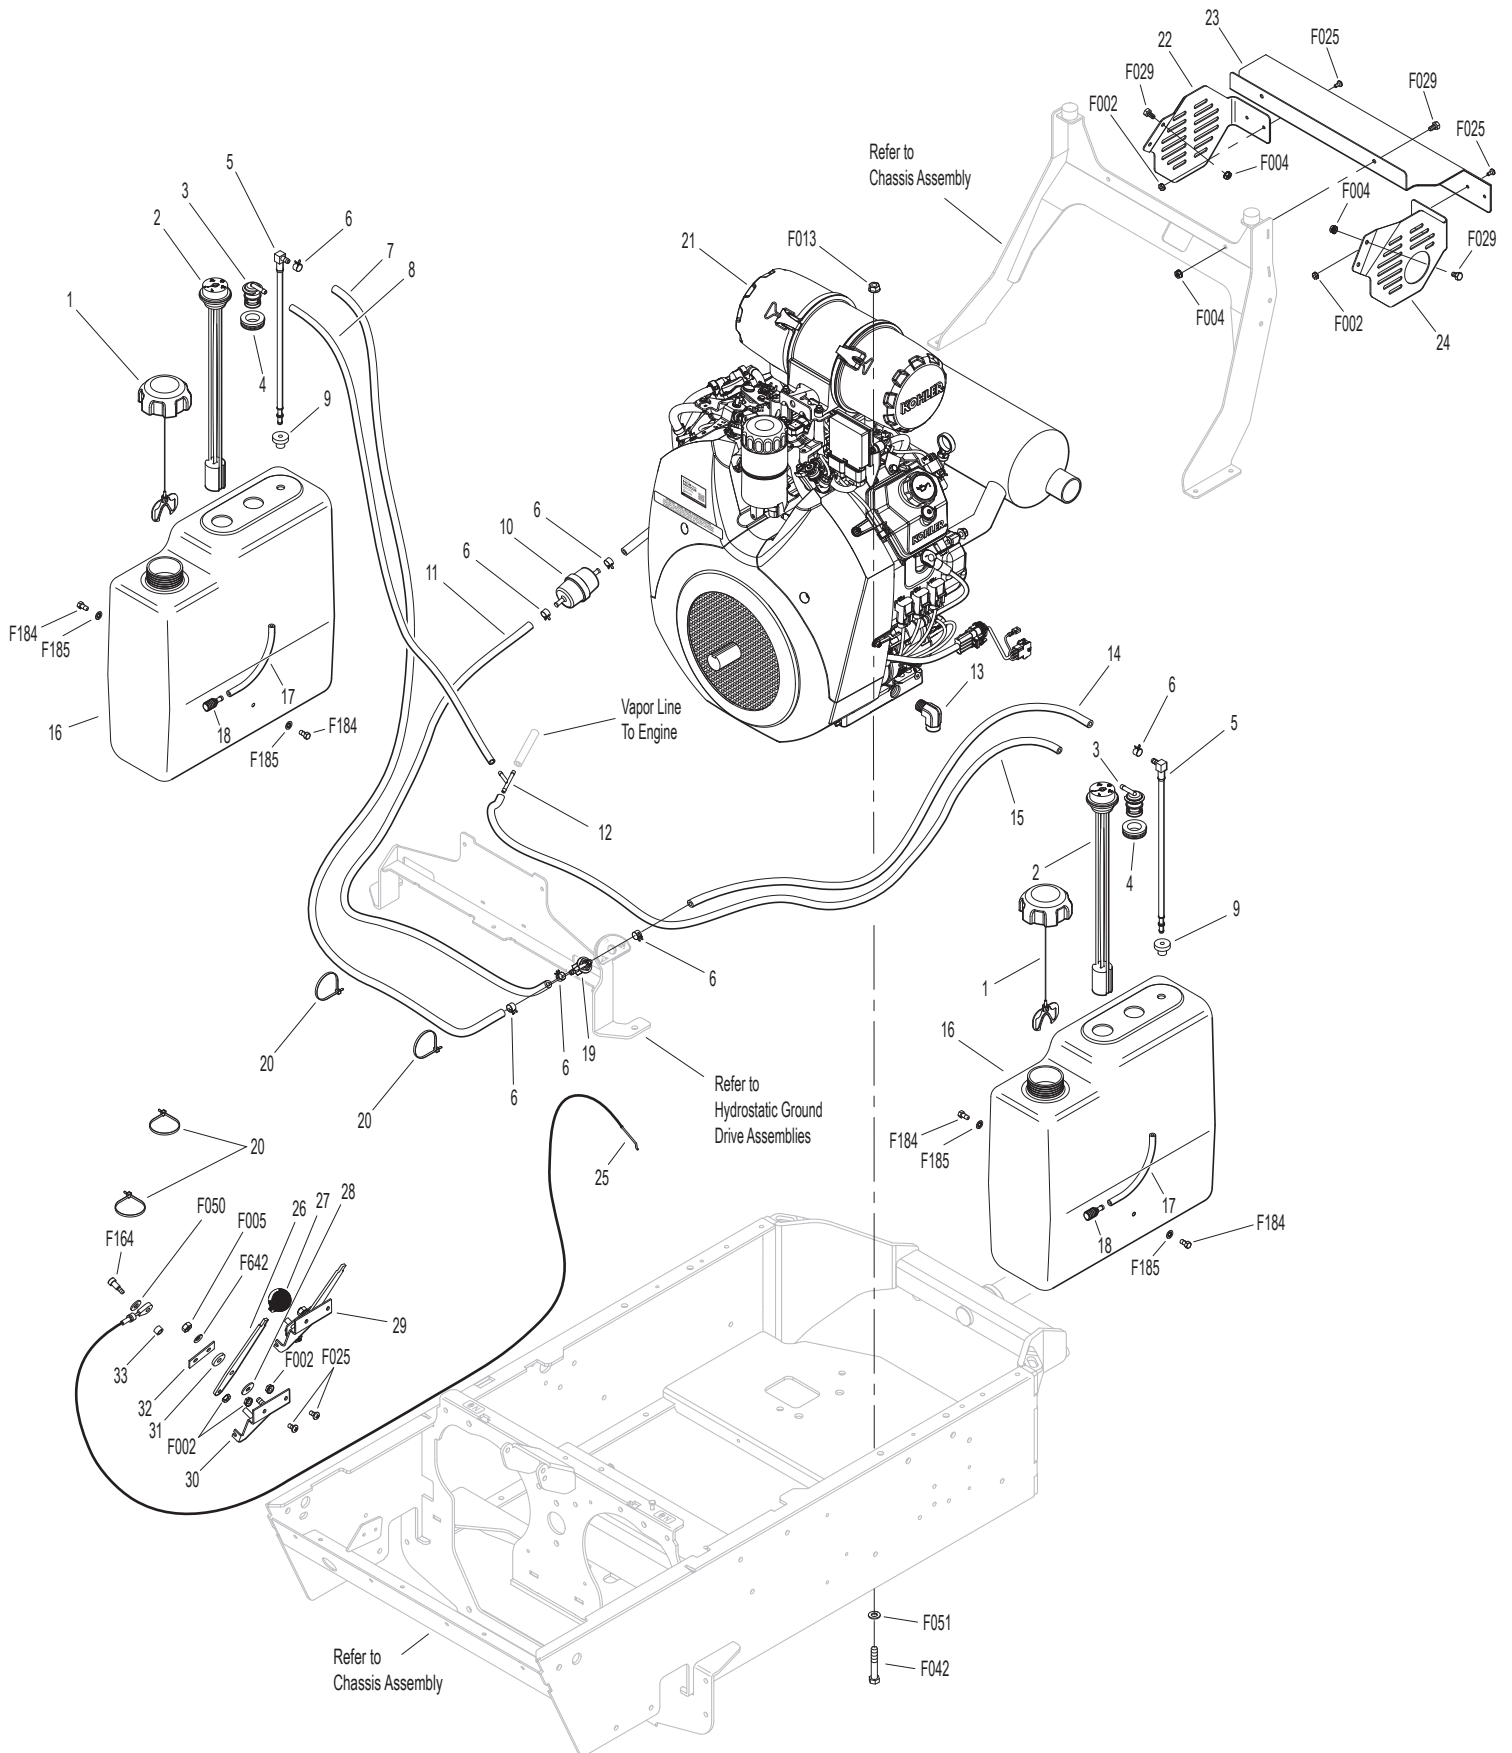

HYDROSTATIC GROUND DRIVE ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Parking Brake Assembly				47	2349-15	Idler Mount	1
1	2358-6	5/16-18 x 1-3/4 Stud	2	48	2025-41	Hydro-Gear ZT3400, LH	1
2	2300-20	Parking Brake Hydro Mount, RH	1	49	2026-41	Hydro-Gear ZT3400, RH	1
3	5103-2	Pivot Bushing (5/16 ID)	2	Wheel Assembly			
4	2406-3	Parking Brake Actuator Tube	1	50	2071	Wheel & Tire (22 x 10.50-12)	2
5	5222	Extension Spring (1/2 x 3-1/4)	1	PTO Coupler			
6	2280	Clevis (3/8)	1	51	2351-50	Flex Coupler Half (1" Bore) (Includes Items # F171 & F435)	1
7	2406-4	Clevis Pin (5/16 x 1-1/8)	1	52	2351-1	Rubber Iso Coupler	6
8	8655-4	Clevis Pin (5/16 x 3/4)	1	53	2351-19	Inner Flex Coupler Half	1
9	2406-14	Brake Actuator Pull	1	54	2351-55	Flex Coupler Half (1-1/8" Bore) (Includes Items # F171 & F435)	1
10	4407-4	Bow Tie Cotter Pin	5	Fasteners			
11	5830	Grease Fitting	1	F002	10-24 Keps Nut		3
12	7406-1	Handle Grip, Red	1	F004	1/4-20 Keps Nut		2
13	2406-15	Parking Brake Lever / Idler Mount (Includes Items # 11 & 12)	1	F005	1/4-20 ESNA Nut		2
14	2406-5	Spacer	1	F009	5/16-18 Whiz Locknut		17
15	2300-1	Parking Brake Hydro Mount, LH	1	F010	5/16-24 ESNA Nut		2
16	5281-5	Clevis Pin (1/4 x 0.80)	2	F012	3/8-16 Keps Nut		4
17	2406-10	Parking Brake Rod	2	F013	3/8-16 Whiz Locknut		7
18	5665-1	Compression Spring (2-1/2)	2	F015	1/2-20 Wheel Lug Nut		8
19	5463	Steering Lever Actuator	2	F025	10-24 x 3/8 PPHMS		3
Transaxle Reservoir Assemblies				F029	1/4-20 x 1/2 Hex Bolt		1
20	2025-17	Straight Thread Hose Fitting	2	F031	1/4-20 x 5/8 Hex Bolt		1
21	5879-4	Hose Clamp (7/16)	2	F032	1/4-20 x 3/4 Hex Bolt		2
22	M111	Hose (1/4 x 6-1/2")	1*	F034	5/16-18 x 3/4 Hex Bolt		18
23	5879-3	Hose Clamp (1/2)	4	F035	5/16-18 x 1-1/4 Hex Bolt		1
24	8043-9	1/4 x 1/4 x 1/4 Tee	1	F039	3/8-16 x 1-1/4 Hex Bolt		2
25	M111	Hose (1/4 x 6-1/4")	1*	F040	3/8-16 x 1-1/2 Hex Bolt		1
26	5832	Cable Clamp (1/2)	3	F042	3/8-16 x 2-1/4 Hex Bolt		1
27	2025-19	Hose Channel	1	F049	5/16 SAE Washer		1
28	M111	Hose (1/4 x 15")	1*	F050	1/4 SAE Washer		2
29	2024-1	Oil Expansion Reservoir (1 Qt.)	1	F051	3/8 SAE Washer		2
30	2025-18	Reservoir Bottle Mount	1	F052	5/16 Ext. Star Lock Washer		12
Ground Drive Assemblies				F108	3/8-16 x 2 Hex Bolt		1
31	2028-8	Lockout Arm, RH	1	F151	3/8-16 x 7/8 Hex Bolt		2
32	2248-1	Ground Drive Belt	1	F171	5/16-18 x 3/8 Set Screw		6
33	4245	Idler Pulley (3/A)	2	F182	1/4 x 5/8 x 1/8 Washer		4
34	4349-12	Flanged Bearing (1")	1	F183	.312 x .700 x .074 Washer		3
35	2240-2	Drive Pulley (Includes Item # F171)	1	F231	1/4 x 3/4 Woodruff Key (#806)		1
36	5841	Retainer Washer (3/8 x 1-1/4)	1	F336	3/8-16 Jam Nut		1
37	5830-3	Grease Fitting (45 Deg.)	1	F350	1/4-20 LP Nylock		2
38	2349-14	Transmission Belt Tensioner (Includes Items # 37 & 39)	1	F388	3/8-16 x 2-1/2 Hex Bolt		4
39	7201-3	Fiberglide Bearing	2	F434	5/16-18 x 3-1/2 Hex Bolt		4
40	7201-4	Inner Race (1-1/2)	1	F435	1/4 x 1/4 x 1-1/4 Key		2
41	6325-3	Spacer Bushing (9/16)	1	F481	Washer 5/16 x 1 x .125		12
42	5146	10mm Ball Stud	2	* Required hose specifications:			
43	2215-6	Pressure Dampener	1	M111 - 1/4" ID fuel/oil/vapor hose (Gates 4219-0103 or equivalent)			
44	2028-7	Lockout Arm, LH	1				
45	9430-1	Spacer Tube	4				
46	2026-6	Hydro-Gear® Oil Filter (52114)	2				


HYDROSTATIC GROUND DRIVE ASSEMBLIES

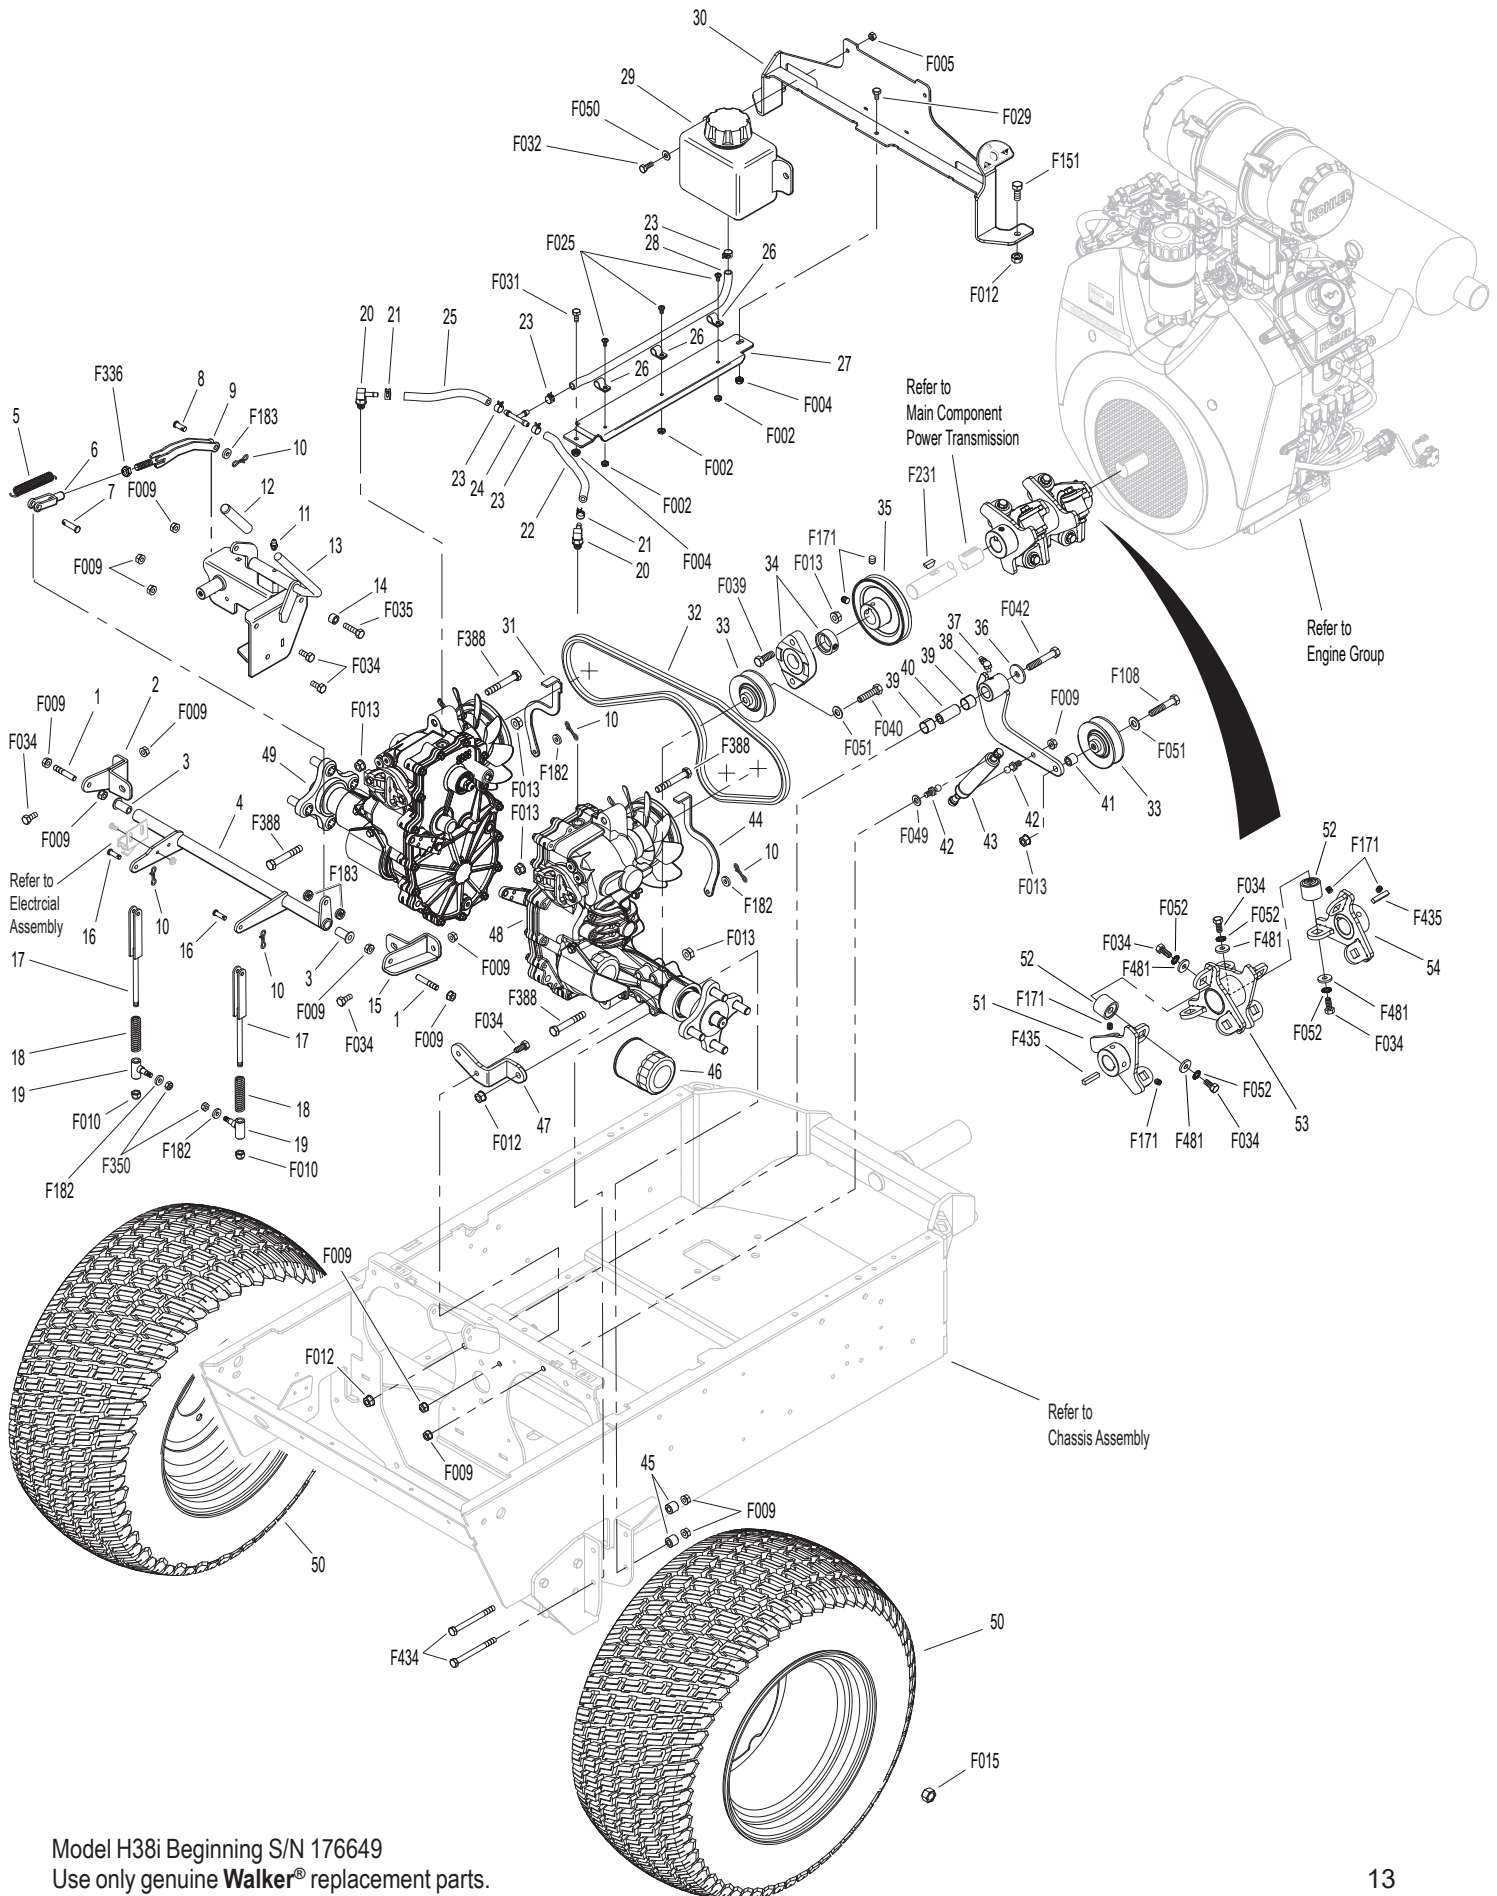

STEERING CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Steering Lever & FSC Assemblies				32	4452-6	Steering Pivot (1/4-20 x 1-5/8)	2
1	5850-2	Handle Grip, Foam (5-1/2)	3	33	4142-1	FSC Cam	1
2	4170-4	FSC Lever Assembly (Includes Item # 3)	*	34	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	1
3	5830	Grease Fitting	1	35	4142-2	FSC Friction Washer (1-1/2 x 1-1/32 x 1/16)	1
4	7201-11	Inner Race (1.938)	1	36	9704-3	Pivot Rod Bushing, Plastic	2
5	5214-4	Ball Joint (5/16-24) W/O Stud	2	37	2451-4	Steering Shaft Spacer	1
6	4213-3	Control Rod (6-1/4)	1	Fasteners			
7	5463-4	Steering Lever Actuator	2		F004	1/4-20 Keps Nut	2
8	5665-1	Compression Spring (2-1/2)	2		F005	1/4-20 ESNA Nut	2
9	2213	Control Rod (7")	2		F008	5/16-24 Keps Nut	2
10	2212-3	Seal Retainer	2		F009	5/16-18 Whiz Locknut	6
11	2212	Transmission Control Arm Stop	2		F010	5/16-24 ESNA Nut	2
12	2212-2	Transmission Control Arm, RH	1		F024	5/16-24 Jam Nut	4
13	5214-2	Ball Joint (5/16-24) (Nylon Lined)	2		F035	5/16-18 x 1-1/4 Hex Bolt	1
14	2212-1	Transmission Control Arm, LH	1		F044	5/16-24 x 3/4 Hex Bolt	2
15	2451-1	Steering Pivot Shaft With Stop	1		F093	5/16-18 x 1 Hex Bolt	2
16	5463-6	Washer 5/16 x 3/4 x .250	2		F121	5/16-18 x 3/8 x 1 SHL Bolt	1
17	7201-2	Fiberglide Bearing (1/2")	2		F146	1/4-20 Jam Nut	2
18	5463-5	Steering Arm Pivot Bushing (SS)	2		F167	5/16-18 Hex Nut	1
19	5830-3	Grease Fitting (45 Degree)	1		F183	.312 x .700 x .074 Washer	6
20	8201-3	Fiberglide Bearing	4		F188	1/4-20 Self-Locking Nut	4
21	2451-7	Speed Control Actuator, LH (Includes Items # 19 & 20)	1		F192	3/8-24 Self-Locking Nut	1
22	5146	10mm Ball Stud	4		F198	.250 x .625 x .040 Washer, SS	2
23	4199-4	Steering Lever Dampener Assembly	2		F211	1/4-20 x 7/8 Hex Bolt	1
24	2451-8	Speed Control Actuator, RH (Includes Items # 20 & 25)	1		F226	5/16-18 x 7/8 Hex Bolt	2
25	5830-4	Grease Fitting (90 Deg.)	1		F235	5/16-18 x 2-1/2 Hex Bolt	1
26	4451-4	FSC Friction Actuator	1		F345	1/4-20 x .770 Knurled Bolt	4
27	4219	Extension Spring (3/4 x 6-1/2)	1		F385	1/4 x 1-1/4 Roll Pin	1
28	5453-20	Steering Lever Handle (+1") Adjustable / SS (Includes Items # 1, F188, F198 & F345)	2		F391	1/4-20 x 1/2 Set Screw, SS	2
29	4452-4	Steering Lever Tube W/Tab	2		F407	Belleville Washer 3/8 x 1.187, SS	1
30	5450	D-Clip	2		F551	5/16-18 Flange Top Lock Nut	1
31	5222	Extension Spring (1/2 x 3-1/4)	2	* Service Part Only			



STEERING CONTROL ASSEMBLIES

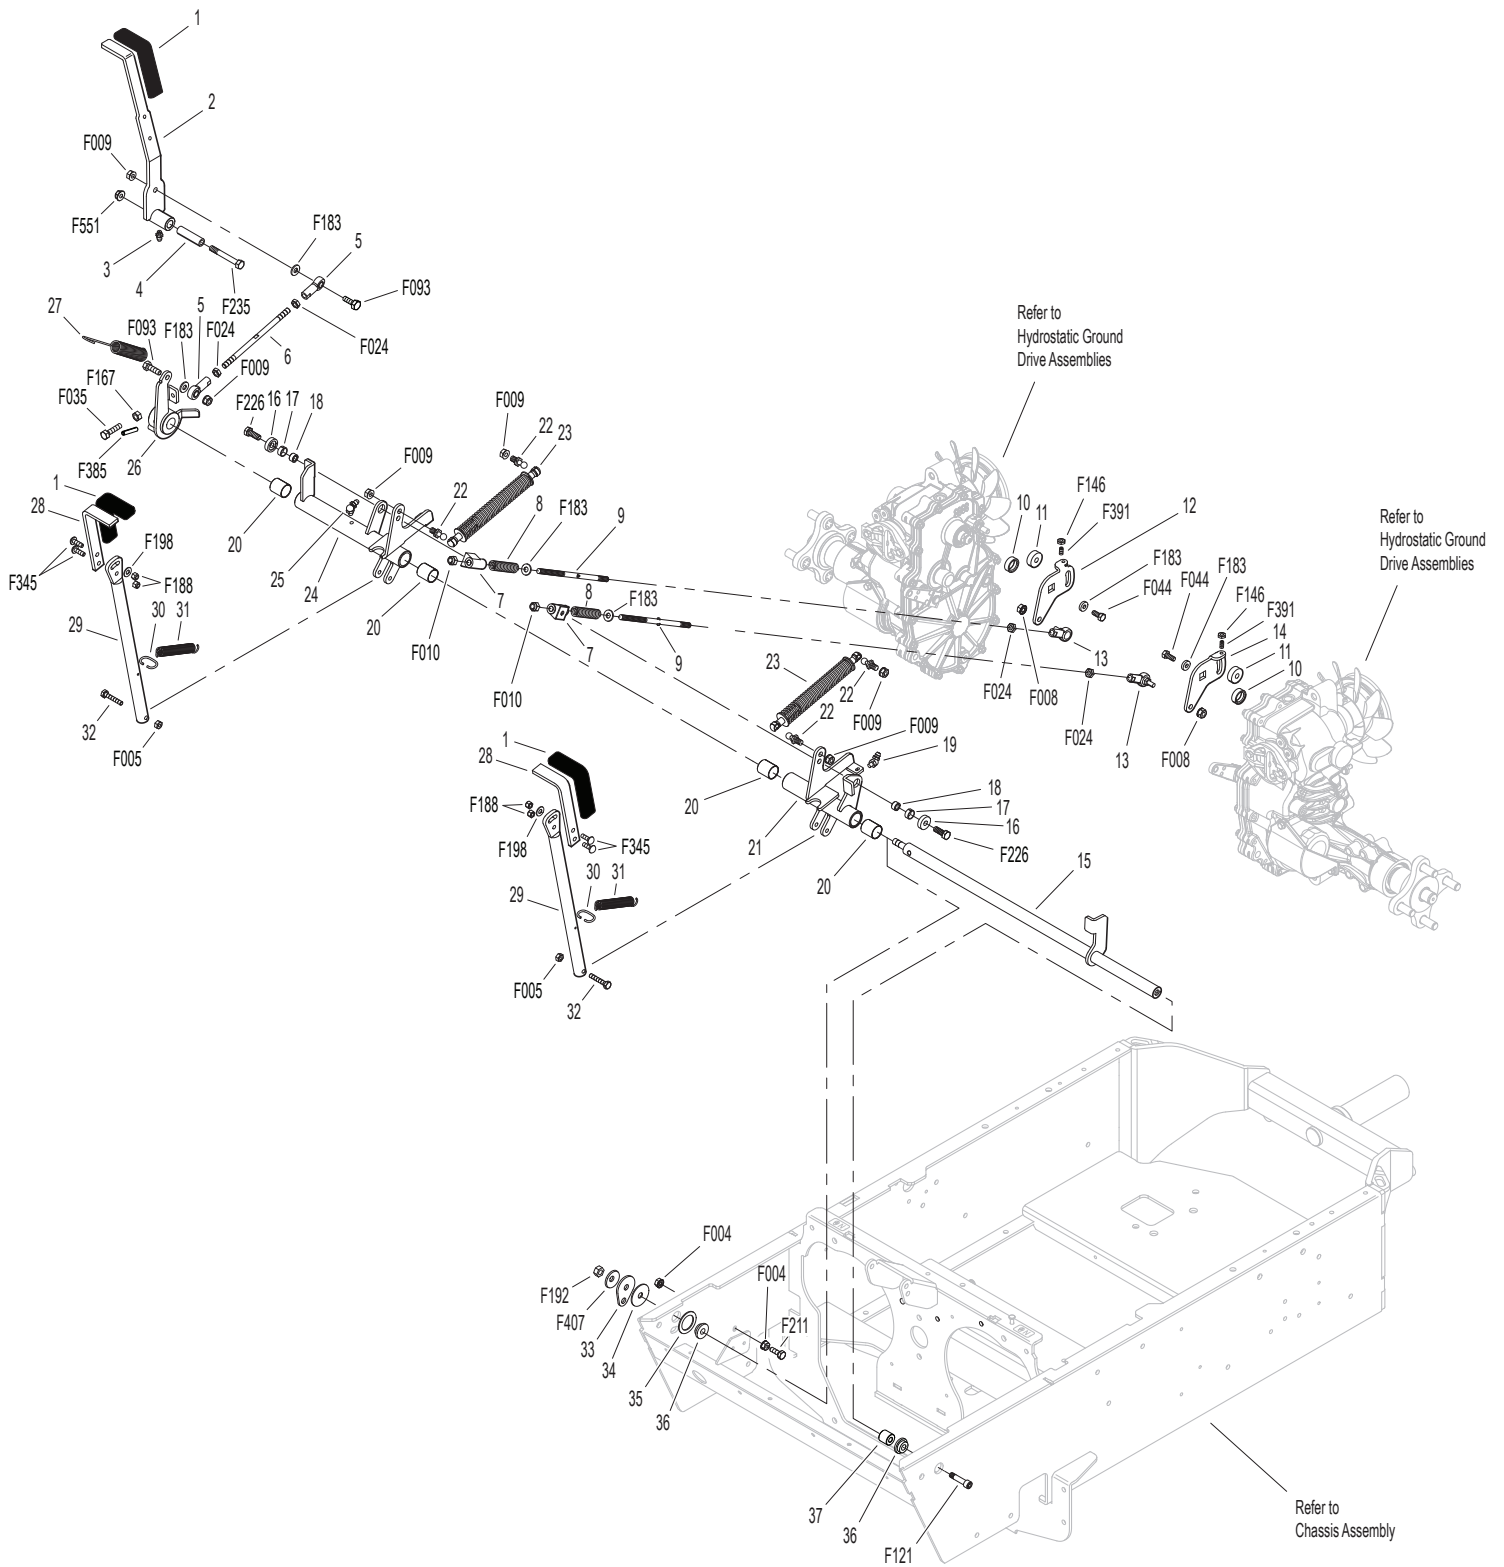

ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Electrical Assembly				23	8941	Circuit Breaker (30 Amp) (Auto Reset/Sealed)	1
1	8960-15	Ignition Switch W/Keys (Includes Items # 2, 3 & F349)	1	24	5975-1	Cable Tie (18# x 3-3/4")	2
2	7854	Plastic Tip, Red	1	25	5932	Battery Terminal Insl., Blk (-)	1
3	8960-3	Key Set W/Umbrella	1	26	NS	Battery (12V/350 CCA/Wet/SP-40)	1
4	7941-3	Boot, Circuit Breaker	1	27	5839	Hook Bolt	2
5	7941-7	Circuit Breaker (20 Amp)	1	28	5933	Battery Terminal Insl., Red (+)	1
6	8990-1	Hourmeter (Global)	1	29	5844	Battery Hold-Down Bar	1
7	8996-9	Red Indicator Light Assembly	3	30	5833	Cable Clamp (1/4)	1
8	8536-2	Warning Horn Assembly	1	31	2940-19	Wire Harness	1
9	6105-3	Harness Clip	3	32	5942-4	Safety Switch (NO)	1
10	5977-3	Grommet (9/16)	1	33	5942-5	Safety Switch (NO)	1
11	2103-8	Adapter Harness	1	Fasteners			
12	6941-9	Relay Switch 30/40 Amp	3	F002	10-24 Keps Nut		15
13	7948-6	Time Delay Module (.5 Second Delay)	1	F004	1/4-20 Keps Nut		2
14	7948-5	Time Delay Harness	1	F009	5/16-18 Whiz Locknut		1
15	5941-2	Safety Switch (NO)	1	F019	1/4-20 ESNA Wing Nut		2
16	7833-2	Cable Clamp (1 x 1/4)	2	F026	10-24 x 1/2 PPHMS		15
17	2940-18	Wire Extension (25")	1	F031	1/4-20 x 5/8 Hex Bolt		2
18	2940-9	Ground Wire (8")	1	F034	5/16-18 x 3/4 Hex Bolt		1
19	2940-3	Battery Cable (14")	1	F050	1/4 SAE Washer		2
20	8404-8	Plastic Cover, Red	2	F182	1/4 x 5/8 x 1/8 Washer		2
21	7938	Lead Wire, Battery Charge (Alternator to Starter)	1	F232	10-32 Keps Nut		2
22	2940-2	Battery Cable (22")	1	F349	Washer .835 ID 1.122 OD, SS		1

ELECTRICAL ASSEMBLY

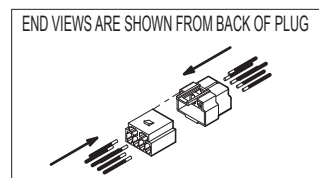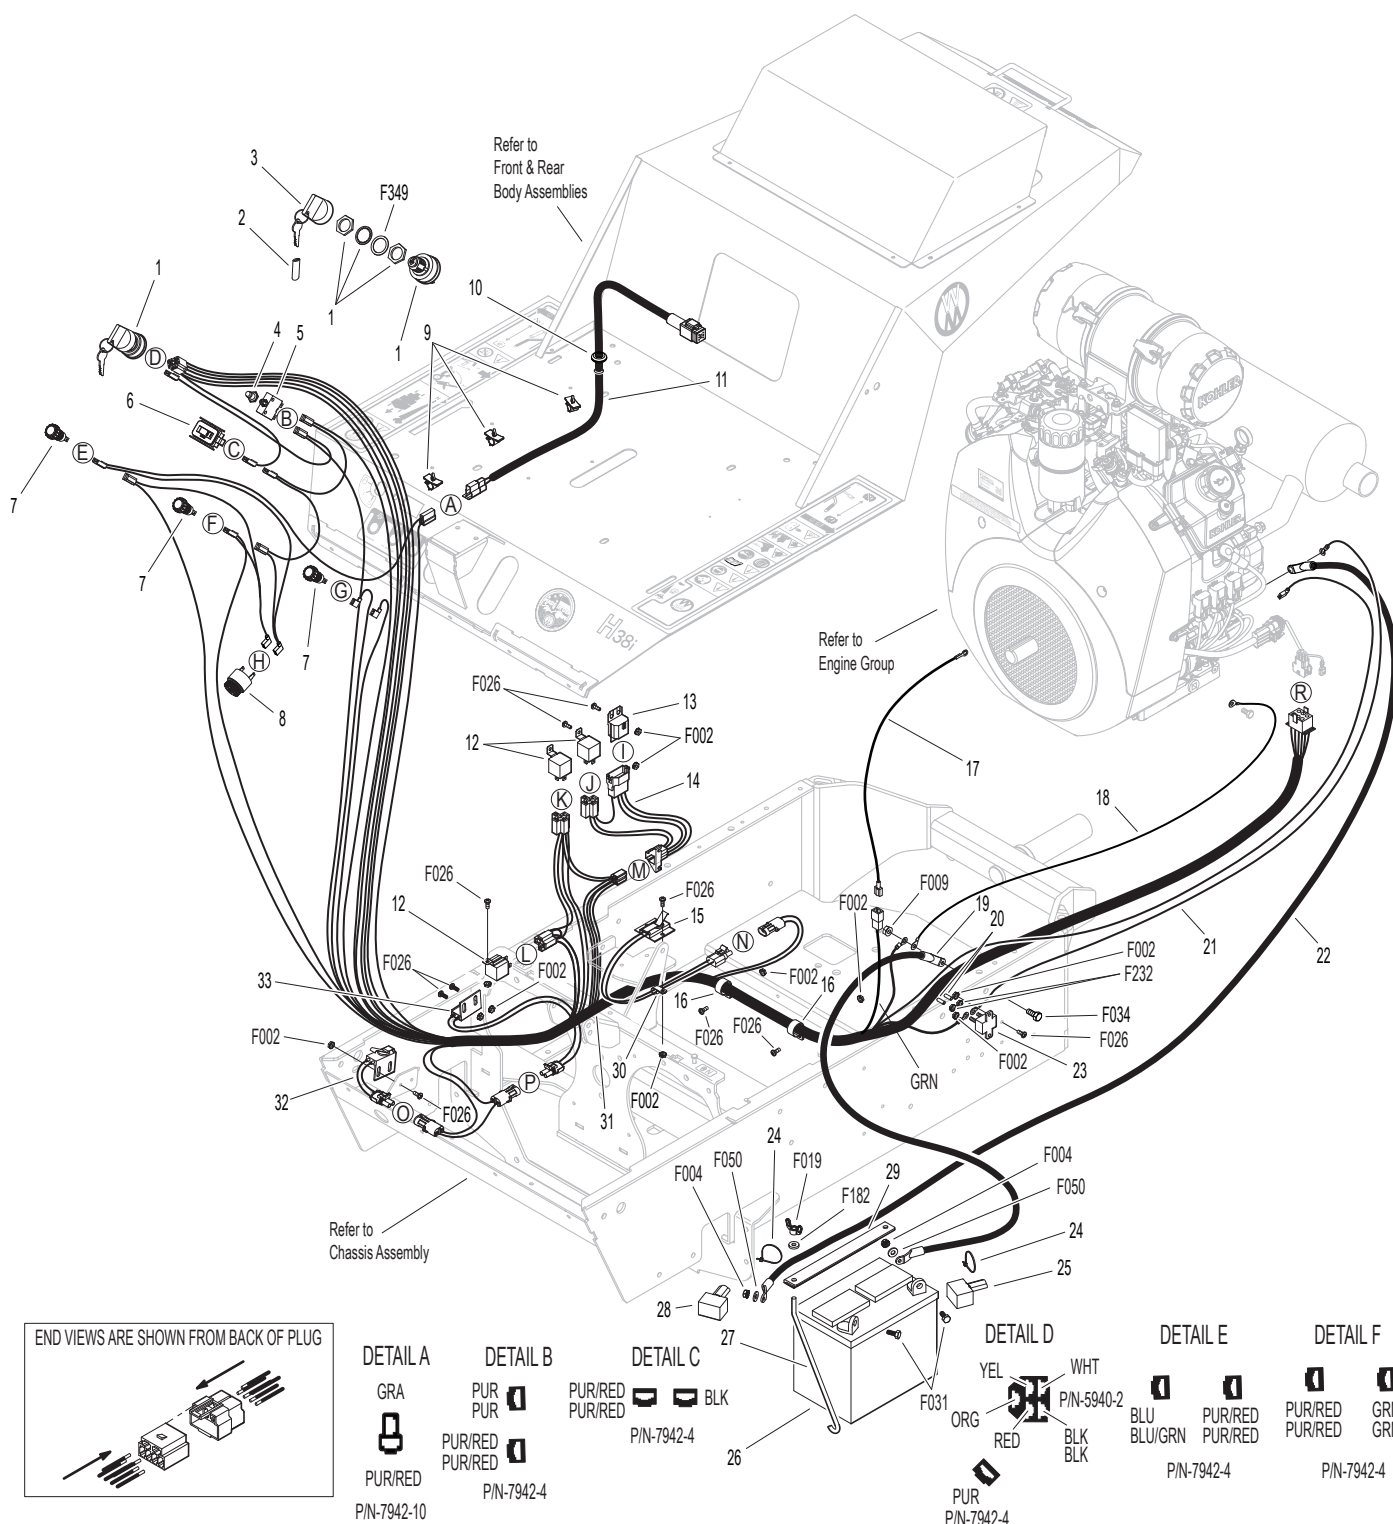

DETAIL A
GRA
PUR
PUR/RED
P/N-7942-10

DETAIL B
PUR
PUR/RED
P/N-7942-4

DETAIL C
PUR/RED
BLK
P/N-7942-4

DETAIL D
YEL
WHT
ORG
RED
P/N-5940-2
PUR
P/N-7942-4

DETAIL E
BLU
PUR/RED
P/N-7942-4

DETAIL F
PUR/RED
GRN
P/N-7942-4

DETAIL G
RED/YEL
BLU
P/N-7996-2

DETAIL H
PUR/RED
BLU
P/N-7996-2

DETAIL I
GRN
BLK
BRN
GRA
P/N-NS

DETAIL J
WHT
GRN
RED
P/N-7942-5

DETAIL K
YEL/BRN
YEL
BRN
BRN
PUR/RED
P/N-7942-5

DETAIL L
ORG
BRN
BRN
PUR/RED
P/N-7942-5

DETAIL M
WHT
GRN
BLK
GRA
RED
BRN
P/N-8942-1

DETAIL N
BLK
BLK/BRN
P/N-7939-2

DETAIL O
BRN
BLK/BRN
P/N-7939-2

DETAIL P
BRN
BRN
P/N-7939-2

DETAIL R
YEL/BRN
BLU
BLU/GRN
WHT
PUR
RED/YEL
P/N-NS


DETAIL Q
PUR/RED
BRN
GRA
WHT
BLK
P/N-5940-2

Model H38i Beginning S/N 176649
Use only genuine **Walker®** replacement parts.


LUBRICATION POINTS

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES	ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points				15	Rear Wheel Bearing	Grease	2
1	Steering Lever Pivot	Grease	2	16	Engine Oil Fill	Oil**	1
2	Deck Support Arm Pivot	Grease	2	17	PTO Belt Tightener Pivot	Grease	1
3	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1	18	Clutch Actuator Push Rod	Grease	1
4	Universal Joint Tube Assembly	Grease*	1	19	Brake Band Pivot Pins (Clevis)	Oil	2
5	FSC Lever Pivot	Grease	1	20	Parking Brake Lever Pivot	Grease	1
6	Body Latch Pivot	Oil	2	21	Parking Brake Clevis	Oil	3
7	PTO Clutch Lever Pivot	Grease	1	22	Throttle Control Pivot	Oil	1
8	Clutch Arm Pivot	Grease	1	* Grease every 25 hours.			
9	Hydro Idler Arm Pivot	Grease	1	** Refer to H38i Operator's Manual for procedure for checking and changing oil in Engine Crankcase.			
10	Transaxle Oil Reservoir	Oil/20W-50	1	NOTE: See Model H38i Operator's Manual (P/N 2000-42) for proper lubrication intervals.			
11	Throttle Control Cable Ends	Oil	2				
12	Engine Dipstick	Oil**	1				
13	Tail Wheel Caster Fork Pivot	Grease	2				
14	Rear Axle Pivot	Grease	1				

LUBRICATION POINTS

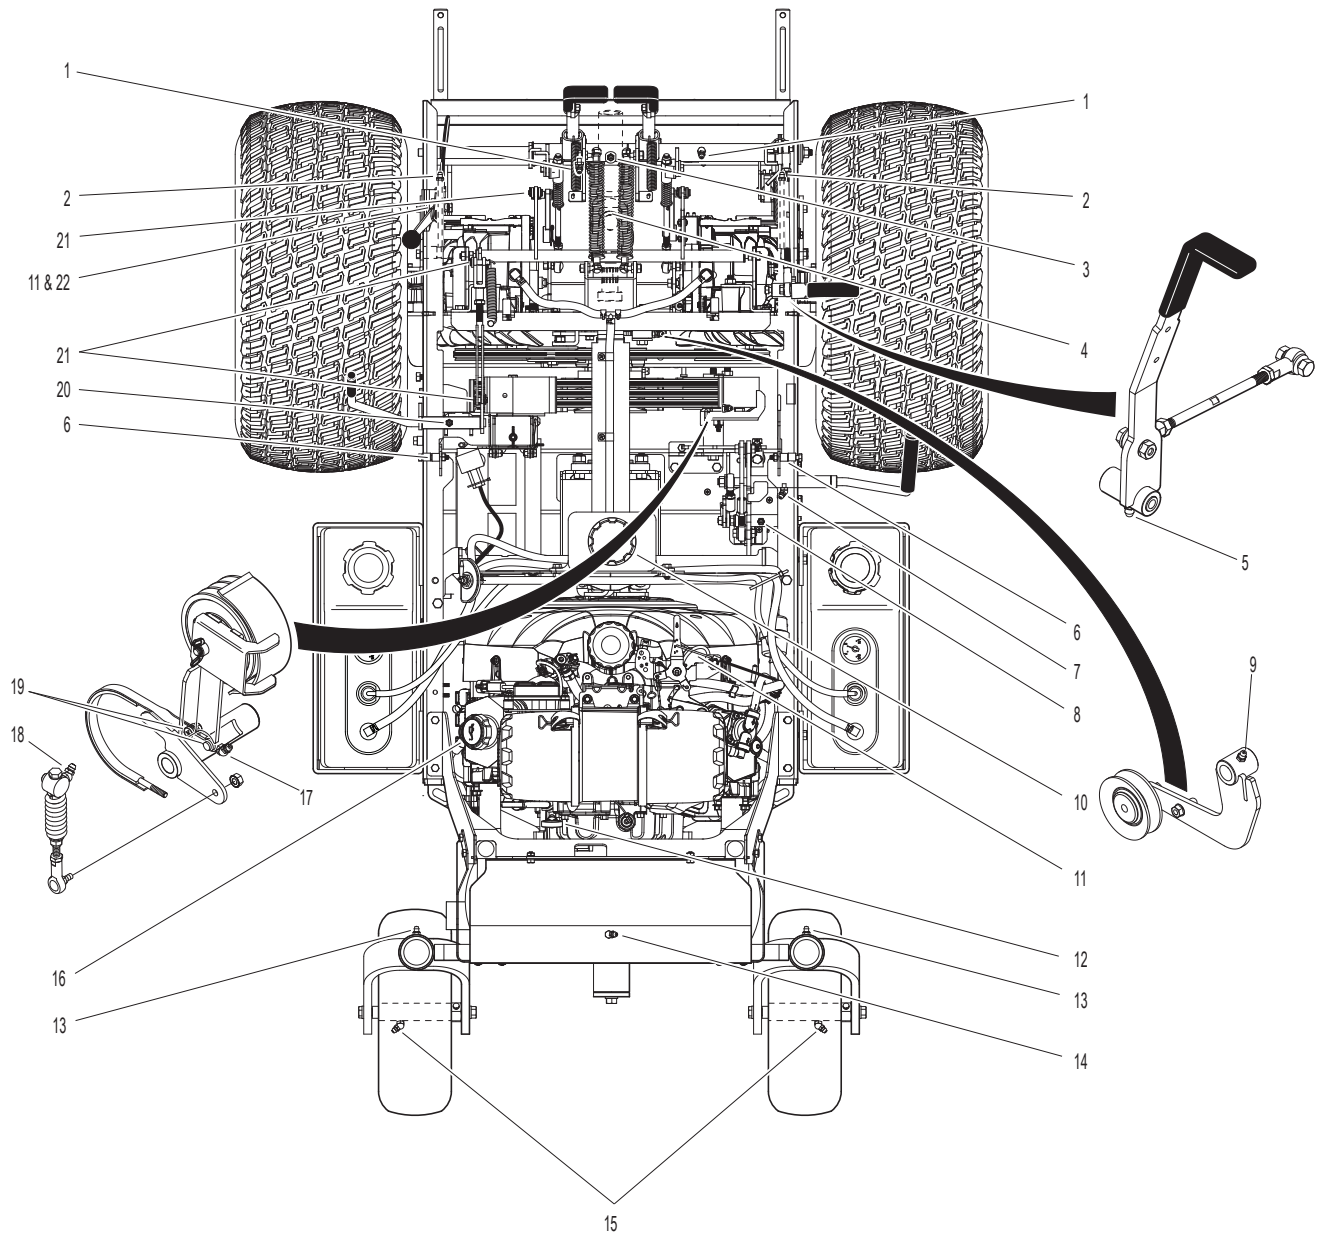

WIRING SCHEMATIC

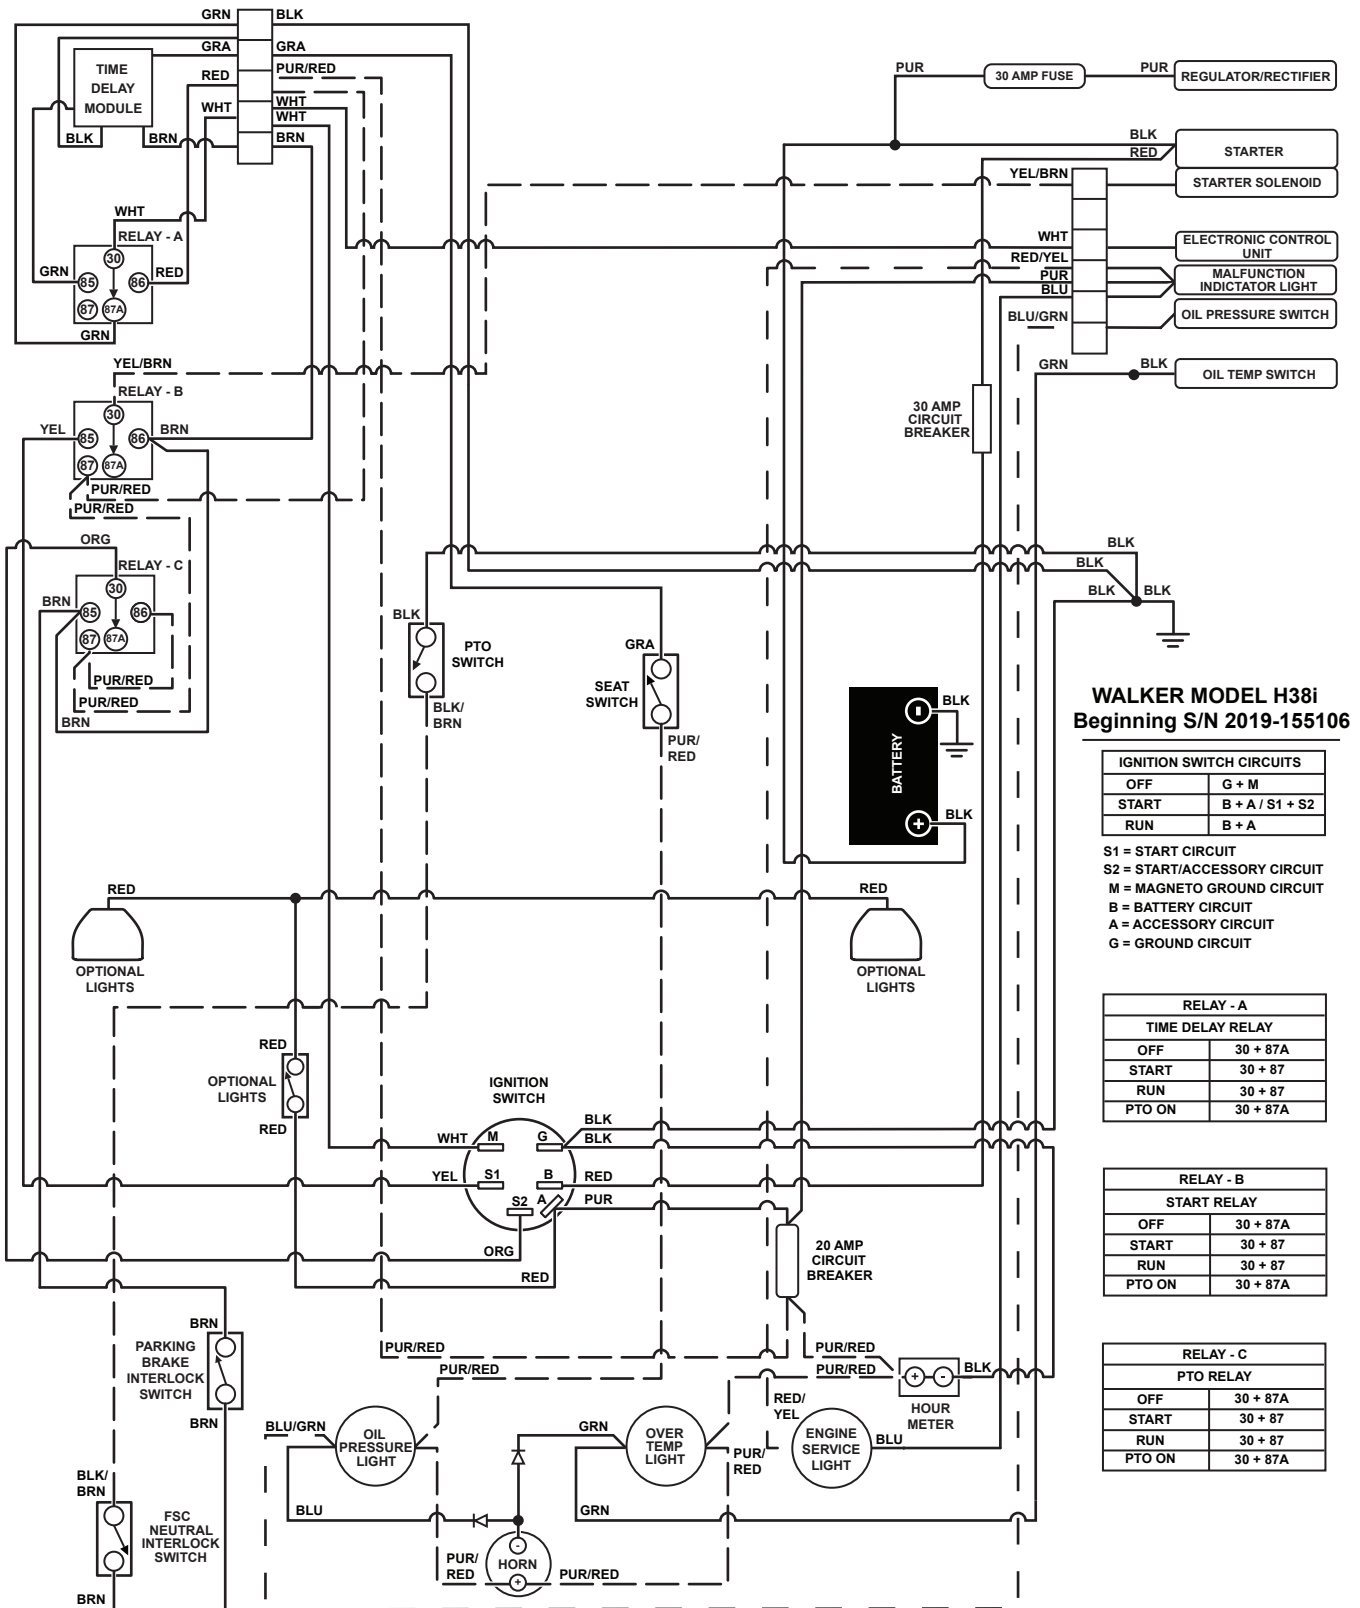

LIMITED WARRANTY FOR WALKER MODEL H38i RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within two (2) years* after the date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Kohler Engine
Battery

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

* A three (3) year or 3000 hour (whichever comes first) warranty is offered for Hydro-Gear ZT3400 hydrostatic transmissions; covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 3000 hours.

2. WHAT THIS WARRANTY DOES NOT COVER:


- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Operator's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

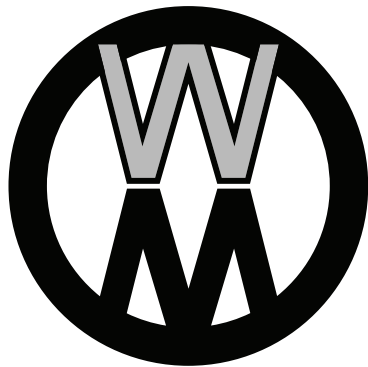

WALKER

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 041923 PRINTED IN USA www.walker.com ©2023 WALKER MFG. CO