


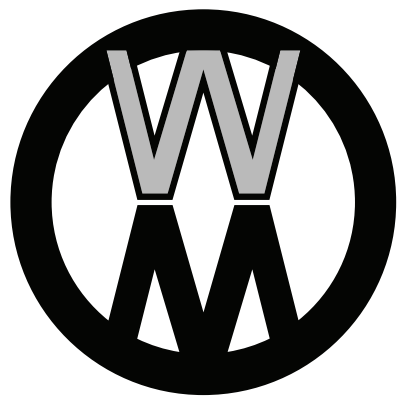

WALKER

Illustrated Parts Manual

*B*23



Beginning S/N: 169308
P/N 4000-34

KEY TO ABBREVIATIONS USED IN THIS MANUAL

<i>Abbreviation</i>	<i>What it Represents</i>
° (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
AT	All-Terrain
CCW	Counter-clockwise
Conn.	Connector
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal.	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz.	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt.	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
Spg.	Spring
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
Term.	Terminal
V	Volts
VLR	Very Low Restriction

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

Beginning S/N 169308
Use only genuine **Walker®** replacement parts.

ILLUSTRATED PARTS LIST


<i>Section of Tractor Covered</i>	<i>Page</i>	<i>Section of Tractor Covered</i>	<i>Page</i>
Decals		Electrical Components	
Tractor Decals	2	Electrical Assembly	16
Body / Chassis Assemblies		Maintenance	
Body / Chassis Assembly	4	Lubrication Points	18
Rear Body Assembly	6	Wiring Schematic	20
Tractor Components		Warranty	
Main Component Power Transmission	8	Limited Warranty	21
Engine Group	10		
Hydrostatic Ground Drive Assemblies	12		
Steering Control Assemblies	14		

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQ'D SD
Walker Product and Operation Decals				
1	8600-48	RH Fender	Chassis, RH Side Near Seat	1
2	5800	Decal, Round (4")	Rear Body (one on each side)	2
	5800-9	Decal, Round (4-3/4")	Utility Bed (one on each side)	2
3	8600-65	LH Fender	Chassis, LH Side Near Seat	1
4	9804-1	Axle Lockout	Chassis	2
5	8821-31	Decal, B23	Chassis, Front	1
6	5856-1	Made In USA	Chassis, Front	1
Danger Decals Warning Decals Caution Decals				
7	4107-13	Decal, Belt Routing	Front Body, Underside	1
8	8600-2	Decal, Rotating Components	Air Cleaner Mount	1
9	8600-12	Danger, Engine Exhaust	Rear Body, Underside or Utility Bed, Underside	1
10	8600-5	Caution, Engine Exhaust	Rear Body or Utility Bed	1
Maintenance Decals				
11	5855	Important, Engine Cooling	Body Support	1
12	6895-103	Kohler 300 Hour Oil	Engine, LH Side	1
13	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1
14	8600-54	Decal, Ignition Switch	Front Body	1


NOTE: All parts requiring decals are shipped with decals applied.

TRACTOR DECALS

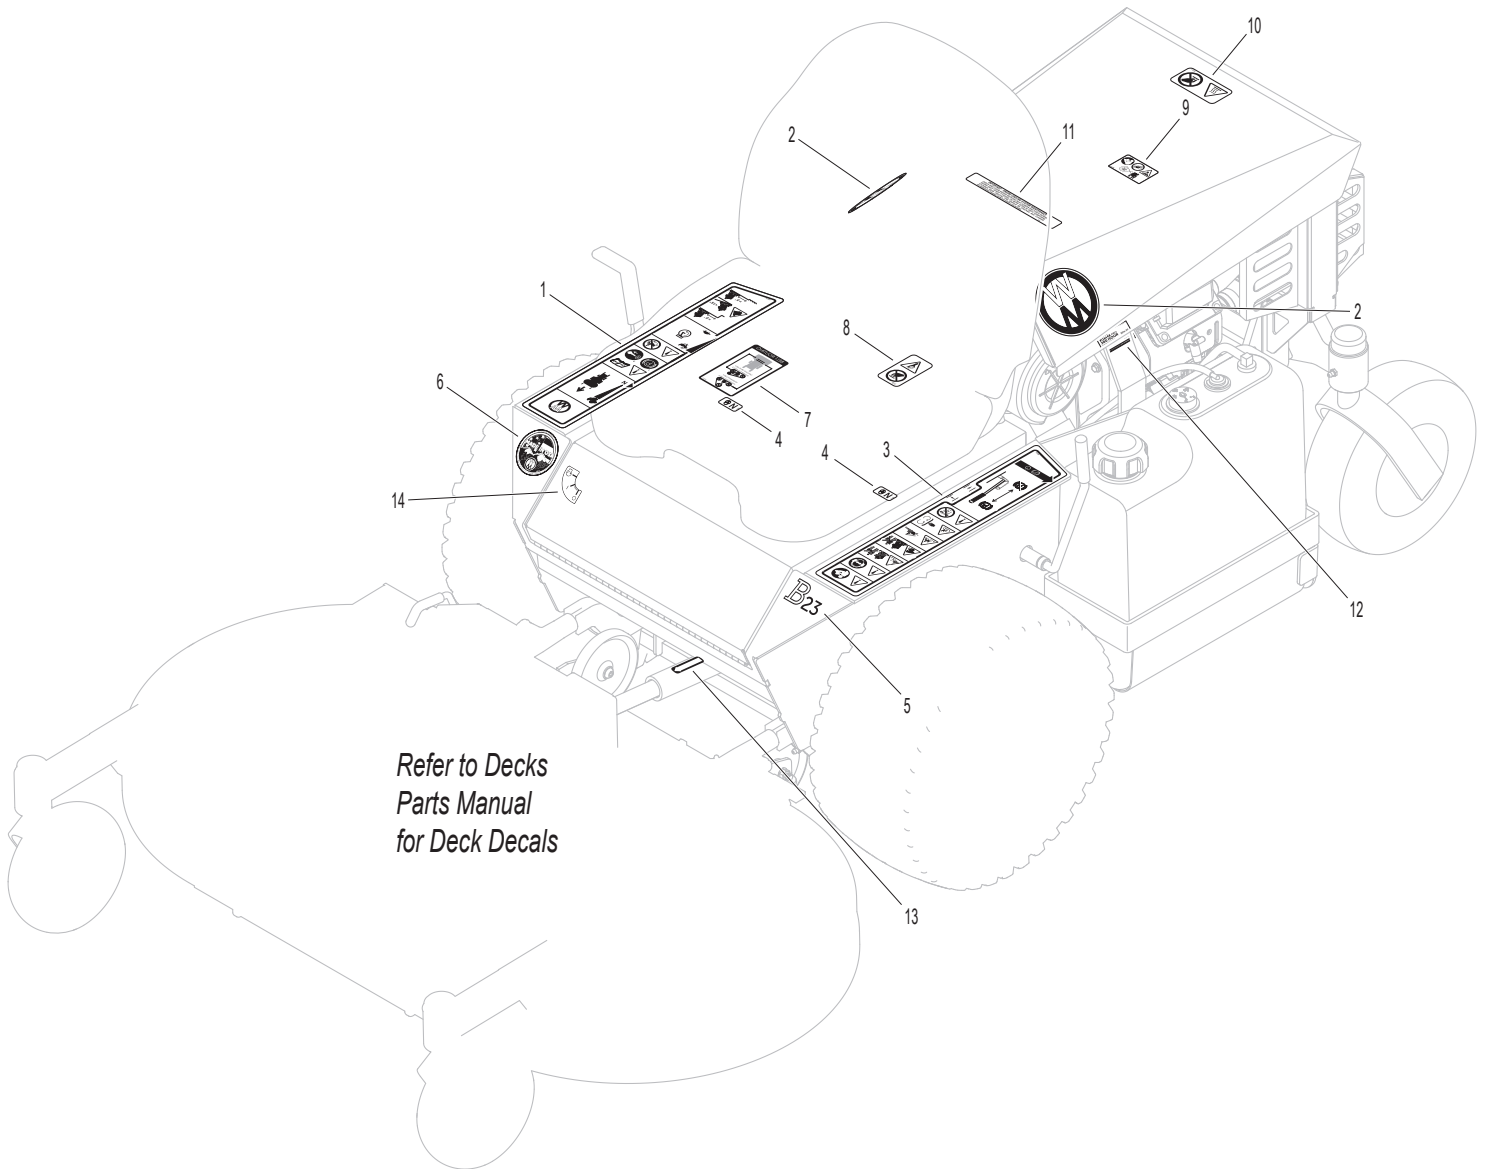

BODY / CHASSIS ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Seat Assembly				Deck Support Arm & Hitch Assemblies			
1	6104-31	Comfort Seat	1	35	4301-11	Deck Arm Support Mount	1
2	7440-5	Shock Mount (1-1/4 x 3/4)	4	36	6840-3	Support Arm Bushing (2-1/16)	2
Body Assembly				37	5830-1	5/16-24 4" Grease Fitting	2
3	4100-9	Front Body	1	38	5775-2	Hitch Pin (#6)	2
4	4100-7	Spacer (1/4 x 3/8 x 3/4)	2	39	4431-2	Deck Support Arm, LH (Includes Item # 37)	1
5	5146	10mm Ball Stud	2	40	4430-2	Deck Support Arm, RH (Includes Item # 37)	1
6	4145-2	Gas Spring Assembly (Includes Item # 5)	1	Tilt-Up Latch Assembly**			
7	5180	Edge Molding / Lever Opening	2	41	5847	Plastic Tip	1
8	4504-2	Hinge (17")	1	42	5744-20	Spring Arm, Tilt-Up Latch	1
9	5989-18	Dome Plug (11/16)	1	43	5744-10	Spring Pivot Bushing	1
Body Latch Assembly				44	5744-15	Compression Spring (3/8 x 5/8)	1
10	7222	Extension Spring (1/4 x 3)	1	45	5744-13	Mount Angle, LH	1
11	7383-12	Body Latch Hook, RH	1	46	5744-12	Hook, Tilt-Up Latch	1
12	7383-9	Body Latch Trigger	1	47	5744-14	Mount Angle, RH	1
13	7383-13	Body Latch Hook, LH	1	Fasteners			
14	5854	Plastic Tip	1	F004	1/4-20 Keps Nut		9
Chassis Assembly				F005	1/4-20 ESNA Nut		6
15	5845	Rubber Bumper (1.50 x 1.25)	2	F009	5/16-18 Whiz Locknut		18
16	2046-1	Gas Tank Mount, LH	1	F013	3/8-16 Whiz Locknut		2
17	4215-10	Shock Mount / Body Lift Arm	1	F020	5/16-18 ESNA Nut		1
18	4305	Chassis Frame	1	F029	1/4-20 x 1/2 Hex Bolt		2
19	4910-7	Battery Mount	1	F034	5/16-18 x 3/4 Hex Bolt		10
Spread Tail Wheel Assembly				F093	5/16-18 x 1 Hex Bolt		1
20	4401-4	Washer (1-3/4 x 3/8 x 1/4 Thk)	1	F116	1/4-20 x 1-1/4 Hex Bolt		2
21	4301-2	Fiberglide Thrust Washer	2	F172	1/4-20 x 3/4 Carriage Bolt		2
22	4301-3	Fiberglide Bearing	2	F182	1/4 x 5/8 x 1/8 Washer		2
23	4301-12	Tail Wheel Pivot (Includes Items # 22, 24 & 25)	1	F183	.312 x .700 x .074 Washer		2
24	5830	Grease Fitting	2	F200	7/16-20 x 3 Grade 8 Bolt		2
25	5830-4	Grease Fitting (90 Deg.)	1	F211	1/4-20 x 7/8 Hex Bolt		2
26	8769-8	Dust Cap, Deck Caster	2	F246	1/4-20 x 1/2 PTHMS		7
27	8769-6	Bearing Cone (1" ID)	4	F341	Coil Roll Pin (7/64 x 9/16)		1
28	8769-5	Bearing Cup (2 x 1-5/8)	4	F342	5/16 Conical Washer		2
29	8769-7	Seal	2	F344	3/4-16 Slotted Hex Nut		2
30	8765-11	Caster Wheel Fork	2	F348	1/8 x 1-1/2 Cotter Pin		2
31	8769-13	Bearing Cup (7/16 ID)	4	F388	3/8-16 x 2-1/2 Hex Bolt		2
32	5037-1	Bearing, Tail Wheel	4	F430	7/16-20 ESNA Nut		2
33	5038-3	Axle Spacer Tube (4.995) (.4375 ID)	2	F591	7/16-14 Flange Top Lock Nut		2
34	8768-10	Caster Wheel, Pneumatic (11 x 4-5 PR, BB) (Includes Items # 31-33 & F634)	2	F631	3/8-16 x 1 Button Head Cap Screw		1
	8768-8	Tire, Pneumatic (11 x 4-5 6-Ply)	*	F633	7/16-14 x 6-1/2 Hex Bolt		2
				F634	Washer .835 x .438 x .080		4
				F639	Belleville Washer (1.5 x .755 x .072)		2
				* Service Part Only			
				** Complete Tilt-Up Latch Assembly Kit available by ordering kit # 5747.			

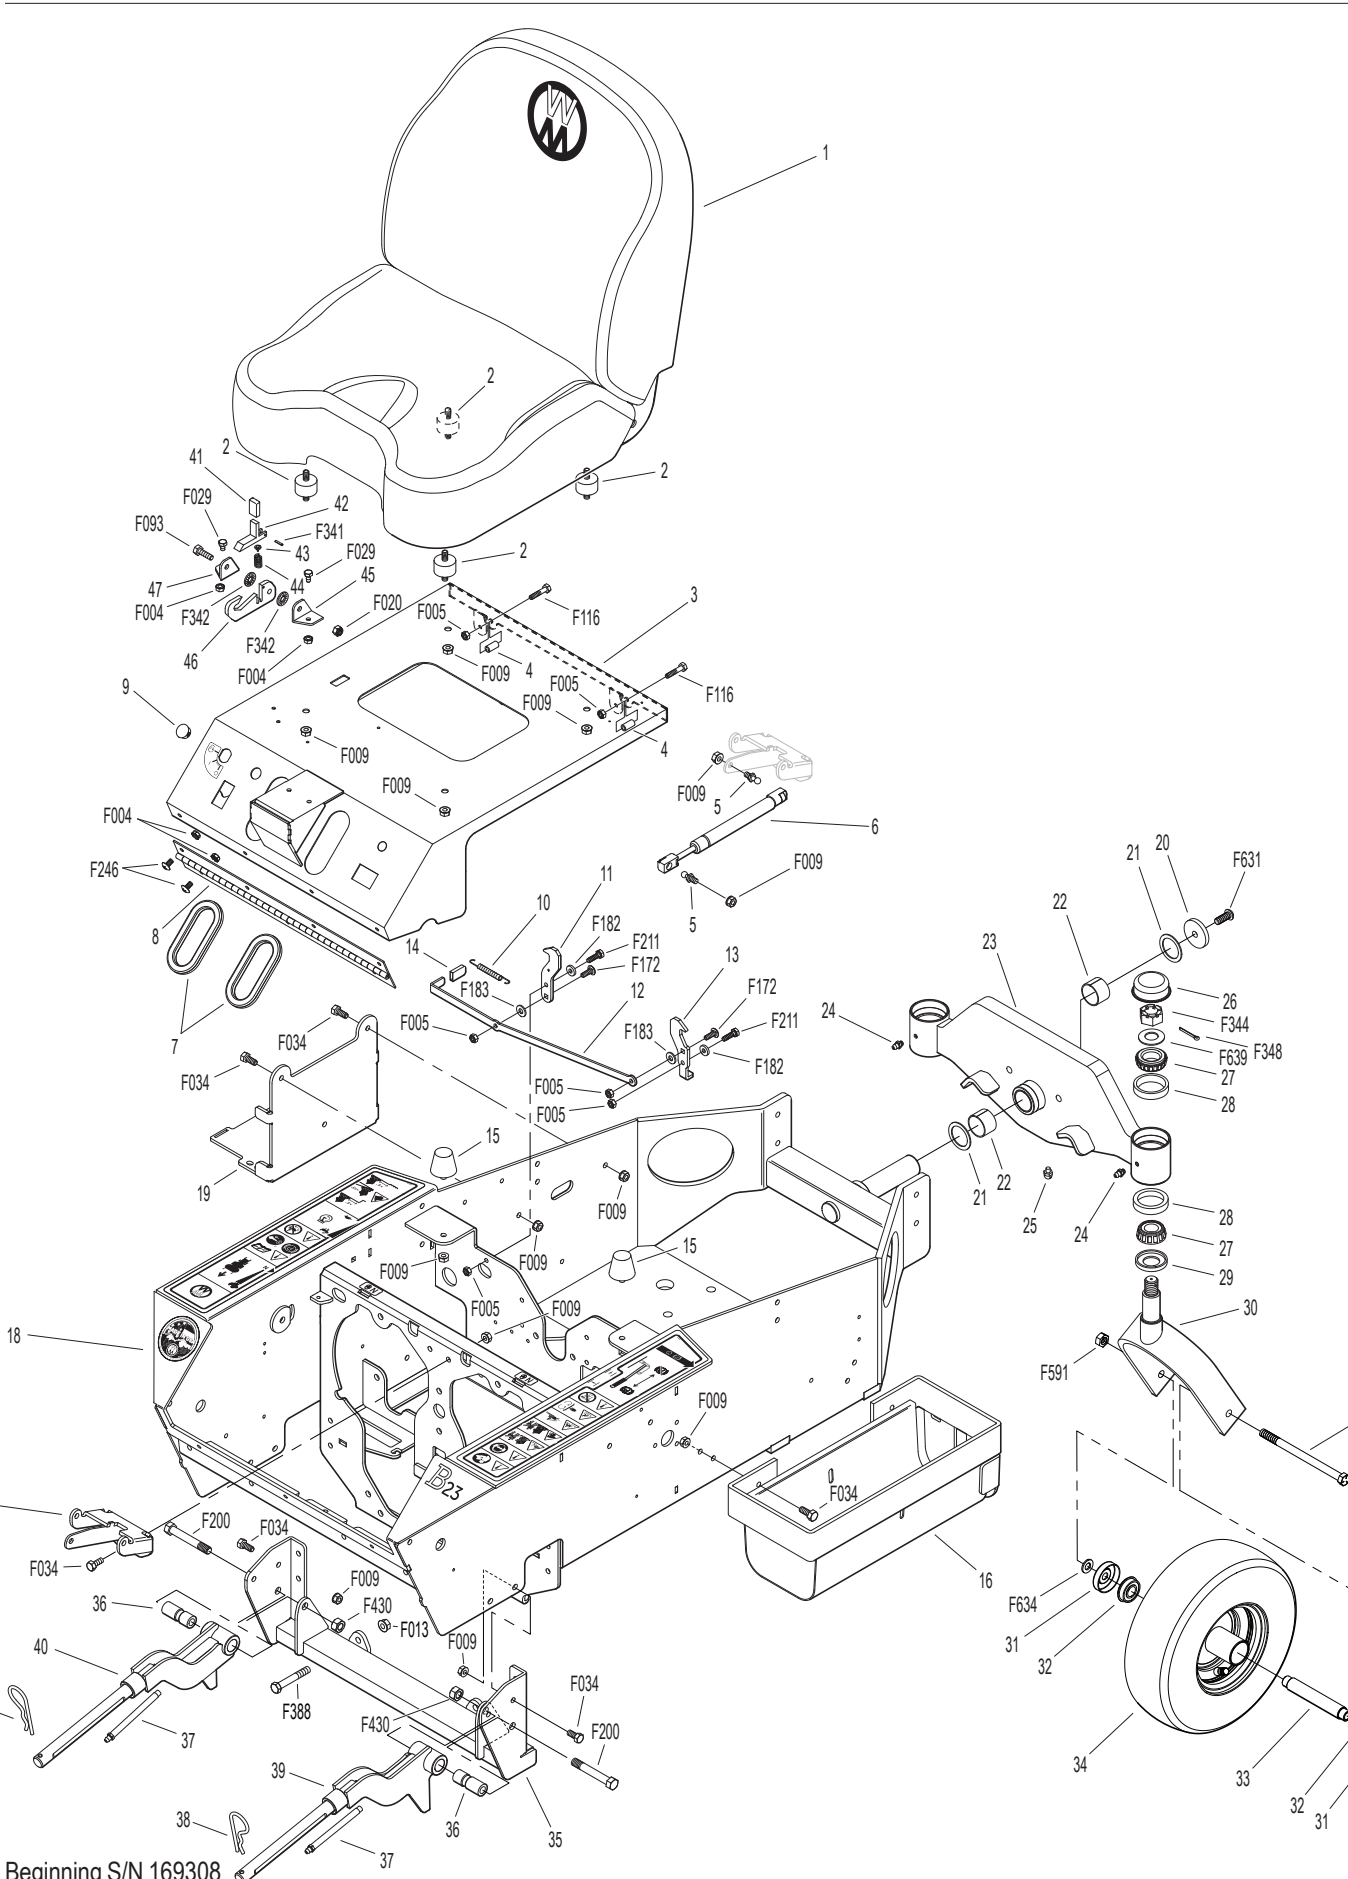

Beginning S/N 169308
Use only genuine **Walker®** replacement parts.

REAR BODY ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Utility Bed Option

1	8650-13	Bed Liner (19-1/4 x 22)	1
2	4650-2	Utility Bed (Includes Items # 1 & 3)	1
3	M112	Edge Molding (17-5/8")	1


Rear Body Assembly

4	4105-7	Rear Body	1
5	5145-4	Gas Spring Assembly	1
6	4013-6	Muffler Guard	1
7	5146	10mm Ball Stud	2
8	4013-9	Body Pivot Plate	2
9	4013-7	Muffler Guard, LH	1
10	4013-8	Muffler Guard, RH	1
11	7844	Rubber Bumper (1.25 x .250)	2
12	4104-12	Body Support	1
13	4104-11	Rear Body Support	1
14	4104-14	Rear Body Cross Brace	1
15	4104-13	Body Support Brace	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Fasteners

F004	1/4-20 Keps Nut	10
F009	5/16-18 Whiz Locknut	11
F029	1/4-20 x 1/2 Hex Bolt	10
F034	5/16-18 x 3/4 Hex Bolt	7
F093	5/16-18 x 1 Hex Bolt	2
F226	5/16-18 x 7/8 Hex Bolt	2
F504	1/4-20 Whiz Locknut	2
F551	5/16-18 Flange Top Lock Nut	4
F582	Washer 5/16 x 7/8 x .125	3
F643	1/4-20 x 3/4 Carriage Bolt Flat Head	2
F645	5/16-18 x 1-1/8 Hex Bolt	2

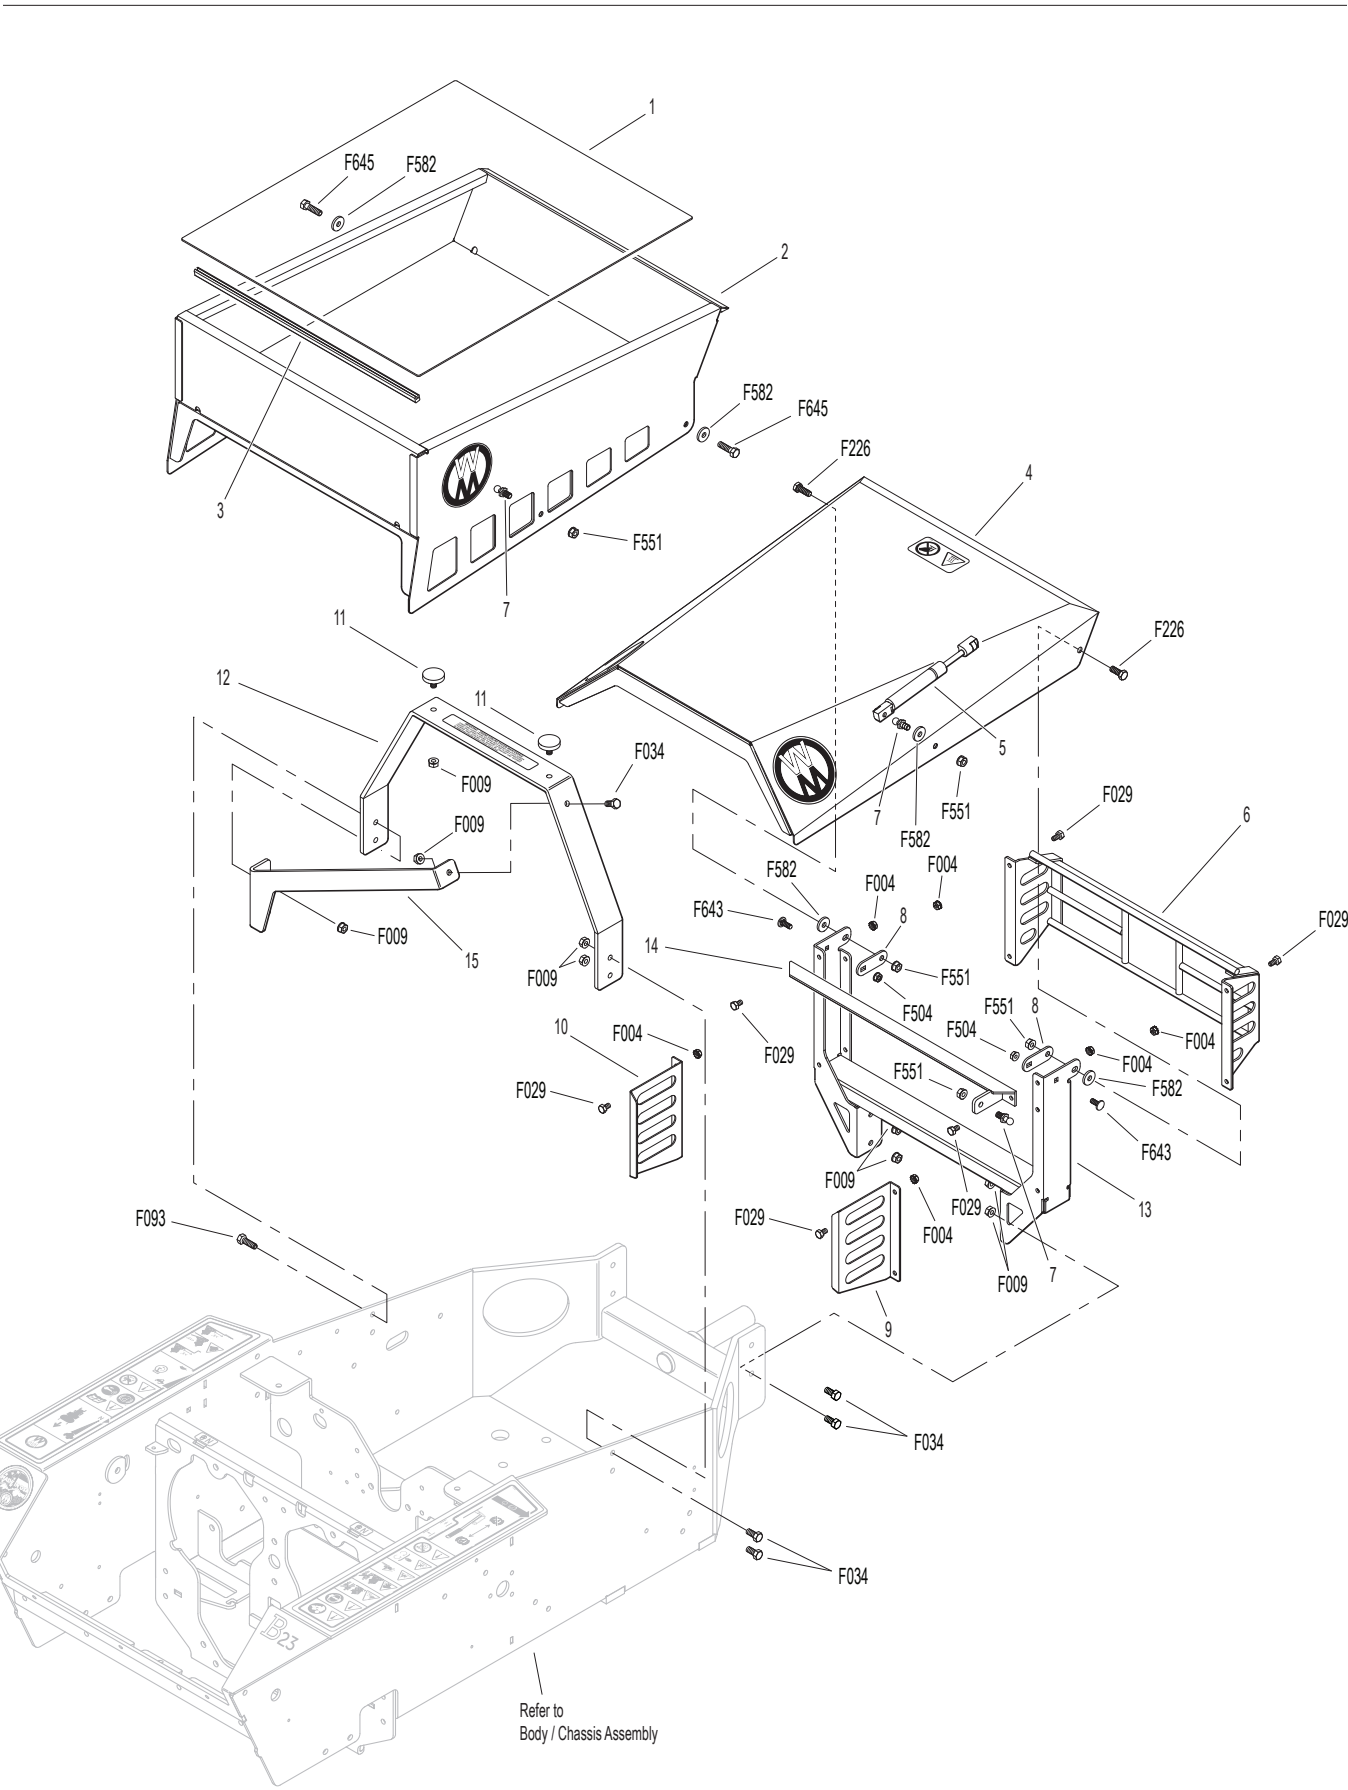


Beginning S/N 169308
Use only genuine **Walker®** replacement parts.

MAIN COMPONENT POWER TRANSMISSION

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
PTO Drive Assembly				Fasteners			
1	4230-3	Clutch Belt	1	F009	5/16-18 Whiz Locknut		10
2	5247-2	V-Groove Idler (4")	2	F013	3/8-16 Whiz Locknut		5
3	6325-2	Spacer Bushing (5/16)	1	F032	1/4-20 x 3/4 Hex Bolt		2
4	7201-3	Fiberglide Bearing	2	F034	5/16-18 x 3/4 Hex Bolt		6
5	7201-7	Inner Race (2-5/8)	1	F035	5/16-18 x 1-1/4 Hex Bolt		2
6	4325-16	Idler Mount, RH	1	F040	3/8-16 x 1-1/2 Hex Bolt		1
7	4325-17	Idler Pivot	1	F041	3/8-16 x 1-3/4 Hex Bolt		1
8	5146	10mm Ball Stud	2	F046	3/8-16 x 3-1/2 Hex Bolt		1
9	2215-6	Pressure Dampener	1	F051	3/8 SAE Washer		2
10	4410-18	Dampener Mount	1	F093	5/16-18 x 1 Hex Bolt		2
11	4325-15	Idler Mount, LH	1	F153	3/16 x 3/16 x 1-1/4 Key		1
12	4411-6	Drive Shaft Collar	1	F449	Washer 1/2 x 1-5/8 x 1/4		1
13	5830-3	Grease Fitting (45 Deg.)	1	F451	1/2-20 Nylon Locknut		1
14	4411-7	Drive Shaft	1	F472	1-14 LH Hex Nut		1
15	4410-17	Clutch Stop	1	F551	5/16-18 Flange Top Lock Nut		1
16	4410-15	Clutch	1	F569	1/4-20 Flange Top Lock Nut		2
17	4410-9	Washer 1 x 1-5/8 x 1/4	1	F647	5/16-18 x 2.0625 Hex Bolt GR 8		1
18	5830	Grease Fitting	1				
19	7275-16	Universal Joint Tube Assembly / Spline	1				
20	4274-12	PTO Drive Shaft Assembly / Spline	1				
21	4236-5	PTO Drive Pulley	1				
22	7275-9	Quick Coupler Installation Tool	1				


MAIN COMPONENT POWER TRANSMISSION

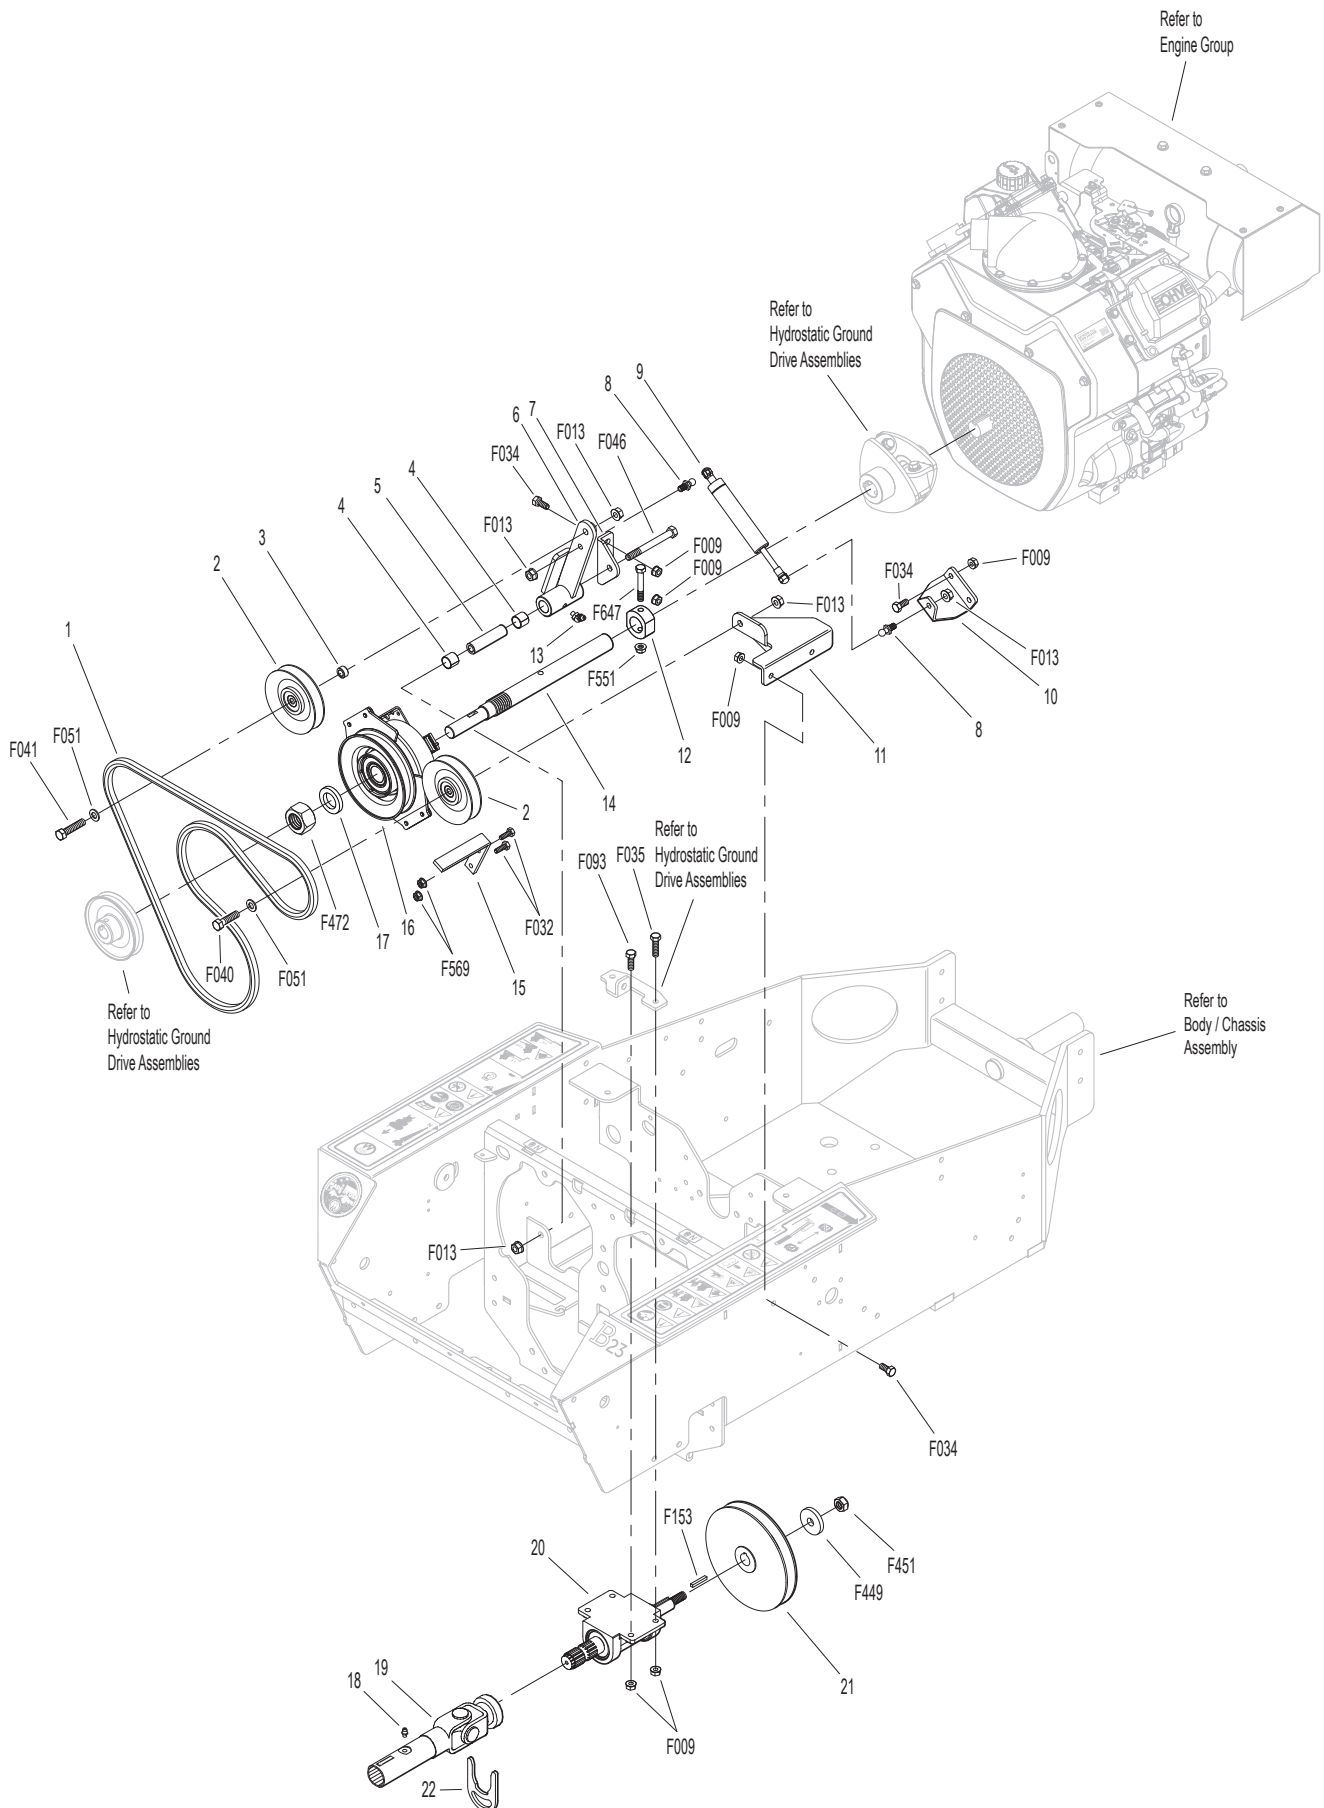

ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Engine Assembly				Throttle & Choke Control Assemblies			
1	4013-10	Shield Side, RH	1	37	8123-3	Insultherm (3/8 x 10)	1
2	4013-12	Muffler Heat Shield, Center	1	38	5108-24	Control Cable (56")	1
3	4013-11	Shield Side, LH	1	39	5108-28	Throttle Cable (32-1/2")	1
4	NS	Muffler	1	40	5108-6	Choke Control Knob, Black	1
5	4010-1	Drain Valve 3/8-18 NPTF	1	41	5108-10	Friction Washer (.125)	4
6	NS	23 HP Kohler Engine	1	42	5108-22	Control Lever, Choke	1
Precleaner Assembly				43	5108-38	Control Bracket, Choke	1
7	7840-5	Hose Clamp (1-1/2 to 2)	1	44	5108-21	Control Bracket, Throttle	1
8	6087-9	Air Intake Hose	1	45	5108-20	Control Lever, Throttle	1
9	7026-4	Remote Precleaner	1	46	5108-5	Throttle Control Knob, Red	1
10	7840	Hose Clamp (1-1/4 to 1-3/4)	1	Fasteners			
11	5091-0	1/8 Pipe Thread Male W/Barb	1	F002	10-24 Keps Nut		8
12	6029	Hose Clamp (1-3/4 to 2-1/4)	1	F005	1/4-20 ESNA Nut		2
13	4090-1	Air Cleaner Assembly (Includes Items # 17-20)	1	F009	5/16-18 Whiz Locknut		2
14	M258	Vacuum Hose (13")	1*	F025	10-24 x 3/8 PPHMS		8
15	5091-19	Air Flow Indicator W/Bracket (Vacuum 15" H2O)	1	F029	1/4-20 x 1/2 Hex Bolt		4
16	5088-4	Air Cleaner Band	1	F049	5/16 SAE Washer		2
17	5090-7	Safety Filter Insert	1	F050	1/4 SAE Washer		4
18	5090-8	Air Cleaner Cartridge	1	F091	5/16-18 x 5/8 Hex Bolt		2
19	5088-5	Air Cleaner Draw Latch	2	F094	8-32 x 1/2 PTHMS		2
20	5090-2	Vacuator Valve	1	F175	1/2 Split Lock Washer		4
Fuel Tank Assembly				F184	1/4-20 x 1/2 Hex Bolt, SS		2
21	M246	Fuel Line (1/4 x 27")	1*	F185	1/4 Internal Star Lock Washer, SS		2
22	5879-3	Hose Clamp (1/2)	4	F439	1/2-13 x 1-3/4 Hex Bolt		4
23	5020-3	Fuel Filter (9-12 Micron)	1	F482	8-32 Nylock Nut		2
24	M246	Fuel Line (1/4 x 3")	1*	F638	1/4-20 x 1 Carriage Bolt		2
25	5083-8	Tank Tube (13")	1	F642	1/4 x .042 Belleville Washer		2
26	5083-1	Bushing, Rubber (Fits 5083)	1	* Required hose specifications:			
27	8043-8	Roll Over Valve	1	M113 - 3/16" ID fuel/oil/vapor hose (Gates 4219-0093 or equivalent)			
28	M113	Fuel Line (3/16 x 31-1/2")	1*	M246 - 1/4" ID low permeation (<15g/m^2/day) fuel hose (Parker 38904 or equivalent)			
29	8055-2	Fuel Tank Gauge	1	M258 - 7/64" ID automotive vacuum hose			
30	5082-4	2-1/4 Ratchet Fuel Cap (EPA)	1				
31	5977-7	Roll Over Grommet (.900 x 1-1/2)	1				
32	8055-1	Fuel Tank, 4.7 Gallon (Black) (Includes Items # 25-27, 29 & 31-34)	1				
33	5086-7	Hose (1/4 x 6)	1				
34	5020-2	Fuel Filter, In Tank	1				
35	5975-3	Cable Tie (50# x 7")	1				
36	7833-2	Cable Clamp (1 x 1/4)	2				


ENGINE GROUP

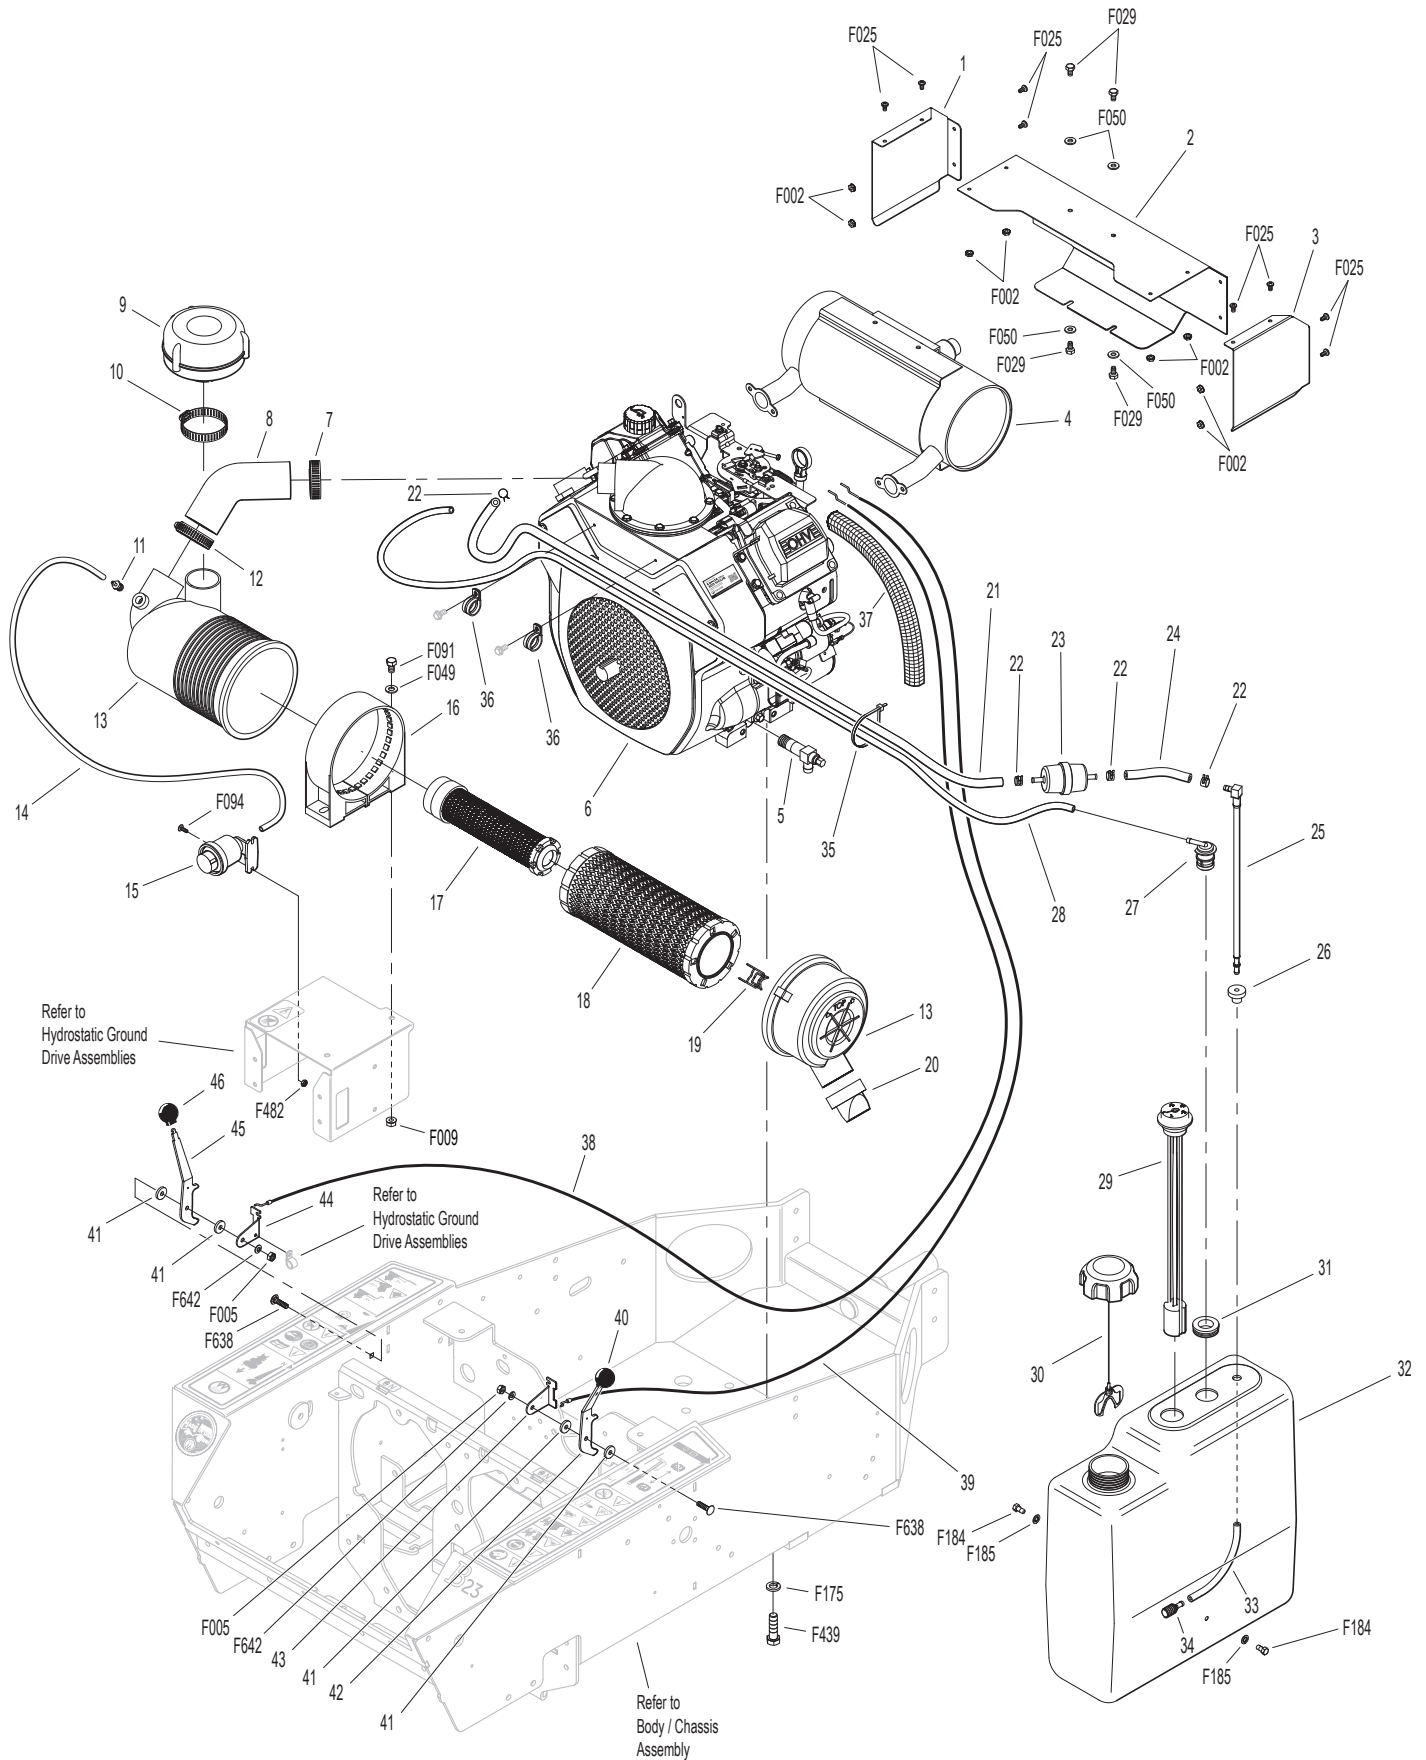

HYDROSTATIC GROUND DRIVE ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Ground Drive Assemblies				Wheel Assembly			
1	4023-1	Oil Expansion Reservoir Mount	1	46	5075-3	LP Wheel & Tire Assembly (18 x 8.50-10)	2
2	4023	Oil Expansion Reservoir	1		5075-2	LP Tire (18 x 8.50-10)	*
3	4010-17	Air Cleaner Mount	1		5075-5	LP Wheel (10 x 7)	*
4	2351-17	Flex Coupler Half (Includes Items # F171 & F435)	2		8075-4	LP Wheel & Tire (18 x 10.50-10)	***
					8075-6	LP Tire (18 x 10.50-10)	*
5	2351-1	Rubber Iso Coupler	3		8070-12	AT Wheel & Tire RH/LH (18 x 11.00-10)	***
6	4349-12	Flanged Bearing (1")	1		8070-13	AT Tire RH/LH (18 x 11.00-10)	*
7	4026-9	Pulley (53804)	2		8070-11	AT/LP Wheel (10 x 8.5)	*
8	4240-1	Drive Pulley (Includes Items # F065 & F171)	1		5076	BT Wheel & Tire Assembly (20 x 10.00-10)	***Δ
					5076-1	BT Tire (20 x 10.00-10)	*Δ
9	6349-2	Flanged Bearing (3/4")	1		5076-2	BT Wheel (10 x 7.00)	*Δ
10	4230-2	Ground Drive Belt	1	Fasteners			
11	5841	Retainer Washer (3/8 x 1-1/4)	1		F002	10-24 Keps Nut	3
12	7201-3	Fiberglide Bearing	2		F004	1/4-20 Keps Nut	9
13	4245	Idler Pulley (3/A)	1		F005	1/4-20 ESNA Nut	2
14	7201-5	Inner Race (2-1/4)	1		F009	5/16-18 Whiz Locknut	8
15	4325-13	Idler Arm (Includes Items # 12 & 17)	1		F012	3/8-16 Keps Nut	2
16	7364-2	Torsion Spring	1		F013	3/8-16 Whiz Locknut	6
17	5830-3	Grease Fitting (45 Deg.)	2		F015	1/2-20 Wheel Lug Nut	8
18	9430-1	Spacer Tube	4		F020	5/16-18 ESNA Nut	2
19	2026-6	Hydro-Gear® Oil Filter (52114)	2		F025	10-24 x 3/8 PPHMS	1
20	4025-34	Hydro-Gear ZT3100, LH	1		F026	10-24 x 1/2 PPHMS	2
21	4026-34	Hydro-Gear ZT3100, RH	1		F029	1/4-20 x 1/2 Hex Bolt	6
22	4407-4	Bow Tie Cotter Pin	4		F031	1/4-20 x 5/8 Hex Bolt	5
23	2028-5	Lockout Arm, LH	1		F034	5/16-18 x 3/4 Hex Bolt	8
24	2028-6	Lockout Arm, RH	1		F035	5/16-18 x 1-1/4 Hex Bolt	2
25	2025-17	Straight Thread Hose Fitting	2		F038	3/8-16 x 1 Hex Bolt	4
26	5879-3	Hose Clamp (1/2)	6		F040	3/8-16 x 1-1/2 Hex Bolt	1
27	M111	Hose (1/4 x 3-1/2)	2**		F042	3/8-16 x 2-1/4 Hex Bolt	2
28	8043-11	1/4 Barb Fitting "Y" Connector	1		F043	3/8-16 x 3 Hex Bolt	1
29	M111	Hose (1/4 x 27")	1**		F050	1/4 SAE Washer	2
30	5833-1	Cable Clamp (1/4 x 1/4)	1		F051	3/8 SAE Washer	1
Parking Brake Assembly					F052	5/16 Ext. Star Lock Washer	6
31	4406-46	Parking Brake Lever (Includes Items # 17 & 32)	1		F065	3/16 x 3/4 Woodruff Key (#606)	1
					F069	3/32 x 1/2 Cotter Pin	1
32	7406-1	Handle Grip, Red	1		F171	5/16-18 x 3/8 Set Screw	6
33	8655-4	Clevis Pin (5/16 x 3/4)	2		F182	1/4 x 5/8 x 1/8 Washer	4
34	4406-42	Brake Actuator Pull	1		F183	.312 x .700 x .074 Washer	5
35	2280	Clevis (3/8)	1		F336	3/8-16 Jam Nut	1
36	2406-4	Clevis Pin (5/16 x 1-1/8)	1		F350	1/4-20 LP Nylock	2
37	4401-6	Parking Brake Mount	1		F369	5/16-18 x 4-1/2 Hex Bolt	2
38	4401-7	Parking Brake Pivot	1		F434	5/16-18 x 3-1/2 Hex Bolt	4
39	4407-3	Parking Brake Actuator	1		F435	1/4 x 1/4 x 1-1/4 Key	2
40	4407-27	Parking Brake Bolt Stabilizer	1		F481	Washer 5/16 x 1 x .125	6
41	5665-1	Compression Spring (2-1/2)	2	* Service Part Only			
42	4407	Parking Brake Link	1	** Required hose specifications:			
43	5222	Extension Spring (1/2 x 3-1/4)	1	M111 - 1/4" ID fuel/oil/vapor hose (Gates 4219-0103 or equivalent)			
44	5463	Steering Lever Actuator	2	*** May be ordered as a factory-installed option or for dealer installation. Narrow Drive Tires are used when installing a 36" Deck. Contact your Walker dealer.			
45	5942-18	Parking Brake Safety Switch Mount	1	Δ Used only when Big Tire Option is installed			

HYDROSTATIC GROUND DRIVE ASSEMBLIES

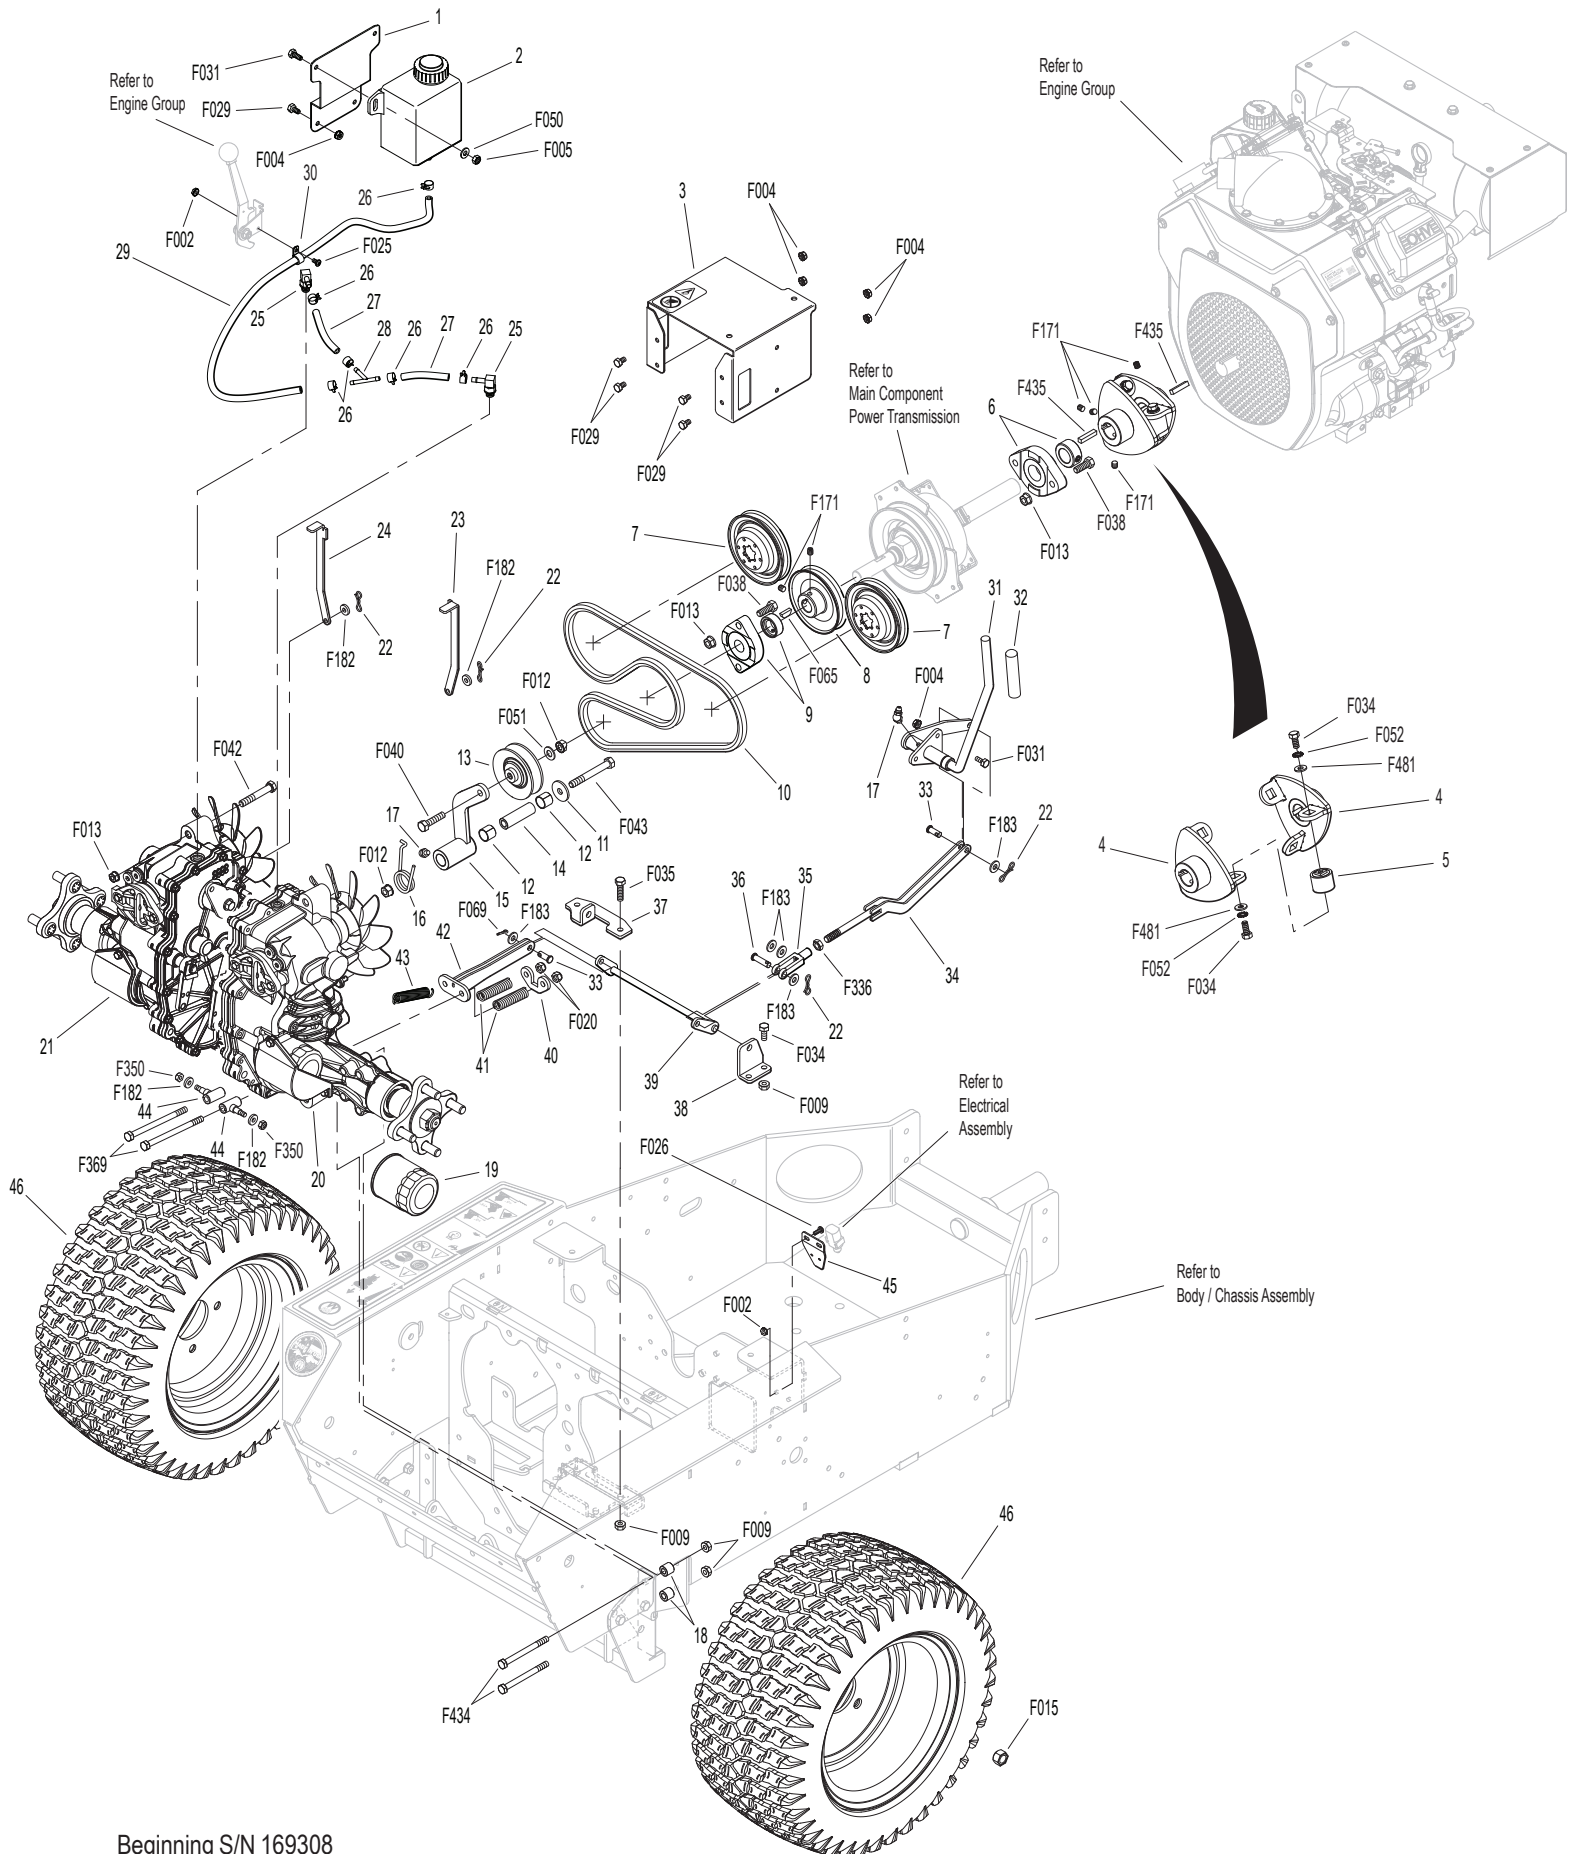


Beginning S/N 169308
Use only genuine **Walker®** replacement parts.

STEERING CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Steering Lever & FSC Assemblies				Fasteners			
1	5850-2	Handle Grip, Foam (5-1/2)	3	F004	1/4-20 Keps Nut		2
2	4170-2	FSC Lever	1	F005	1/4-20 ESNA Nut		2
3	4219-1	Extension Spring	1	F008	5/16-24 Keps Nut		2
4	4170-3	FSC Linkage	1	F010	5/16-24 ESNA Nut		2
5	5830	Grease Fitting	2	F013	3/8-16 Whiz Locknut		4
6	5146	10mm Ball Stud	4	F024	5/16-24 Jam Nut		2
7	4199-3	Steering Lever Dampener Assembly	2	F035	5/16-18 x 1-1/4 Hex Bolt		1
8	8201-3	Fiberglide Bearing	4	F044	5/16-24 x 3/4 Hex Bolt		2
9	5463-4	Steering Lever Actuator	2	F093	5/16-18 x 1 Hex Bolt		2
10	5665-1	Compression Spring (2-1/2)	2	F116	1/4-20 x 1-1/4 Hex Bolt		1
11	2213	Control Rod (7)	2	F146	1/4-20 Jam Nut		1
12	2212-3	Seal Retainer	2	F167	5/16-18 Hex Nut		1
13	5214-2	Ball Joint (5/16-24) (Nylon Lined)	2	F173	5/16-18 x 3/4 Carriage Bolt		1
14	6212-4	Transmission Control Arm	2	F183	.312 x .700 x .074 Washer		4
15	4451-16	Steering Pivot Shaft W/Stop	1	F188	1/4-20 Self-Locking Nut		4
16	6451-1	Speed Control Actuator, LH (Includes Items # 5 & 8)	1	F192	3/8-24 Self-Locking Nut		1
17	7201-2	Fiberglide Bearing (1/2")	2	F198	.250 x .625 x .040 Washer, SS		2
18	5463-5	Steering Arm Pivot Bushing (SS)	2	F312	3/8 x 3/8 Shoulder Bolt		2
19	5463-6	Washer 5/16 x 3/4 x .250	2	F345	1/4-20 x .770 Knurled Bolt		4
20	5453-10	Steering Lever Handle / Adjustable (Includes Items # 1 & F345)	2	F385	1/4 x 1-1/4 Roll Pin		1
21	6452-1	Steering Lever Tube W/Tab	2	F392	1/4-20 x 1 Set Screw, SS		1
22	5450	D-Clip	2	F407	Belleville Washer 3/8 x 1.187, SS		1
23	5222	Extension Spring (1/2 x 3-1/4)	2	F551	5/16-18 Flange Top Lock Nut		2
24	4452-6	Steering Pivot (1/4-20 x 1-5/8)	2	F571	5/16-18 x 7/8 Carriage Bolt		1
25	9704-3	Pivot Rod Bushing / Plastic	2	F582	Washer 5/16 x 7/8 x .125		2
26	4142-2	FSC Friction Washer (1-1/2 x 1-1/32 x 1/16)	1	F620	3/8-24 x 1-1/2 Hex Bolt		1
27	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	2				
28	4142-1	FSC Cam	1				
29	6451-4	Speed Control Actuator, RH (Includes Items # 5 & 8)	1				
30	4451-17	FSC Friction Actuator	1				

STEERING CONTROL ASSEMBLIES

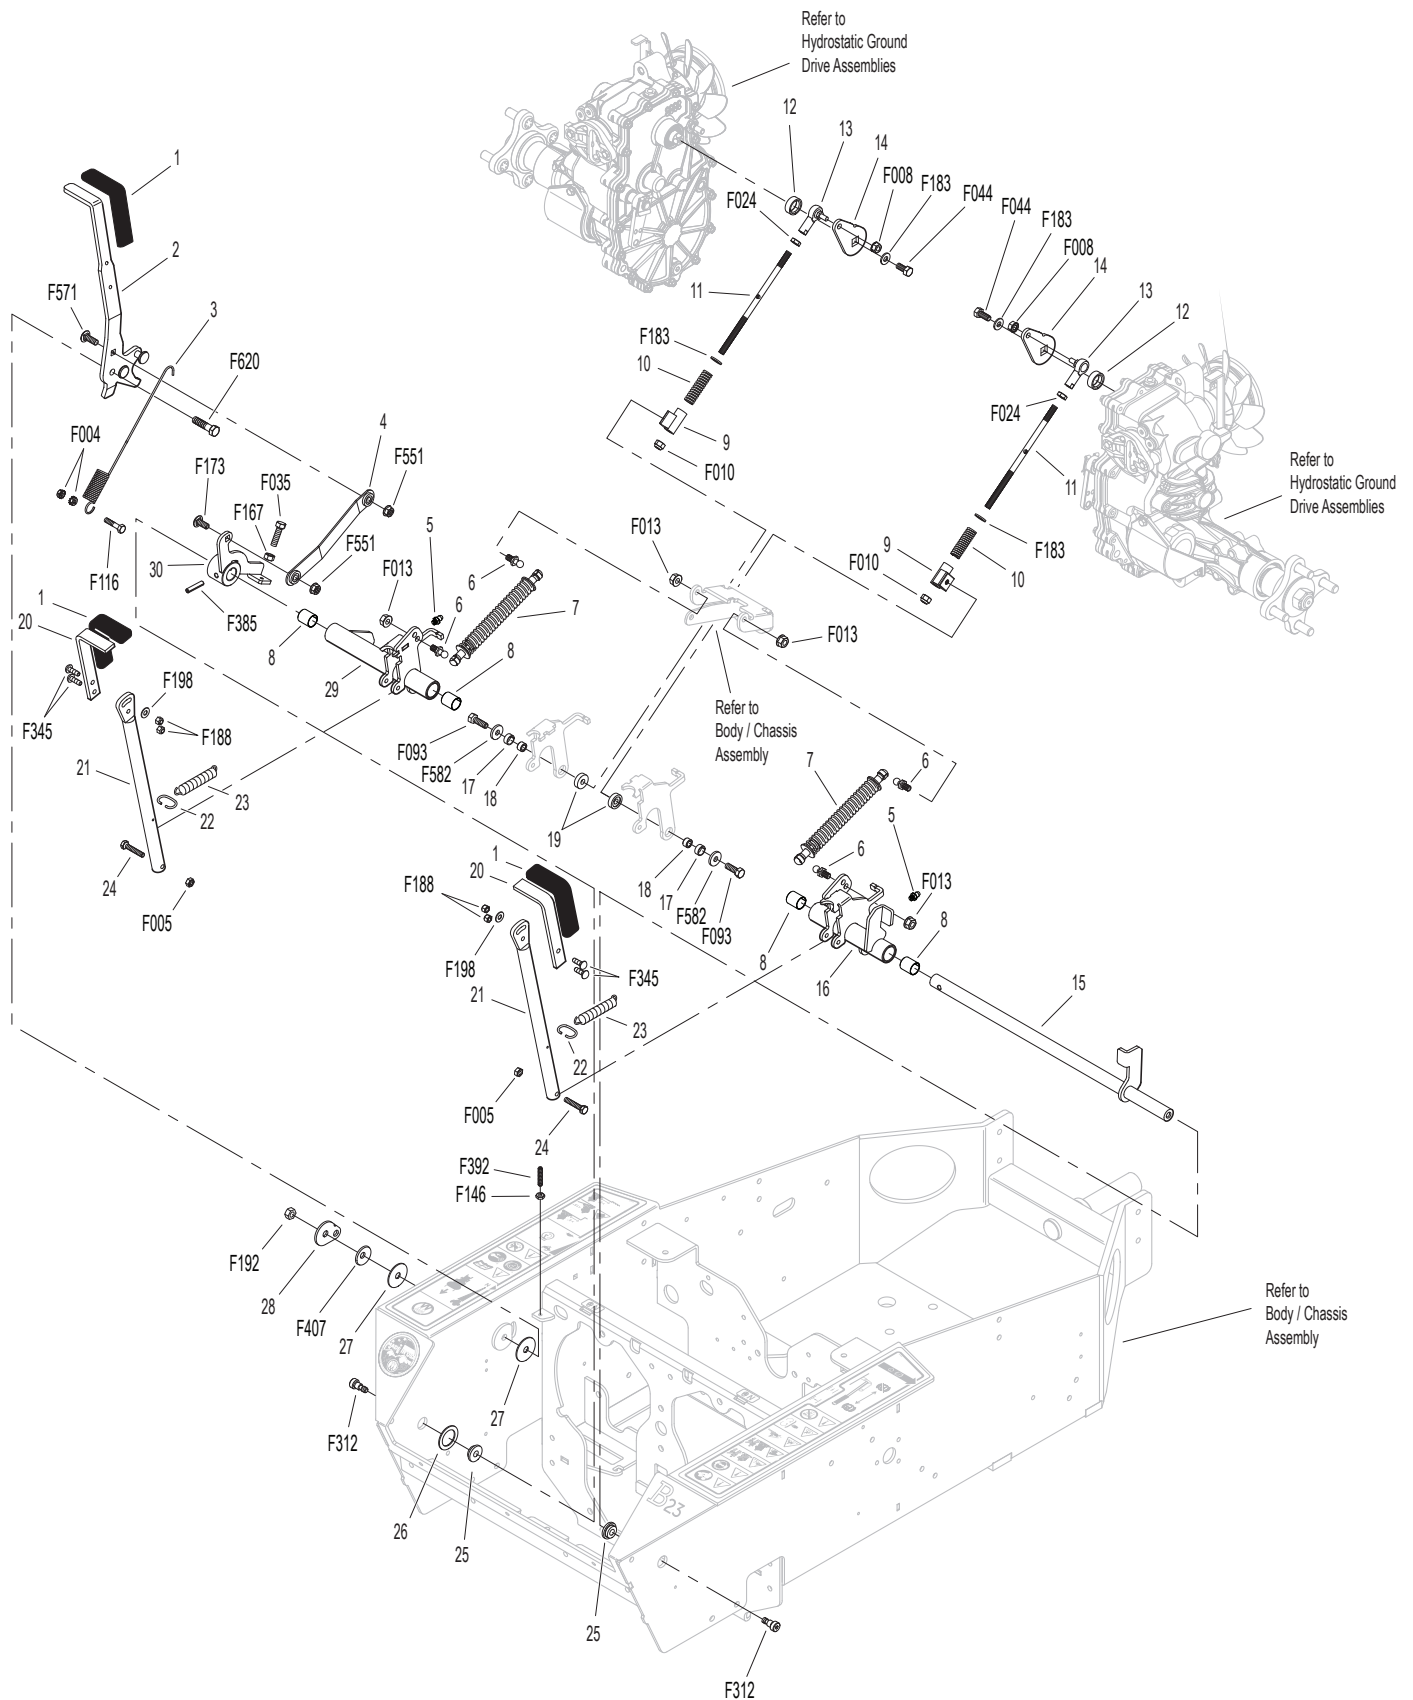


Beginning S/N 169308
Use only genuine **Walker®** replacement parts.

ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Electrical Assembly				Fasteners			
1	7834-3	Wire Saddle (3 Wires)	2	F002	10-24 Keps Nut		9
2	5832	Cable Clamp (1/2)	2	F004	1/4-20 Keps Nut		4
3	8990-1	Hourmeter (Global)	1	F019	1/4-20 ESNA Wing Nut		2
4	7854	Plastic Tip, Red	2	F025	10-24 x 3/8 PPHMS		2
5	5975-1	Cable Tie (18# x 3-3/4")	2	F026	10-24 x 1/2 PPHMS		6
6	5932	Battery Terminal Insulation Black (-)	1	F028	10-24 x 3/4 PPHMS		1
7	5933	Battery Terminal Insulation Red (+)	1	F029	1/4-20 x 1/2 Hex Bolt		1
8	4940-6	Battery Cable (33")	1	F031	1/4-20 x 5/8 Hex Bolt		2
9	6923-4	Battery Cable, 13-1/2" (-)	1	F050	1/4 SAE Washer		2
10	6942	Relay Switch 20/40 Amp (NC)	3	F182	1/4 x 5/8 x 1/8 Washer		2
11	8404-8	Plastic Cover, Red	2	F232	10-32 Keps Nut		2
12	8941	Circuit Breaker (30 Amp)	1	F349	Washer .835 ID 1.122 OD, SS		1
		Auto Reset/Sealed		F381	1/4-20 Hex Nut		1
13	4940-11	Jumper Wire	1	F475	1/4-20 x 1 PFH Screw		1
14	5942-8	Safety Switch (NO), Delta Side Mount	2	F505	6-32 x 7/8 Hex Trim MS, SS		4
15	5975-3	Cable Tie (50# x 7")	2	F506	6-32 Nylock Nut		4
16	4410-16	Soft Start Control	1				
17	4940-23	Wire Harness	1				
18	7948-6	Time Delay Module	1				
19	NS	Battery (12V/300 CA/Wet/SP-35)	1				
20	5839	Hook Bolt	2				
21	4910-1	Battery Hold Down Bracket	1				
22	2703-5	Knob, 10-24 x 1/2	2				
23	4910-5	Cover Plate	1				
24	8960-15	Ignition Switch W/Keys (Includes Items # 4, 25 & F349)	1				
25	8960-3	Key Set W/Umbrella	1				
26	4950	PTO Switch	1				
27	4950-10	PTO Switch Spacer	1				

ELECTRICAL ASSEMBLY

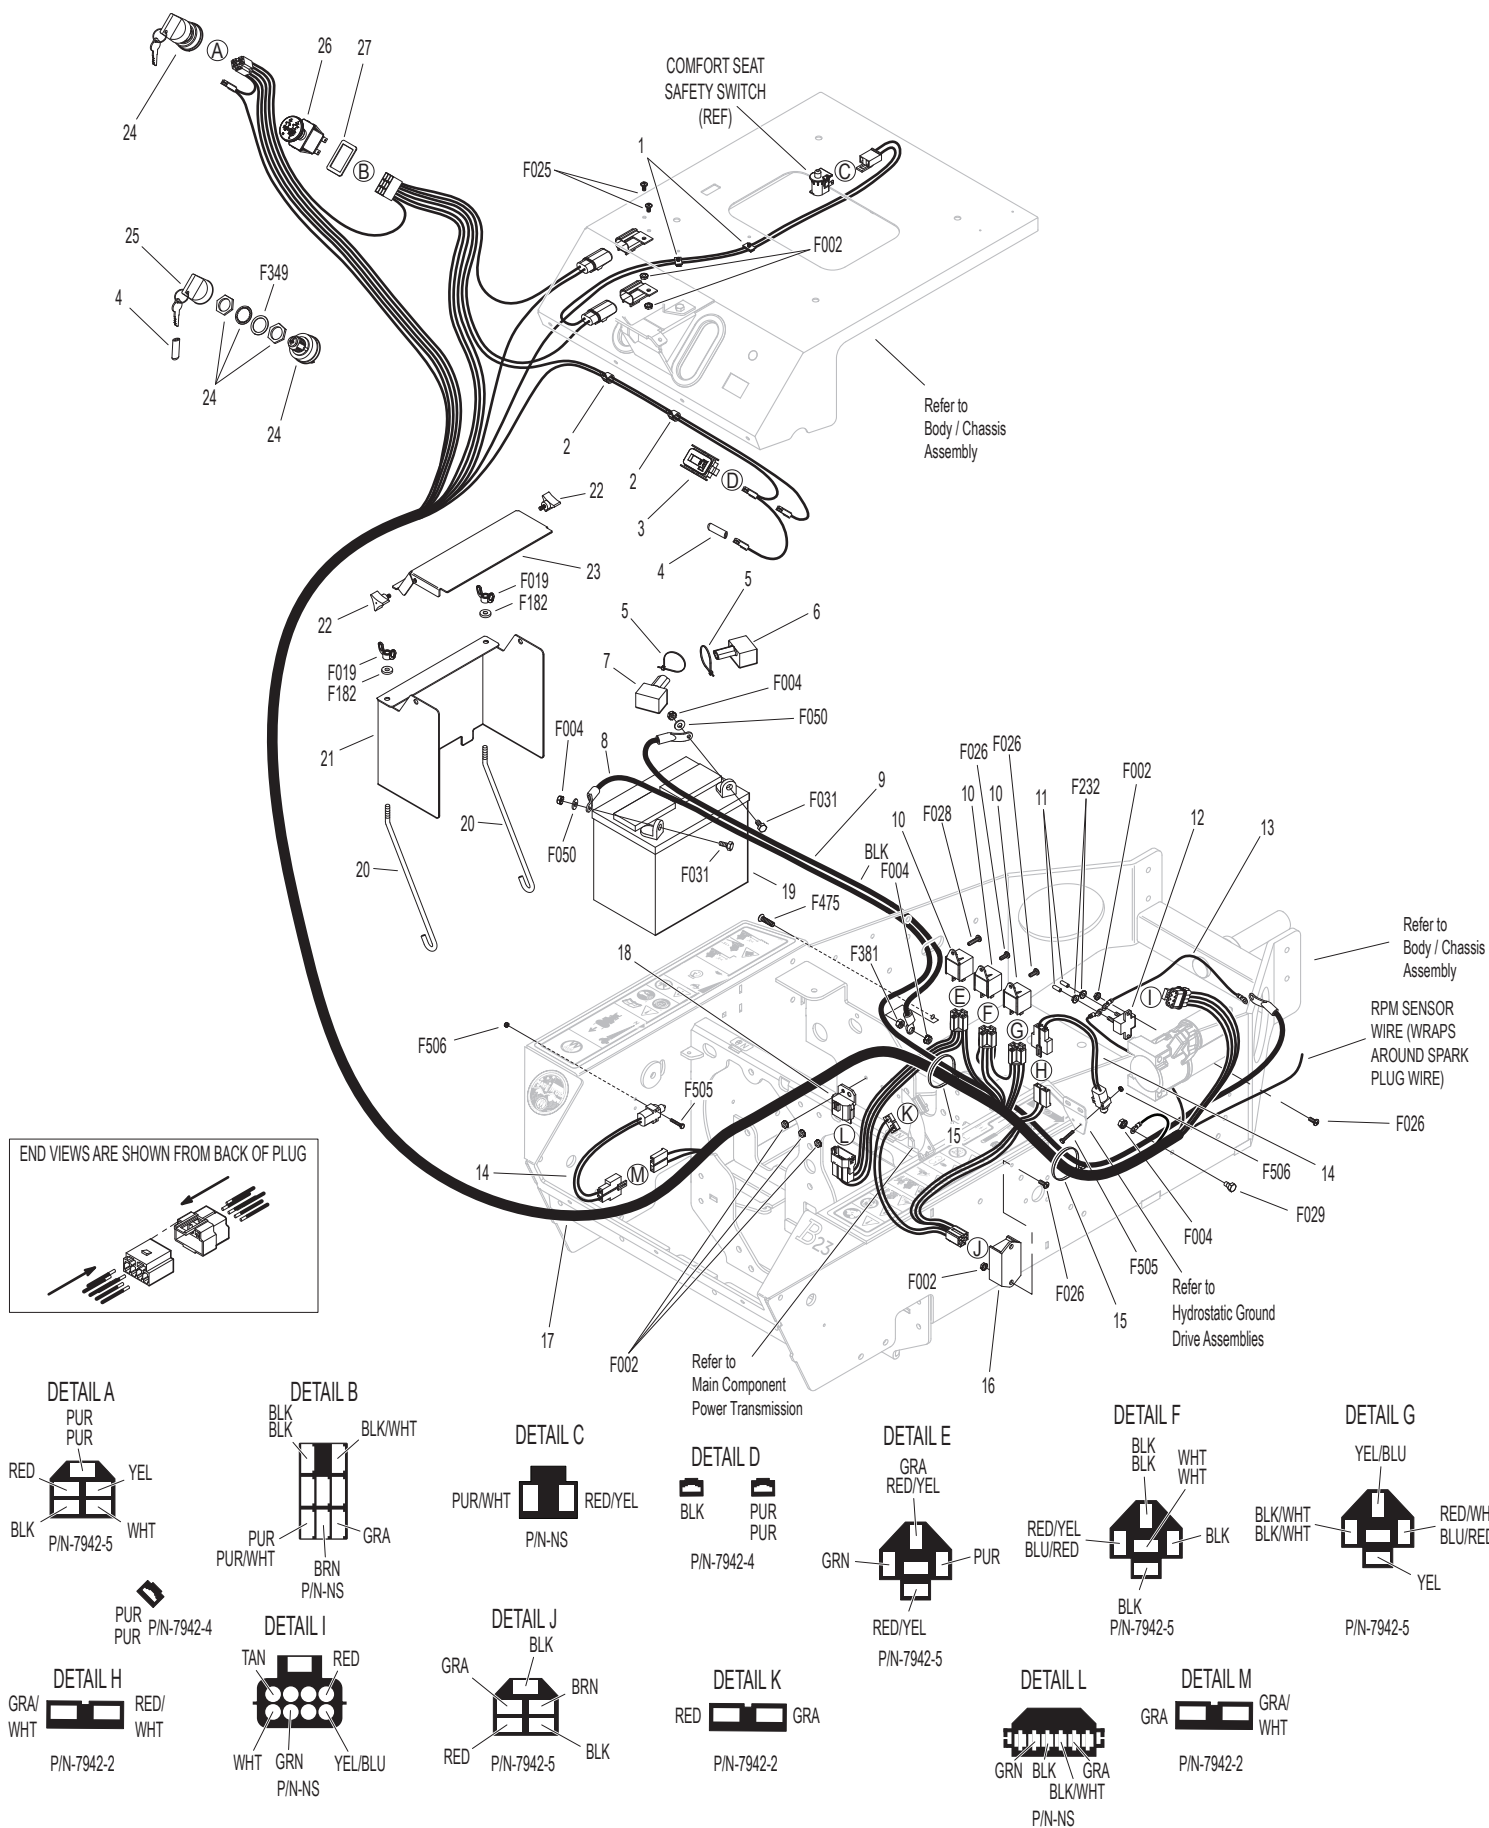


Beginning S/N 169308
Use only genuine **Walker®** replacement parts.


LUBRICATION POINTS

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES	ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points				13	Choke Control Cable Ends	Oil	2
1	Steering Lever Pivot	Grease	2	14	Engine Dipstick	Oil**	1
2	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1	15	PTO Belt Tightener Idler Pivot	Grease	1
3	Deck Support Arm Pivot	Grease	2	16	Parking Brake Clevis	Oil	2
4	Universal Joint Tube Assembly	Grease*	1	17	Body Latch Pivot	Oil	2
5	Universal Joint Quick Connect Spline (Grease Slide Area)	Grease	1	18	Parking Brake Lever Pivot	Grease	1
6	Throttle Control Pivot	Oil	1	19	Choke Control Pivot	Oil	1
7	Throttle Control Cable Ends	Oil	2	* Grease every 25 hours.			
8	Ground Drive Idler Pivot	Grease	1	** Refer to B23 Operator's Manual for procedure for checking and changing oil in Engine Crankcase.			
9	Transaxle Oil Reservoir	Oil/20W-50	1	NOTE: See Model B23 Operator's Manual (P/N 4000-35) for proper lubrication intervals.			
10	Engine Oil Fill	Oil**	1				
11	Tail Wheel Caster Fork Pivot	Grease	2				
12	Rear Axle Pivot	Grease	1				

LUBRICATION POINTS

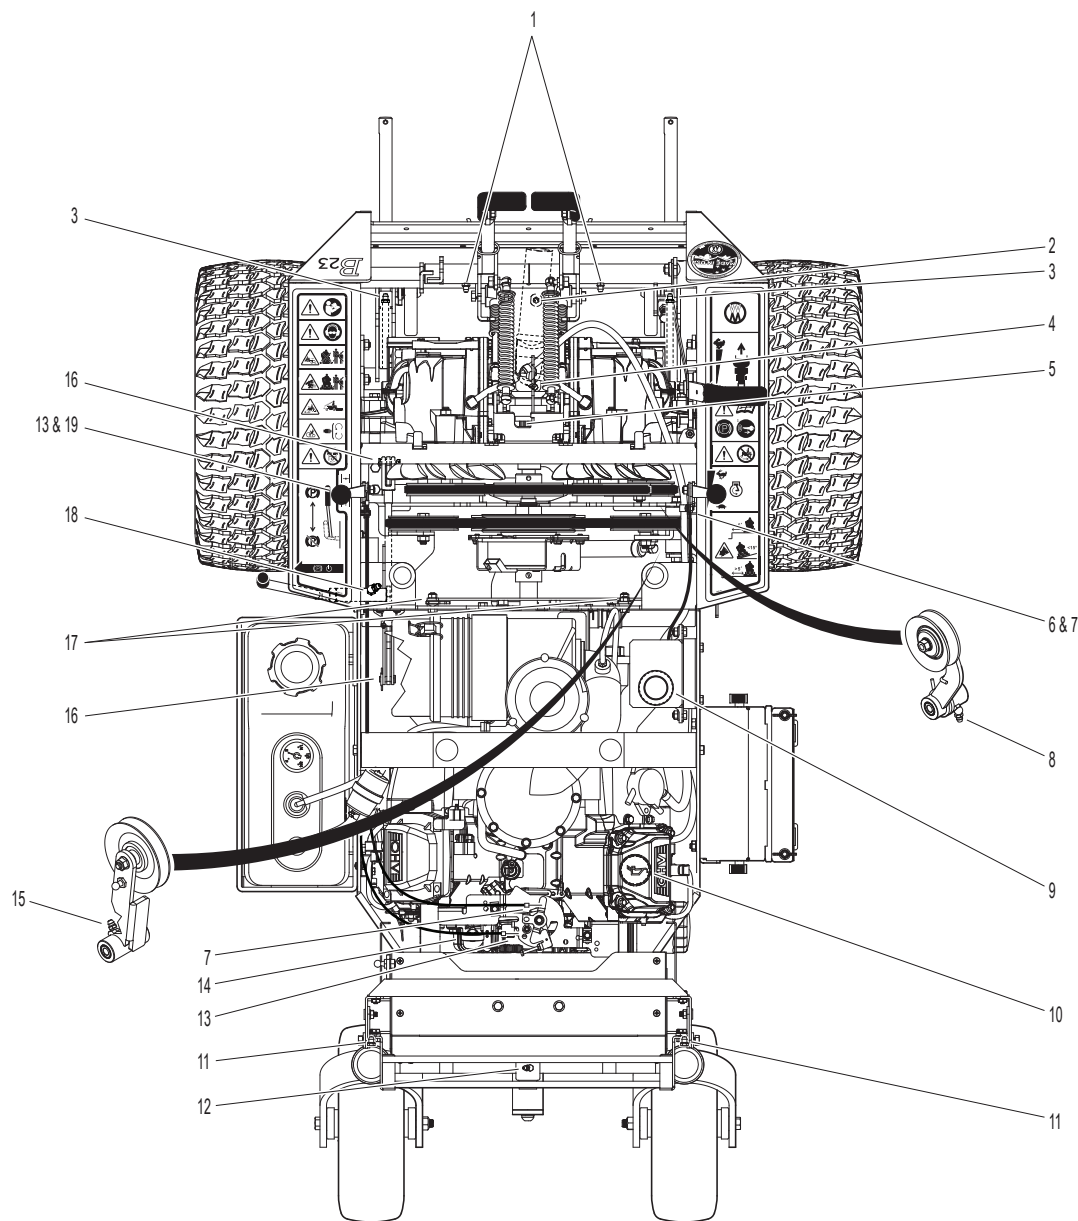

WIRING SCHEMATIC

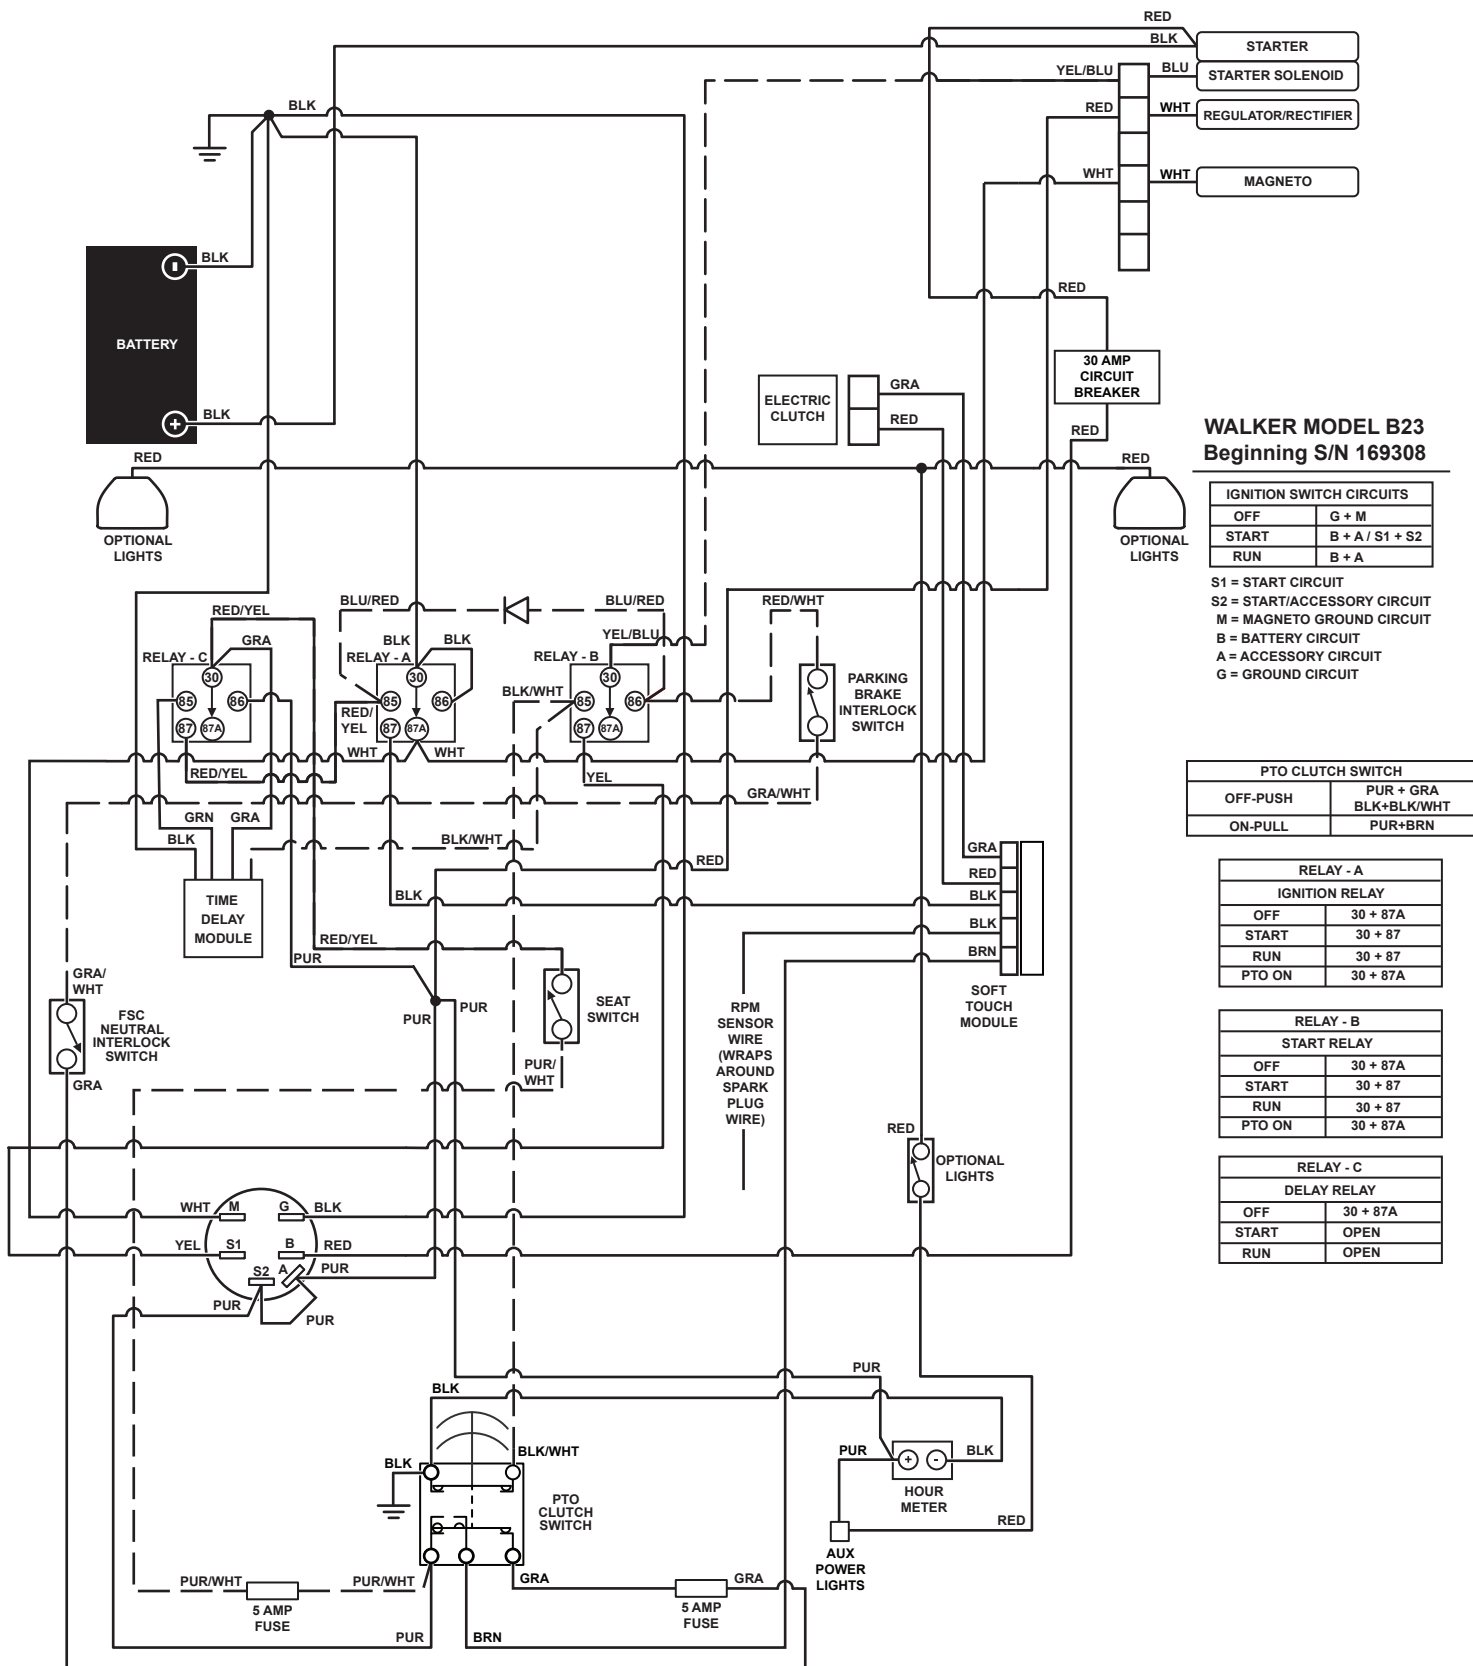

LIMITED WARRANTY FOR WALKER MODEL B23 RIDER MOWERS

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within two (2) years* after the date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Kohler Engine
Battery

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

* Extended warranties are offered for the following powertrain components:

- A two (2) year or 2000 hour (whichever comes first) warranty is offered for Hydro-Gear ZT3100 Hydrostatic transaxle; covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 2000 hours.

2. WHAT THIS WARRANTY DOES NOT COVER:


- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Operator's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

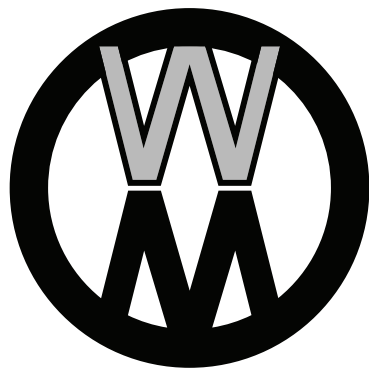

WALKER

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 050421 PRINTED IN USA www.walker.com ©2021 WALKER MFG. CO