Walker Rider Lawnmowers

ILLUSTRATED PARTS MANUAL

Model MS (13 HP) (Covers Serial Numbers 95-20381 and on)





KEY TO ABBREVIATIONS USED IN THIS MANUAL

Abbreviation What it Represents

((Dimension)	Dograda (Angla)
	Degrees (Angle)inches
	Negative (Polarity)
	Diameter
	Deck, Grass Handling System (number refers to size in inches)
	Deck, Mulching (number refers to size in inches)
	Deck, Side Discharge (number refers to size in inches)
	Nylon Insert Locknut
	Forward Speed Control
	Gauge
	gallon
	Grass Handling System
	Grade
	Horse Power
	Heat-Treated
	Identification or Inside Diameter
	Length
	Left Hand (orientated with operator on seat)
	Low Profile
	millimeters
	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
	ounce
	Phillips Flat Head
	Part Number
	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
	Power Take-Off
QKS	Quick Slide
	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	
SBH (Fastener)	Socket Button Head (Bolt)
SD	Side Discharge
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
	Spring
	Square Head
	Stainless Steel
,	Terminal
	Volts

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

ILLUSTRATED PARTS LIST

Section of Mower Covered Page		Section of Mower Covered	Page	
Decals		Electrical Components		
Tractor Decals	2	Electrical Assembly Electrical Assemblies	30	
Body / Chassis Assemblies		(GHS 6.7 Bushel Components)		
Body / Chassis Assembly (GHS Models) Body Assembly (SD Models)		Options and Kits		
Tractor Components		Armrest Kit / Touch-up Paint		
Main Component Power Transmission		Suspension Seat Kit	40	
(GHS Models)(SD Models)		Light Kit No Catch Deflector Kit (6.7 Bushel)		
Engine Group		Optional Tires & Tire Chain Sets	46	
Engine Group (Beginning Serial Number 2004-68821) Hydrostatic Ground Drive Assemblies		Maintenance		
Parking Brake Assembly		Lubrication Points	48	
Steering Control Assemblies		Wiring Schematic	50	
Throttle & Choke Control Assemblies		Operator's Notes	E4	
GHS Powerfil [®] Assembly		Operator's Notes	31	
GHS 6.7 Bushel Catcher &		Warranty		
Exhaust Deflector Assemblies	28	-		
		Limited Warranty	53	


TRACTOR DECALS

ITEM No.	PART NO.	DESCRIPTION	LOCATION	NO. REQ'D. GHS	NO. REQ'D SD
Walk	er Produc	t Decals			
1	5801	GHS	6.7 Bushel Catcher (one on each side)	2	0
2	5803	Walker Manufacturing Logo	Body	1	1
3	5856	Made in USA	Body, Spring Bracket	1	1
4	5800	Walker Mower (4 x 7-1/2)	Utility Bed (one on each side)	0	2
5	5813-1	Powerfil [®]	6.7 Bushel Catcher, Front	1	0
6	5802-2	LH Fender	Body, LH near Seat	1	1
7	5802-1	RH Fender	Body, RH near Seat	1	1
8	5806	Blade Clutch	Body, RH Side	1	1
Dang	er Decals	Warning Decals Caution Decals	S		
9	5861	Danger, Raised Body	Body - Underside, Center	1	1
10	5804	Danger, Rotating Blower Blades	Body near Body Chute	1	0
11	6810	Danger, Engine Exhaust	Engine	1	1
12	5868	Danger, Pinch Point	6.7 Bushel Catcher Mounting Frame Assembly	2	0
			(one on each side)		
13	5805	Caution, Engine Exhaust	Body, LH Side	1	1
Maint	tenance D	ecals			
14	5869	Removable Screen	6.7 Bushel Catcher Removable Screen	1	0
15	5815	Body Lift	Rear Bumper	1	1
16	5855	Important, Engine Cooling	Engine	1	1
17	5819	Blower Maintenance	Blower Housing	1	0
18	5810-2	Reservoir	Hydrostatic Drives (one on each)	2	2
19	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1	1
20	5874	Push to Release	6.7 Bushel Catcher Safety Latch	1	0
21	5810-1	Axle Oil Level	Gear Axle Drive Assemblies (one on each)	2	2
22	7809	Parking Brake	Body, RH below seat (Gear Drive Models only)	1	1
Optio	on Decals	k			
23	5877	Lights, On-Off	Body	1	1
	8500-8	No Catch Deflector	6.7 Bushel No Catch Deflector, LH Side	1	0
	8500-9	No Catch Deflector, Off-On	(Refer to 6.7 Bushel No Catch Deflector Kit Listing) Body, RH above fender	1	0
			(Refer to 6.7 Bushel No Catch Deflector Kit Listing)	·	-

^{*} Option Decals applied only to units with corresponding Options installed.

NOTE: All parts requiring decals are shipped with decals applied.

TRACTOR DECALS

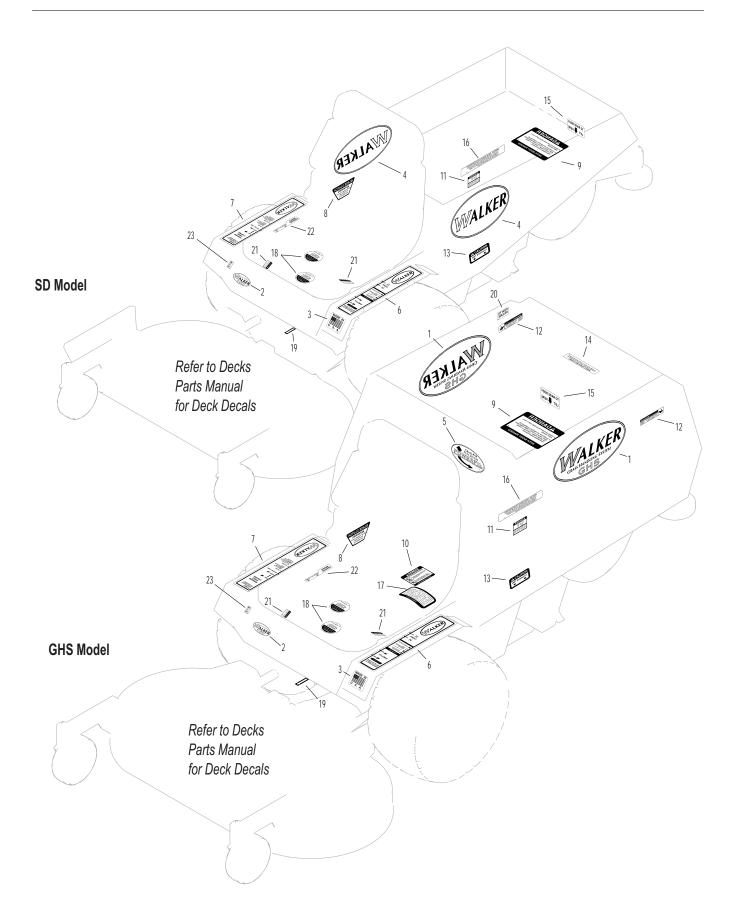

BODY / CHASSIS ASSEMBLY (GHS MODELS)

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Seat	Assembly			35	5035	Tail Wheel & Tire Assembly (13 x 6.50-6)) 1
Seat I	Assembly			33	5035-1	Tire Only (13 x 6.50-6)	<i>)</i>
1	5103	Seat	1		5036	Wheel & Hub Only (6 x 4.5)	*
2	7203	Seat Spring Plate	1	36	5038-1	Axle Spacer Tube (6-5/8)	1
3	7223	Compression Spring (1/2 x 1)	2	37	5127	Trash Guard	1
4	7846	Rubber Washer (3/8 ID x 1-1/4 OD x 1/8)		38	5033-2	Wheel & Tire Assembly (18 x 6.50-8)	2
5	7845	Rubber Bumper (1.375 OD x .63)	2	00	5030-2	Tire Only (18 x 6.50-8)	*
6	7204	Shoulder Bolt, Seat Mount	2		5031-2	Wheel Only (8 x 5.5)	*
7	7440-5	Shock Mount (1.25 D x .75)	2		5030-4	Tire Tube (18 x 8.50-8)	*
-		((_	39	5300-9	Chassis Frame	1
Rear	Bumper As	sembly (GHS Models Only)**		00	0000 0	Shaddid Famo	•
	•	2,		Faste	eners		
8	5566	Tilt Stop Strap	1				
9	5516	Rear Bumper (6.7)	1		F002	10-24 Keps Nut	4
10	7516-5	Catcher Pivot Bushing	2		F004	1/4-20 Keps Nut	2
11	5162	Roller Wheel (5")	2		F009	5/16-18 Whiz Locknut	11
12	7517-2	Catcher Pivot Plate	2		F012	3/8-16 Keps Nut	2
					F013	3/8-16 Whiz Locknut	2
Body	Assembly				F014	3/8-16 ESNA Nut	4
					F016	1/2-13 Self-Locking Nut	1
13	5100-6	Welded Body	1		F020	5/16-18 ESNA Nut	1
	5100-7	Welded Body	1		F026	10-24 x 1/2 PPHMS	3
		(Beginning S/N 2004-68821)			F027	10-24 x 5/8 PPHMS	1
14	5989-3	Dome Plug (5/16)	2		F029	1/4-20 x 1/2 Hex Bolt	2
15	5989-4	Dome Plug (3/8)	2		F031	1/4-20 x 5/8 Hex Bolt	1
16	7147	Spring Clip	2		F040	3/8-16 x 1-1/2 Hex Bolt	2
17	5145	Gas Spring Assembly	1		F048	1/2 SAE Washer	2
		(Includes Items # 16 & 18)			F051	3/8 SAE Washer	2
18	7146	13mm Ball Stud	2		F059	3/8 Wave Spring Washer	2
19	5154	Spacer, Gas Spring	1		F085	3/16 Rivet Backup Washer	1
20	5180	Edge Molding, Lever Opening	2		F087	#10 x 7/8 Fender Washer	2
21	5989-5	Dome Plug (7/16)	1		F091	5/16-18 x 5/8 Hex Bolt	4
22	NS	Body ID Plate	1		F093	5/16-18 x 1 Hex Bolt	5
					F113	5/16-18 x 5/16 Set Screw	2
Tilt-U	p Latch As	sembly			F151	3/8-16 x 7/8 Hex Bolt	2
23	5847	Plastic Tip	1		F157	1/2-20 x 1-1/4 Wheel Lug Bolt	8
24	5744-20	Tilt-Up Latch Spring Arm	1		F206	#2 x 3/16 Drive Pin	2
25	5744-10	Spring Pivot Bushing	1		F227	3/8 x 1-1/4 x 1/8 Plastic Washer	2
26	5744-15	Compression Spring (3/8 x 5/8)	1		F241	.375 x .875 x .10 Washer	4
27	5744-13	Mount Angle, LH	1		F292	1/2-13 x 8-1/2 Hex Bolt GR 2	1
28	5744-12	Hook, Tilt-Up Latch	1		F341	Coil Roll Pin (7/64 x 9/16)	1
29	5744-14	Mount Angle, RH	1		F342	5/16 Conical Washer	2
	sis Assemb	•		*	Service Part 0	Only	
Jiius	ois Asseill	··· ,					
30	5845	Rubber Bumper (1.50 OD x 1.25)	2			Assembly for SD Models is not shown	here.
31	5267-1	Retainer Collar (1")	1		Reter to BOD	Y ASSEMBLY (SD MODELS), Page 6.	
		(Includes Item # F113)					
32	5270-1	Pivot Bearing	2				
33	5420-2	Tail Wheel Fork	1				


2

Bearing

34

5037-1

BODY / CHASSIS ASSEMBLY (GHS MODELS)

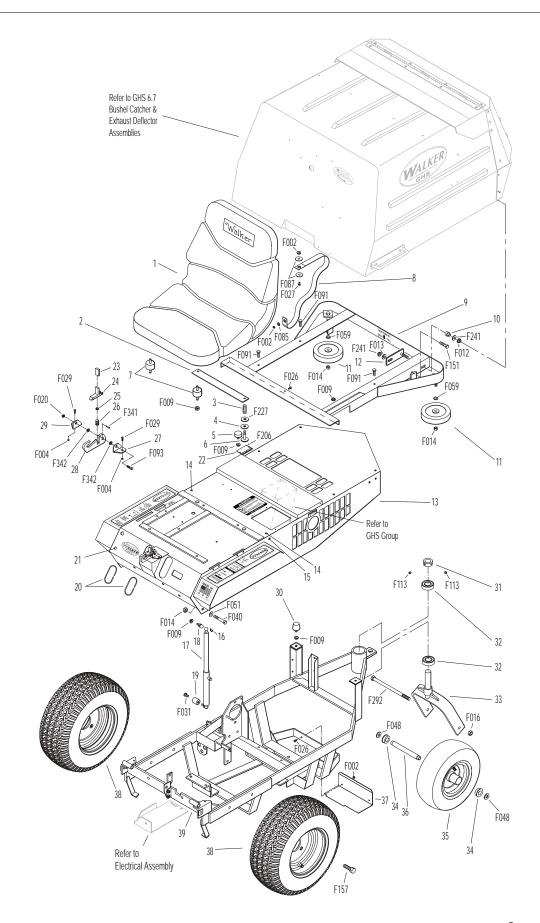


BODY ASSEMBLY (SD MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Utility	y Bed Asse	mbly		Faste	eners		
1	8650-10	Bed Liner	1		F002	10-24 Keps Nut	4
2	5650	Utility Bed	1		F005	1/4-20 ESNA Nut	2
3	5588	Rubber Bumper (.75 OD x .50)	3		F009	5/16-18 Whiz Locknut	8
4	5651-2	Utility Bed Mount, RH	1		F014	3/8-16 ESNA Nut	2
5	5652-3	Utility Bed Mount, LH	1		F020	5/16-18 ESNA Nut	2
		•			F025	10-24 x 3/8 PPHMS	4
Rear	Bumper As	ssembly (SD Models Only)*			F033	1/4-20 x 1 PTH Bolt	2
					F034	5/16-18 x 3/4 Hex Bolt	4
6	5112	Rear Bumper	1		F050	1/4 SAE Washer	2
7	5161	Bumper Pad	2		F059	3/8 Wave Spring Washer	2
8	5162	Roller Wheel (5")	2		F079	A/A66D Aluminum Pop Rivet	3
9	7153-3	Cover Plate	1		F084	5/16 Wave Spring Washer	2
					F087	#10 x 7/8 Fender Washer	3
					F091	5/16-18 x 5/8 Hex Bolt	6

^{*} Rear Bumper Assembly for GHS Models is not shown here. Refer to **BODY** / **CHASSIS ASSEMBLY** (**GHS MODELS**), Page 4.

NOTE: Refer to **BODY / CHASSIS ASSEMBLY (GHS MODELS),**Page 4, for all common parts used on both models.


BODY ASSEMBLY (SD MODELS)

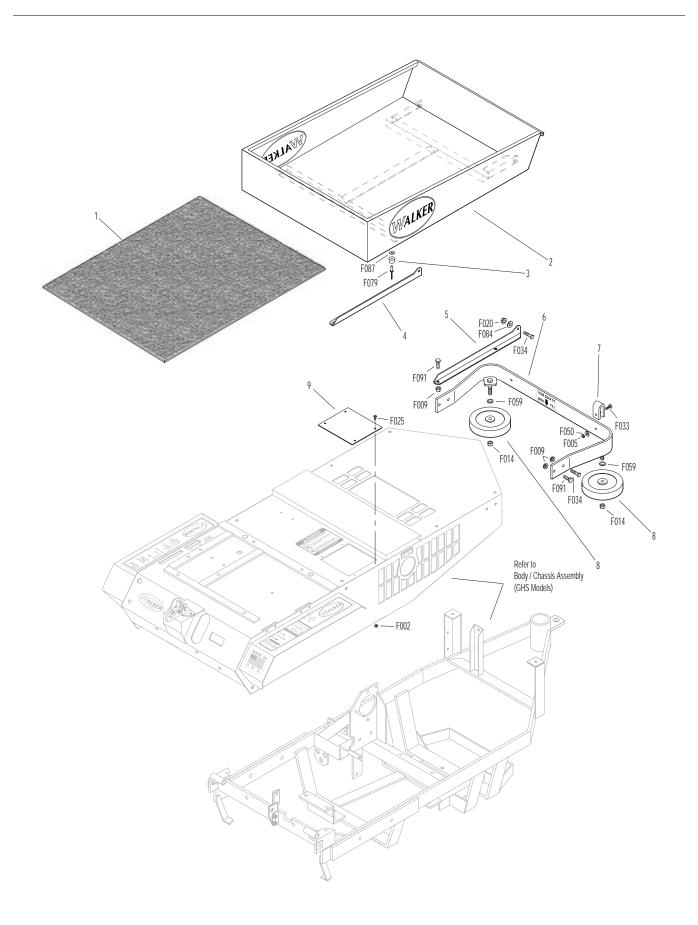

MAIN COMPONENT POWER TRANSMISSION (GHS MODELS)

NO.	PART NO.	DESCRIPTION	NO. REQ'D	NO.	PART NO.	DESCRIPTION	NO. REQ'I
Cluto	ch Control /	Assembly		РТО	Drive Shaft	Assembly	
1	5860	Knob, PTO Clutch	1	27	5236-1	Transmission Drive Pulley (3-1/4/A)	1
2	5281-2	Clevis Pin (5/16 x 7/8)	1			(Includes Items # F065 & F171)	
3	5830	Grease Fitting	5	28	5245	idler Pulley (3")	2
4	5229	Extension Spring (1/2 x 2-1/4)	1	29	5232	Ground Drive Belt (#6847 or AX45)	1
5	5244	PTO Idler Pulley (3-1/2)	1	30	5275-15	Universal Joint Tube Assembly	1
6	5346-3	PTO Belt Tightener	1			(Includes Item # F076)	
		(Includes Item # 3)		31	5264	Pillowblock Bearing, Short Mount	1
7	7226	Compression Spring (3/4 x 2-1/2)	1			(Includes Item # 3)	-
8	5406-2	Clutch Actuator	1	32	5274	PTO Drive Shaft	1
9	5410	Clutch Control Lever	1	33	5830-4	Grease Fitting (90 Degree)	1
Ů	0110	(Includes Item # 3)	•	34	5263	Pillowblock Bearing	1
		(morados nom m o)		01	0200	(Includes Item # 33)	•
Rlow	er Brake A	esembly		35	5050-1	Right Angle Gearbox	1
Diow	CI DIUNC A	Sociality		36	5480-2	Belt Guide, PTO Drive	1
10	5359-2	Brake Actuator Rod	1	00	0 100 Z	Boil Guide, 1 10 Billy	
11	5529-1	Spring, Blower Brake	1	Faste	nore		
12	5357-3	Brake Actuator Arm	1	i aste	,11013		
13	5355-3	Retainer Clip	1		F002	10-24 Keps Nut	2
14	5355-2	Brake Actuator Link	1		F004	1/4-20 Keps Nut	1
15	5360	Brake Mount	1		F012	3/8-16 Keps Nut	17
16	5355-1	Brake Link	1		F023	10-24 ESNA Nut	1
17	5358	Brake Bar	1		F032	1/4-20 x 3/4 Hex Bolt	1
17	0000	Diake Dai	'		F038	3/8-16 x 1 Hex Bolt	6
Engi	ne Relt Tial	htener Assembly			F039	3/8-16 x 1-1/4 Hex Bolt	5
Liigii	ne ben ngi	mener Assembly			F040	3/8-16 x 1-1/2 Hex Bolt	4
18	5240-2	Compound Pulley (4-1/4 / A/B)	1		F049	5/16 SAE Washer	1
19	5230-2	Engine Belt	1		F051	3/8 SAE Washer	4
	0200 2	(#6932 or BX30)	•		F054	AN960616 Washer	2
20	5247-2	V-Groove Idler Pulley (4")	1		F065	3/16 x 3/4 Woodruff Key (#9)	2
21	5237	Engine Pulley (4 / B)	1		F066	1/4 x 1/4 x 3/4 Key	1
22	5495	Engine Belt Tightener Assembly	1		F067	3/16 x 3/16 x 1 Key	1
	0.00	(Includes Item # 3)	•		F076	3/8-16 x 5/8 SQH Set Screw	1
23	5221	Extension Spring, Transmission (3/4 x 4)	1		F111	1/8 x 3/4 Cotter Pin	1
	0221	Extension opining, transmission (6/1 x 1)	•		F113	5/16-18 x 5/16 Set Screw	2
Trans	smission R	elt Tightener Assembly			F115	#8 SAE Washer	1
	J	on rightenor recombly			F120	AN960416 Washer	1
24	5290-2	Belt Tightener Arm	1		F127	1/16 x 1/2 Cotter Pin	2
	v =	(Includes Item # 3)	=		F133	1/4 Wave Spring Washer	4
25	5227-1	Extension Spring (1/2 x 4)	2		F136	AN960C416L Washer	4
26	6237	Bolt & Spring Hook	1		F138	3/8-16 x 1/2 x 1-1/2 SHL Bolt	1
		2 2. 2F9	•		F156	3/16 x 3/16 x 1-1/4 Key	1
					F171	5/16-18 x 3/8 Set Screw	4
					F291	0/ 10-10 V 0/0 OC! OC!CM	4


MAIN COMPONENT POWER TRANSMISSION (GHS MODELS)

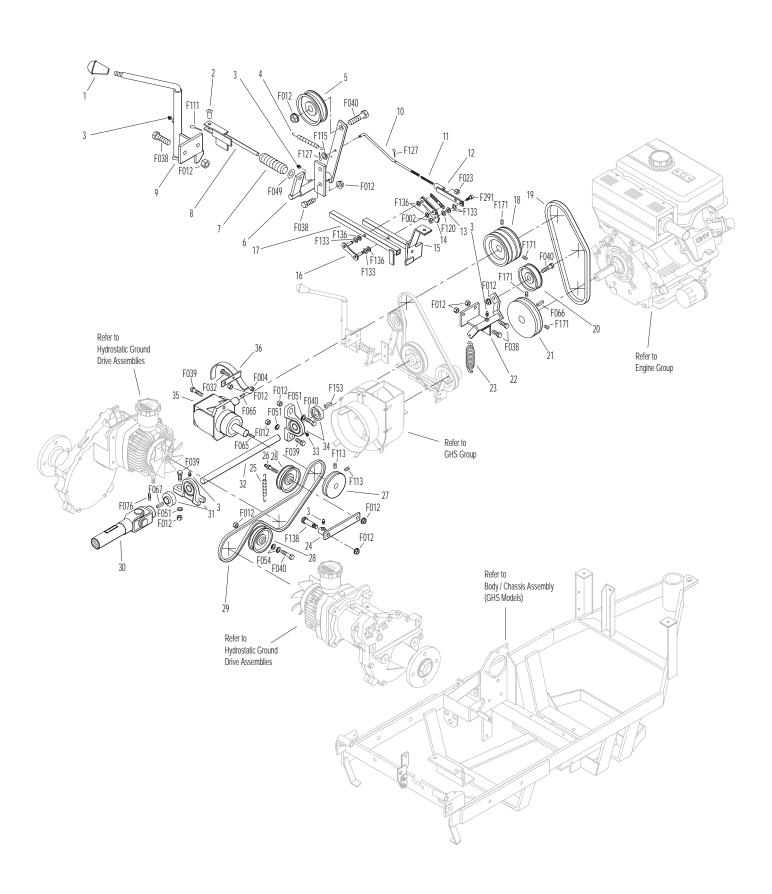

MAIN COMPONENT POWER TRANSMISSION (SD MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Cluto	h Control	Assembly		23	5275-15	Universal Joint Tube Assembly	1
1	5860	Knob, PTO Clutch	1	24	5264	(Includes Item # F076) Pillowblock Bearing, Short Mount	1
2	5281-2	Clevis Pin (5/16 x 7/8)	1	24	3204	(Includes Item # 3)	ı
3	5830	Grease Fitting	5	25	5274	PTO Drive Shaft	1
4	5244	PTO Idler Pulley (3-1/2)	1	26	5050-1	Right Angle Gearbox	1
5	5229	Extension Spring (1/2 x 2-1/4)	1	27	5480-2	Belt Guide, PTO Drive	1
6	5346-1	PTO Belt Tightener	1	21	0400-2	Bolt Guide, 1 10 Blive	Į.
Ū	00101	(Includes Item # 3)	•	Trans	mission Re	elt Tightener Assembly	
7	7226	Compression Spring (3/4 x 2-1/2)	1	Hans	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	or rightener Assembly	
8	5406-2	Clutch Actuator	1	28	5290-2	Belt Tightener Arm	1
9	5410	Clutch Control Lever	1	20	0200 2	(Includes Item # 3)	•
Ü	0110	(Includes Item # 3)	•	29	5227-1	Extension Spring (1/2 x 4)	2
		(morados nom m o)		30	6237	Bolt & Spring Hook	1
Engir	ne Belt Tial	htener Assembly			··	zon a opinig moon	•
		,		Faste	eners		
10	5240-2	Compound Pulley (4-1/4 / A/B)	1				
11	5230-2	Engine Belt	1		F002	10-24 Keps Nut	1
		(#6932 or BX30)			F004	1/4-20 Keps Nut	1
12	5247-2	V-Groove Idler Pulley (4")	1		F012	3/8-16 Keps Nut	17
13	5237	Engine Pulley (4 / B)	1		F032	1/4-20 x 3/4 Hex Bolt	1
14	5495	Engine Belt Tightener Assembly	1		F038	3/8-16 x 1 Hex Bolt	6
		(Includes Item # 3)			F039	3/8-16 x 1-1/4 Hex Bolt	5
15	5221	Extension Spring, Transmission (3/4 x 4)	1		F040	3/8-16 x 1-1/2 Hex Bolt	4
		, ,			F049	5/16 SAE Washer	1
РТО	Drive Shaf	t Assembly			F051	3/8 SAE Washer	4
		•			F054	AN960616 Washer	2
16	5238-2	PTO Drive Pulley (5 / B)	1		F065	3/16 x 3/4 Woodruff Key (#9)	2
		(Includes Items # F075 & F114)			F066	1/4 x 1/4 x 3/4 Key	1
17	5234-1	SD PTO Belt (6935 Gates)	1		F067	3/16 x 3/16 x 1 Key	1
18	5263	Pillowblock Bearing	1		F075	5/16-18 x 1/2 SQH Set Screw	1
		(Includes Item # 19)			F076	3/8-16 x 5/8 SQH Set Screw	1
19	5830-4	Grease Fitting (90 Degree)	1		F111	1/8 x 3/4 Cotter Pin	1
20	5236-1	Transmission Drive Pulley (3-1/4/A)	1		F113	5/16-18 x 5/16 Set Screw	2
		(Includes Items # F065 & F171)			F114	5/16-18 x 5/8 SQH Set Screw	1
21	5245	Idler Pulley (3")	2		F138	3/8-16 x 1/2 x 1-1/2 SHL Bolt	1
22	5232	Ground Drive Belt (#6847 or AX45)	1		F153	3/16 x 3/16 x 1-1/4 Key	1
					F171	5/16-18 x 3/8 Set Screw	4


MAIN COMPONENT POWER TRANSMISSION (SD MODELS)

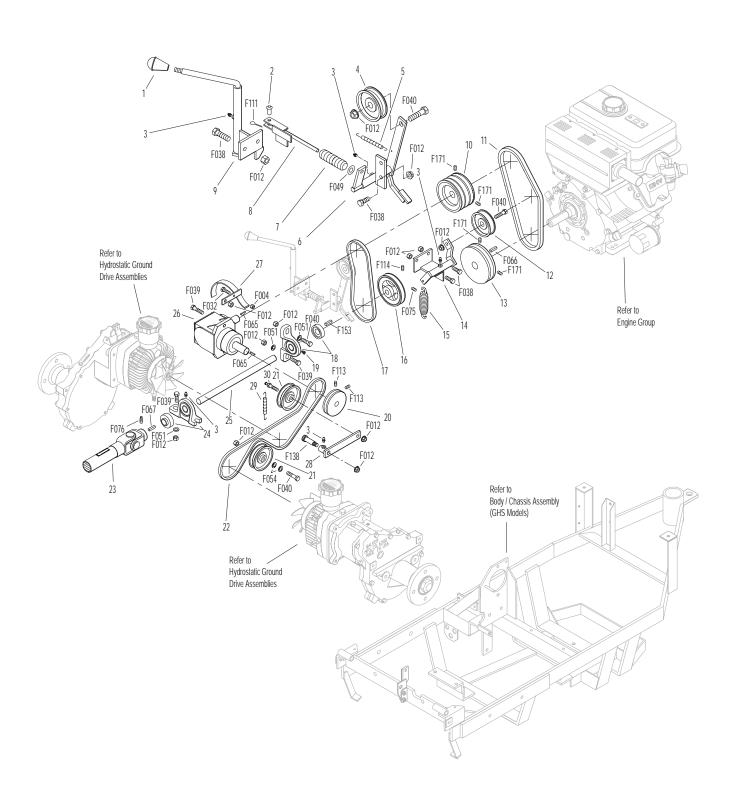

ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Air C	leaner & Eı	ngine Assembly		Fast	eners		
1	5090	Air Cleaner w/Valve	1		F009	5/16-18 Whiz Locknut	2
		(Includes Items # 2-5 & 18)			F023	10-24 ESNA Nut	1
2	5090-2	Vacuator™ Valve	1		F026	10-24 x 1/2 PPHMS	1
3	5088-5	Air Cleaner Draw Latch	2		F091	5/16-18 x 5/8 Hex Bolt	2
4	5090-1	Air Cleaner Cartridge	1		F190	#10 Internal Star Lock Washer	2
5	5090-3	Safety Filter	1		F217	7/16-14 Hex Nut	4
6	5088-1	Air Cleaner Band	1		F218	7/16 Split Lock Washer	4
7	7840	Hose Clamp (1-5/16 to 2-1/4)	2		F281	7/16-14 x 1-3/4 Hex Bolt	4
8	5087	Air Intake Hose	1		F313	M5 x .8 x 12 Machine Screw	2
9	5123	Throttle / Choke Mount	1				
	5128	Choke Arm & Mount Assembly (Includes Items # 9, 16, 17, F023 & F026	*	*	Service Pa	rt Only	
10	NS	Oil Filter (Kawasaki 49065-2071)	, 1				
11	NS	O-Ring (Kawasaki 670B2015)	1				
12	NS	Engine Plug (Kawasaki 92066-2003)	1				
13	NS	13 hp Engine (Kawasaki FE4000, AS04) (Includes Items # 12, 13 & 15)	1				
14	NS	Muffler (Kawasaki 49069-2285-9X)	1				
15	NS	Fuel Tank (Kawasaki 51001-2258-9H)	1				
16	5124	Choke Actuator Arm	1				
17	5982-2	Insulator Bushing	2				
18	5091-11	Air Flow Indicator & Nipple	1				


ENGINE GROUP

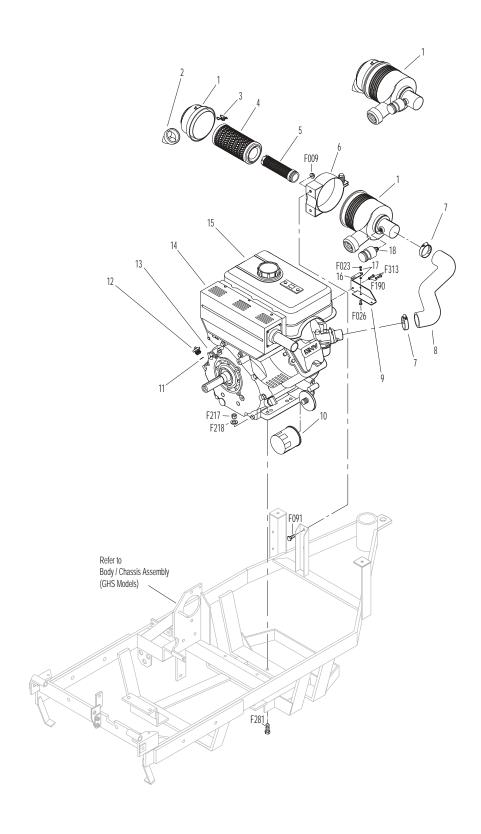

ENGINE GROUP (BEGINNING S/N 2004-68821)

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Engir	ne Assemb	ly		Faste	eners		
1	5100-7	Body	1		F032	1/4-20 x 3/4 Hex Bolt	2
2	NS	13 hp Engine (Kawasaki FE4000, AS04)) 1		F050	1/4 SAE Washer	2
3	7833	Cable Clamp (7/8 x 1/4)	1		F061	1/4 Star Lock Washer	2
4	8123	Insulating Sleeve (3/8 x 6)	1		F184	1/4-20 x 1/2 Hex Bolt, SS	4
5	NS	Gasket, Muffler (Kawasaki 11061-2078)	1		F185	1/4 Internal Star Lock Washer	4
6	NS	Washer (Kawasaki 461F0800)	2				
7	NS	Nut (Kawasaki 317R0800)	2				
8	5013-4	Exhaust Pipe	1				
9	5013-2	Muffler, Kawasaki	1				
10	5013-3	Muffler Heat Shield	1				


ENGINE GROUP (BEGINNING S/N 2004-68821)

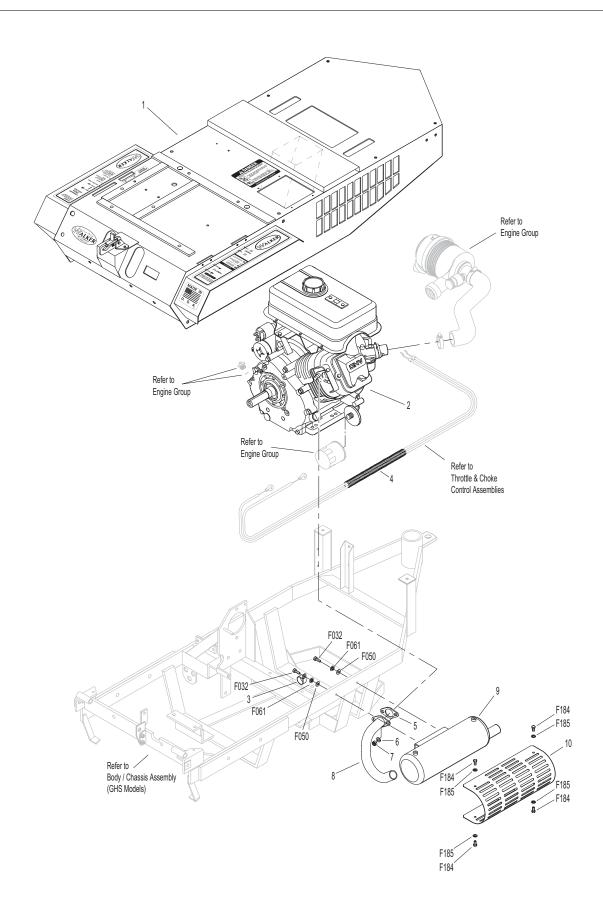

HYDROSTATIC GROUND DRIVE ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Trans	smission L	ockout Assembly		Trans	smission R	epair Parts	
1	5028-3	Transmission Lockout Assembly	*	28	5025-5	Input Shaft	*
		(Includes Items #2-5, F023 & F027)		29	5025-8	Bearing, Input Shaft	*
2	5847	Plastic Tip	2	30	5025-7	Snap Ring	*
3	5057	Lockout Cam	2	31	5025-2	Seal, Input Shaft	*
		(Includes Item # F081)		32	5022	Reservoir to Casting Gasket	*
4	5028-5	Lockout Lever	2	33	5024	Reservoir Cap and Gasket	*
5	5027-5	Lockout Mount	2	34	5023	Transmission Reservoir Kit	*
				35	5023-1	Rubber Bladder	*
Grou	nd Drive A	ssemblies		36	5025-6	O-Ring & Plug Assembly	*
				37	5025-3	Seal, Control Shaft	*
6	5227-1	Extension Spring (1/2 x 4)	2				
7	5236-1	Transmission Drive Pulley (3-1/4 / A) (Includes Item # F171)	1	Fast	eners		
8	5209-3	Bridge Assembly	1		F012	3/8-16 Keps Nut	1
9	6832	Cable Clamp (9/16 x 1/4)	1		F023	10-24 ESNA Nut	2
10	6200-9	Gear Axle Drive Assembly	2		F027	10-24 x 5/8 PPHMS	2
		(Includes Item # 14)			F036	1/4-20 x 1/2 SBH Screw	2
11	5025	Hydrostatic Drive, CCW (700-042)	1		F038	3/8-16 x 1 Hex Bolt	4
12	6243-2	Hydro Fan, CCW	1		F040	3/8-16 x 1-1/2 Hex Bolt	4
13	5026	Hydrostatic Drive, CW (700-041)	1		F043	3/8-16 x 3 Hex Bolt	7
14	6206-1	Pressure Relief Valve	*		F053	7/16 Internal Star Lock Washer	4
15	5126	Cable Retainer	1		F063	3/8 Internal Star Lock Washer	16
		(Uses existing bolt			F064	1/8 x 1/2 Woodruff Key (#3)	4
		Gear Axle Drive Assembly)			F081	A/A45D Aluminum Pop Rivet	2
16	6233-1	Pinion Gear	2		F160	External Snap Ring (.669 Shaft)	2
17	6234	Spacer, Pinion Gear	2		F171	5/16-18 x 3/8 Set Screw	2
18	6201	O-Ring Seal	2		F178	1/4 x 1 Fender Washer	2
19	6244	Hydro Pulley (3-7/8)	2		F194	7/16 x 1-1/4 x 1/8 Washer	2
. •		(Includes Items # F064 & F359)	_		F200	7/16-20 x 3 Grade 8 Bolt	2
20	6243-1	Hydro Fan, CW	1		F244	7/16-20 x 3/4 Hex Bolt	2
	02101	riyaro ran, orr	•		F262	3/8-16 x 4 Hex Bolt (Spec) All Thread	1
Deck	Support A	rm Assemblies			F359	5/16-18 x 5/16 Set Screw	4
DCCK	Cupport	an Assembles			1 000	(Unbrako Knurl Point)	7
21	5830	Grease Fitting	2			(Onbrake Wildin'i Olity	
22	6840-1	Support Arm Bushing (2-1/16)	2	*	Service Par	t Only	
23	6430-10	Outboard Mount, LH	1		OCT VICE T AI	Comy	
24	6430-2	Deck Support Arm, LH	1				
27	0400-2	(Includes Item # 21)	ı				
25	5775-2	Hitch Pin (# 6)	2				
26	6430-1	Deck Support Arm, RH	1				
20	U 1 3U-1	(Includes Item # 21)	I				
27	6430-9	Outboard Mount, RH	1				
۷1	U 1 3U-3	Outboard Mount, NT	ı				

HYDROSTATIC GROUND DRIVE ASSEMBLIES

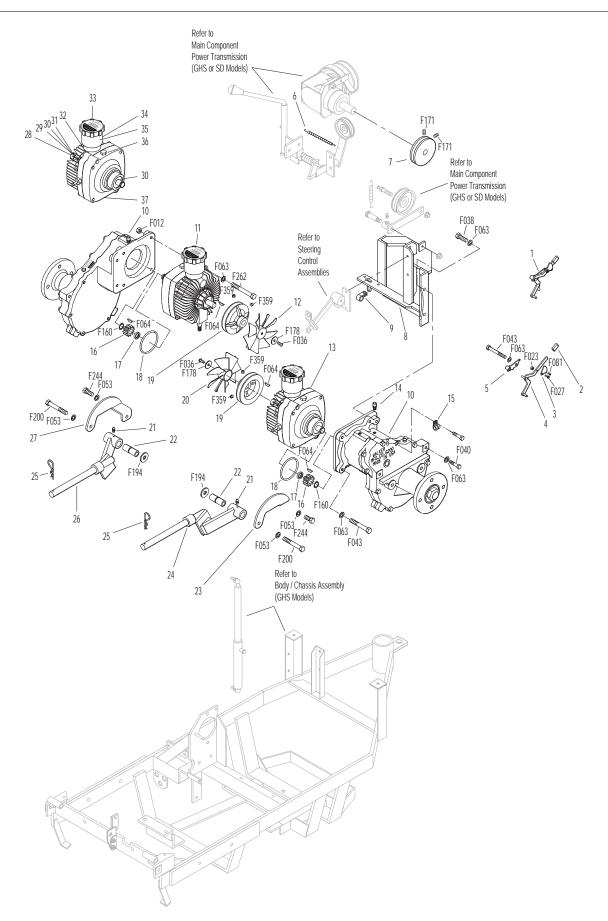


Effective Date 03-02-04

PARKING BRAKE ASSEMBLY

ITEM	PART	DESCRIPTION	NO.	ITEM	PART	DESCRIPTION	NO.
NO.	NO.		REQ'D	NO.	NO.		REQ'D
Parki	ng Brake A	Assembly		Faste	eners		
1	7406-1	Handle Grip, Red	1		F002	10-24 Keps Nut	2
2	7406-8	Parking Brake Lever	1		F003	1/4-28 Hex Nut	1
3	7406-2	Lever Mount	1		F004	1/4-20 Keps Nut	4
4	5830	Grease Fitting	1		F025	10-24 x 3/8 PPHMS	2
5	7407	Clevis Pin (3/16 x 1/2)	2		F029	1/4-20 x 1/2 Hex Bolt	3
6	7404	Brake Actuator Arm	2		F032	1/4-20 x 3/4 Hex Bolt	1
7	7405	Pin, Transmission Lock	2		F054	AN960616 Washer	1
8	7402	Clevis	2		F072	1/4 "E" Retainer Ring	2
9	7408	Compression Spring (1/2 x 3/4)	2		F086	#10 SAE Washer	4
10	7415	Rubber Dust Shield (5/8 x 3/8 x 1/32)	2		F109	1/8 x 5/8 Roll Pin	2
11	5567-3	O-Ring Seal (1/4 x 3/8)	4		F111	1/8 x 3/4 Cotter Pin	1
12	7403	Plunger Bushing, Gear Axle	2		F112	5/8 x 1-1/4 x .03 Washer	2
13	7404-1	Brake Actuator Mount	2		F127	1/16 x 1/2 Cotter Pin	4
14	7412	Clevis Pin (3/16 x 5/8)	2		F261	AN960616L Washer	6
15	5833	Cable Clamp (1/4)	2		F287	1/4-28 Keps Nut	1
16	7410	Brake Control Cable, LH (27")	1				
17	7409	Brake Control Cable, RH (21")	1				
18	7401-3	Cable Mount Bracket	1				
19	7401-1	Cable Pull Rod	1				
20	5552	Ball Joint (1/4-28)	1				

PARKING BRAKE ASSEMBLY

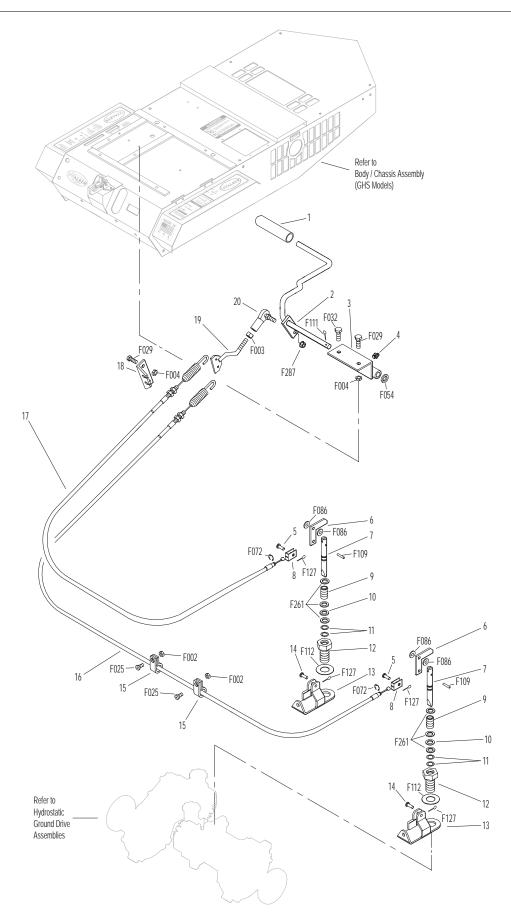


Effective Date 03-02-04

STEERING CONTROL ASSEMBLIES

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Trans	smission S _l	pring Assembly		33	5450-3	Steering Lever Assembly, RH	1
1	5199	Transmission Spring Assembly	*			(Includes Items # 13, 19, 28,	
'	3133	(Includes Items # 2-8, F003,			5450-5	F188, F198 & F345) Adjustable Steering Lever Arm, RH	1
		F146, F287 & F293)		34	5862	FSC Knob	1
2	5197	J-Bolt	2	35	7170	FSC Lever Assembly	1
3	5193	Washer (.750 ID x 1.00 OD x .085)	2	33	7170	(Includes Item # 13)	
4	5195	Compression Spring (1 x 5-1/8)	2	36	5975-3	Cable Tie (50# x 7")	1
5	5191	Spring Slide (3-5/8)	2	37	5213-1	Control Rod, RH (15")	1
6	5194	Plunger Sleeve	2	31	0210-1	Control Rod, Ref (13)	'
7	5192-1	Spring Plunger	2	Fast	eners		
8	5552	Ball Joint (1/4-28)	2	ı ası			
Ū	0002	2a. 33(17 1 23)	_		F003	1/4-28 Hex Nut	3
Steer	ina Lever 8	& FSC Assemblies			F004	1/4-20 Keps Nut	8
	9 _0.0.0				F007	5/16-18 Jam Nut	1
9	5214-2	Ball Joint (5/16-24), Nylon Lined	2		F008	5/16-24 Keps Nut	2
10	5173	FSC Actuator Rod	1		F009	5/16-18 Whiz Locknut	1
11	5172	Bearing, Nylon (.255 ID x .379 OD x .250)) 1		F010	5/16-24 ESNA Nut	2
12	5142-2	FSC Actuator Cam	´ 1		F012	3/8-16 Keps Nut	2
13	5830	Grease Fitting	6		F024	5/16-24 Jam Nut	2
14	5212	Transmission Control Arm, RH	1		F029	1/4-20 x 1/2 Hex Bolt	2
15	5141	FSC Friction Washer	2		F032	1/4-20 x 3/4 Hex Bolt	4
16	5140	FSC Friction Body	1		F034	5/16-18 x 3/4 Hex Bolt	1
		(Includes Item # 13)			F050	1/4 SAE Washer	3
17	5142-5	FSC Key	1		F051	3/8 SAE Washer	2
	5140-3	FSC Control Assembly	*		F064	1/8 x 1/2 Woodruff Key (#3)	2
		(Includes Items # 12, 13, 15-17,			F068	1/8 x 1 Cotter Pin	1
		F192 & F193)			F069	3/32 x 1/2 Cotter Pin	1
18	5212-2	Transmission Control Arm, LH	1		F093	5/16-18 x 1 Hex Bolt	1
19	5850-2	Handle Grip, Foam (5-1/2)	2		F134	AN960816L Washer	2 **
20	5213-2	Control Rod, LH (6")	1		F146	1/4-20 Jam Nut	2
21	5223	Extension Spring (1/4 x 5-1/2)	2		F182	1/4 x 5/8 x 1/8 Washer	2
22	5450	D-Clip	2		F183	.312 x .700 x .074 Washer	2
23	5214-1	Bearing, Steering Lever Actuator	2		F186	5/64 x 1/2 Cotter Pin	1
24	5463	Steering Lever Actuator	2		F188	1/4-20 Self-Locking Nut	4
25	5391-3	Steering Lever Support	1		F192	3/8-24 Self-Locking Nut	1
26	5217	Pivot Pin, Steering Lever	1		F193	3/8 Belleville Spring Washer	3
27	5451-3	Steering Lever Assembly, LH	1		F198	.250 x .625 x .040 Washer, SS	2
		(Includes Items # 13, 19, 28,			F287	1/4-28 Keps Nut	2
		F188, F198 & F345)			F345	1/4-20 x .770 Knurled Bolt	4
28	5453-10	Adjustable Steering Lever Handle (Includes Items # 19 & F345)	2		F352	5/32 x 1 Hvy Duty Roll Pin	2
29	5219	FSC Extension Spring (3/4 x 6-3/4)	1	*	Service Par	t Only	
30	5280	Clevis (1/4)	1			,	
31	5281-5	Clevis Pin (1/4 x 0.80)	1	**	Average nui	mber used per assembly. Adjust as requi	red.
32	5470-1	Speed Control Stop	1		J - 1		


STEERING CONTROL ASSEMBLIES

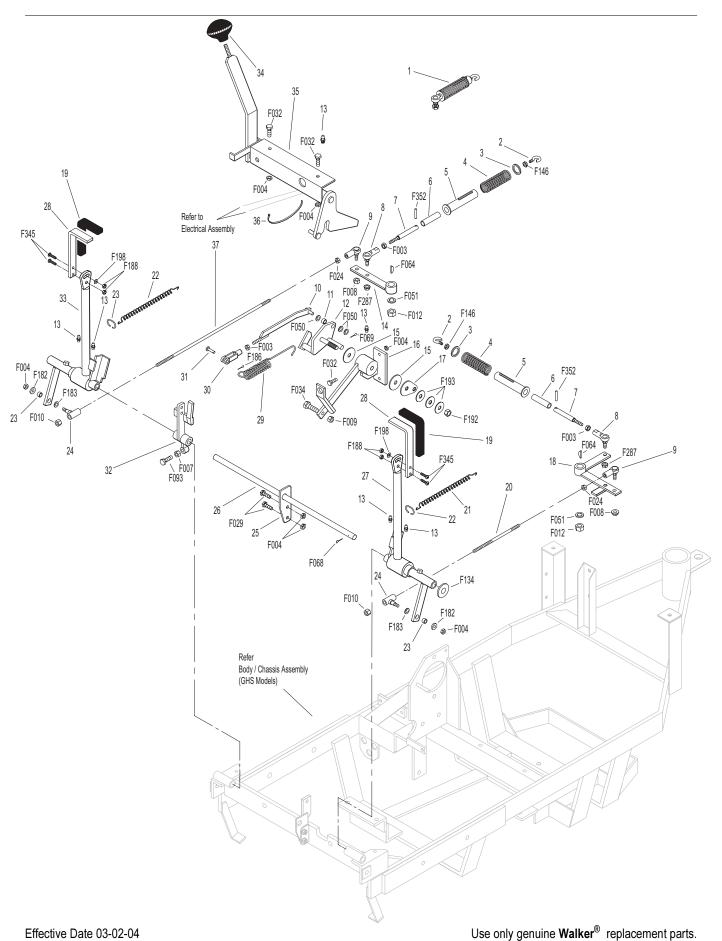

THROTTLE & CHOKE CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Thro	ttle & Choke	e Control Assemblies		Fast	eners		
1	5121-1	Throttle Cable	1		F002	10-24 Keps Nut	8
2	5122-1	Choke Cable	1		F005	1/4-20 ESNA Nut	2
3	5172	Nylon Bearing	2		F025	10-24 x 3/8 PPHMS	5
4	5108-7	Control Lock Tab	2		F026	10-24 x 1/2 PPHMS	1
5	5108-10	Friction Washer (.125)	2		F050	1/4 SAE Washer	2
6	5108-1	Control Lever, Throttle and Choke	2		F164	10-24 x 1/4 x 3/8 SHL Bolt	2
7	5108-5	Throttle Control Knob, Red	1		F201	1/4 Belleville Spring Washer	4
8	5108-11	Friction Washer (.062)	2				
9	5108-8	Control Bracket	2	*	Service Pa	rt Only	
10	7108	Control Assembly, Throttle and Choke	*				
11	5108-6	Choke Control Knob, Black	1				
12	5656-15	Conduit Clip	2				
13	5975-1	Cable Tie (18# x 3-3/4")	2				
14	5121-20	Throttle Control and Cable Assembly (Complete Control and Cable Assembly)	*				
15	5122-20	Choke Control and Cable Assembly (Complete Control and Cable Assembly)	*				
16	5126	Cable Retainer	1				

THROTTLE & CHOKE CONTROL ASSEMBLIES

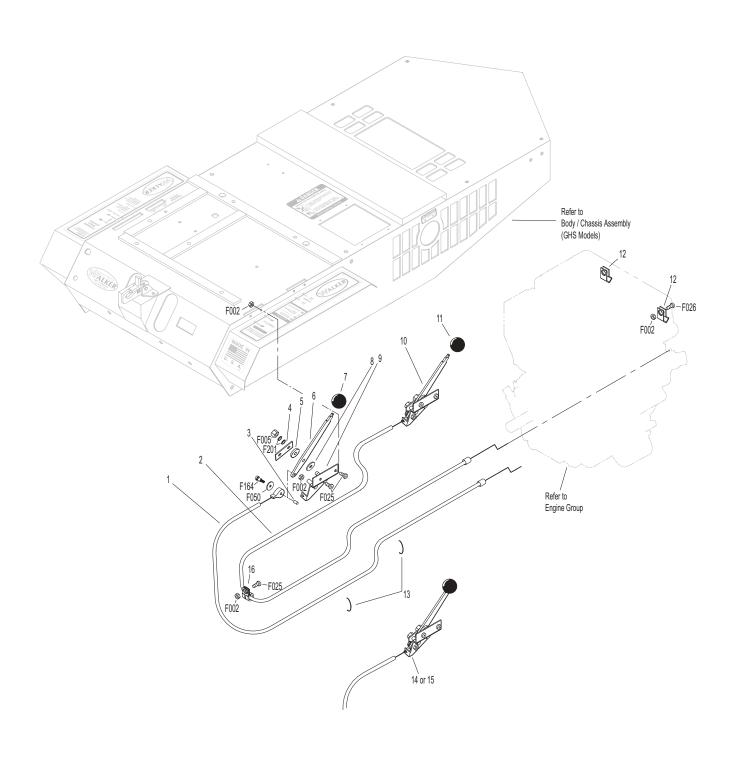


GHS GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Deliv	ery Chute A	Assembly		Fast	eners		
1	5515-2	Elbow Delivery Spout	1		F002	10-24 Keps Nut	8
2	5592-13	Backing Plate, Grass-Pak [®] Switch	1		F004	1/4-20 Keps Nut	9
3	5592-12	Mount Plate, Grass-Pak® Switch	1		F009	5/16-18 Whiz Locknut	1
4	5578	Rear Clip, Chute Mount	1		F012	3/8-16 Keps Nut	2
5	5577	Side Clip, Chute Mount	2		F025	10-24 x 3/8 PPHMS	6
6	5511-3	Delivery Chute Assembly, (6.7)	1		F026	10-24 x 1/4 PPHMS	2
		(Includes Items # 4, 5, F079 & F085)			F031	1/4-20 x 5/8 Hex Bolt	1
7	5578-10	Front Clip, Chute Mount	1		F034	5/16-18 x 3/4 Hex Bolt	1
8	5530-3	Body Chute (9")	1		F038	3/8-16 x 1 Hex Bolt	2
					F067	3/16 x 3/16 x 1 Key	1
Blow	er Assembl	y			F074	1/4-20 x 3/8 Set Screw	2
					F075	5/16-18 x 1/2 SQH Set Screw	3
9	5239-2	Blower Pulley, Offset Hub	1		F079	A/A66D Aluminum Pop Rivet	14
		(Includes Item # F075)			F085	3/16 Rivet Backup Washer	8
10	5238-2	PTO Drive Pulley (5 / B)	1		F090	1/4-20 x 2-1/2 Hex Bolt	1
		(Includes Items # F075 & F114)			F102	10-24 x 1-1/2 PTHMS	2
11	5234-2	GHS PTO Belt (B41 / #6944)	1		F114	5/16-18 x 5/8 SQH Set Screw	1
12	5268	Bearing (3/4) Includes Locking Collar	2		F132	1/4-20 x 2-3/4 Hex Bolt	1
13	5545-2	Blower Wheel (9")	1		F362	A/A62D Alum. Pop Rivet (3/16D x 1	3/32L) 2
14	5525-7	Faceplate (9" Blower)	1				
15	5526-3	Blower Intake Tube (6-1/2 x 3)	1			er when GHS is not in use. Furnished	
16	5595-2	Intake Cover	*		Mulching D	Decks, SD Decks used on a GHS Trac	tor, Rotary
17	5543-3	Housing (9" Blower)	1		Broom Atta	achment and Snowblower Attachment.	
	5542-3	Blower Assembly (9")	**				
18	5527-2	Blower Mount Plate	1	**	Service Pa	rt Only	
19	5534	Skid Bar (9" Blower)	1				

NOTE: Refer to **ELECTRICAL CONNECTORS,** Page 34, for identification of all Electrical Wiring Service Parts.


GHS GROUP

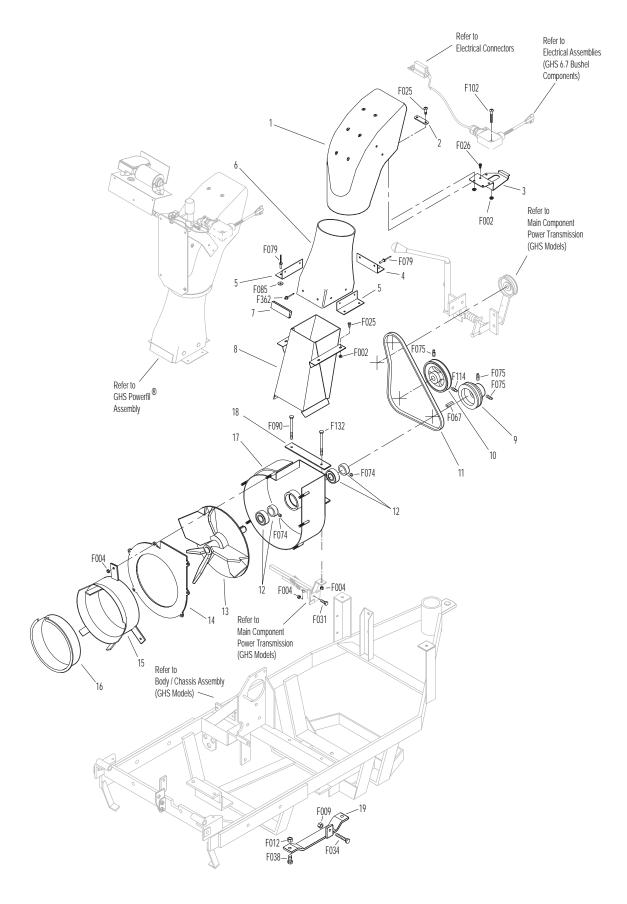

GHS POWERFIL® ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
GHS	Powerfil [®]	Assembly		Faste	eners		
1	5557	Motor Mount, Powerfil®	1		F002	10-24 Keps Nut	9
2	5551-3	Bearing Cap, Powerfil®	1		F003	1/4-28 Hex Nut	4
3	5551-1	Pivot Bearing (#S3PP)	2		F025	10-24 x 3/8 PPHMS	1
4	5552	Ball Joint (1/4-28)	2		F054	AN960616 Washer	1
5	5518-2	Pivot, Delivery Spout	1		F061	1/4 Internal Star Lock Washer	1
6	5517-2	Pivot Mount	1		F085	3/16 Rivet Backup Washer	1
7	5558-1	Powerfil [®] Push Rod	1		F101	10-24 x 1-1/4 SHC Screw	1
8	5553-3	Bushing, Powerfil [®] Actuator	4		F109	1/8 x 5/8 Roll Pin	1
9	5558-2	Powerfil [®] Actuator Rod	1		F129	10-24 x 1/2 PTHMS	7
	5549	Actuator Rod Assembly	*		F261	AN960616L Washer	1
		(Includes Items # 4, 7-10 & F003)			F287	1/4-28 Keps Nut	1
10	5553-1	Spring, Powerfil® Actuator	2				
11	5554	Actuator Arm	1	*	Service Pa	rt Only	
12	5519-3	Motor Mount Nut (5/8-24 Panel Nut)	*			•	
13	5519-2	Motor Mount Washer	*	NOTI	E: Refer to	o ELECTRICAL CONNECTORS, Pag	ge 34, for
14	5519	Actuator Motor (12/24V) (Includes Items # 12 & 13)	1		identific	ation of all Electrical Wiring Service Part	S.
15	5977	Grommet (1/2 ID x 7/8 OD x 1/16)	1				

GHS POWERFIL® ASSEMBLY

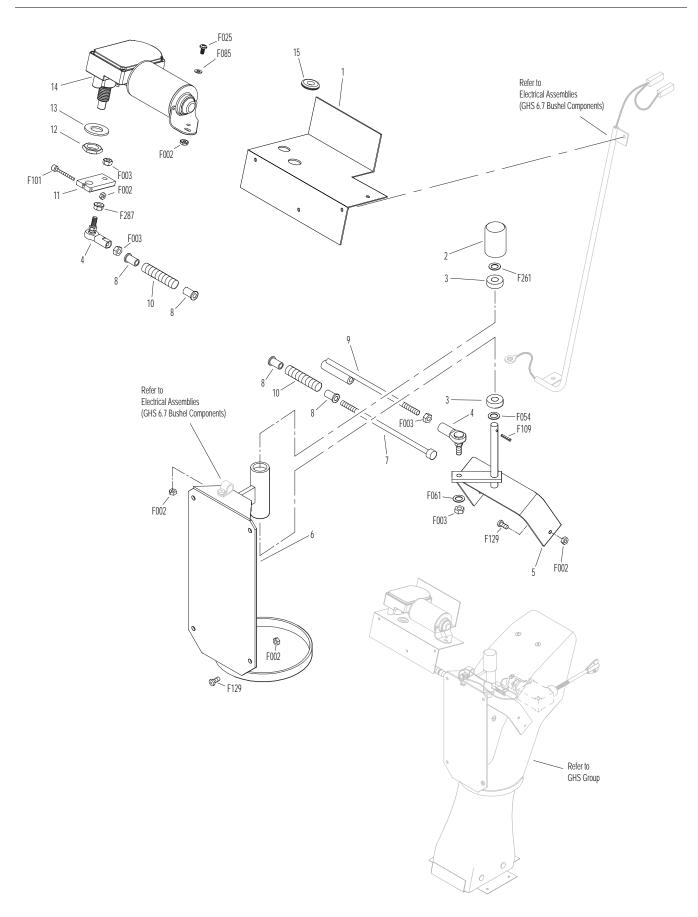


Effective Date 03-02-04

GHS 6.7 BUSHEL CATCHER & EXHAUST DEFLECTOR ASSEMBLIES

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	NO.	PART NO.	DESCRIPTION	NO. REQ'D		
Uppe	Upper Baffle Screen Assembly (Removable)				5598 Optional Dump Bag (Not Shown) May be ordered as an option. Contact your Walker dealer.				
1	7509-3	Channel Bottom	2	,					
2	7505	Mustache Spring	2	Faste	eners				
3	6507	Screen Seal, 6.7 (24")	1						
4	6856-1	Edge Molding, 6.7 (21-3/4)	1		F002	10-24 Keps Nut	23		
5	7509-2	Channel Top	2		F004	1/4-20 Keps Nut	16		
6	6512-2	Removable Screen (6.7)	1 ***		F009	5/16-18 Whiz Locknut	2		
7	7506	Knob	2		F020	5/16-18 ESNA Nut	2		
8	6509-4	C-Channel (6.7)	1		F025	10-24 x 3/8 PPHMS	4		
		(5.7)			F026	10-24 x 1/2 PPHMS	8		
Exha	ust Deflect	or Assembly			F027	10-24 x 5/8 PPHMS	4		
		,			F035	5/16-18 x 1-1/4 Hex Bolt	1		
	5504	Exhaust Deflector Kit, 6.7	*		F037	10-24 x 5/8 PTH Screw	4		
9	5504-3	Hinge, Exhaust Deflector	1		F049	5/16 SAE Washer	5		
10	5504-1	Exhaust Deflector (Two Piece Set)	1		F061	1/4 Internal Star Lock Washer	2		
11	5504-8	Deflector Mount Doubler	2		F079	A/A66D Aluminum Pop Rivet	11		
	00010	Bollodol Mount Boubloi	-		F085	3/16 Rivet Backup Washer	21		
GHS	6 7 Rushel	Catcher Assembly			F129	10-24 x 1/2 PTHMS	10		
0110	o.r Busilei	outoner Assembly			F172	1/4-20 x 3/4 Carriage Bolt	4		
12	5583	Handle	1		F188	1/4-20 Self Locking Nut	17		
13	5588	Rubber Bumper (.75 OD x .50)	2		F195	1/4-20 x 3/4 PPHMS SS	8		
14	5130	Side Strap, Door (6.7)	2		F196	1/4-20 x 1 PPHMS SS	2		
15	5514-10	Door Frame, Catcher (6.7)	1		F198	.625 x .250 x .040 Washer, SS	9		
16	5510-1	6.7 Bushel Catcher, Including Door	1		F203	1/4-20 x 5/8 PPHMS SS	4		
10	5502-1	6.7 Catcher, Without Powerfil®	**		F230	1/4-20 x 3/6 F F HMS 33	1		
	3302-1	(Includes Door)			F242	1/4-20 x 7/8 PPHMS SS	14		
	5502-2	6.7 Catcher Assembly	**		F242 F252	10-24 x 3/4 PFHMS	14		
	3302-2	(Includes Powerfil®)			F255	5/16-18 x 1-1/2 Hex Bolt	1		
17	5503		1		F329				
17		Mounting Frame, Catcher (6.7)	1			.260 ID x 1.939 OD Washer	2		
18	5513-1	Mounting Frame Doubler (6.7)	1		F330	3/16 D x 21/32 L Rivet, SS	2 6		
19	5522-1	Hinge Backup Plate, LH	1 2		F351	Aluminum Pop Rivet	0		
20	5155-12	5/16 Ball Stud		*	This bit is				
21	5147	Spring Clip, Gas Spring	4			sold as a complete assembly, including	mounting		
22	5155-2	Gas Spring Cover	2		hardware.				
23	5155-10	Catcher Gas Spring Assembly	2	**	O	of Out.			
0.4	5504.4	(Includes Items # 20, 21 & 25)	•	****	Service Pa	irt Only			
24	5524-1	Flanged Hinge Bearing	2	***	- . ·				
25	5155-13	3/4 Ball Stud	2			en can be replaced by P/N 6512-3 R			
26	5523-6	Gas Spring Plate	2			4" holes) for improved air flow performa	nce in wet		
27	7532	Handle, Catcher Lift	2 *		conditions.				
	7534	Catcher Handle Kit							
	7500	(Includes Items # 27, 28, F004 & F172	•						
28	7533	Backing Plate, Handle	2						
29	5155-15	Box Support, Gas Spring	2						
30	6508	Safety Latch Hinge	1						
31	5522-2	Hinge Backup Plate, RH	1						
32	5584	Reinforcing Strap, Catcher Top	2						

GHS 6.7 BUSHEL CATCHER & EXHAUST DEFLECTOR ASSEMBLIES

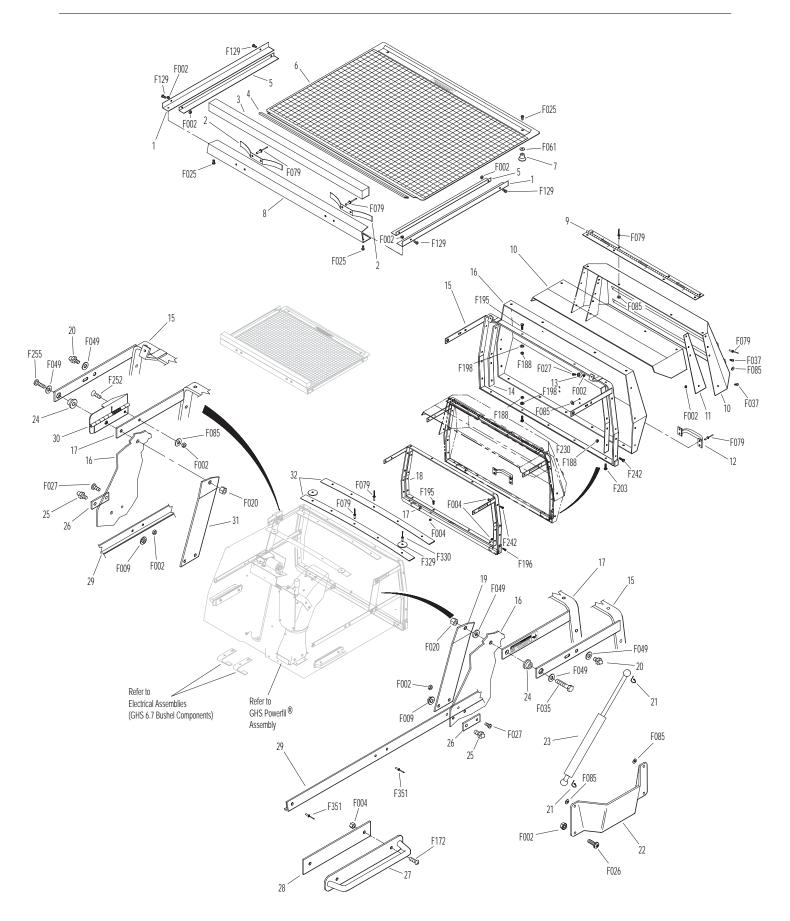


Effective Date 03-02-04

Use only genuine Walker® replacement parts.

ELECTRICAL ASSEMBLY

NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Batte	ry Assemb	ly		23	5940-6	Fuse Holder with Terminals	*
				24	6941-1	20 Amp Fuse	*
1	5932	Battery Terminal Insul., Black (-)	1	25	5961	Fuse Holder Mount Bracket	1
2	5975-1	Cable Tie (18# x 3-3/4")	3	26	6832	Cable Clamp (9/16 x 1/4)	1
3	5933	Battery Terminal Insul., Red (+)	1	27	NS	Voltage Regulator (Kawasaki 21066	5-2004) 1
4	5910-1	Battery (12V/295CCA/Wet)	1				,
5	5844	Battery Hold-Down Bar	1	Faste	eners		
6	6392	Battery Protector Plate	1				
7	5839	Hook Bolt	2		F002	10-24 Keps Nut	2
8	6390	Battery Pan	1		F004	1/4-20 Keps Nut	7
9	6923	Negative Battery Cable	1		F009	5/16-18 Whiz Locknut	1
		,			F019	1/4-20 ESNA Wing Nut	2
Elect	Electrical Assembly				F025	10-24 x 3/8 PPHMS	1
		•			F028	10-24 x 3/4 PPHMS	1
10	8960-15	Ignition Switch (with Keys)	1		F031	1/4-20 x 5/8 Hex Bolt	2
		(Includes Items # 20-23 & F349)			F032	1/4-20 x 3/4 Hex Bolt	3
11	5941-1	Switch Boot (Fits P/N 5941)	2		F050	1/4 SAE Washer	5
12	5941	Safety Switch (Normal Closed)	2		F093	5/16-18 x 1 Hex Bolt	1
		(Includes Item # 11)			F179	1/4-20 x 1 Hex Bolt	2
13	5975-3	Cable Tie (50# x 7")	3		F349	Washer .835 ID 1.122 OD, SS	1
14	5942	Safety Switch (Normal Open)	3				
		(Includes Item # 15)		*	Service Par	t Only	
15	5942-1	Switch Boot (Fits P/N 5942)	3			•	
16	5991-1	Hourmeter Power Lead Wire	1	NOT	E: Refer to	ELECTRICAL CONNECTORS, Page	34 for identi
17	8990-1	Hourmeter (SenDec)	1		cation of	all Electrical Wiring Service Parts.	
18	5991-2	Hourmeter Ground Wire	1			-	
19	5940-3	Ignition Switch Cover	1	NOT	E: Decals fo	or this assembly are not shown here. Re	efer to TRAC
20	8960-2	Ignition Key (1 Set)	1			CALS, Page 2, for Decal listing and pla	
21	7854	Plastic Tip / Red	1		mation.		
22	5943-1	Wire Harness Assembly	1				

ELECTRICAL ASSEMBLY

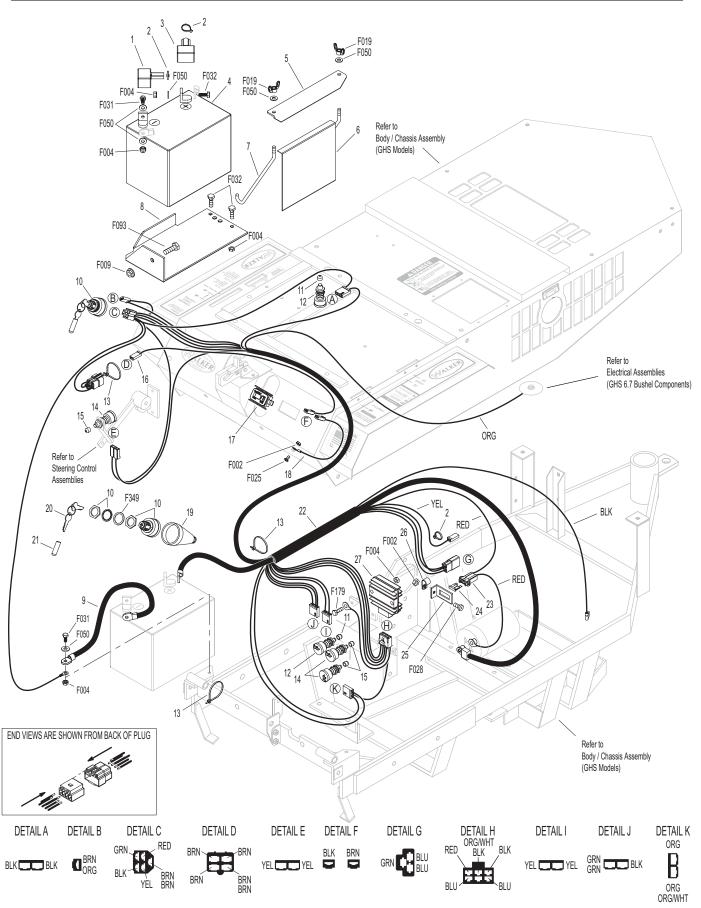


Effective Date 03-02-04

Use only genuine Walker® replacement parts.

ELECTRICAL ASSEMBLIES (GHS 6.7 BUSHEL COMPONENTS)

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Horn	& Powerfil [©]	[®] Wiring Assemblies		Faste	eners		
1	5599	Pigtail Wire Set, Horn	1		F002	10-24 Keps Nut	11
2	5857	Wire Clamp (1/8 J-Clip)	1		F025	10-24 x 3/8 PPHMS	1
3	5975-3	Cable Tie (50# x 7")	2		F037	10-24 x 5/8 PTH Screw	1
4	5536-2	Horn, Full Signal	*		F085	3/16 Rivet Backup Washer	1
5	5984	Electric Contact Spring	2		F086	#10 SAE Washer	1
6	5982-2	Insulator Bushing, Plastic	1		F129	10-24 x 1/2 PTHMS	3
7	5982-1	Insulator Washer, Plastic (2")	1		F144	4-40 x 1/4 PPHMS	1
8	5985-2	Power Lead Wire, Catcher	1		F145	4-40 Keps Nut	1
9	5988-1	Conduit Assembly, Powerfil® Wiring	1		F147	10-24 x 1/2 PPHMS SS	3
	5988-4	Powerfil [®] Tube & Wire Assembly	*		F148	10-24 x 3/8 PPHMS SS	3
		(Includes Item # 8)					
				*	Service Pa	rt Only	
Grass	s-Pak [®] Swit	tch Assembly					
				NOTI	E: Refer to	ELECTRICAL CONNECTORS , Page	e 34 for iden-
10	5833	Cable Clamp (1/4)	2		tification	of all Electrical Wiring Service Parts.	
11	5980-3	Wire, Grass-Pak [®] Switch	1				
12	5592-11	Liquid Tight Plug	1				
13	5592-10	Grass-Pak [®] Switch Module	1				
	5592-4	Grass-Pak [®] Switch Assembly (Includes Items # 3 & 10-14)	*				
14	5594-5	Vane Assembly, Grass-Pak® Switch (Includes Items # F144 & F145)	1				

ELECTRICAL ASSEMBLIES (GHS 6.7 BUSHEL COMPONENTS)

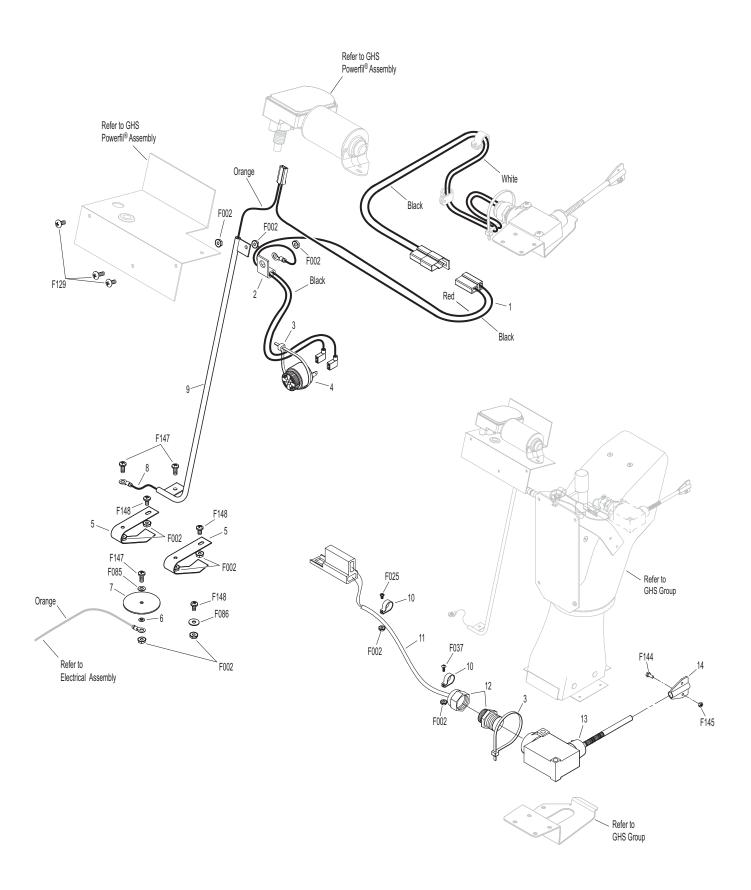


Use only genuine Walker® replacement parts.

ELECTRICAL CONNECTORS

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	NO.	PART NO.	DESCRIPTION	NO. REQ'D
Elect	Electrical Wiring Service Parts			29	7942-1	2-Way Locking Connector, Female	*
				30	7942-2	2-Way Connector, Male	*
1	5996-1	16-14 GA Butt Connector	*	31	7942-3	2-Way Connector, Female	*
2	5996-11	12-10 GA Butt Connector	*	32	7942-10	2-Way Locking Connector, Male	
3	7942-14	14-16 GA Shrink Connector	*	33	5940-8	3-Way Connector, Male	*
4	7942-13	10-12 GA Shrink Connector	*	34	7942-9	3-Way Connector, Male	*
5	5995-1	Wire Terminal Adapter	*	35	8944	3-Way Locking Connector, Male	*
6	5996-4	16-14 GA Bullet Conn., Male	*	36	8944-1	3-Way Locking Connector, Female	*
7	5996-5	16-14 GA Bullet Conn., Female	*	37	7942-11	4-Way Connector, Male	*
8	5940-4	16-14 GA Spg. Loaded Term., Female	*	38	7942-12	4-Way Connector, Female	*
9	5940-7	Brass Wire Clip, Female	*	39	7942-5	5-Way Connector, Male	*
10	5996	1/4 x 16-14 GA QKS Term., Female	*	40	5940-2	5-Way Connector, Male	*
11	5996-2	3/16 x 22-18 GA QKS Term., Female	*	41	8942-1	5-Way Connector, Female	*
12	7996	3/16 x 16-14 GA QKS Term., Female	*	42	7942-6	6-Way Connector, Male	*
13	5940-5	16-14 GA Spg. Loaded Term., Male	*	43	7942-7	6-Way Connector, Male	*
14	5996-0	1/4 x 22-18 GA QKS Term., Male	*	44	7942-8	8-Way Connector, Male	*
15	5996-18	16-14 GA Ring Term. (#8) Nylon Insulated		45	8942-2	8-Way Connector, Female	*
16	7996-1	1/4 x 16-14 GA QKS Term., Male	*	46	8942-3	5-Way Connector, Male	*
17	5996-8	6 GA Ring Lug (5/16)	*	47	5940-9	3-Way Connector (M)	*
18	5996-9	22-18 GA Ring Term., #10	*	48	7942-15	6-Way Connector (Female)	*
19	5996-10	16-14 GA Ring Term. (5/16)	*	49	7940-3	Packard Plug (Male)	*
20	5996-12	12-10 GA Ring Term. (5/16)	*	50	7940-4	Packard Plug (Female)	*
21	5996-13	16-14 GA Ring Term., # 10	*				
22	5996-15	12-10 GA Ring Term. (1/2)	*	*	Service Part	Only	
23	5996-16	6 GA Ring Terminal (1/4)	*			•	
24	5996-17	16-14 GA Ring Term. (1/4)	*	NOT	E: Not all Ele	ectrical Connectors are used with all asse	emblies.
25	5996-20	12-10 GA Ring Term. (1/4)	*				
26	5996-21	12-10 GA Ring Term., #10	*	NOT	E: Refer to E	ELECTRICAL ASSEMBLY, Pages 30-31	for loca-
27	7942-4	Single Connector, Male	*			Viring Harness, Electrical Components a	
28	8942	2-Way Connector, Male	*			Wiring Service Parts.	

ELECTRICAL CONNECTORS

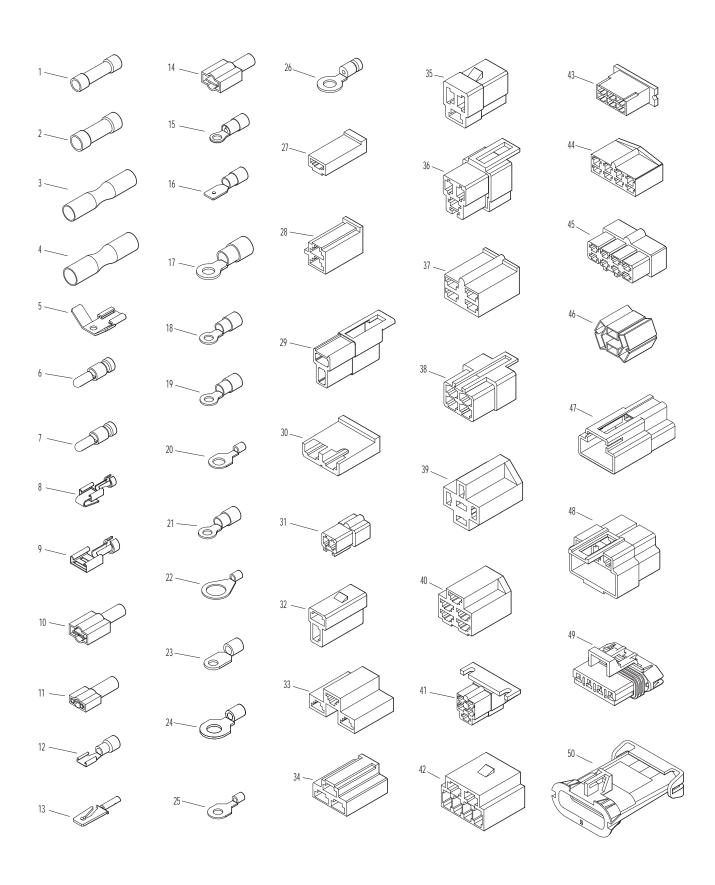



ARMREST KIT / TOUCH-UP PAINT

NO.	PART NO.	DESCRIPTION	NO. REQ'D	NO.	PART NO.	DESCRIPTION	NO. REQ'D
Kit	5885	Armrest Option / Kit		Touc	h-Up Pain	t	
Includ	les Items #	‡ 1-5, fasteners listed and instruct	ions. May be				
ordere	ed as a dea	ller-installed option. Contact your Wa	alker dealer.	6	5866	Touch-Up Paint, Yellow (12 oz. Aerosol)	
				7	5867	Touch-Up Paint, Grey (12 oz. Aerosol)	
1	5886-1	Armrest, RH	1			, , , ,	
2	5886-3	Cover Plate, RH	1	Faste	eners		
3	5887	Mounting Bracket	1				
4	5886-4	Cover Plate, LH	1		F305	1/4-20 x 3/8 SH Cap Screw	2
5	5886-2	Armrest, LH	1		F306	3/8-16 x 3/4 Hex Bolt	4
	5888	Armrest Hardware Kit	*		F307	#10 x 5/8 PPHST Screw	2
		(Includes Items # F305, F306, F3	307 & F308)		F308	1-1/4 x 1-5/8 Wave Spring Washer	2

^{*} Service Part Only

 ARMREST KIT / TOUCH-UP PAINT

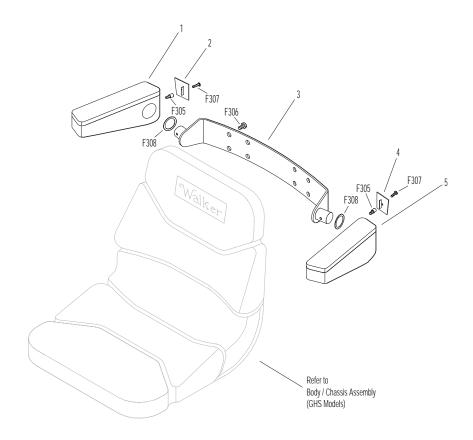



COMFORT SEAT / ARMREST KIT

ITEM	PART	DESCRIPTION	NO.	ITEM	PART	DESCRIPTION	NO.
NO.	NO.		REQ'D	NO.	NO.		REQ'D

Kit 6103-5 Comfort Seat Option / Kit (Grey)

Includes Item # 1 and fasteners listed (except as indicated; refer to **NOTE**) and instructions. May be ordered as a factory-installed option or as a kit for dealer installation. Contact your Walker dealer.

1	6103-5	Comfort Seat	1
2	7203	Seat Spring Plate	1
3	7223	Compression Spring (1/2 x 1)	2
4	7846	Rubber Washer (3/8 ID x 1-1/4 OD x 1/8)	2
5	7204	Shoulder Bolt, Seat Mount	2
6	7845	Rubber Bumper (1.375 OD x .63)	2
7	7440-5	Shock Mount (1.25 D x .75)	2


Kit 6103-15 Armrest Option / Kit

Includes Items # 8, 9 and instructions. Item # 8 is the **Right** side armrest only. Item # 9 is the **Left** side armrest only. Sold only as a complete set and may be ordered together as a factory-installed option or as a kit for dealer installation. Contact your Walker dealer.

1 1
2

NOTE: Reuse Items # 3-7, F009 and F227 from Seat Assembly. Refer to BODY / CHASSIS ASSEMBLY (GHS MODELS), Page 4.

COMFORT SEAT / ARMREST KIT

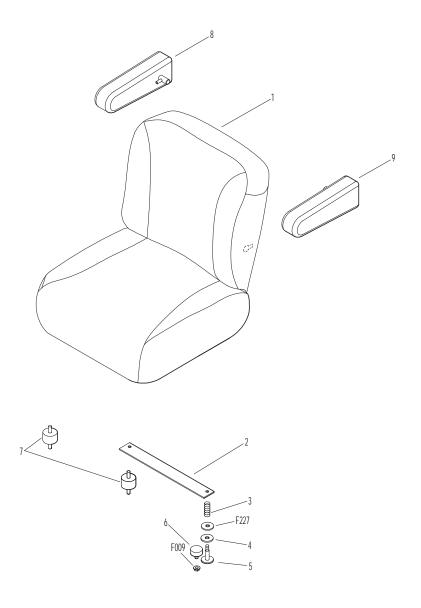

SUSPENSION SEAT KIT

ITEM	PART	DESCRIPTION	NO.	ITEM	PART	DESCRIPTION	NO.
NO.	NO.		REQ'D	NO.	NO.		REQ'D

Kit 6103-9 **Armrest Kit**

Includes Items # 1-6 and instructions. May be ordered as a factory-installed option or as a kit for dealer installation. Contact your Walker dealer.

6103-92	Armrest, RH	1
NS	5/8 Nut Cover	4
NS	7/16-20 x 13/4 HHCS	4
NS	3/8 SAE Washer	4
NS	Bushing, 3/4 x 3/4	4
6103-91	Armrest, LH	1
	NS NS NS NS	NS 5/8 Nut Cover NS 7/16-20 x 13/4 HHCS NS 3/8 SAE Washer NS Bushing, 3/4 x 3/4

Kit 6103-10 Suspension Seat Option / Kit

Includes Items # 7-9, 11-13, 18, 21, fasteners listed (except as indicated; refer to NOTE) and instructions. May be ordered as a factory-installed option or as a kit for dealer installation. Contact your Walker dealer.


7	6103-11	Suspension Seat	1
8	5941	Safety Switch (Normal Open)	*
9	6103-33	Seat Mount Plate, LH	1
10	7223	Compression Spring	2
11	5975-3	Cable Tie (50# x 7")	2
12	5975-1	Cable Tie (18# x 3-3/4")	1
13	6103-12	Wire Harness, S Suspension Seat	1
14	7846	Rubber Washer 3/8 x 1-1/4 x 1/8	2
15	7204	Shoulder Bolt, Seat Mount	2
16	5453-20	Steering Lever Handle (+1"), Adj.	2
17	5977-5	Grommet (5/8)	2
18	5841	Retainer Washer	2
19	7845	Rubber Bumper (1.375 x 0.63)	2
20	7440-5	Shock Mount (1.25 x 0.75)	2
21	6103-34	Seat Mount Plate, RH	1

F009	5/16-18 Whiz Locknut	6
F168	5/16 Split Lock Washer	4
F227	3/8 x 1-1/4 x 1/8 Washer (Plastic)	2
F357	M8 x 16 Hex Bolt	2
F358	M8 x 25 Hex Bolt	2

NOTE: Reuse Items # 8, 10, 14, 15, 17, 19 and Item # F227 from Seat Assembly. Refer to BODY / CHASSIS ASSEMBLY (GHS MODELS), Page 4.

Only one Safety Switch is included with kit. One is reused from Electrical Assembly. Refer to ELECTRICAL ASSEM-BLY, Page 30.

SUSPENSION SEAT KIT

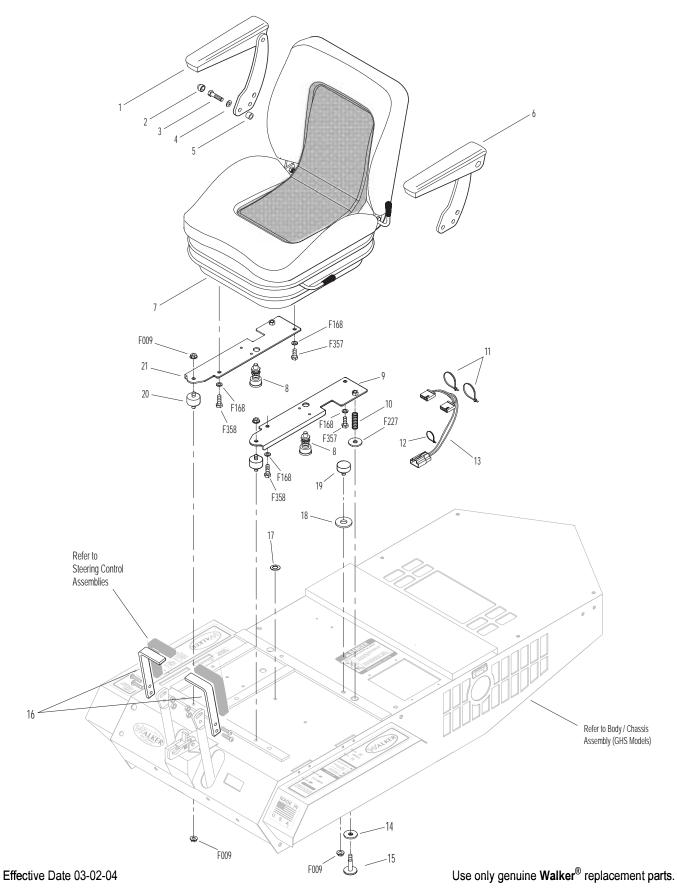


LIGHT KIT

	PART NO.	DESCRIPTION	NO. REQ'D	NO.	PART NO.	DESCRIPTION	NO. REQ'D
5989 Lig	ıht Kit*			Fast	eners		
59 2 78 3 59 4 59 5 69 6 59 7 59 8 59	989-2 989-6 834-1 977-1 975-5 940-10 975-1 995 995-2 995-4 992	Light Assembly (Includes Sealed Beam Lamp) Sealed Beam Lamp (Fits P/N 5989-2) Half U-Wire Clip Grommet (1/8 x 3/8) Wire Clip, Self-Mount Jumper Wire Cable Tie (18# x 3-3/4") Toggle Switch (Off-On) Switch Boot Power Lead Wire Assembly (Lights) Mount Bracket, Lights (Includes Items # 6 & 7)	2 ** 4 2 3 1 1 1 1 1	**	Walker dea Service Pa E: Upon ir (Dome) (Dome) (Dome)		P/N 5989-4 9-5 s P/N 5989-3 rn here.

NOTE: Refer to **ELECTRICAL CONNECTORS**, Page 34 for identification of all Electrical Wiring Service Parts.


LIGHT KIT

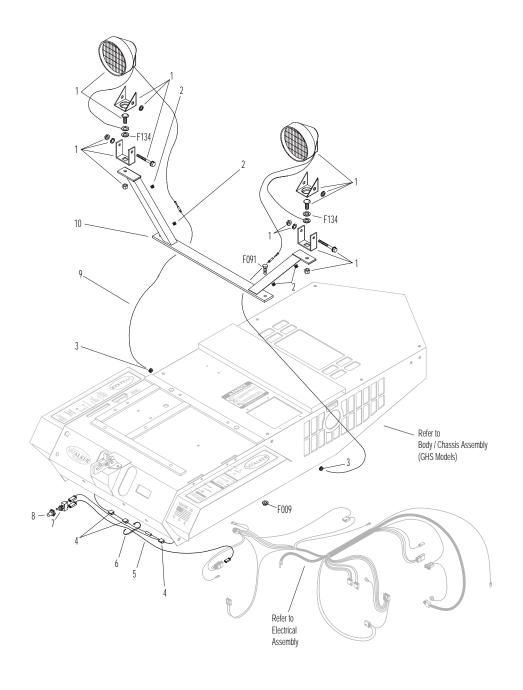

NO CATCH DEFLECTOR KIT (6.7 BUSHEL)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Kit	5500 les Items #	No Catch Deflector Option / Kit (6.7 1-10, fasteners listed and instructions	•	Faste	eners		
		or dealer installation. Contact your Walk	•		F002	10-24 Keps Nut	4
		,			F030	1/4-20 x 1/2 PPH Bolt	1
1	8500-5	Side Bracket	2		F128	10-24 x 3/8 PTHMS	4
2	8787-2	Knob (1/4-20) Thrd Insert	1		F146	1/4-20 Jam Nut	1
3	5500	6.7 Deflector Assembly	1		F333	1/4-20 x 3/4 PTHMS	1
		(Includes Items # 4 & F340)			F340	Rivet, Aluminum	20
4	5726-10	Hinge (2 x 8)	2				
5	8500-8	Decal, No Catch Deflector	1	NOTE	E: Refer	to ELECTRICAL CONNECTORS,	Page 34, for
6	8500-6	Spacer Lug	1		identific	cation of all Electrical Wiring Service F	^o arts.
7	5500-8	Wire Assembly, 6.7 No Catch Deflect	or 1			_	
8	5995	Toggle Switch (Off - On)	1				
9	8500-9	Decal, Off - On	1				
10	5995-2	Switch Boot	1				

NO CATCH DEFLECTOR KIT (6.7 BUSHEL)

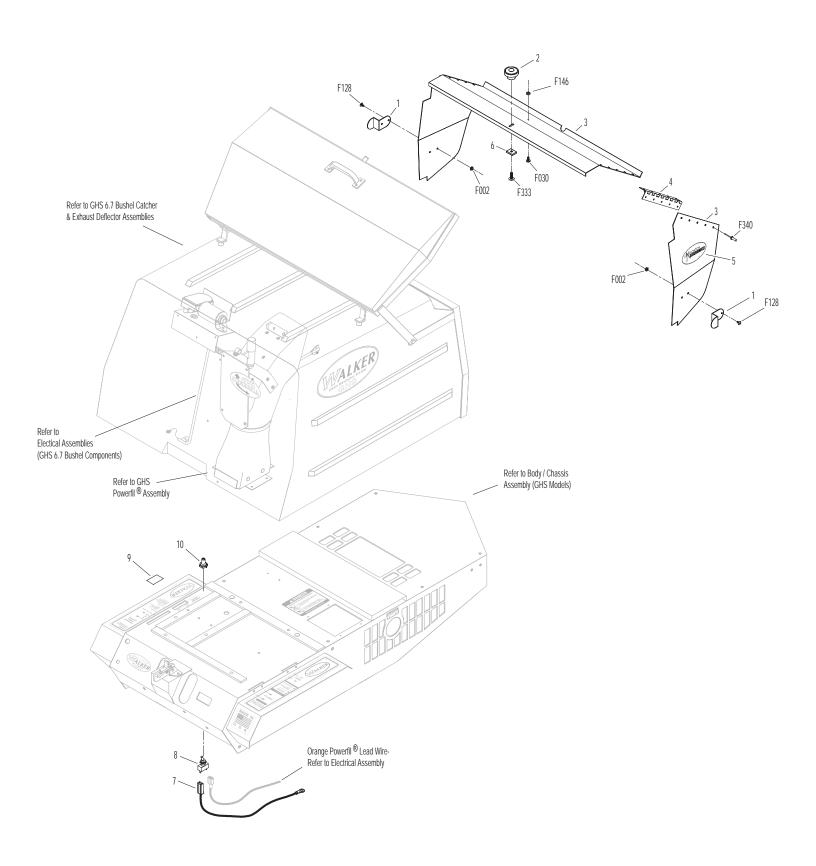


OPTIONAL TIRES & TIRE CHAIN SETS

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Tire C	Chain Sets*	**		Faste	eners		
1	5675	Tire Chain Set (18 x 6.50-8) (Includes Item # 2)	1		F157	1/2-20 x 1-1/4 Wheel Lug Bolt	8
		(For use with Standard Narrow Drive T	ires)	*	Service Pa	rt Only	
	5675-2	Tire Chain Set (18 x 8.50-8)	1			•	
		(Includes Item # 2)		**	Wheel Spa	cer Plates (Item 2) are included with Tire	e Chain Se
		(For use with Wide Wheel & Tire Assy)			•	,	
2	8070-31	Wheel Spacer Plate (1/2)	2**		•	ered as a factory-installed option or as allation. Contact your Walker dealer.	a kit for
Optio	nal Wide D	rive Tires $^\Delta$,	
•				Δ	May be ord	dered as a kit for dealer installation. Cor	tact your
3	5070-5	Wheel & Tire Assembly (18 x 8.50-8)	2		Walker dea		,
	5070-2	Tire Only (18 x 8.50-8)	*		vvainci uci	aioi.	
	5070-4	Wheel Only (8 x 7)	*	NOTI		57 is reused from Body Assembly and is with this kit. Refer to BODY / CHASSIS	

(GHS MODELS), Page 4.


OPTIONAL TIRES & TIRE CHAIN SETS

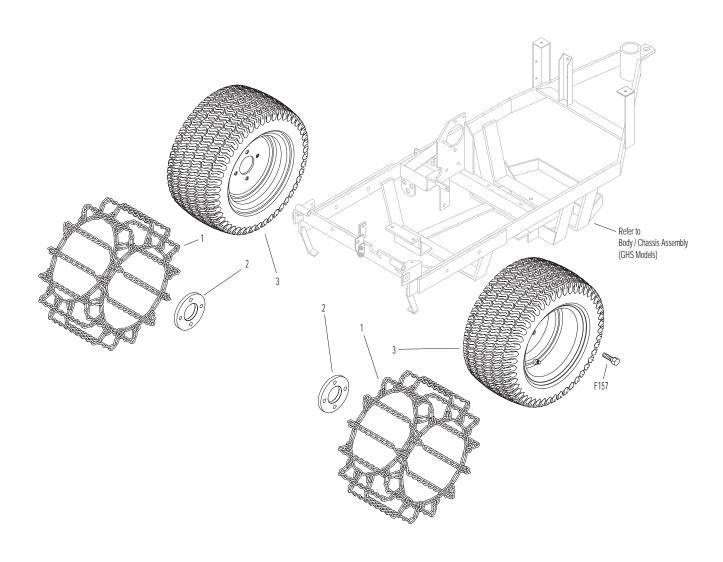

LUBRICATION POINTS


ITEM No.	LOCATION	LUBRICATION TYPE	NO. PLACES	NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points				29	Engine Belt Tightener Pivot	Grease	1
				30	Right Angle Gearbox, Tractor		1
1	Deck Caster Wheel Fork Pivot	Grease	2	31	Hydrostatic Drive	Oil***	2
2	Blade Drive Gearbox	Oil*	2	32	Ground Drive Belt Tightener		1
3	Tee Gearbox, Deck	Oil*	1	33	Choke Control Pivot	Oil	1
4	Deck Caster Wheel Bearing	Grease	2	34	Throttle Control Pivot	Oil	1
5	Universal Joint Shaft Assembly		1				
6	Pivot Assembly, Tilt-Up Deck	Grease	4	* Gearboxes are permanently lubricated and sealed requiring			
7	Deck Support Arm Socket	Grease	2		no scheduled lubrication. Oil I	evel should be ch	necked only
8	Steering Lever Pivot	Grease	4		when an oil leak is noted.		
9	Body Hinge Point	Oil	2				
10	FSC Actuator Rod Pivot Pins	Oil	2	**	Grease every eight (8) hours.		
11	FSC Lever Pivot	Grease	1				
12	FSC Lever Fork (Grease Slide Area)	Grease	1		Refer to Gear Axle Lubrication Gearbox Lubrication, and		
13	(FSC) Friction Body Pivot	Grease	1		Fluid in Owner's Manual.	•	
14	Deck-to-PTO Coupling	Grease	1				
	(Grease Slide Area)			Δ	Sealed, relubricatable-type bea	arings grease light	ly once ner
15	Deck Support Arm Pivot	Grease	2		year, do not over grease or se		
16	Universal Joint Tube Assembly	Grease**	1		year, do not over grease or se	ais wiii be damag	eu.
17	Parking Brake Lever	Grease	1	NOTE: See Model MS Owner's Manual (P/N 5000-11) for		I (D/N E000 44)00 11) for pro====
18	Pillowblock Bearing, Drive Shaf	$^{ au}$ t Grease $^{\Delta}$	2) for proper	
19	Gear Axle	Oil***	2		lubrication intervals.		
20	Clutch Control Lever Pivot	Grease	1	NOT	F. DOUGAS TILLE Deals in the		
21	Clutch Control Clevis Pin	Oil	1	NOI	E: DGHS42 Tilt-Up Deck is sh		
22	Scrubber Brake Linkage (GHS Model Only)	Oil	5		Deck Lubrication Points, refe Illustrated Parts Manual.	er to Deck and Ca	rrier Frame
23	Clutch Actuator Rod (Grease Slide Area)	Grease	1				
24	PTO Belt Tightener Pivot	Grease	1				
25	Engine Dipstick / Oil Filler	Oil***	2				
26	Catcher Hinge Point	Oil	2				
27	Throttle Control Cable Ends	Oil	2				
28	Choke Control Cable Ends	Oil	2				

LUBRICATION POINTS

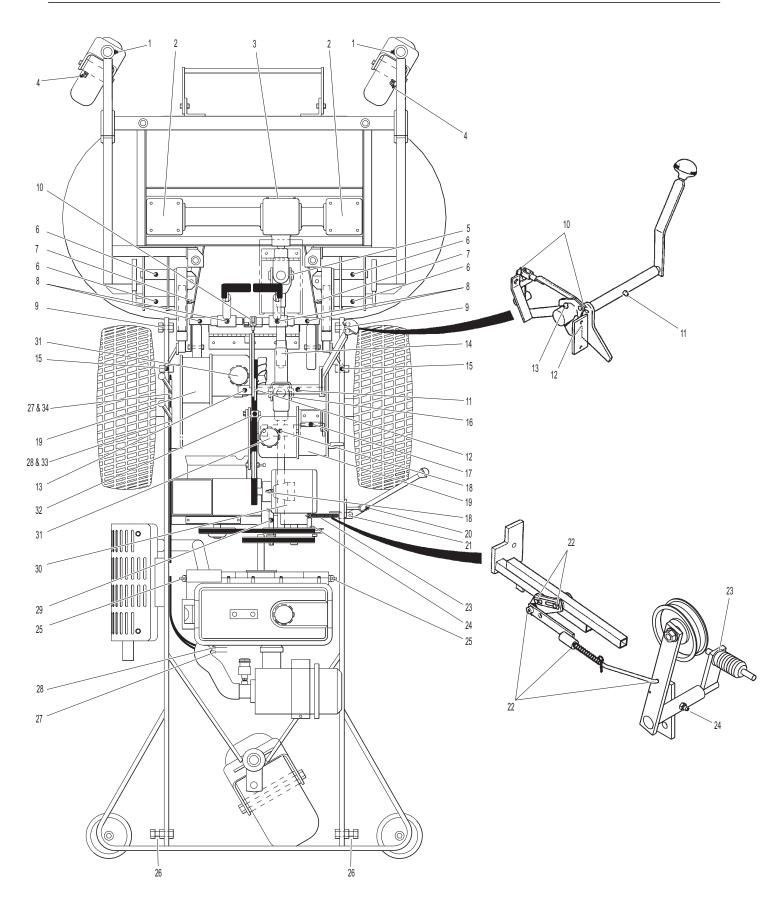

Effective Date 03-02-04

WIRING SCHEMATIC

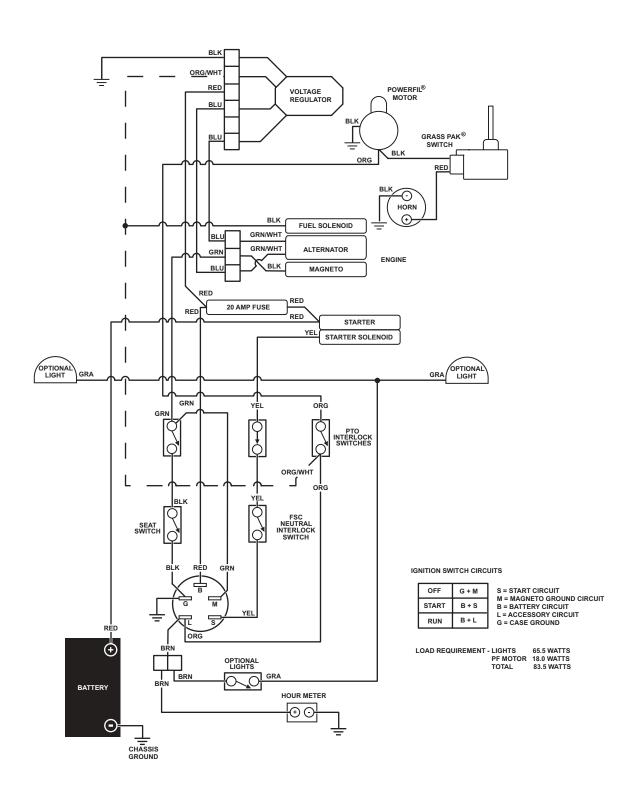

OPERATOR'S NOTES

OPERATOR'S NOTES

LIMITED WARRANTY FOR WALKER COMMERCIAL RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within one (1) year* after date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty except the following components which are warranted separately by their respective manufacturers:

Kohler Engine
Kubota Engine
Kawasaki Engine
Eaton Hydraulic Transmission
Peerless Gearboxes
Battery
Tires

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

* An extended three (3) year warranty is offered on the Walker P/N 6200-9 Gear Axle Assembly.

2. WHAT THIS WARRANTY DOES NOT COVER:

- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Owner's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

