
Walker Rider Lawnmowers

ILLUSTRATED PARTS MANUAL

Model MC Twin (16 HP) (For Tractors with Kohler OHC-16 V-Twin Engine)

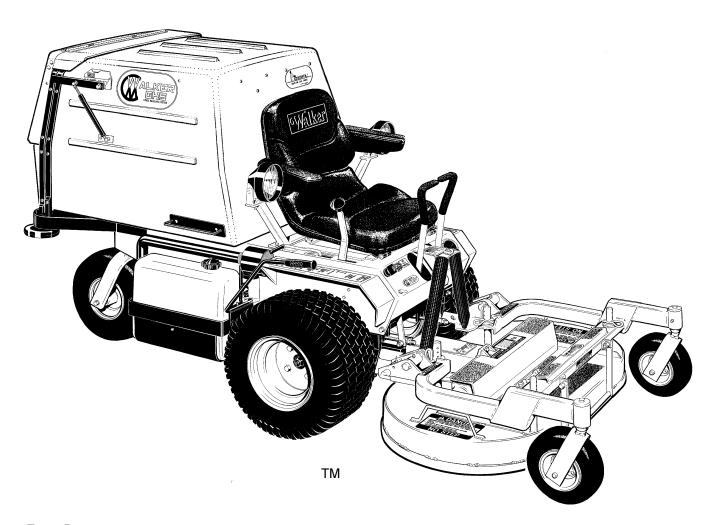



KEY TO ABBREVIATIONS USED IN THIS MANUAL

Abbreviation What it Represents

ΔΤ	All-Terrain
	Connector
	Clockwise
	Deck, Grass Handling System (number refers to size in inches)
	Nylon Insert Locknut
	Forward Speed Control
	Gauge
	gallon
•	Grass Handling System
	Grade
,	Inside Diameter
	inches
,	Left Hand (orientated with operator on seat)
	millimeters
` ,	
,	National Pipe Thread
` . ,	Outside Diameter
	ounce
	Phillips Flat Head Machine Screw
	Part Number
	Phillips Pan Head Machine Screw
,	Phillips Pan Head Sheet Metal (Screw)
,	Phillips Pan Head Self-Tapping (Screw)
· · · · · · · · · · · · · · · · · · ·	Phillips Truss Head Machine Screw
· · · · · · · · · · · · · · · · · · ·	Power Take-Off
	Quick Slide
	quart
•	Right Hand (orientated with operator on seat)
	Society of Automotive Engineers
,	Socket Button Head (Bolt)
	Side Discharge
	Slotted Flat Head
,	Socket Head Cap
•	
	Serial Number
	Spring
	Square Head
•	Stainless Steel
· · · · · · · · · · · · · · · · · · ·	Terminal

ILLUSTRATED PARTS LIST


Section of Mower Covered	Page	Section of Mower Covered	Page		
Decals		GHS 6.7 Bushel Catcher &			
		Exhaust Deflector Assemblies	26		
Tractor Decals	2	Electrical Assembly	28		
		Electrical Connectors	30		
Body / Chassis Assemblies					
		Special Options			
Body / Chassis Assembly (GHS Models)	4				
Body Assembly (SD Models)	6*	5989 Light Kit			
		5885 Armrest Kit & Walker Touch-Up Pa	aint 34		
Tractor Components		8072 All-Terrain Tire Kits & Tire Chain S	Sets36		
Main Component Power Transmission		Maintenance			
(GHS Models)	8				
(SD Models)	10	Lubrication Points	38		
Engine Group	12	Wiring Schematic	40		
Hydrostatic Ground Drive Assemblies	14				
Steering Control Assemblies	16	Warranty			
Throttle & Choke Control Assemblies	18				
Parking Brake Assembly	20	Limited Warranty	41		
GHS Group	22				
GHS Powerfil® Assembly	24	 * Refer to GHS Body Assembly (Pag common parts used on both models 			

TRACTOR DECALS

NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQ'D. GHS	NO. REQ'D SD
Walke	er Product	and Operation Decals			
1	7802	RH Fender	Body, RH near Seat	1	1
2	5856	Made in USA	Body, Spring Bracket	1	1
3	5803	Walker Manufacturing Logo	Body	1	1
4	5813-1		6.7 Bushel Catcher, Front	1	0
5	5801	GHS	6.7 Bushel Catcher (one on each side)	2	0
6	5802-2	LH Fender	Body, LH near Seat	1	1
7	5800	Walker Mower (4 x 7-1/2)	Utility Bed (one on each side)	0	2
Dang	er Decals	Warning Decals Caution Decale	s		
8	5805	Caution, Engine Exhaust	Body, LH Side	1	1
9	5861	Danger, Raised Body	Body - Underside, Center	1	1
10	5804	Danger, Rotating Blower Blades	Body near Body Chute	1	0
11	6810	Danger, Engine Exhaust	Engine	1	1
12	5868	Danger, Pinch Point	6.7 Bushel Catcher Mounting Frame Assembly (one on each side)	2	0
Maint	enance D	ecals			
13	5815	Body Lift	Rear Bumper	1	1
14	5855	Important, Engine Cooling	Engine	1	1
15	5810	Reservoir	Hydrostatic Drives (one on each)	2	2
16	5810-1	Axle Oil Level	Gear Axle Drive Assemblies (one on each)	2	2
17	5819	Blower Maintenance	Blower Housing	1	0
18	7819	Throttle	Body, LH Side	1	1
19	8819	Choke	Body, LH Side	1	1
20	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1	1
21	7827	Oil Level	Jackshaft Support	1	1
22	6811	Pre-Cleaner Jar	Glass Collection Jar, Pre-Cleaner	1	1
23	5869	Removable Screen	6.7 Bushel Catcher Removable Screen	1	0
24	5874	Push to Release	6.7 Bushel Catcher Safety Latch	1	0
25	6807	Oil Pressure	Body	1	1
26	7809	Parking Brake	Body, RH below seat	1	1

NOTE: All parts requiring decals are shipped with decals applied.


TRACTOR DECALS

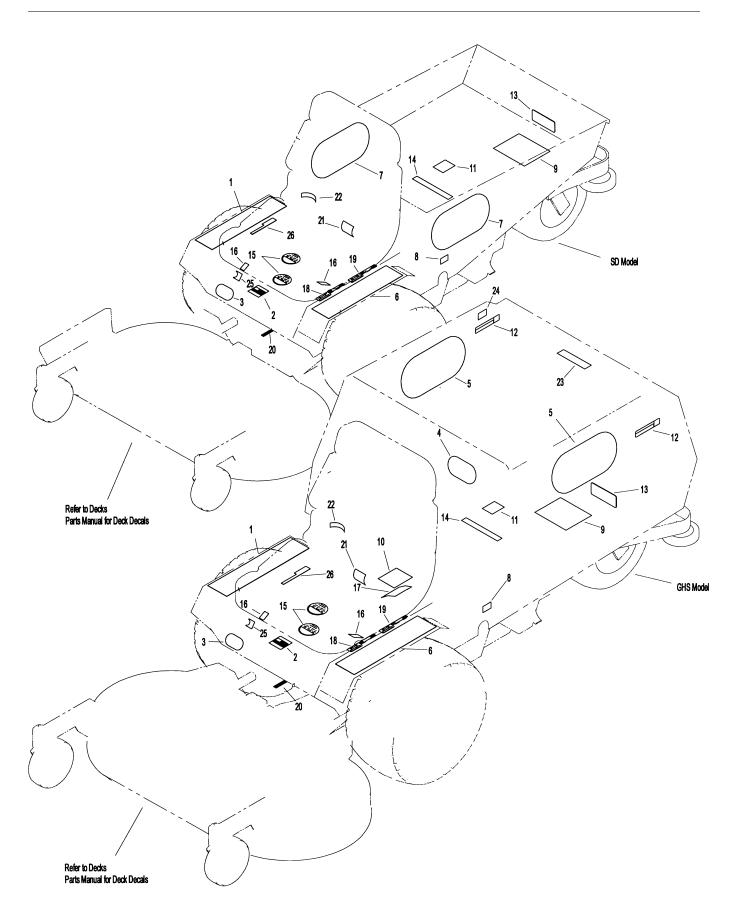

BODY / CHASSIS ASSEMBLY (GHS MODELS)

NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Seat .	Assembly			31	5038-1	Axle Spacer Tube (6-5/8)	1
ocut i	ASSCITISTY			32	5070-5	Wheel & Tire Assembly (18 x 8.50-8)	2
1	5103	Seat	1	02	5070-2	Tire Only (18 x 8.50-8)	*
2	7203	Seat Spring Plate	1		5070-4	Wheel Only (8 x 7)	*
3	7223	Compression Spring (1/2 x 1)	2		5033-2	Wheel & Tire Assembly (18 x 6.50-8)	***
4	7846	Rubber Washer (3/8 ID x 1-1/4 OD x 1/8)			5030-2	Tire Only (18 x 6.50-8)	*
5	7205-5	Pivot Pin	1		5031-2	Wheel Only (8 x 5.5)	*
6	7845	Rubber Bumper (1.375 OD x .63)	2		5030-4	Tire Tube (18 x 8.50-8)	*
7	7204	Shoulder Bolt, Seat Mount	2	33	6307	Chassis Frame	1
8	5103-2	Pivot Bushing	4	55	0307	Chassis Frame	1
9	7205-1	Lower Plate, Seat Hinge	1	Faste	nore		
10	7205-1 7205-2	Upper Plate, Seat Hinge	1	гази	HIGIS		
10			! *		E002	10 24 Kona Nut	2
	7205	Seat Hinge Assembly			F002	10-24 Keps Nut	2
		(Includes Items # 5, 8, 9, 10 & F069)			F009	5/16-18 Whiz Locknut	12
_		(0110 M 1 1 0 1)**			F012	3/8-16 Keps Nut	2
Kear	Bumper A	ssembly (GHS Models Only)**			F013	3/8-16 Whiz Locknut	2
	==00	T11 01 01			F014	3/8-16 ESNA Nut	4
11	5566	Tilt Stop Strap	1		F016	1/2-13 Self-Locking Nut	1
12	5516	Rear Bumper (6.7)	1		F026	10-24 x 1/2 PPHMS	1
13	7516-5	Catcher Pivot Bushing	2		F027	10-24 x 5/8 PPHMS	1
14	5162	Roller Wheel (5")	2		F034	5/16-18 x 3/4 Hex Bolt	8
15	7517-2	Catcher Pivot Plate	2		F040	3/8-16 x 1-1/2 Hex Bolt	2
					F048	1/2 SAE Washer	2
Body	Assembly				F051	3/8 SAE Washer	2
					F059	3/8 Wave Spring Washer	2
16	6100-7	Welded Body	1		F060	AN960516 Washer	2
17	5989-3	Dome Plug (5/16)	2		F069	3/32 x 1/2 Cotter Pin	2
18	5989-4	Dome Plug (3/8)	2		F086	#10 SAE Washer	1
19	7146	13mm Ball Stud	2		F087	#10 x 7/8 Fender Washer	2
20	5145	Gas Spring Assembly	1		F113	5/16-18 x 5/16 Set Screw	2
		(Includes Items # 19 & 21)			F151	3/8-16 x 7/8 Hex Bolt	2
21	7147	Spring Clip	2		F157	1/2-20 x 1-1/4 Wheel Lug Bolt	8
22	5180	Edge Molding, Lever Opening	2		F206	#2 x 3/16 Drive Pin	2
23	5989-5	Dome Plug (7/16)	1		F227	3/8 x 1-1/4 x 1/8 Plastic Washer	2
24	NS	Body ID Plate	1		F241	.375 x .875 x .10 Washer	4
		·			F292	1/2-13 x 8-1/2 Hex Bolt GR 2	1
Chas	sis Assem	bly		*	Service Par	t Only	
25	5845	Rubber Bumper (1.50 OD x 1.25)	2			er Assembly for SD Models is not shown h	ere. Refe
26	5267-1	Retainer Collar (1")	1			embly (SD Models), Page 6.	
		(Includes Item # F113)	•			ered as a factory-installed option or for de	aler
27	5270-1	Pivot Bearing	2			Narrow Drive Tires are used when installi	
28	5420-2	Tail Wheel Fork	1			act your Walker dealer.	00
29	5037-1	Bearing	2	ļ	Joon. Outle	to jour mainer dedict.	
29 30	5037-1	Tail Wheel & Tire Assembly (13 x 6.50-6)		NOT	- Decale fo	or this assembly are not shown here. Refe	r to Tracto
JU	5035-1	Tire Only (13 x 6.50-6)	*	NOTI		Page 2) for Decal listing and placement in	
	5036	Wheel & Hub Only (6 x 4.5)	*		Decais (F	age 2) for Decai listing and placement in	ioiiiialioii

BODY / CHASSIS ASSEMBLY (GHS MODELS)

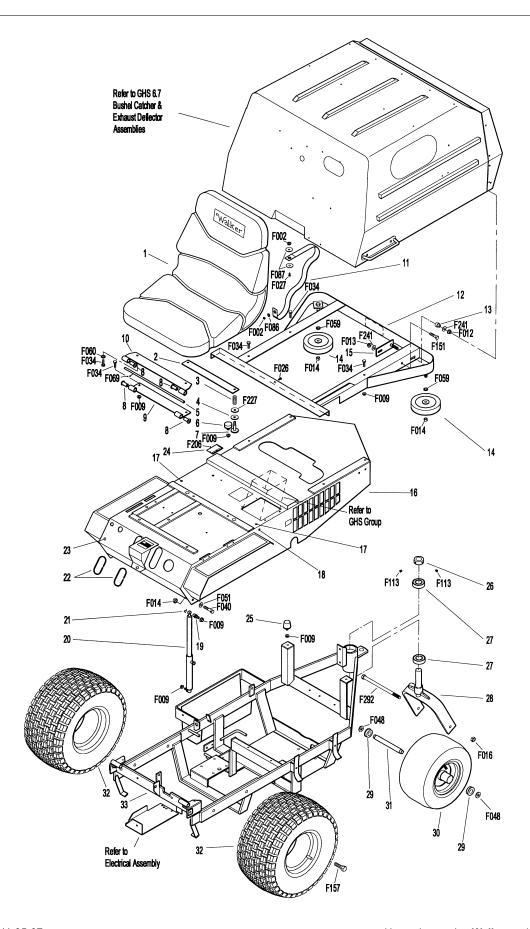

BODY ASSEMBLY (SD MODELS)


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Utility	/ Bed Asse	mbly		Faste	eners		
1	5656	Utility Bed	1		F002	10-24 Keps Nut	4
2	5845	Rubber Bumper (1.50 OD x 1.25)	2		F005	1/4-20 ESNA Nut	2
3	5651-1	Utility Bed Mount, RH	1		F009	5/16-18 Whiz Locknut	10
4	5652-1	Utility Bed Mount, LH	1		F014	3/8-16 ESNA Nut	2
		•			F020	5/16-18 ESNA Nut	2
Rear	Bumper As	ssembly (SD Models Only)*			F025	10-24 x 3/8 PPHMS	4
	-	,			F033	1/4-20 x 1 PTH Bolt	2
5	7153-2	Cover Plate	1		F034	5/16-18 x 3/4 Hex Bolt	8
6	5112	Rear Bumper	1		F050	1/4 SAE Washer	2
7	5161	Bumper Pad	2		F059	3/8 Wave Spring Washer	2
8	5162	Roller Wheel (5")	2		F084	5/16 Wave Spring Washer	2
					F091	5/16-18 x 5/8 Hex Bolt	2

^{*} Rear Bumper Assembly for GHS Models is not shown here. Refer to Body / Chassis Assembly (GHS Models), Page 4.

NOTE: Refer to Body / Chassis Assembly (GHS Models), Page 4 for all common parts used on both models.

NOTE: Decals for this assembly are not shown here. Refer to Tractor Decals (Page 2) for Decal listing and placement information.


BODY ASSEMBLY (SD MODELS)

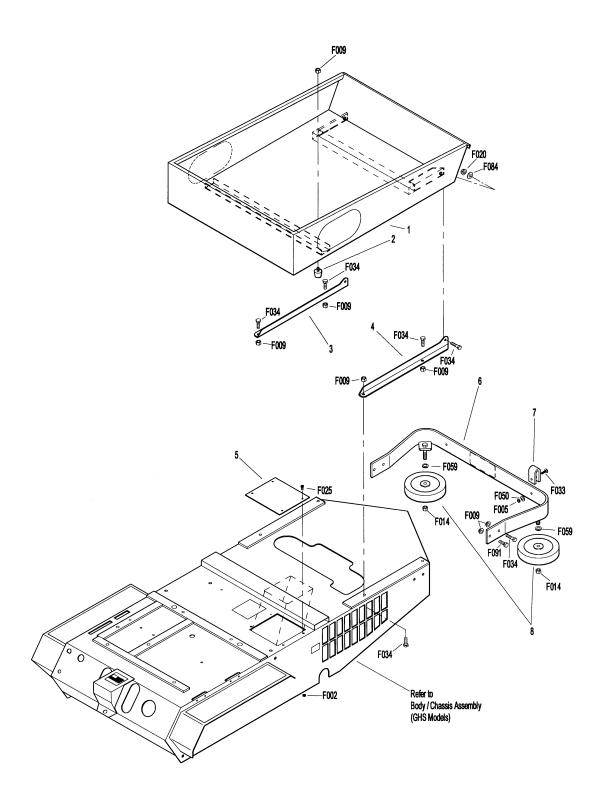

MAIN COMPONENT POWER TRANSMISSION (GHS MODELS)

	NO.		NO. REQ'D	NO.	PART NO.	DESCRIPTION	NO. REQ'D
Cluto	h Lever As	ssembly		44	7241-2	Transmission Drive Pulley, Micro-V	1
1	6358	Clutch Lever (Includes Items # 2 & 3)	1			(Includes Item # F171)	
2	5830	Grease Fitting	6	45	8539	Starter Relay Mount	1
3	7860	Handle Grip	1	46	8349	Transmission Belt Tightener Arm	1
4	7303-7	Clutch Actuator Rod	1	47	8393	Jackshaft Support	1
5	7380	Knuckle Joint	1	48	8273	Jackshaft (3/4 x 7-1/2)	1
6	7300 7226	Compression Spring (3/4 x 2-1/2)	1	49	7240-1	Jackshaft Drive Pulley	1
7	5841	Retainer Washer	1			(Includes Item # F171)	
8	6130	Push Rod, Clutch Actuator	1		7240-2	Jackshaft Drive Pulley (2-3/4 / 3V)	*
9	7201-1		6	East	eners		
10	7201-1	Needle Bearing	6	гази	eners		
11	6345	Bearing Inner Race PTO Belt Tightener Arm	1		F002	10-24 Keps Nut	1
12	8367		1		F003	1/4-28 Hex Nut	2
		Bearing Spacer Tube (3/4)	1		F004	1/4-20 Keps Nut	3
13	8243-1	Clutch Idler Pulley	1		F005	1/4-20 ESNA Nut	1
	8243	Clutch Idler Pulley Assembly	1		F007	5/16-18 Jam Nut	1
	5005	(Includes Items # 14, 15 & F070)			F009	5/16-18 Whiz Locknut	3
14	5265	Bearing (3/4)	1		F012	3/8-16 Keps Nut	8
15	8243-3	Hub, Idler Pulley	1		F025	10-24 x 3/8 PPHMS	1
16	8375	PTO Belt Tightener Stop	1		F029	1/4-20 x 1/2 Hex Bolt	1
17	7377	Plastic Washer (1 x .438 x .025)	2		F034	5/16-18 x 3/4 Hex Bolt	2
18	7378	Pivot Bearing (7/16 x 9/16)	1		F040	3/8-16 x 1-1/2 Hex Bolt	1
19	5281-5	Clevis Pin (1/4 x 0.80)	2		F040		2
20	5280	Clevis (1/4)	2		F041 F042	3/8-16 x 1-3/4 Hex Bolt	3
21	8305	Brake Actuator Rod	1			3/8-16 x 2-1/4 Hex Bolt	ن 1
22	8370	Bearing, Brake Actuator	1		F043	3/8-16 x 3 Hex Bolt	1
23	8250	Brake Spring (1/2 x 2-1/2)	1		F047	3/8-16 x 4-1/2 Hex Bolt	1
24	8369	Brake Actuator (Includes Items # 2 & 22	2) 1		F054	AN960616 Washer	1
DTO	D Ob#	. A			F060	AN960516 Washer	2
PIU	Drive Snam	t Assembly			F061	1/4 Internal Star Lock Washer	1
25	7050-1	Dipstick, Gearbox	1		F067	3/16 x 3/16 x 1 Key	2
26	8371	Mount Bracket, Brake Band	1		F069	3/32 x 1/2 Cotter Pin	2
27	8377	Brake Band Guide	1		F070	1-3/4 Internal Snap Ring	1
28	8050	PTO Gearbox	1		F075	5/16-18 x 1/2 SQH Set Screw	1
29	5245	Idler Pulley (3")	2		F076	3/8-16 x 5/8 SQH Set Screw	1
30	7248	Ground Drive Belt, Micro-V	1		F114	5/16-18 x 5/8 SQH Set Screw	1
31	7275	Universal Joint Tube Assembly	1		F116	1/4-20 x 1-1/4 Hex Bolt	1
•		(Includes Item # F076)	•		F121	5/16-18 x 3/8 x 1 SHL Bolt	1
32	7523-2	Clevis Pin (1/4 x 5/8)	1		F131	5/16-18 x 1/2 Hex Bolt	2
33	8304	Brake Band (14-1/2)	1		F132	1/4-20 x 2-3/4 Hex Bolt	1
34	6250	Drive Belt (3VX375)	1		F135	3/16 x 3/16 x 1-3/4 Key	1
35	7236	PTO Drive Pulley	1		F163	5/16-18 x 3/4 SQH Set Screw	2
00	1200	(Includes Items # F075 & F114)	•		F168	5/16 Split Lock Washer	6
36	8237	Engine Pulley (Includes Item # F163)	1		F171	5/16-18 x 3/8 Set Screw	4
37	8230	Engine PTO Belt	1		F178	1/4 x 1 Fender Washer	1
01	0200	Engine i 10 beit	·		F182	5/8 x 1/4 x 1/8 Washer	2
Jacks	shaft Asser	mbly			F186	5/64 x 1/2 Cotter Pin	1
		•	4		F226	5/16-18 x 7/8 Hex Bolt	6
38	7245-1	Idler Pulley (3/8 Groove)	1		F240	1/4 x 1/4 x 2-1/4 Key	1
39	6325-2	Spacer Bushing (5/16)	2		F241	.375 x .875 x .10 Washer	1
40	7349-1	Idler Arm	1		F288	5/16-18 ESNA Jam Nut	1
41	5221	Extension Spring (3/4 x 4)	2		F325	1/4-20 x 3 Hex Bolt	1
42	5268 7833	Bearing (3/4) Cable Clamp (7/8 x 1/4)	2	*	May be orde	ered as a kit for dealer installation.	
43			1		IVIAV DE UIUE	arva ad a Nil ivi usaisi Ilibialialivii.	


MAIN COMPONENT POWER TRANSMISSION (GHS MODELS)

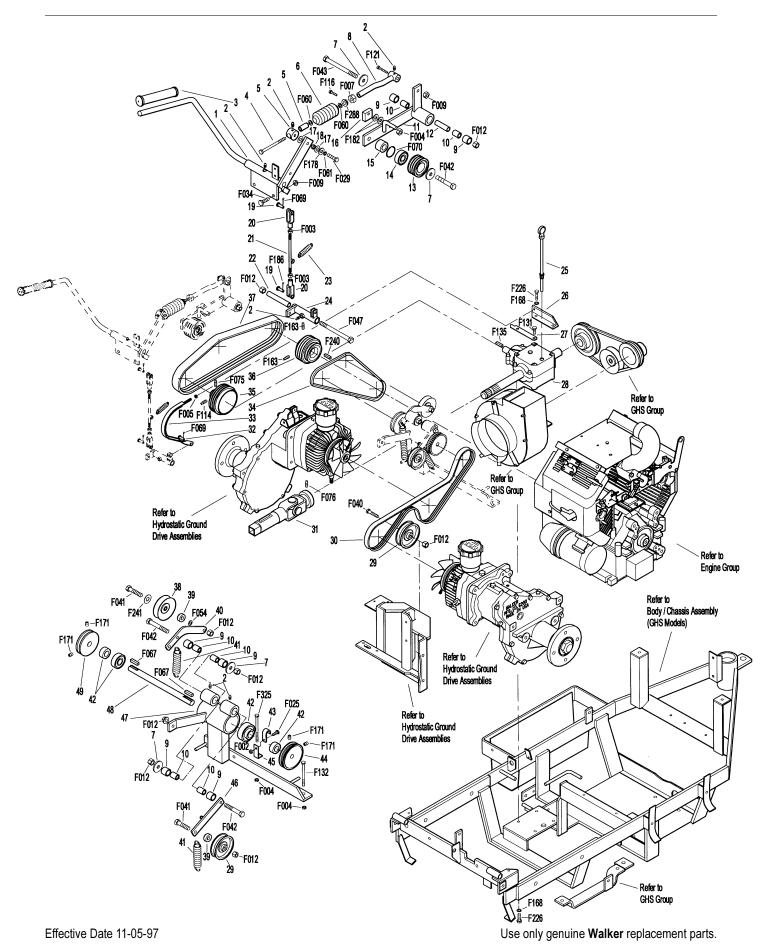

MAIN COMPONENT POWER TRANSMISSION (SD MODELS)

NO.	PART NO.	DESCRIPTION	NO. REQ'D	NO.	PART NO.	DESCRIPTION	NO. REQ'D
Clutc	h Lever As	sembly		44	8539	Starter Relay Mount	1
		•		45	5268	Bearing (3/4)	2
1	6358	Clutch Lever (Includes Items # 2 & 3)	1	46	8349	Transmission Belt Tightener Arm	1
2	5830	Grease Fitting	6	47	8393	Jackshaft Support	1
3	7860	Handle Grip	1	48	8273	Jackshaft (3/4 x 7-1/2)	1
4	7303-7	Clutch Actuator Rod	1	49	7240-1	Jackshaft Drive Pulley	1
5	7380	Knuckle Joint	1	.0	12101	(Includes Item # F171)	•
6	7226	Compression Spring (3/4 x 2-1/2)	1		7240-2	Jackshaft Drive Pulley (2-3/4 / 3V)	*
7	5841	Retainer Washer	4		72102	backerial Brive Falley (2 of 17 ov)	
8	6130	Push Rod, Clutch Actuator	1	Faste	eners		
9	7201-1	Needle Bearing	6		E000	10.041/	4
10	7201	Bearing Inner Race	6		F002	10-24 Keps Nut	1
11	6345	PTO Belt Tightener Arm	1		F003	1/4-28 Hex Nut	2
12	8367	Bearing Spacer Tube (3/4)	1		F004	1/4-20 Keps Nut	3
13	8243-1	Clutch Idler Pulley	1		F005	1/4-20 ESNA Nut	1
	8243	Clutch Idler Pulley Assembly	1		F007	5/16-18 Jam Nut	1
		(Includes Items # 14, 15 & F070)	-		F009	5/16-18 Whiz Locknut	3
14	5265	Bearing (3/4)	1		F012	3/8-16 Keps Nut	8
15	8243-3	Hub, Idler Pulley	1		F025	10-24 x 3/8 PPHMS	1
16	8375	PTO Belt Tightener Stop	1		F029	1/4-20 x 1/2 Hex Bolt	1
17	7377	Plastic Washer (1 x .438 x .025)	2		F034	5/16-18 x 3/4 Hex Bolt	2
18	7378	Pivot Bearing (7/16 x 9/16)	1		F040	3/8-16 x 1-1/2 Hex Bolt	1
19	5281-5		2		F041	3/8-16 x 1-3/4 Hex Bolt	2
20	5280	Clevis Pin (1/4 x 0.80)			F042	3/8-16 x 2-1/4 Hex Bolt	3
		Clevis (1/4)	2		F043	3/8-16 x 3 Hex Bolt	1
21	8305	Brake Actuator Rod	1		F047	3/8-16 x 4-1/2 Hex Bolt	1
22	8370	Bearing, Brake Actuator	l 4		F054	AN960616 Washer	1
23	8250	Brake Spring (1/2 x 2-1/2)	1		F060	AN960516 Washer	2
24	8369	Brake Actuator (Includes Items # 2 & 22	2) 1		F061	1/4 Internal Star Lock Washer	1
PTO I	Drive Shaft	Assembly			F067	3/16 x 3/16 x 1 Key	2
	Dillo Ollan				F069	3/32 x 1/2 Cotter Pin	2
25	7050-1	Dipstick, Gearbox	1		F070	1-3/4 Internal Snap Ring	1
26	8371	Mount Bracket, Brake Band	1		F075	5/16-18 x 1/2 SQH Set Screw	1
27	8377	Brake Band Guide	1		F076	3/8-16 x 5/8 SQH Set Screw	1
28	8050	PTO Gearbox	1		F090	1/4-20 x 2-1/2 Hex Bolt	1
29	5245	Idler Pulley (3")	2		F114	5/16-18 x 5/8 SQH Set Screw	1
30	7248	Ground Drive Belt, Micro-V	1		F116	1/4-20 x 1-1/4 Hex Bolt	1
31	7275	Universal Joint Tube Assembly	1		F121	5/16-18 x 3/8 x 1 SHL Bolt	1
		(Includes Item # F076)			F131	5/16-18 x 1/2 Hex Bolt	2
32	7523-2	Člevis Pin (1/4 x 5/8)	1		F132	1/4-20 x 2-3/4 Hex Bolt	1
33	8304	Brake Band (14-1/2)	1		F135	3/16 x 3/16 x 1-3/4 Key	1
34	6250	Drive Belt (3VX375)	1		F163	5/16 x 3/16 x 1-3/4 Key 5/16-18 x 3/4 SQH Set Screw	1
35	7236	PTO Drive Pulley	1				2
		(Includes Items # F075 & F114)	•		F168	5/16 Split Lock Washer	6
36	8237	Engine Pulley (Includes Item # F163)	1		F171	5/16-18 x 3/8 Set Screw	4
37	8230	Engine PTO Belt	1		F178	1/4 x 1 Fender Washer	1
01	0200	Engine 1 10 Box	•		F182	5/8 x 1/4 x 1/8 Washer	2
Jacks	shaft Asser	nbly			F186	5/64 x 1/2 Cotter Pin	1
20	7045 4	Idler Dulley (2/9 Creeve)	4		F226	5/16-18 x 7/8 Hex Bolt	6
38	7245-1	Idler Pulley (3/8 Groove)	1		F240	1/4 x 1/4 x 2-1/4 Key	1
39	6325-2	Spacer Bushing (5/16)	2		F241	.375 x .875 x .10 Washer	1
40	7349-1	Idler Arm	1		F288	5/16-18 ESNA Jam Nut	1
41	5221	Extension Spring (3/4 x 4)	2	*	May be orde	ered as a kit for dealer installation.	
42	7241-2	Transmission Drive Pulley, Micro-V	1			r Walker dealer.	
		(Includes Item # F171)			Comact you	ı vvainci ucaici.	
43	7833	Cable Clamp (7/8 x 1/4)	1				

MAIN COMPONENT POWER TRANSMISSION (SD MODELS)

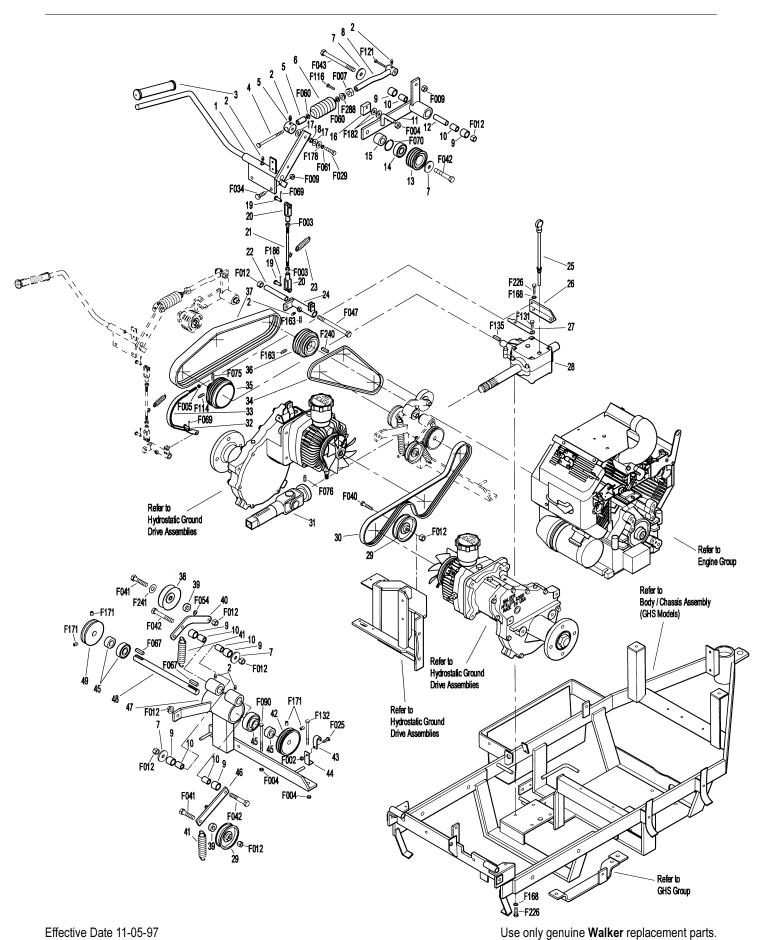


see em, gename tramer replacement parter

ENGINE GROUP

NO.	PART NO.	DESCRIPTION	NO. REQ'D	NO.	PART NO.	DESCRIPTION	NO. REQ'D
Precl	eaner Asse	embly		Engi	ne & Exhau	ıst Assemblies	
1	6016-2	Glass Collection Jar	1	26	NS	16 HP Engine	1
2	6016-1	Rubber Gasket	1			(Kohler TH16S, Spec. # 2543502)	
3	6011-0	Precleaner Housing	1	27	NS	Oil Filter (Kohler 2805001)	1
		(Includes Item # 2)		28	NS	Gasket (Kohler 2404102)	2
	6011-11	Precleaner Assembly	*	29	NS	Nut (Kohler M-0841080)	4
		(Includes Items # 1, 2, 3 & 4)		30	8897	Muffler Band Clamp	2
4	6011-10	Hose Clamp (3/4 to 1-1/4)	1	31	6052	Exhaust Pipe, Rear	1
5	6028	Precleaner Tube	1	32	6051	Exhaust Pipe, Front	1
		(Uses Existing Fasteners at Engine)		33	8013-1	Muffler	1
6	7840	Hose Clamp (1-5/16 to 2-1/4)	3	34	8013-5	Muffler Heat Shield	1
7	6029	Hose Clamp (2-1/2)	1	35	6327	Solenoid Mount	1
8	7027	Elbow, Precleaner	1				
9	6087	Air Intake Hose	1	Faste	eners		
10	6090	Air Cleaner	1				
		(Includes Item #6)			F004	1/4-20 Keps Nut	4
11	5088-1	Air Cleaner Band	1		F009	5/16-18 Whiz Locknut	2
12	5090-1	Air Cleaner Cartridge	1		F029	1/4-20 x 1/2 Hex Bolt	4
13	5090-2	Vacuator Valve	1		F031	1/4-20 x 5/8 Hex Bolt	2
14	5091	Air Flow Indicator	1		F061	1/4 Internal Star Lock Washer	2
15	5092	Close Nipple, 3/4 (1/8 NPT)	1		F091	5/16-18 x 5/8 Hex Bolt	2
		,			F184	1/4-20 x 1/2 Hex Bolt SS	6
Fuel	Tank Assen	nbly			F185	1/4 Internal Star Lock SS	6
		•			F249	M10 Split Lock Washer	4
16	5082	Fuel Tank Cap	*		F332	M10 x 1.5 x 30 Hex Bolt	4
		(Includes Item # 17)					
17	5082-2	Fuel Cap Seal	*	*	Service Par	t Only	
18	6046	Fuel Tank, 3.0 gal., Gas	1			•	
		(Includes Items # 16, 17, 24 & 25)		NOTI	E: Refer to	Kohler Engine Decal (NS) for Engine Ide	ntification
19	8023	Fuel Tank Support	1		Numbers	• • • • •	
20	7015	Fuel Line, Tank (1/4 x 15)	1				
21	5879-3	Hose Clamp (1/2)	4	NOTI	E: Decals fo	or this assembly are not shown here. Refe	er to Tracto
22	5020	Fuel Filter	1			Page 2) for Decal listing and placement in	
23	6015-3	Fuel Line, Engine (1/4 x 12-1/2)	1		/-	5 ,	
24	5083	Fuel Shut-Off Valve & Filter	*				
25	5083-1	Bushing, Rubber	*				

ENGINE GROUP

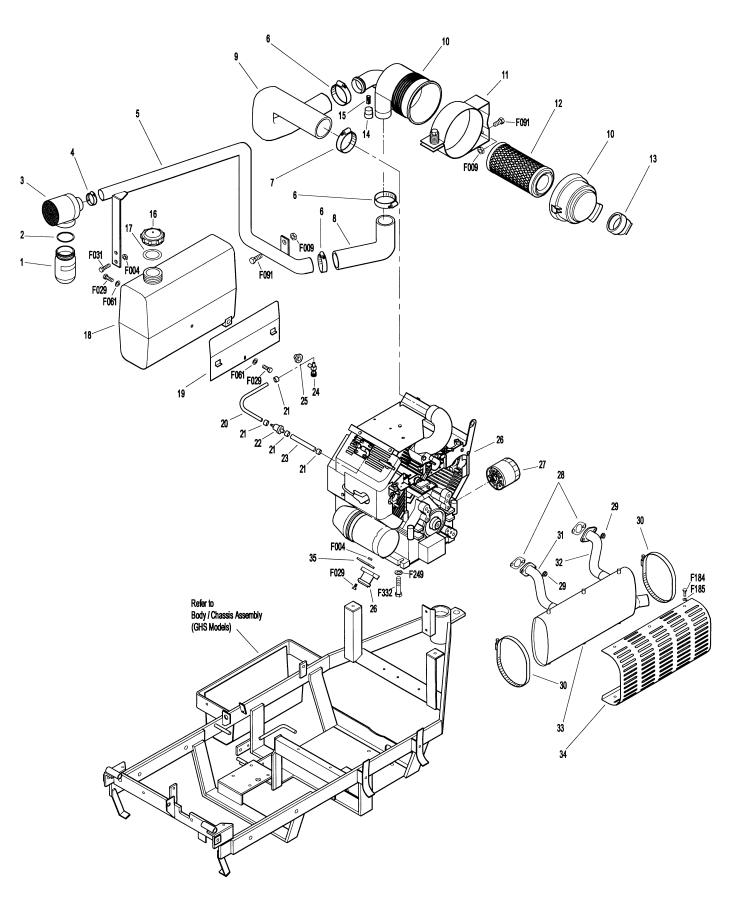


HYDROSTATIC GROUND DRIVE ASSEMBLIES

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Trans	smission Lo	ockout Assembly		Trans	smission R	epair Parts*	
1	5027	Lockout Mount	2	24	5025-5	Input Shaft	*
	5028-3	Transmission Lockout Assembly	*	25	5025-8	Bearing, Input	*
		(Includes Items # 1, 2, 3, 4, F023 & F027	·)	26	5025-7	Snap Ring	*
2	5028	Lockout Lever	2	27	5025-2	Seal, Input Shaft	*
3	5057	Lockout Cam	2	28	5022	Reservoir to Casting Gasket	*
		(Includes Item # F081)		29	5024	Reservoir Cap and Gasket	*
4	5847	Plastic Tip, Lockout Lever	2	30	5023	Transmission Reservoir Kit	*
						(Includes Items # 28, 29, & 31)	
Grou	nd Drive As	ssemblies		31	5023-1	Rubber Bladder	*
				32	5025-6	O-Ring & Plug Assembly	*
5	6209-1	Bridge Assembly	1	33	5025-3	Seal, Control Shaft	*
6	6243-2	Hydro Fan, CCW	1				
7	5026	Hydrostatic Drive, CW (700-031)	1	Faste	eners		
8	6206	Pressure Relief Valve	*				
9	6200-5	Gear Axle Drive Assembly	2		F012	3/8-16 Keps Nut	1
		(Includes Item # 8)			F023	10-24 ESNA Nut	2
10	5126	Cable Retainer	1		F027	10-24 x 5/8 PPHMS	2
11	6233-1	Pinion Gear	2		F036	1/4-20 x 1/2 SBH Screw	2
12	6234	Spacer, Pinion Gear	2		F038	3/8-16 x 1 Hex Bolt	4
13	6201	O-Ring Seal	2		F040	3/8-16 x 1-1/2 Hex Bolt	4
14	7244	Hydro Pulley (3-7/8)	2		F043	3/8-16 x 3 Hex Bolt	7
15	6243-1	Hydro Fan, CW	1		F053	7/16 Internal Star Lock Washer	4
16	5025	Hydrostatic Drive, CCW (700-032)	1		F063	3/8 Internal Star Lock Washer	16
					F064	1/8 x 1/2 Woodruff Key (#3)	4
Deck	Support Ar	rm Assemblies			F081	A/A45D Aluminum Pop Rivet	2
47	0400 40	0.000	4		F160	External Snap Ring (.669 Shaft)	2
17	6430-10	Outboard Mount, LH	1		F178	1/4 x 1 Fender Washer	2
18	6430-2	Deck Support Arm, LH	1		F194	7/16 x 1-1/4 x 1/8 Washer	2
10	E77E 0	(Includes Item # 22)	2		F200	7/16-20 x 3 Grade 8 Bolt	2
19 20	5775-2 6430-1	Hitch Pin (#6)	2		F205 F244	5/16-18 x 1/4 Set Screw, Knurl Point	4
20	043U-1	Deck Support Arm, RH	1		F244 F262	7/16-20 x 3/4 Hex Bolt	2
21	6430-9	(Includes Item # 22) Outboard Mount, RH	1		F202	3/8-16 x 4 Hex Bolt (Spec) All Thread	1
21 22		· ·	1 2	* .	Corvino Dor	t Only	
23	5830 6840-1	Grease Fitting	2	•	Service Par	t Only	
23	0040-1	Support Arm Bushing	۷	NOT	- D	or this assambly are not shown here. Defer	

NOTE: Decals for this assembly are not shown here. Refer to Tractor Decals (Page 2) for Decal listing and placement information.

HYDROSTATIC GROUND DRIVE ASSEMBLIES

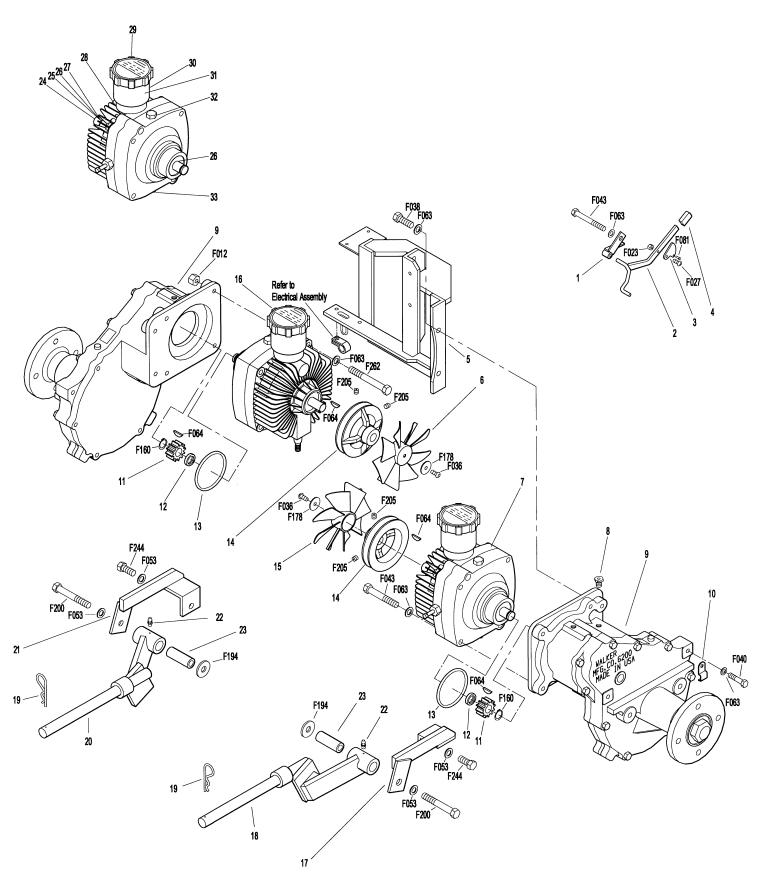


Effective Date 11-05-97

STEERING CONTROL ASSEMBLIES

TEM No.	PART NO.	DESCRIPTION	NO. REQ'D	NO.	PART NO.	DESCRIPTION	NO. REQ'D
Frans	mission S	pring Assemblies		31	5280	Clevis (1/4)	1
i i u i i c	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	pring Assemblies		32	5219	FSC Extension Spring (3/4 x 6-3/4)	1
1	6199	Transmission Spring Assembly (RH)	*	33	5142-2	FSC Actuator Cam	1
ļ	0133	(Includes Items # 2-8, F003,		34	5172	Bearing, Nylon (.255 ID x .379 OD x .25	50\ 1
		•		35	5172	FSC Actuator Rod	10) 1
2	EEEO	F287, F293 & F320)	2	36			1
2	5552	Ball Joint (1/4-28)	2		5975-3	Cable Tie (50# x 7")	1
3	5192	Spring Plunger	2	37	7170	FSC Lever Assembly	I
4	5194	Plunger Sleeve	2		=000	(Includes Item # 22)	
5	6191	Spring Slide (4-3/4)	1	38	5862	FSC Knob	1
6	5195	Compression Spring (1 x 5-1/8)	2				
7	6196	Spring Slide Cap	1	Faste	eners		
8	5193	Washer (.750 ID x 1.00 OD x .085)	2				
9	5197	J-Bolt	1		F003	1/4-28 Hex Nut	3
0	5191	Spring Slide (3-5/8)	1		F004	1/4-20 Keps Nut	6
1	5199	Transmission Spring Assembly (LH)	*		F007	5/16-18 Jam Nut	1
		(Includes Items # 2-4, 6, 8-10,			F008	5/16-24 Keps Nut	2
		F003, F146, F287 & F293)			F009	5/16-18 Whiz Locknut	1
		,			F010	5/16-24 ESNA Nut	2
teer	teering Lever & FSC Assemblies				F012	3/8-16 Keps Nut	2
	9 _0.0.	2 1 00 7 1000 ms.100			F024	5/16-24 Jam Nut	2
2	6212	Transmission Control Arm, RH	1		F032	1/4-20 x 3/4 Hex Bolt	3
3	5141	FSC Friction Washer	2		F034	5/16-18 x 3/4 Hex Bolt	1
14	5140	FSC Friction Body	1		F050	1/4 SAE Washer	3
4	3140	•	'		F050		2
15	E440 E	(Includes Item # 22)	4			3/8 SAE Washer	
0	5142-5	FSC Key	1 *		F064	1/8 x 1/2 Woodruff Key (#3)	2
	5140-3	FSC Control Assembly			F068	1/8 x 1 Cotter Pin	1
		(Includes Items # 13, 14, 15, 22, 33,			F069	3/32 x 1/2 Cotter Pin	1
	50440	F192 & F193)	•		F093	5/16-18 x 1 Hex Bolt	1
6	5214-2	Ball Joint (5/16-24), Nylon Lined	2		F104	1/4-20 x 3/4 PFH Bolt	1
7	5212-5	Transmission Control Arm, LH	1		F134	AN960816L Washer	2**
8	5850	Handle Grip, Foam	2		F146	1/4-20 Jam Nut	1
9	5213-1	Control Rod, LH (15")	1		F182	1/4 x 5/8 x 1/8 Washer	2
20	5223	Extension Spring (1/4 x 5-1/2)	2		F183	.312 x .700 x .074 Washer	2
21	5450	D-Clip	2		F186	5/64 x 1/2 Cotter Pin	1
22	5830	Grease Fitting	6		F192	3/8-24 Self-Locking Nut	1
23	5214-1	Bearing, Steering Lever Actuator	2		F193	3/8 Belleville Spring Washer	3
24	5463	Steering Lever Actuator	2		F287	1/4-28 Keps Nut	2
25	5451-2	Steering Lever, LH	1		F293	1/8 X 1 Roll Pin	2
		(Includes Item # 22)			F320	1/8 x 3/4 Split Spring Pin	1
26	5217	Pivot Pin, Steering Lever	1				
27	5470-1	Speed Control Stop	1	*	Service Par	t Onlv	
28	5450-2	Steering Lever, RH	1			mber used per assembly. Adjust as require	ed.
	J	(Includes Item # 22)	•				
9	5213-2	Control Rod, RH (6")	1	NOT	E: Decals fo	or this assembly are not shown here. Refer	to Tract
_	5281-5	Clevis Pin (1/4 x 0.80)	1			Page 2) for Decal listing and placement info	

STEERING CONTROL ASSEMBLIES

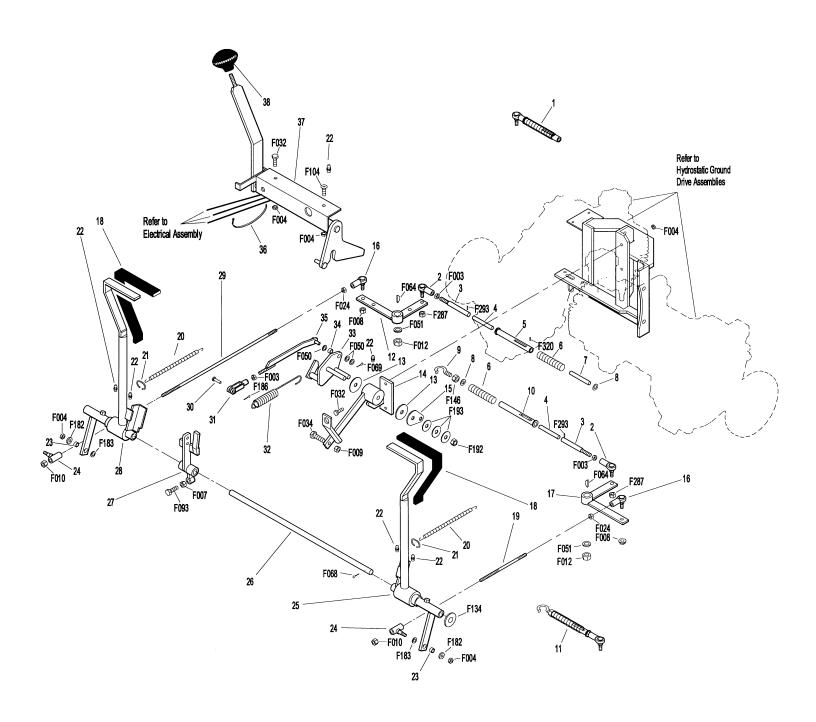


THROTTLE & CHOKE CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Throt	tle & Choke	e Control Assemblies		14	6108-1	Throttle Control and Cable Assembly (Complete Control and Cable Assembly)	*
1	5108-13	Throttle Cable	1	15	8122	Choke Control and Cable Assembly	*
2	8122-1	Choke Cable	1			(Complete Control and Cable Assembly)	
3	5172	Nylon Bearing	2				
4	5108-7	Control Lock Tab	2	Fast	eners		
5	5108-10	Friction Washer (.125)	2				
6	5108-1	Control Lever, Throttle & Choke	2		F002	10-24 Keps Nut	6
7	5108-5	Throttle Control Knob, Red	1		F005	1/4-20 ESNA Nut	2
8	5108-11	Friction Washer (.062)	2		F025	10-24 x 3/8 PPHMS	4
9	5108-8	Control Bracket	2		F050	1/4 SAE Washer	2
10	7108	Control Assembly, Throttle and Choke	2		F164	10-24-1/4 x 3/8 SHL Bolt	2
11	5108-6	Choke Control Knob, Black	1		F201	1/4 Belleville Spring Washer	4
12	5975-3	Cable Tie (50# x 7")	1				
13	5975-1	Cable Tie (18# x 3-3/4")	2	*	Service Par	t Only	

NOTE: Decals for this assembly are not shown here. Refer to Tractor Decals (Page 2) for Decal listing and placement information.


THROTTLE & CHOKE CONTROL ASSEMBLIES

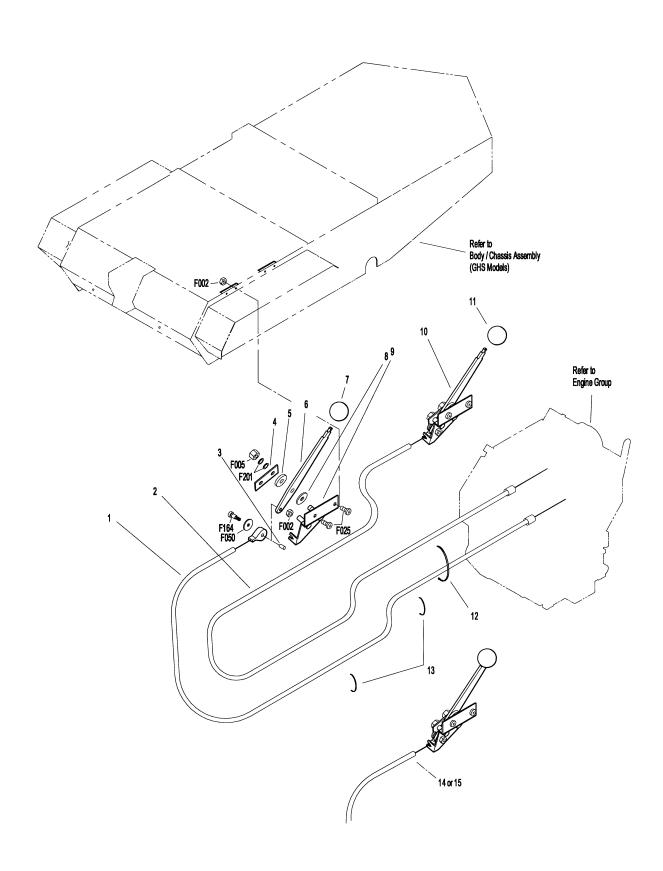

PARKING BRAKE ASSEMBLY

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Parki	ng Brake A	Assembly		Faste	eners		
1	7406-1	Handle Grip, Red	1		F002	10-24 Keps Nut	2
2	7406-5	Parking Brake Lever	1		F003	1/4-28 Hex Nut	2
3	7406-2	Lever Mount	1		F004	1/4-20 Keps Nut	4
4	5830	Grease Fitting	1		F025	10-24 x 3/8 PPHMS	2
5	7407	Clevis Pin (3/16 x 1/2)	2		F029	1/4-20 x 1/2 Hex Bolt	3
6	7404	Brake Actuator Arm	2		F032	1/4-20 x 3/4 Hex Bolt	1
7	7405	Pin, Transmission Lock	2		F054	AN960616 Washer	1
8	7402	Clevis	2		F061	1/4 Internal Star Lock Washer	1
9	7408	Compression Spring (1/2 x 3/4)	2		F072	1/4 "E" Retainer Ring	2
10	7415	Rubber Dust Shield (5/8 x 3/8 x 1/32)	2		F086	#10 SAE Washer	4
11	5567-3	O-Ring Seal (1/4 x 3/8)	4		F109	1/8 x 5/8 Roll Pin	2
12	7403	Plunger Bushing, Gear Axle	2		F111	1/8 x 3/4 Cotter Pin	1
13	7404-1	Brake Actuator Mount	2		F112	5/8 x 1-1/4 x .03 Washer	2
14	7412	Clevis Pin (3/16 x 3/4)	2		F127	1/16 x 1/2 Cotter Pin	4
15	5833	Cable Clamp (1/4)	2		F261	AN960616L Washer	6
16	7410	Brake Control Cable, LH (27")	1				
17	7409	Brake Control Cable, RH (21")	1	NOT	E: Decals f	for this assembly are not shown here. Re	efer to Tractor
18	7401-3	Cable Mount Bracket	1			(Page 2) for Decal listing and placemen	
19	7401-1	Cable Pull Rod	1			- ,	
20	5552	Ball Joint (1/4-28)	1				

PARKING BRAKE ASSEMBLY

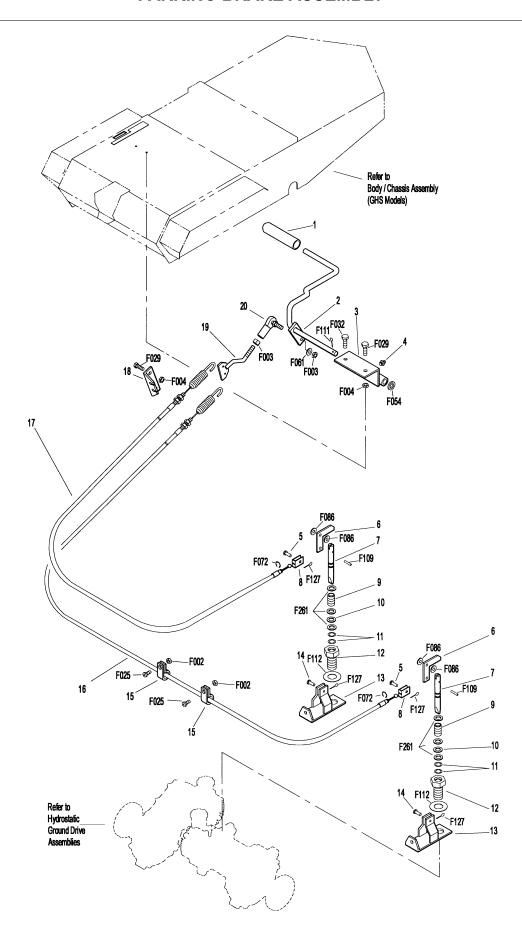


GHS GROUP

			<u></u>	-			
NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Deliv	ery Chute	Assembly		Fast	eners		
1	5515-2	Elbow Delivery Spout	1		F002	10-24 Keps Nut	4
2	5594	Vane Assembly, Grass Pak Switch	1		F004	1/4-20 Keps Nut	6
		(Includes Items # F130, F144 & F145)			F009	5/16-18 Whiz Locknut	1
3	5592	Grass Pak Switch Assembly	1		F012	3/8-16 Keps Nut	3
4	5578	Rear Clip, Chute Mount	1		F025	10-24 x 3/8 PPHMS	4
5	5577	Side Clip, Chute Mount	2		F034	5/16-18 x 3/4 Hex Bolt	1
6	5511-3	Delivery Chute Assembly, (6.7)	1		F038	3/8-16 x 1 Hex Bolt	1
		(Includes Items # 4, 5, F079 & F085)			F040	3/8-16 x 1-1/2 Hex Bolt	1
7	6530	Body Chute (10")	1		F042	3/8-16 x 2-1/4 Hex Bolt	1
		. ,			F054	AN960616 Washer	1
Blow	er Belt Tig	htener Assembly			F067	3/16 x 3/16 x 1 Key	1
	•	•			F074	1/4-20 x 3/8 Set Screw	2
8	7238	Blower Drive Pulley (4-1/4 / 3V)	1		F075	5/16-18 x 1/2 SQH Set Screw	1
9	7234	Blower Belt (3VX280)	1		F079	A/A66D Aluminum Pop Rivet	14
10	7239	Blower Pulley (3-3/8 / 3V)	1		F085	3/16 Rivet Backup Washer	8
11	7201-1	Needle Bearing	2		F086	#10 SAE Washer	4
12	7201	Bearing Inner Race	2		F114	5/16-18 x 5/8 SQH Set Screw	2
13	5221	Extension Spring (3/4 x 4)	1		F124	10-32 x 3/8 Taptite Machine Screw	4
14	7364	Blower Belt Tightener Arm	1		F130	10-24 x 3/16 Set Screw	1
15	5841	Retainer Washer	1		F144	4-40 x 1/4 PPHMS	1
					F145	4-40 Keps Nut	1
Blow	er Assemb	ly			F163	5/16-18 x 3/4 SQH Set Screw	1
		•			F217	7/16-14 Hex Nut	1
16	7245	Idler Pulley (1/2 Groove)	1		F218	7/16 Split Lock Washer	1
17	5268	Bearing (3/4) Includes Locking Collar	2		F219	7/16-14 x 1-1/4 Hex Bolt	1
18	6543	Housing (10" Blower)	1		F231	1/4 x 3/4 Woodruff Key (#806)	1
	6542	Blower Assembly (10")	*			, (,	
19	6545	Blower Wheel (10")	1	*	Service Pa	rt Only	
20	6525-2	Faceplate (10" Blower)	1			er when GHS is not in use. Furnished only	v with
21	6526	Intake Tube (6-1/2 x 2-1/2)	1		•	Decks, SD Decks used on a GHS Tractor,	•
22	5595-2	Intake Cover	**			achment and Snowblower Attachment.	,
23	7833	Cable Clamp (7/8 x 1/4)	1				
24	7528	Skid Bar (10" Blower)	1	NOT		Electrical Connectors (Page 30) for ident	ification o

all Electrical Wiring Service Parts.

NOTE: Decals for this assembly are not shown here. Refer to Tractor Decals (Page 2) for Decal listing and placement information.


GHS GROUP

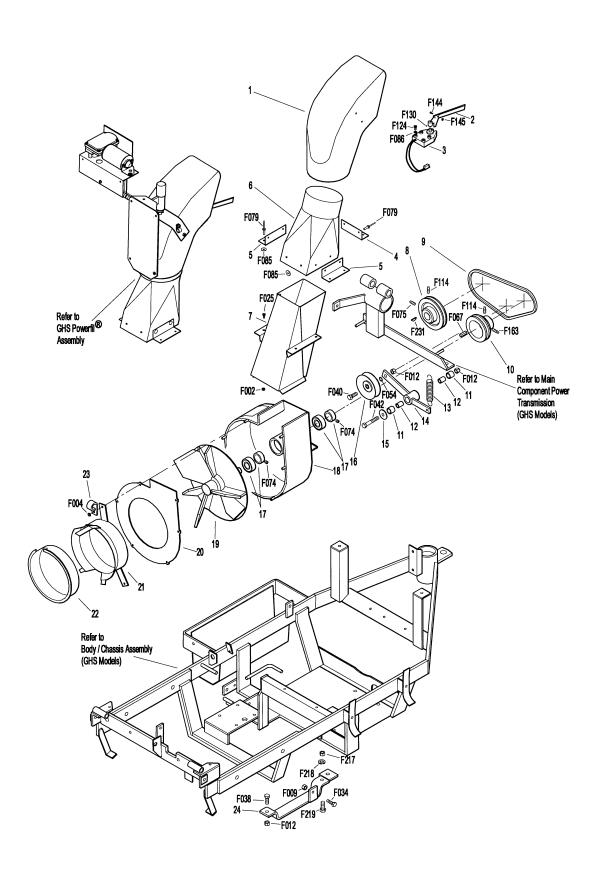

GHS POWERFIL® ASSEMBLY

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
GHS	Powerfil [®] /	Assembly		Faste	eners		
1	5557	Motor Mount, Powerfil®	1		F002	10-24 Keps Nut	14
2	5857	Wire Clamp (1/8 J-Clip)	3		F003	1/4-28 Hex Nut	4
3	5551-3	Bearing Cap, Powerfil®	1		F025	10-24 x 3/8 PPHMS	2
4	5551-1	Pivot Bearing (#S3PP)	2		F054	AN960616 Washer	1
5	5552	Ball Joint (1/4-28)	2		F061	1/4 Internal Star Lock Washer	1
6	5518-2	Pivot, Delivery Spout	1		F086	#10 SAE Washer	1
7	5517-2	Pivot Mount	1		F101	10-24 x 1-1/4 SHC Screw	1
8	5558-1	Powerfil [®] Push Rod	1		F109	1/8 x 5/8 Roll Pin	1
9	5553-3	Bushing, Powerfil [®] Actuator	4		F129	10-24 x 1/2 PTHMS	11
10	5558-2	Powerfil® Actuator Rod	1		F261	AN960616L Washer	1
	5549	Actuator Rod Assembly	*				
		(Includes Items # 5, 8, 9, 10, 11 & F003)		*	Service Pa	rt Only	
11	5553-1	Spring, Powerfil [®] Actuator	2				
12	5554	Actuator Arm	1	NOTI	E: Refer to	Electrical Connectors (Page 30) for ide	ntification o
13	5519-3	Motor Mount Nut (5/8-24 Panel Nut)	*		all Elect	rical Wiring Service Parts.	
14	5519-2	Motor Mount Washer	*				
15	5519	Actuator Motor (12/24V) (Includes Items # 13 & 14)	1				
16	5977	Grommet (1/2 ID x 7/8 OD x 1/16)	1				


GHS POWERFIL® ASSEMBLY

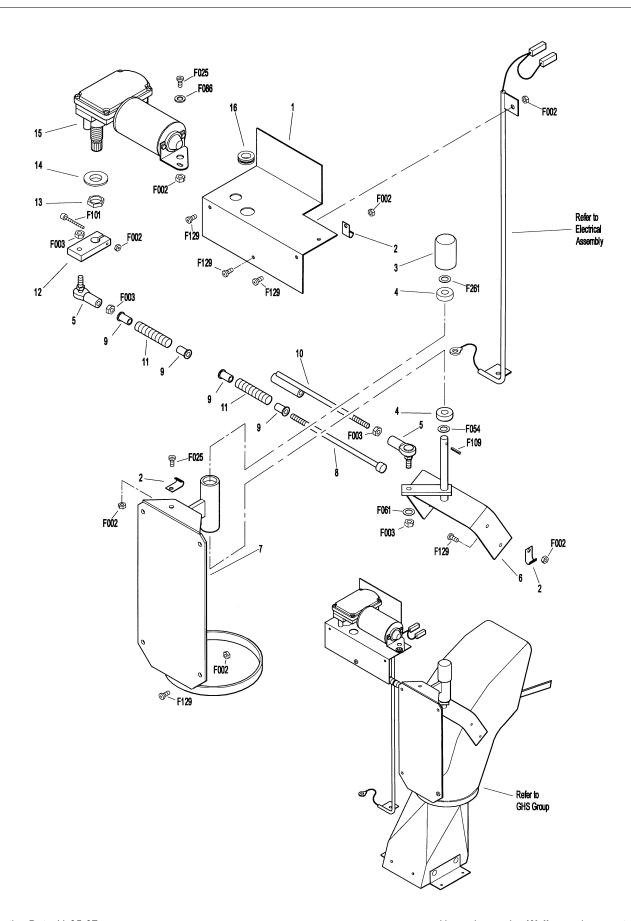

GHS 6.7 BUSHEL CATCHER & EXHAUST DEFLECTOR ASSEMBLIES

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Uppe	r Baffle Scı	reen Assembly (Removable)		5598	Optional I	Dump Bag (Not Shown)**	
1	7509-3	Channel Bottom	2	Fast	eners		
2	7505	Mustache Spring	2				
3	6507	Screen Seal, 6.7 (24")	1		F002	10-24 Keps Nut	18
4	6856-1	Edge Molding, 6.7 (21-3/4)	1		F004	1/4-20 Keps Nut	16
5	7509-2	Channel Top	2		F009	5/16-18 Whiz Locknut	2
6	6512-2	Removable Screen (6.7)	1		F020	5/16-18 ESNA Nut	2
7	7506	Knob	2		F025	10-24 x 3/8 PPHMS	4
8	6509-4	C-Channel (6.7)	1		F027	10-24 x 5/8 PPHMS	4
		,			F035	5/16-18 x 1-1/4 Hex Bolt	1
Exha	ust Deflect	or Assembly			F037	10-24 x 5/8 PTH Screw	4
		•			F049	5/16 SAE Washer	8
9	5504-1	Exhaust Deflector (Two Piece Set)	1		F061	1/4 Internal Star Lock Washer	2
10	5504-8	Deflector Mount Doubler	2		F079	A/A66D Aluminum Pop Rivet	25
11	5504-3	Hinge, Exhaust Deflector	1		F085	3/16 Rivet Backup Washer	9
••	00010	r iii ge, zanadet zeneete.	•		F129	10-24 x 1/2 PTHMS	4
GHS	6 7 Rushel	Catcher Assembly			F188	1/4-20 Self Locking Nut	17
00	on Buonor	outonol Accombin			F195	1/4-20 x 3/4 PPHMS SS	8
12	5584	Reinforcing Strap, Catcher Top	1		F196	1/4-20 x 1 PPHMS SS	2
13	5510-1	6.7 Bushel Catcher, Including Door	1		F198	.625 x .250 x .040 Washer, SS	9
10	5502-1	6.7 Catcher, Without Powerfil®	*		F203	1/4-20 x 5/8 PPHMS SS	4
	0002-1	(Includes Door)			F230	1/4-20 x 1-1/4 PPHMS SS	1
	5502-2	6.7 Catcher Assembly (Includes Powerfil [®]	D\ *		F242	1/4-20 x 7/8 PPHMS SS	14
	5502-3	6.7 Catcher Assembly and Bumper Moun			F252	10-24 x 3/4 PFHMS	1
	0002-0	(Includes Bumper & Powerfil®)	·		F255	5/16-18 x 1-1/2 Hex Bolt	1
14	5583	Handle	1		F329	.260 ID x 1.939 OD Washer	2
15	5514-10	Door Frame, Catcher (6.7)	1		F330	3/16 D x 21/32 L Rivet, SS	2
16	5130	Side Strap, Door (6.7)	2		F333	1/4-20 x 3/4 PTHMS	4
17	5155-12	5/16 Ball Stud	2		ГООО	1/4-20 X 3/4 F 11 11VIS	4
18	5588		2	*	Convios Do	rt Only	
19	5147	Rubber Bumper (.75 OD x .50) Spring Clip, Gas Spring	4		Service Pa	-	n Dog
					Contact yo	ur Walker dealer to order Optional Dump	р вад.
20	5155	Catcher Gas Spring Assembly	2	NOT	E. The De	mouable Unior Daffle Coroon is standar	4
04	EEOA	(Includes Items # 17, 19 & 22)	0	NOI		movable Upper Baffle Screen is standard	
21	5524	Hinge Bearing	2			ent on GHS models starting with Serial N	
22	5155-13	3/4 Ball Stud	2			3 and on. Order kit P/N 6520 for installa	ilion on
23	5523-6	Gas Spring Plate	2		earlier n	nodels. Contact your Walker dealer.	
24	5522-1	Hinge Backup Plate, LH	1	NOT	F. Daniel (fau this assaulth, aus and above to D	afau te
25	5503	Mounting Frame, Catcher (6.7)	1	NOI		for this assembly are not shown here. Re	
26	5522-2	Hinge Backup Plate, RH	1			Decals (Page 2) for Decal listing and pla	cement
27	5513-1	Mounting Frame Doubler (6.7)	1		informat	ion.	
28	6508	Safety Latch Hinge	1				
29	7533	Backing Plate, Handle	2				
30	7532	Handle, Catcher Lift	2				

GHS 6.7 BUSHEL CATCHER & EXHAUST DEFLECTOR ASSEMBLIES

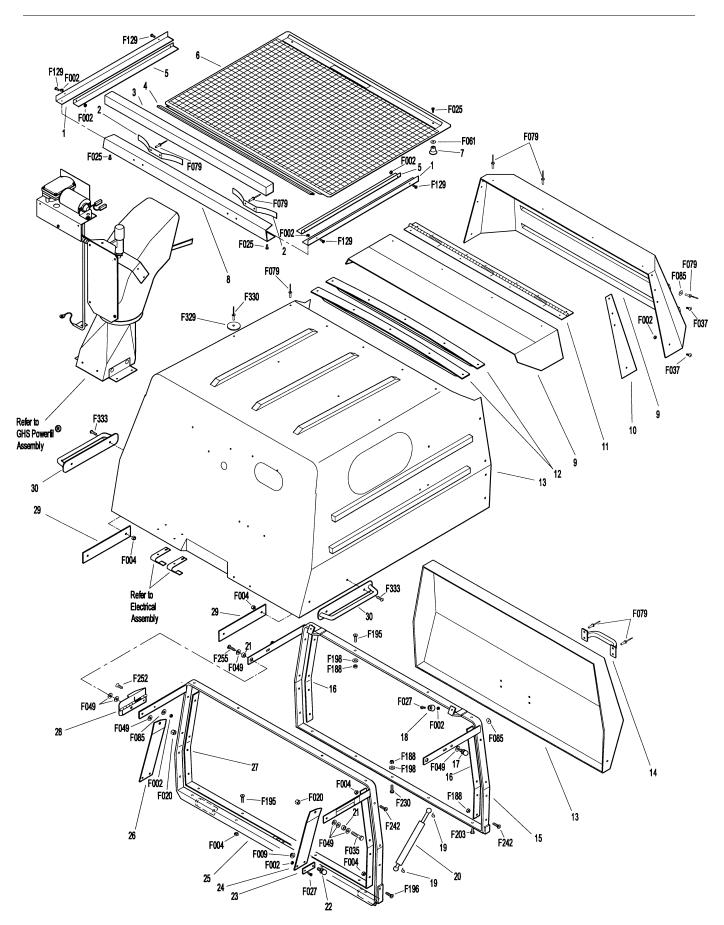


Effective Date 11-05-97

ELECTRICAL ASSEMBLY

NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Elect	rical Asser	mbly		29	7390-1	Battery Pan	1
		•		30	6392	Battery Protector Plate	1
1	5975-3	Cable Tie (50# x 7")	9	31	5910	Battery (12V U1-SP30, Dry)	1
2	5599	Pigtail Wire Set, Horn	1 *	32	6923	Negative Battery Cable	1
3	5536-2	Horn, Full Signal	**	33	5932	Battery Terminal Insul., Black (-)	1
4	5975-1	Cable Tie (18# x 3-3/4")	7	34	5933	Battery Terminal Insul., Red (+)	1
5	5988-1	Conduit Assembly, Powerfil® Wiring	1	35	8943	Positive Battery Lead Wire	1
•	5988-4	Powerfil [®] Tube & Wire Assembly	**	36	8941	Circuit Breaker (30 Amp) with Reset	1
	0000 1	(Includes Items # 5 & 26)		37	6941	Relay Switch (30/40 Amp)	1
6	5983	Power Lead Wire, Body	1 *	38	5839	Hook Bolt	2
7	6940-1	Wire Harness	1	39	5844	Battery Hold-Down Bar	1
8	5975-5	Wire Clip, Self-Mount	3	00	0044	Battery Floid-Bown Bar	'
U	0010-0	(SD Models use only 2)	0	Faste	nore		
9	5941	Safety Switch (Normal Closed)	1	ı ası			
3	0041	(Includes Item # 10)	ı		F002	10-24 Keps Nut	9
10	5941-1	Switch Boot (Fits P/N 5941)	**		1 002	(SD Models use only 3)	3
11	5942	Safety Switch (Normal Open)	1		F004	1/4-20 Keps Nut	5
11	J34Z	(Includes Item # 12)	ı		F009	5/16-18 Whiz Locknut	1
12	5942-1	Switch Boot (Fits P/N 5942)	**		F019		2
13	8990		4		F019 F025	1/4-20 ESNA Wing Nut	2
14		Hourmeter	1		F025 F026	10-24 x 3/8 PPHMS	
	5991-2	Hourmeter Ground Wire	1			10-24 x 1/2 PPHMS	1
15	6996	Oil Pressure Light Assembly	1		F031	1/4-20 x 5/8 Hex Bolt	1
40	0000.4	(Includes Items # 16 & 17)	**		F032	1/4-20 x 3/4 Hex Bolt	4
16	8996-1	Indicator Bulb			F050	1/4 SAE Washer	2
47	0000	(Replacement for P/N 8996)	4		F085	3/16 Rivet Backup Washer	1
17	8996	Red Indicator Light	1		F086	#10 SAE Washer	1*
		(Includes Item # 16)			F093	5/16-18 x 1 Hex Bolt	1
18	5960-2	Ignition Key (1 Set)	1		F112	5/8 x 1-1/4 x .03 Washer	1
		(Includes Item # 4)			F147	10-24 x 1/2 PPHMS SS	3*
	5960-3	Key Tip Protector	1		F148	10-24 x 3/8 PPHMS SS	3 *
19	5960-6	Ignition Switch Cover	1				
20	5960-5	Nylon Nut, Ignition Switch	1		GHS Model		
21	5960	Ignition Switch (with Keys)	1	**	Service Par	t Only	
		(Includes Items # 18, 19, 20 & F112)					
22	5940-3	Ignition Switch Cover	1	NOTI	E: Refer to	Electrical Connectors (Page 30) for identi	fication of
23	7942	Safety Switch (Includes Item # 24)	1		all Electr	ical Wiring Service Parts.	
24	7942-0	Nut, Safety Switch (Fits P/N 7942)	**	NOTI	E: Items#	3, 5 & 6 are Service Parts used exclusive	lv on GHS
25	5984	Electric Contact Spring	2 *		Models.	-,:	.,
26	5985-2	Power Lead Wire, Catcher	1 *				
27	5982-1	Insulator Washer, Plastic (2")	1*	NOTI	F: Decals fo	or this assembly are not shown here. Refe	r to Tracto
28	5982-2	Insulator Bushing, Plastic	1*	.1011		Page 2) for Decal listing and placement in	


ELECTRICAL ASSEMBLY

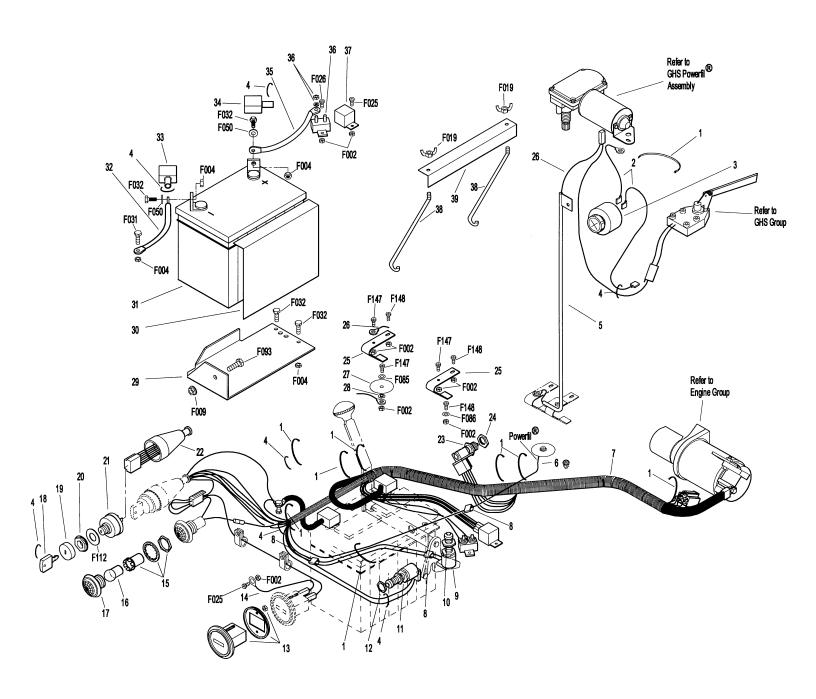

ELECTRICAL CONNECTORS

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
Elect	trical Wiring	Service Parts		24	7942-1	2-Way Locking Connector, Female	*
				25	7942-2	2-Way Connector, Male	*
1	5996-1	16-14 GA Butt Conn.	*	26	7942-3	2-Way Connector, Female	*
2	5996-4	16-14 GA Bullet Conn., Male	*	27	7942-10	2-Way Locking Connector, Male	*
3	5996-5	16-14 GA Bullet Conn., Female	*	28	5940-8	3-Way Connector, Male	*
4	5940-4	16-14 GA Spg. Loaded Term., Female	*	29	7942-9	3-Way Connector, Male	*
5	5940-7	Brass Wire Clip, Female	*	30	8944	3-Way Locking Connector, Male	*
6	5996	1/4 x 16-14 GA QKS Term., Female	*	31	8944-1	3-Way Locking Connector, Female	*
7	5996-2	3/16 x 22-18 GA QKS Term., Female	*	32	7942-11	4-Way Connector, Male	*
8	7996	16-14 GA QKS Term., .187 (Female)	*	33	7942-12	4-Way Connector, Female	*
9	5940-5	16-14 GA Spg. Loaded Term., Male	*	34	7942-5	5-Way Connector, Male	*
10	5996-0	1/4 x 22-18 GA QKS Term., Male	*	35	5940-2	5-Way Connector, Male	*
11	7996-1	1/4 x 16-14 GA QKS Term., Male	*	36	8942-1	5-Way Connector, Female	*
12	5996-8	6 GA Ring Lug (5/16)	*	37	7942-6	6-Way Connector, Male	*
13	5996-9	22-18 GA Ring Term., #10	*	38	7942-7	6-Way Connector, Male	*
14	5996-10	16-14 GA Ring Term. (5/16)	*	39	7942-8	8-Way Connector, Male	*
15	5996-12	12-10 GA Ring Term. (5/16)	*	40	8942-2	8-Way Connector, Female	*
16	5996-13	16-14 GA Ring Term., #10	*	41	8942-3	5-Way Connector, Male	*
17	5996-15	12-10 GA Ring Term. (1/2)	*			•	
18	5996-16	6 GA Ring Terminal (1/4)	*	*	Service Part	Only	
19	5996-17	16-14 GA Ring Term. (1/4)	*			·	
20	5996-20	12-10 GA Ring Term. (1/4)	*	NOT	E: Not all Ele	ectrical Connectors are used with all asso	emblies.
21	5996-21	12-10 GA Ring Term., #10	*				
22	7942-4	Single Connector, Male	*	NOT	E: Refer to E	Electrical Assembly (Page 28) for location	ns of
23	8942	2-Way Connector, Male	*			arness and of all Electrical Wiring Service	

ELECTRICAL CONNECTORS

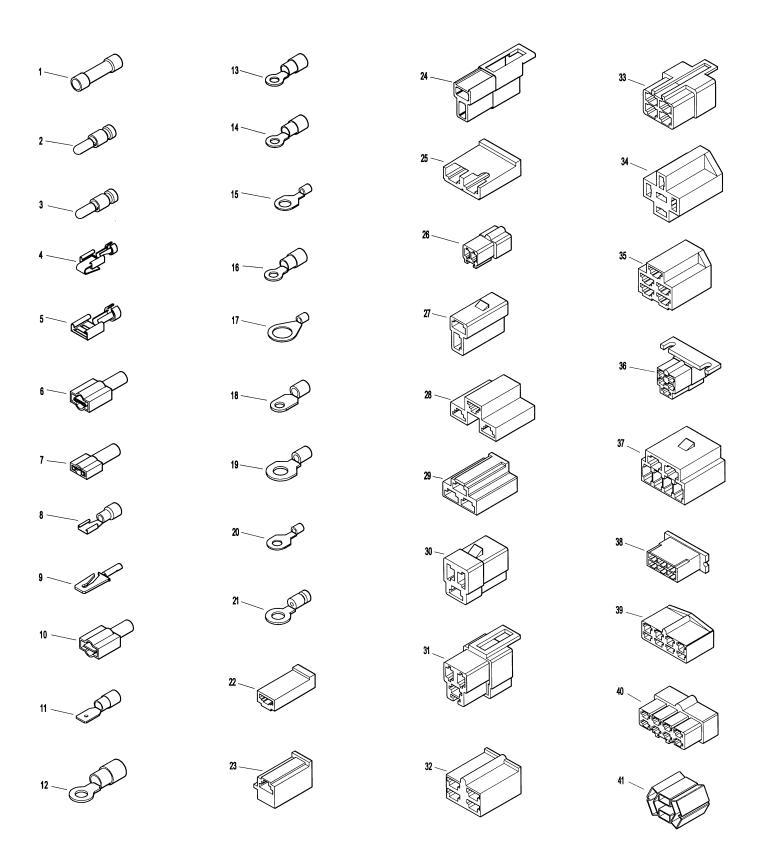


5989 LIGHT KIT

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
5989	Light Kit*			Faste	eners		
1	5989-2	Light Assembly	2		F009	5/16-18 Whiz Locknut	2
		(Includes Sealed Beam Lamp)			F091	5/16-18 x 5/8 Hex Bolt	2
	5989-6	Sealed Beam Lamp (Fits P/N 5989-2)	**		F134	AN960816L Washer	2
2	7834-1	Half U-Wire Clip	4				
3	5977-1	Grommet (1/8 x 3/8)	2	*	May be ord	lered as a kit for dealer installation.	
4	5975-5	Wire Clip, Self-Mount	3		Contact yo	ur Walker dealer.	
5	5975-1	Cable Tie (18# x 3-3/4")	**	**	Service Pa	rt Only	
6	5995	Toggle Switch (Off-On)	1			·	
7	5995-2	Switch Boot	1	NOTI	E: Upon in	stallation of kit, Item # 3 replaces P/N	5989-4
8	7995-4	Power Lead Wire Assembly (Lights) (Includes Item # 5)	1		(Dome F	Plug, 3/8), Item # 6 replaces P/N 5989 Plug, 7/16), and Item # F091 replaces	9-5
9	7992	Mount Bracket, Lights	1		(Dome F	Plug, 5/16). Dome Plugs are not show Chassis Assembly (GHS Models), Pag	n here. Refer t

NOTE: Refer to Electrical Connectors (Page 30) for identification of

all Electrical Wiring Service Parts.

5989 LIGHT KIT

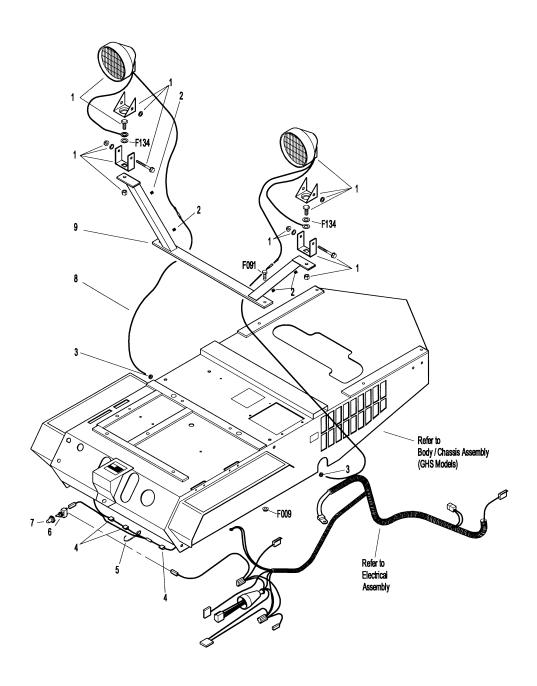

5885 ARMREST KIT & WALKER TOUCH-UP PAINT

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
5885	Armrest K	it*		10	5873	Touch-Up Paint, Grey (1 qt.)	
				11	5873-1	Touch-Up Paint, Grey (1 gal.)	
1	5886-1	Armrest, RH	1				
2	5886-3	Cover Plate, RH	1	Faste	eners		
3	5887	Mounting Bracket	1				
4	5886-4	Cover Plate, LH	1		F305	1/4-20 x 3/8 SH Cap Screw	2
5	5886-2	Armrest, LH	1		F306	3/8-16 x 3/4 Hex Bolt	4
	5888	Armrest Hardware Kit	**		F307	#10 x 5/8 PPHST Screw	2
		(Includes Items # F305, F306, I	F307 & F308)		F308	1-1/4 x 1-5/8 Wave Spring Washer	2
		(111010000 1101110 11 1 000, 1 000, 1			1 000	1 17 1 X 1 0/0 Trave opining Washer	_

Walker Touch-Up Paint***


6	5866	Touch-Up Paint, Yellow (12 oz. Aerosol)
7	5871	Touch-Up Paint, Yellow (1 qt.)
8	5871-1	Touch-Up Paint, Yellow (1 gal.)
9	5867	Touch-Up Paint, Grey (12 oz. Aerosol)


^{*} May be ordered as a kit for dealer installation. Contact your Walker dealer.

^{**} Service Part Only

^{***} Service Part Only, Walker Touch-Up Paint is not included with any replacement parts or kits and must be ordered separately.

5885 ARMREST KIT & WALKER TOUCH-UP PAINT

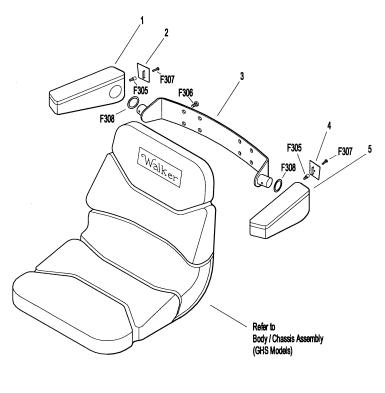


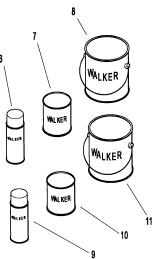

8072 ALL-TERRAIN TIRE KIT & TIRE CHAIN SETS

ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM No.	PART NO.	DESCRIPTION	NO. REQ'D
8072	All-Terrain	Tire Kit*				(For use with Optional Narrow Drive	Tires)
1	0070 4	Wheel Chaper Dieto (4/2)	2**	Faste	eners		
2	8070-4 8071	Wheel Spacer Plate (1/2) All-Terrain Wheel & Tire, LH (18 x 11.00-10)	1		F157	1/2-20 x 1-1/4 Wheel Lug Bolt	8
3	8070	All-Terrain Wheel & Tire, RH (18 x 11.00-10)	1		•	lered as a factory-installed option or as a allation. Contact your Walker dealer.	a kit for
	8070-1	AT Tire Only (18 x 11.00-10)	***			cer Plates (Item 1) are included with Tire	e Chain Sets
	8070-2	AT Wheel Only (10 x 8.5)	***			with 8072 All-Terrain Tire Kit.	
Optio	nal Tire Ch	nain Sets**				,	
-				NOTI	E: Item F1	57 is reused from Body / Chassis Assem	nbly
4	5675-2	Tire Chain Set (18 x 8.50-8) (Includes Item # 1) (For use with Wide Wheel & Tire Assy)	1		•	lodels) and is not included with P/N 8072 Chassis Assembly (GHS Models), Page	
	5675	Tire Chain Set (18 x 6.50-8) (Includes Item # 1)	1	NOTI		ain Sets are not for use on All-Terrain Tir s listed at Item 4. Refer also to Body / C	•


8072 ALL-TERRAIN TIRE KIT & TIRE CHAIN SETS

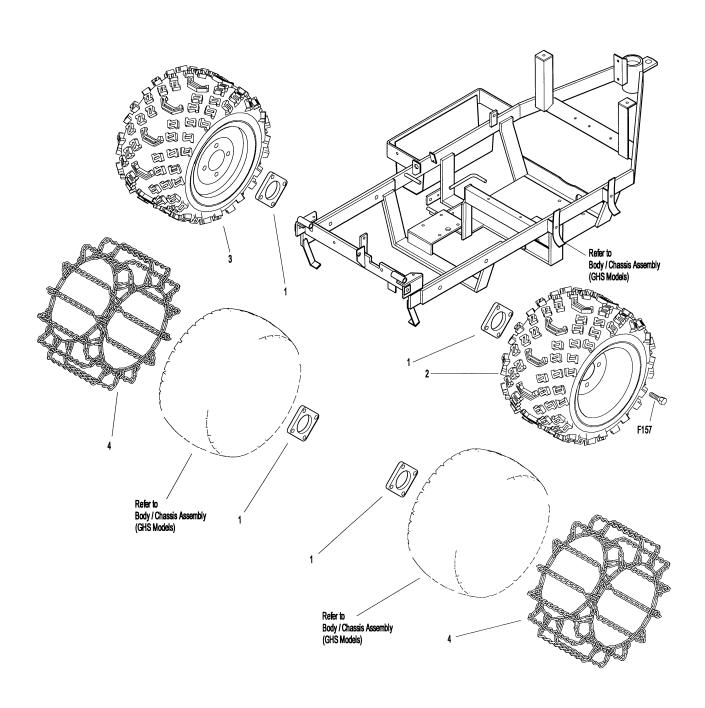

LUBRICATION POINTS

ITEM No.	LOCATION	LUBRICATION TYPE	NO. PLACES	NO.	LOCATION	LUBRICATION TYPE	NO. Places
Lubri	cation Points			27	Engine Oil Filler	Oil***	1
			_	28	Throttle Control Cable Ends	Oil	2
1	Deck Caster Wheel Fork Pivot	Grease	2	29	Choke Control Cable Ends	Oil	2
2	Blade Drive Gearbox	Oil*	2	30	PTO Gearbox Dipstick	Oil	1
3	Tee Gearbox, Deck	Oil*	1	31	Ground Drive Idler Pulley	Oil	2
4	Deck Caster Wheel Bearing	Grease	2	32	Hydrostatic Drive	Oil***	2
5	PTO Shaft Guard Hinge	Oil	1	33	FSC Lever Fork	Grease	1
6	Universal Joint Shaft Assembly		1		(Grease Slide Area)	_	
7	Pivot Assembly, Tilt-Up Deck	Grease	4	34	(FSC) Friction Body Pivot	Grease	1
8	Deck Support Arm Socket	Grease	2	35	Choke Control Pivot	Oil	1
9	Body Hinge Point	Oil	2	36	Throttle Control Pivot	Oil	1
10	Steering Lever Pivot	Grease	4	37	Discharge Chute Hinge	Oil	1
11	Deck Roller Wheel	Oil	2	38	FSC Actuator Rod Pivot Pins	Oil	2
12	Deck Support Arm Pivot	Grease	2				
13	Deck-to-PTO Coupling	Grease	1		Gearboxes are permanently lubri		
14	FSC Lever Pivot	Grease	1		scheduled lubrication. Oil level sh	nould be checked	only when an
15	Universal Joint Tube Assembly	Grease**	1		oil leak is noted.		
16	Parking Brake Lever	Grease	1		Grease every eight (8) hours.		
17	Gear Axle	Oil***	2		See Owner's Manual for procedu		
18	Clutch Lever	Grease	1		oil in Engine Crankcase, Hydrost	atic Transmission	ns, and Gear
19	Brake Actuator	Grease	1		Axles.		
20	Idler Arm Pivot	Oil	2				
21	Jackshaft Bearings	Grease	2	NOT	E: See Model MC Twin Owner's	Manual (P/N 600	0-1) for proper
22	Clutch Actuator Push Rod	Grease	2		lubrication intervals.		
23	Transmission Belt Tightener	Grease	1				
	Arm Idler Pulley			NOT	E: DGHS42 Tilt-Up Deck is show		
24	Clutch Actuator Needle Bearing		1		Deck Lubrication Points, Refe	r to Carrier Fram	e and Deck
25	Anti-Scuff Roller Wheel	Oil	2		Illustrated Parts Manual.		
26	Catcher Hinge Point	Oil	2				


LUBRICATION POINTS

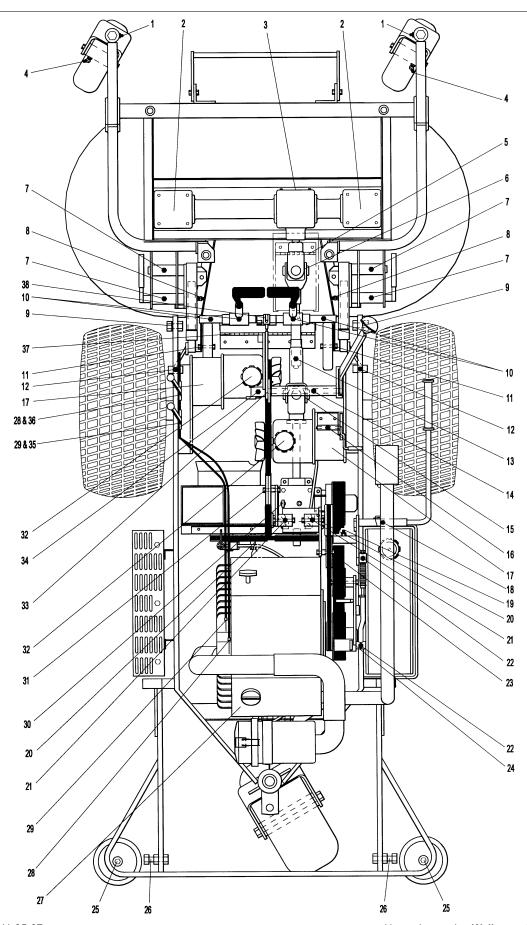

Effective Date 11-05-97

Use only genuine Walker replacement parts.

WIRING SCHEMATIC

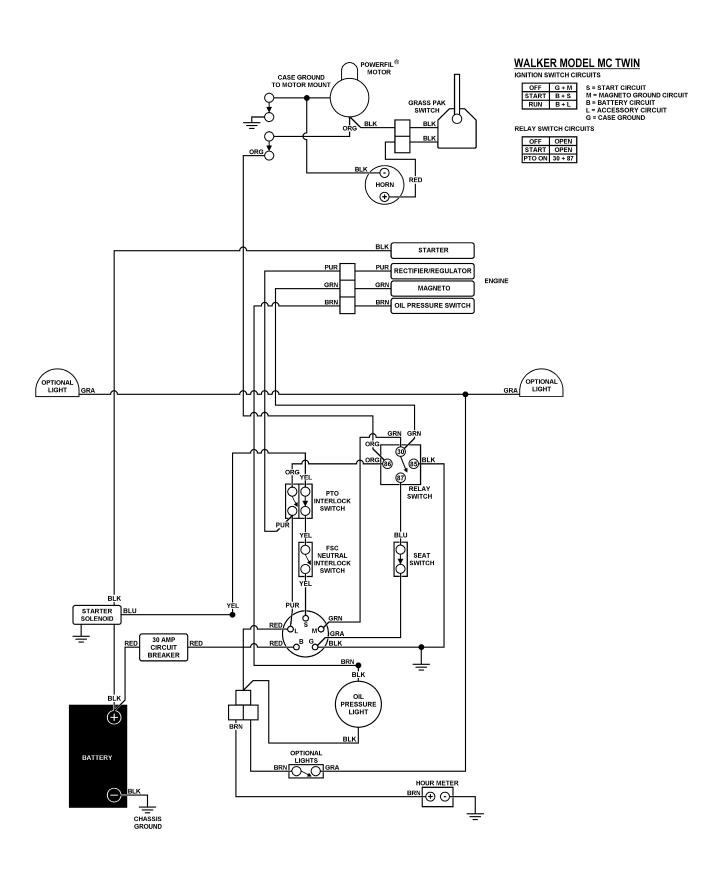

LIMITED WARRANTY FOR WALKER COMMERCIAL RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within one (1) year* after date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty except the following components which are warranted separately by their respective manufacturers:

Kohler Engine Kubota Engine Kawasaki Engine Eaton Hydraulic Transmission Peerless Gearboxes Battery Tires

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

* An extended three (3) year warranty is offered on the Walker P/N 6200 Gear Axle Assembly.

2. WHAT THIS WARRANTY DOES NOT COVER:

- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Owner's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

