


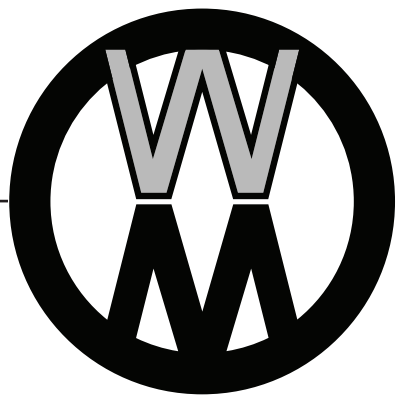

WALKER

Illustrated Parts Manual

C27i



Beginning S/N: 199071
P/N 6000-55

KEY TO ABBREVIATIONS USED IN THIS MANUAL

<i>Abbreviation</i>	<i>What it Represents</i>
° (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
-1 (as deck style designation)	Standard (Aluminum) Gear Drive Deck
-2 (as deck style designation)	Heavy Duty (Cast Iron) Gear Drive Deck
-3 (as deck style designation)	Belt Drive Deck
AT	All-Terrain
CCW	Counter-clockwise
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
V	Volts

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

ILLUSTRATED PARTS LIST


<i>Section of Tractor Covered</i>	<i>Page</i>	<i>Section of Tractor Covered</i>	<i>Page</i>
Decals		Electrical Components	
Tractor Decals	2	Electrical Assembly	24
Body / Chassis Assemblies		Electrical Assemblies (GHS 10.0 Bushel Components).....	26
Front Body Assembly	4	Maintenance	
Rear Body Assembly.....	6	Lubrication Points	28
Chassis Assembly.....	8	Carrier Wheel Fork Installation.....	30
Tractor Components		Wiring Schematic	31
Main Component Power Transmission	10	Maintenance And Service Record Sheet.....	32
Engine Group	12	Warranty	
Hydrostatic Ground Drive Assemblies.....	14	Limited Warranty	33
Steering Control Assemblies.....	16		
GHS Group	18		
GHS Powerfil® Assembly (10.0)	20		
GHS 10.0 Bushel Catcher Assembly.....	22		

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQ'D GHS
Walker Product Decals				
1	5800-22	Walker (8" Round)	10.0 Bushel Catcher (one on each side)	2
2	5813-2	Decal, 4" Grass-Pak Powerfil®	Powerfil® Cover Plate	1
3	9804-1	Axle Lockout	Chassis	2
4	8600-75	LH Fender	Chassis, LH near Seat	1
5	8821-38	Decal, C27i	Chassis, Front	1
6	5856-1	Made in USA	Chassis, Front	1
7	8600-68	RH Fender	Chassis, RH near Seat	1
Danger Decals Warning Decals Caution Decals				
8	8600-10	Danger, Pinch Point	10.0 Bushel Catcher Mounting Frame Assembly (one on each side)	2
9	8600-12	Danger, Engine Exhaust	Fuel Pump Module Cover, Top	1
10	8600-4	Danger, Rotating Blower Blades	Seat Panel Cover Plate	1
11	6107-1	Decal, Belt Routing	Seat Panel, Underside	1
Maintenance Decals				
12	5869	Removable Screen	10.0 Bushel Catcher Removable Screen	1
13	6895-103	Rehiko/Kohler 300 Hour Oil	Oil Cooler Mount	1
14	5855	Important, Engine Cooling	Catcher Support, Front	1
15	8394-35	Jackshaft Decal	Jackshaft	1
16	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1
17	8600-54	Decal, Ignition Switch	Seat Panel, Front	1
18	5802-4	Engine Service Light	Seat Panel, Front	1


NOTE: All parts requiring decals are shipped with decals applied.

TRACTOR DECALS

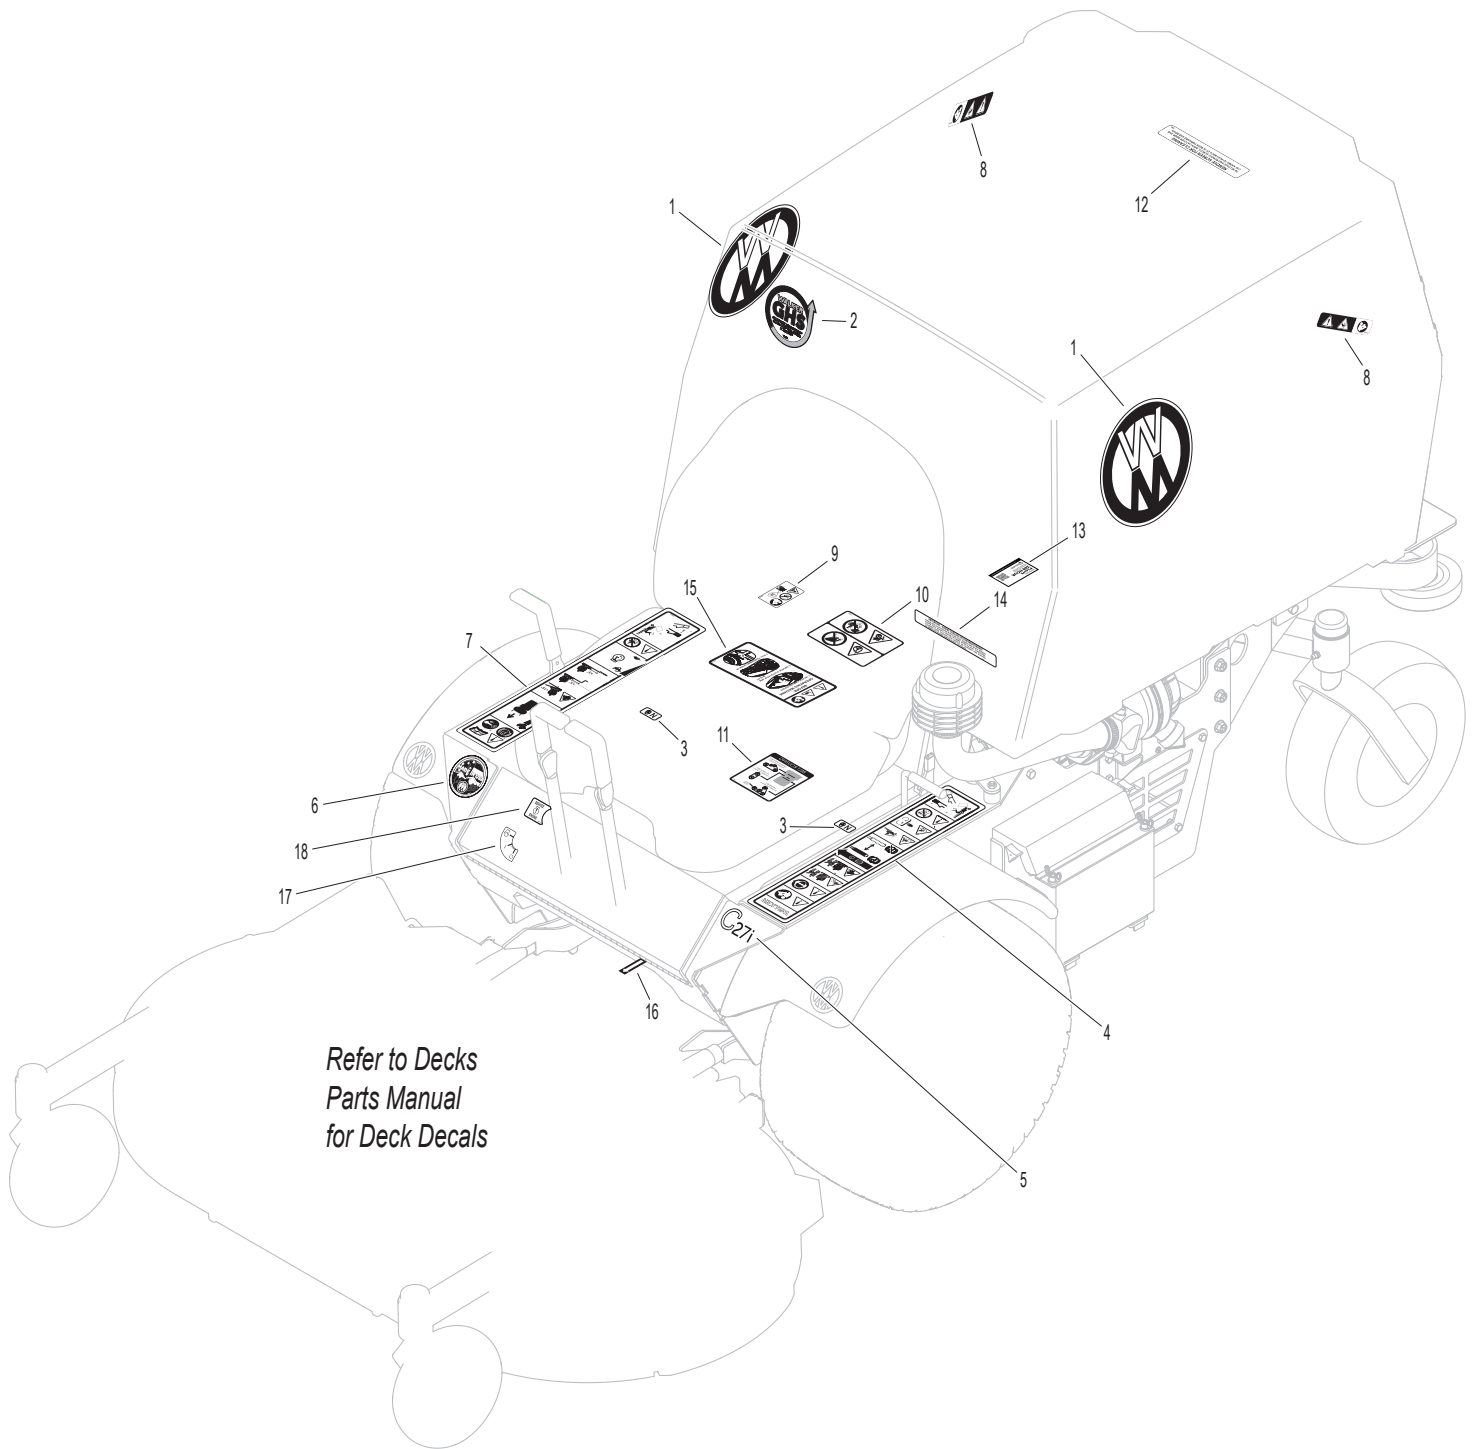

FRONT BODY ASSEMBLY


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Seat Assembly				Fasteners			
1	6104-31	Comfort Seat	1	F002	10-24 Keps Nut		6
2	7440-5	Shock Mount (1-1/4 x 3/4)	4	F004	1/4-20 Keps Nut		10
Body Assembly				F005	1/4-20 ESNA Nut		2
3	5847	Plastic Tip	3	F009	5/16-18 Whiz Locknut		6
4	6101-11	Cover Plate	1	F020	5/16-18 ESNA Nut		1
5	7383-29	Body Latch Trigger	1	F025	10-24 x 3/8 PPHMS		4
6	7222	Extension Spring (1/4 x 3)	1	F029	1/4-20 x 1/2 Hex Bolt		2
7	6100-54	Front Body	1	F093	5/16-18 x 1 Hex Bolt		1
8	5989-55	Dome Plug (1/2)	1	F116	1/4-20 x 1-1/4 Hex Bolt		2
9	5146	10mm Ball Stud	2	F206	#2 x 3/16 Drive Pin		2
10	4145-2	Gas Spring Assembly (Includes Item # 9)	1	F246	1/4-20 x 1/2 PTHMS		8
11	5180	Edge Molding, Lever Opening	2	F299	10-24 x 1 PPHMS		1
12	7504-5	Hinge (19")	1	F341	Coil Roll Pin (7/64 x 9/16)		1
13	NS	Body ID Plate	1	F342	5/16 Conical Washer		2
Tilt-Up Latch Assembly*				* Complete Tilt-Up Latch Assembly Kit available by ordering kit # 5744-5.			
14	5744-20	Spring Arm, Tilt-Up Latch	1				
15	5744-10	Spring Pivot Bushing	1				
16	5744-15	Compression Spring (3/8 x 5/8)	1				
17	5744-13	Mount Angle, LH	1				
18	5744-12	Hook, Tilt-Up Latch	1				
19	5744-14	Mount Angle, RH	1				

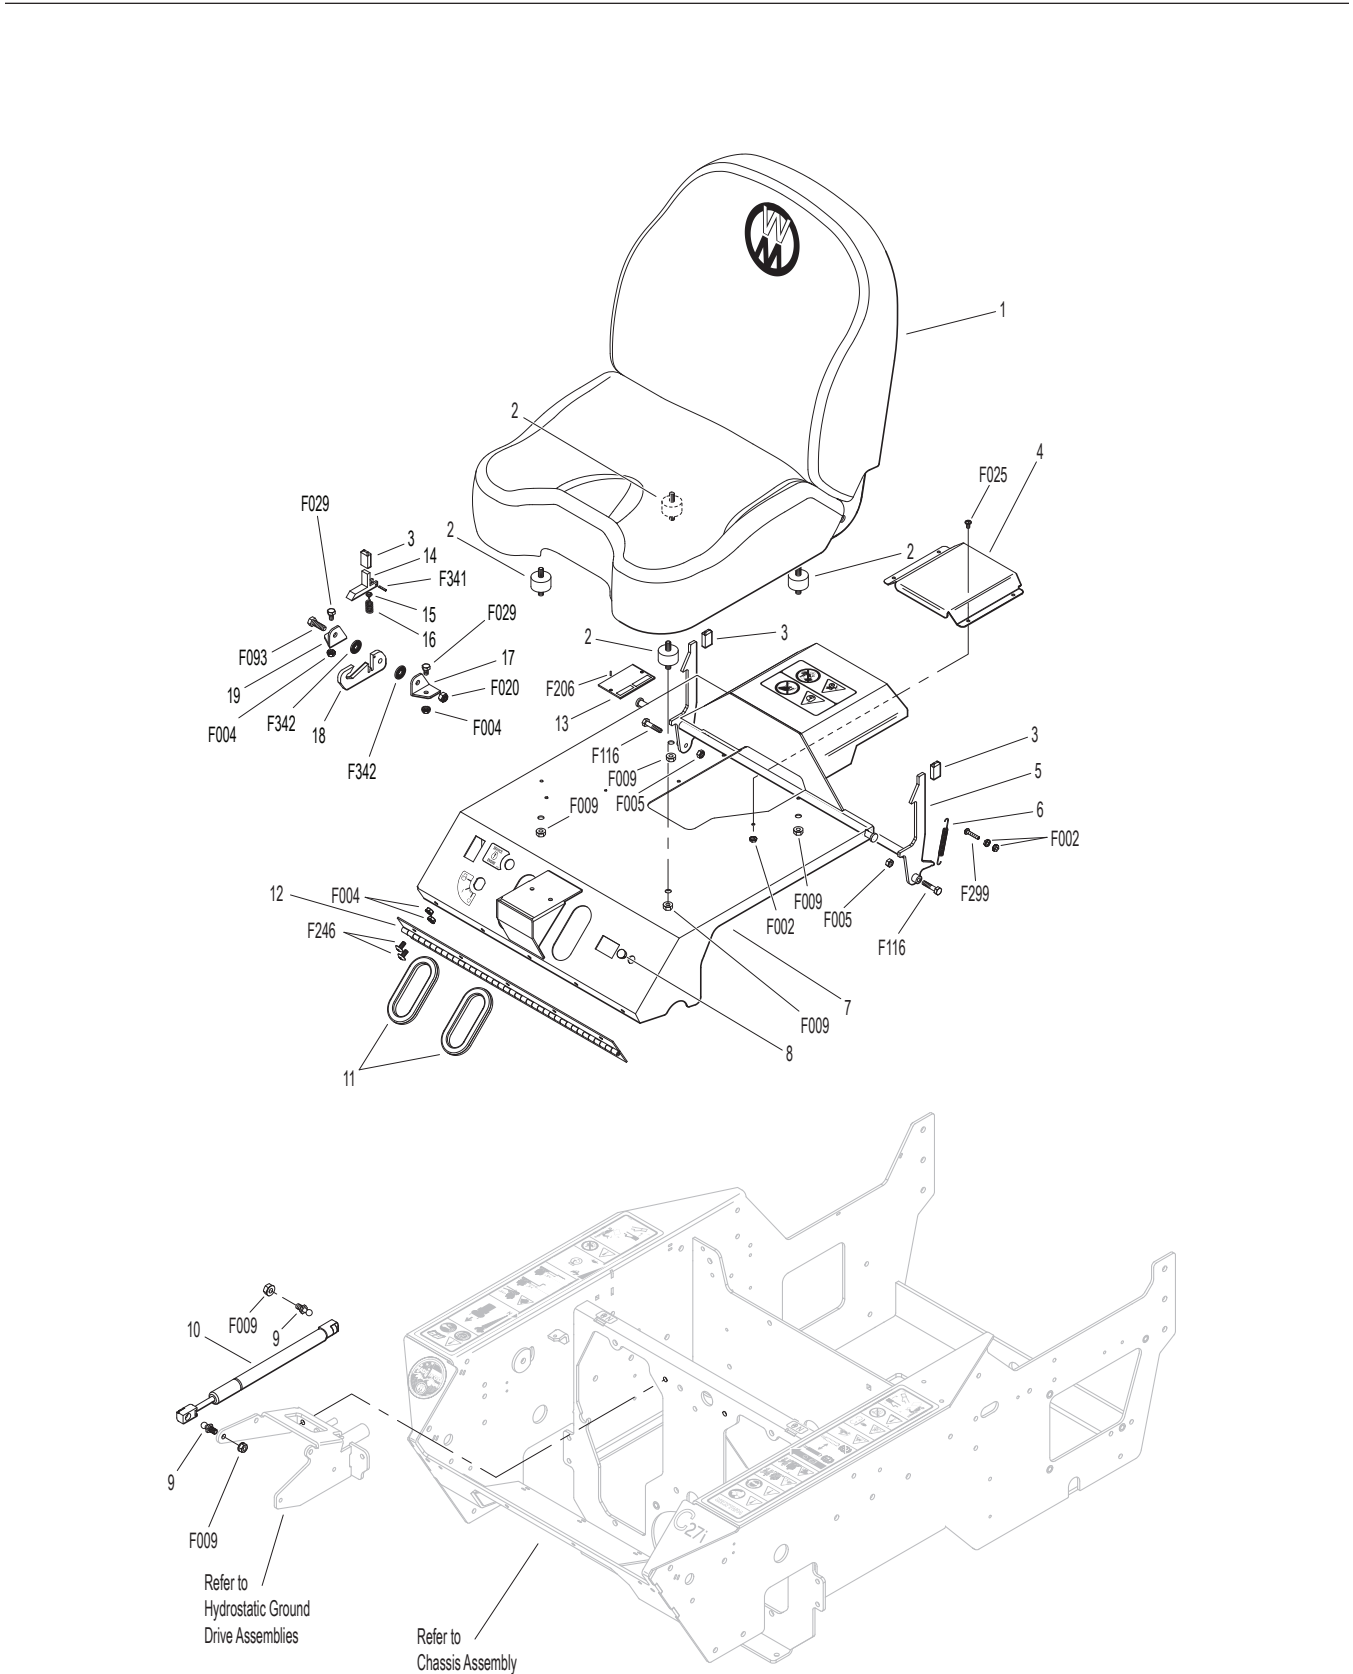

REAR BODY ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Rear Body Assembly				Fasteners			
1	6515-1	Catcher Support	1	F009	5/16-18 Whiz Locknut		8
2	6342-2	Rear Chassis	1	F013	3/8-16 Whiz Locknut		6
3	6342-7	Catcher Bumper Mount	2	F016	1/2-13 Self-Locking Nut		1
4	5845	Rubber Bumper (1.50 x 1.25)	2	F032	1/4-20 x 3/4 Hex Bolt		1
5	8515-17	Catcher Handle Plate, LH	1	F034	5/16-18 x 3/4 Hex Bolt		3
6	7190-6	Insulation Foam Pad	1	F172	1/4-20 x 3/4 Carriage Bolt		2
7	7146	13mm Ball Stud	2	F218	7/16 Split Lock Washer		2
8	7147	Spring Clip	2	F219	7/16-14 x 1-1/4 Hex Bolt		2
9	7145	Gas Spring Assembly (Includes Items # 7 & 8)	1	F226	5/16-18 x 7/8 Hex Bolt		1
10	8515-18	Catcher Handle Plate, RH	1	F344	3/4-16 Slotted Hex Nut		2
Spread Tail Wheel Assembly				F348	1/8 x 1-1/2 Cotter Pin		2
11	8769-8	Dust Cap, Deck Caster	2	F423	1/2-13 x 6-1/2 Hex Bolt		1
12	8769-6	Bearing Cone (1" ID)	4	F569	1/4-20 Flange Top Lock Nut		3
13	8769-5	Bearing Cup (2 x 1-5/8)	4	F615	1.0 x .255 x .125 Washer		1
14	7420-16	Spread Axle (Includes Items # 13 & 25)	1	F639	Belleville Washer (1.5 x .755 x .072)		2
15	8769-7	Seal	2	F693	3/8-16 x 7/8 Flanged Hex Bolt		2
16	7420-2	Tail Fork, Spread Axle	2	F694	3/8-16 x 1 Flanged Hex Bolt		4
17	8035-4	Wheel & Tire (13 x 4.5-6 Ply) Black (W/Bearing Race)	2	F718	5/16-18 x 5/16 Set Screw (Knurl Point)		2
18	7038	Wheel Axle (3/4 x 5-9/16)	2	NOTE: Rear Bumper Assembly is not shown here. Refer to CHASSIS ASSEMBLY , Page 8.			
19	8768-2	Seal, Reverse Lip	4				
20	8037	Bearing Cone (3/4 ID)	4				
21	8038-1	Spacer, Wheel Axle (.750 ID x 1.125 OD)	2				
22	8039	Nut, Tail Wheel Axle	2				
23	5683	Pivot Bearing	2				
24	7420-9	Pivot Shaft	1				
25	5830	Grease Fitting	3				

REAR BODY ASSEMBLY

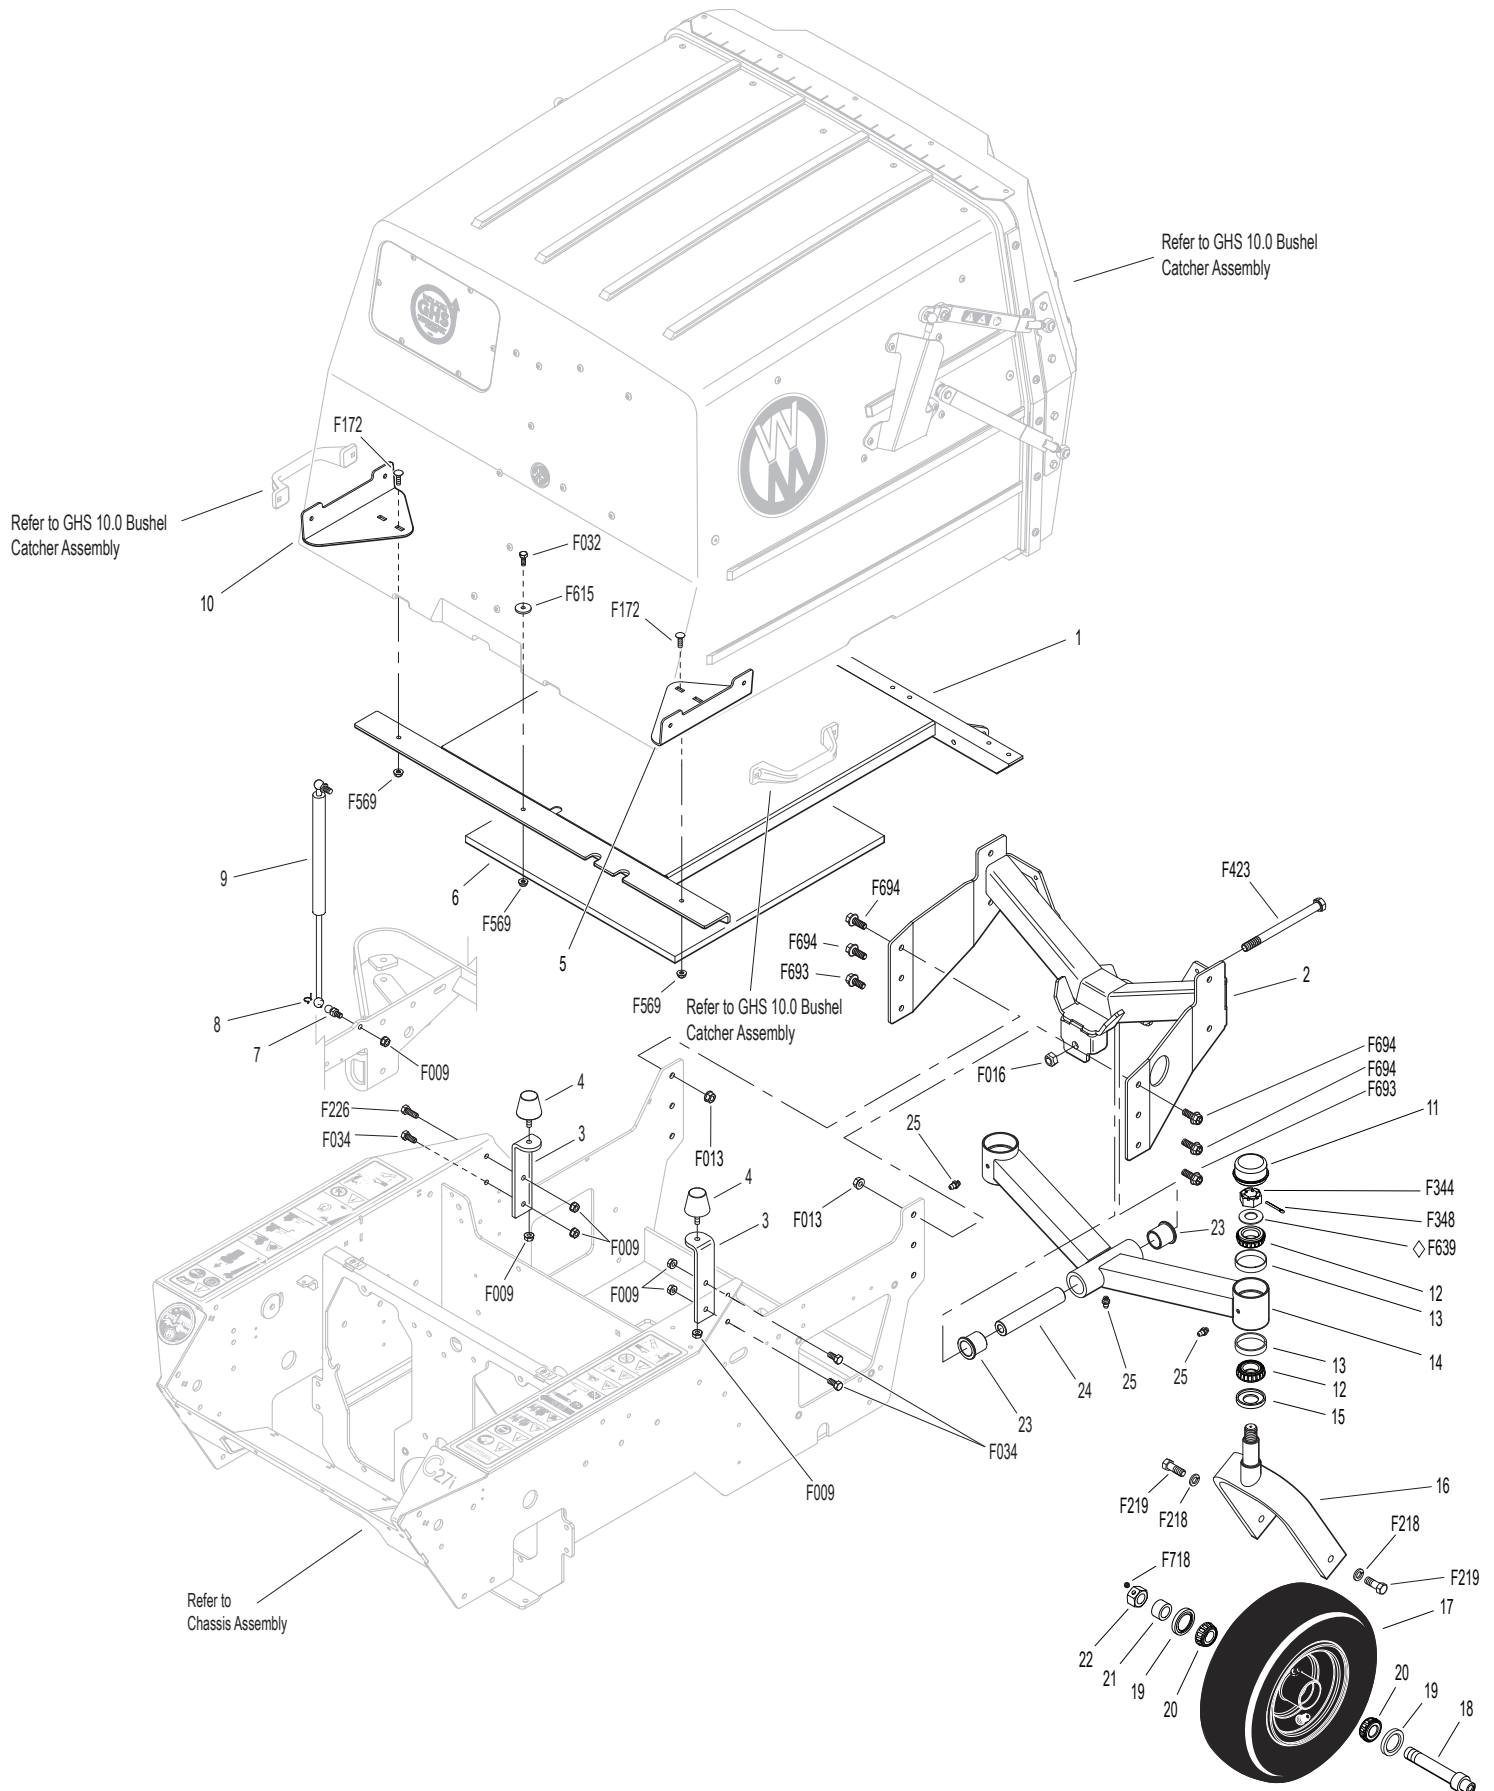


Model C27i Beginning S/N 199071
Use only genuine **Walker®** replacement parts.

◇ Refer to CASTER WHEEL FORK INSTALLATION, Page 30.

CHASSIS ASSEMBLY


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Rear Bumper Assembly				Fasteners			
1	7516-5	Catcher Pivot Bushing	2	F004	1/4-20 Keps Nut		2
2	7517-4	Catcher Pivot Plate	2	F009	5/16-18 Whiz Locknut		21
3	7516-12	Rear Bumper (10.0)	1	F013	3/8-16 Whiz Locknut		4
4	5162	Roller Wheel (5" Rubber)	2	F014	3/8-16 ESNA Nut		2
Chassis Assembly				F031	1/4-20 x 5/8 Hex Bolt		4
5	6342-11	Chassis Frame	1	F032	1/4-20 x 3/4 Hex Bolt		2
6	6307-9	Air Cleaner Mount	1	F034	5/16-18 x 3/4 Hex Bolt		16
7	5300-22	Side Cover	1	F038	3/8-16 x 1 Hex Bolt		2
8	4305-6	Fender Doubler	2	F041	3/8-16 x 1-3/4 Hex Bolt		2
9	4305-3	Fender	2	F042	3/8-16 x 2-1/4 Hex Bolt		2
10	6310-5	Skid Plate	1	F051	3/8 SAE Washer		4
11	8394-15	Front Body Bumper Mount, LH	1	F059	3/8 Wave Spring Washer		2
12	7844	Rubber Bumper (1.25 x .250)	2	F091	5/16-18 x 5/8 Hex Bolt		1
13	8394-24	Front Body Bumper Mount, RH	1	F151	3/8-16 x 7/8 Hex Bolt		4
14	6046-11	Gas Tank Mount	1	F169	5/16-18 x 1 Carriage Bolt		2
Deck Support Arm & Hitch Assemblies				F173	5/16-18 x 3/4 Carriage Bolt		2
15	6431-12	Deck Arm Mount, RH	1	F226	5/16-18 x 7/8 Hex Bolt		2
16	6431-11	Deck Arm Mount, LH	1	F241	.375 x .875 x .10 Washer		4
17	5830	Grease Fitting	2	F551	5/16-18 Flange Top Lock Nut		4
18	6840-4	Deck Arm Bushing (3")	2	F570	3/8-16 Flange Top Lock Nut		4
19	6431-15	Deck Support Arm, LH (Includes Item # 17)	1	F591	7/16-14 Flange Top Lock Nut		2
20	5775-2	Hitch Pin (#6)	2	F645	5/16-18 x 1-1/8 Hex Bolt		3
21	6431-16	Deck Support Arm, RH (Includes Item # 17)	1	F687	7/16-14 x 4 Hex Bolt, Grade 8		2

CHASSIS ASSEMBLY

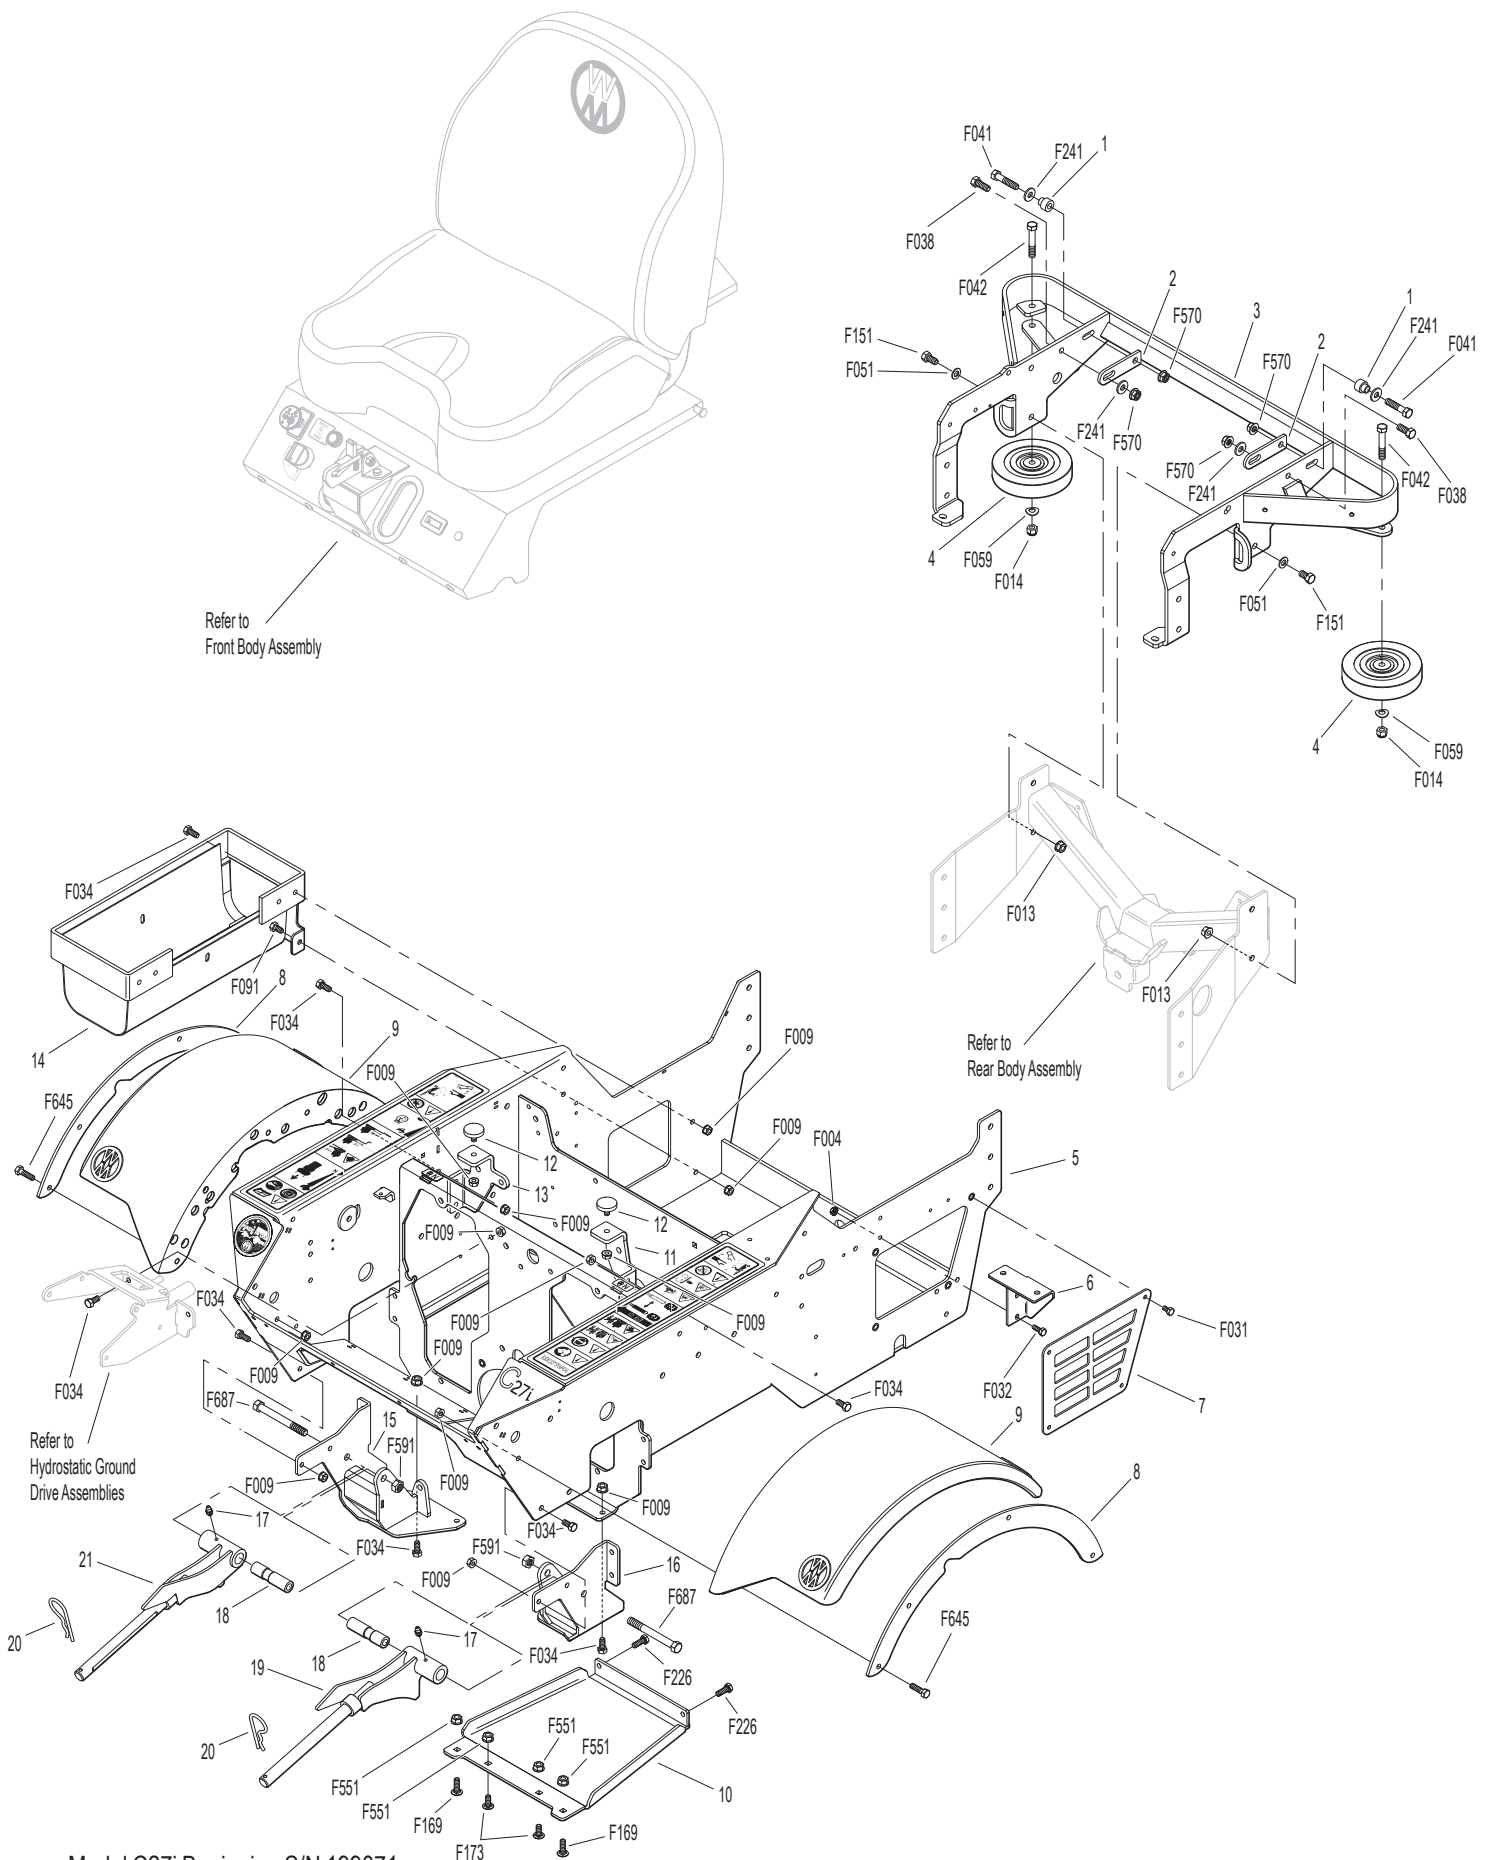

MAIN COMPONENT POWER TRANSMISSION


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Swing-Away Jackshaft Assembly				Jackshaft Tensioner Assembly			
1	8394-10	Lock Tab	1	34	8394-40	Jackshaft Tensioner Lever	1
2	7223-5	Compression Spring (3/8 x 1-1/2)	1	35	7620-16	Roller Bushing	1
3	8394-9	Locking Pin	1	36	5221-6	Extension Spring (1-1/4 x 6-1/2)	1
4	6325-8	Bushing (.375 x .625 x .280)	1	37	8394-11	Jackshaft Spring Tensioner	1
5	5665-2	Compression Spring (.590 x 1.438)	1	38	8394-12	Washer (1/2 x 1-1/2 x .288)	1
6	6410-9	Clutch Stop	1	Fasteners			
7	6235	Spring, Belt Tension Cam	1	F004	1/4-20 Keps Nut		2
8	8394-18	Jackshaft Tension Cam	1	F005	1/4-20 ESNA Nut		2
9	8394-37	Jackshaft Swingarm Assembly (Includes Items # 1-3, 5-8, 11-13, F004, F005, F031, F216, F398, F517, F587 & F711)	1	F009	5/16-18 Whiz Locknut		6
10	8394-16	Jackshaft Clutch Spacer (1.625 x 1.128 x .465)	1	F013	3/8-16 Whiz Locknut		2
11	6273-10	Jackshaft Bearing Kit	1	F031	1/4-20 x 5/8 Hex Bolt		1
12	6207-19	1/8 NPT Plug	1	F034	5/16-18 x 3/4 Hex Bolt		2
13	8394-39	Jackshaft Swingarm (Includes Item # 12)	1	F039	3/8-16 x 1-1/4 Hex Bolt		1
14	8394-19	Swingarm Pivot Plate	1	F041	3/8-16 x 1-3/4 Hex Bolt		2
15	6325-3	Spacer Bushing (9/16)	1	F046	3/8-16 x 3-1/2 Hex Bolt		1
Engine Belt Tightener Assembly				F051	3/8 SAE Washer		2
16	6345-7	Engine Idler Mount	1	F091	5/16-18 x 5/8 Hex Bolt		2
17	5245-7	Idler Pulley (5/V)	2	F093	5/16-18 x 1 Hex Bolt		1
18	7240-6	Jackshaft Pulley (Includes Item # F149)	1	F108	3/8-16 x 2 Hex Bolt		1
19	6230-3	Engine Belt (BB64)	1	F149	1/4 x 1/4 x 1-1/2 Key		1
20	8394-17	Jackshaft Washer	1	F169	5/16-18 x 1 Carriage Bolt		1
21	8237-11	Engine Pulley	1	F208	5/16-18 x 2-1/4 Hex Bolt		1
22	M111	Hose (1/4 x 3/4")	1	F216	3/8-16 x 5-1/2 Hex Bolt		1
23	5221-1	Extension Spring (3/4 x 5)	1	F241	.375 x .875 x .10 Washer		1
24	6358-14	Idler Weldment (Includes Items # 25 & 28)	1	F244	7/16-20 x 3/4 Hex Bolt		1
25	7201-3	Fiberglide Bearing	2	F316	5/16-18 x 1-3/4 Hex Bolt		1
26	5841	Retainer Washer (3/8 x 1-1/4)	1	F398	1/4-20 x 2 Hex Bolt		1
27	7201-7	Inner Race (2-5/8)	1	F517	Washer 3/8 x 1-1/8 x 1/8		1
28	5830	Grease Fitting	1	F551	5/16-18 Flange Top Lock Nut		2
29	6358-11	Idler Arm Mount	1	F570	3/8-16 Flange Top Lock Nut		3
PTO Drive Assembly				F587	3/8-16 Top Lock Flange Nut, Grade G		1
30	4401-4	Washer (1-3/4 x 3/8 x 1/4 Thk)	1	F670	3/8-24 x 1 Hex Bolt Grade 8		1
31	6231-1	PTO Drive Belt (B35K)	1	F685	1/4-20 x 1/2 SHC Screw		1
32	7239-2	Blower Pulley (Includes Items # 30, F670 & F695)	1	F695	1/4 x 1/4 x 7/8 Key		1
33	6410-1	Clutch	1	F711	1/4-20 x 6 Hex Bolt, Grade 5		1

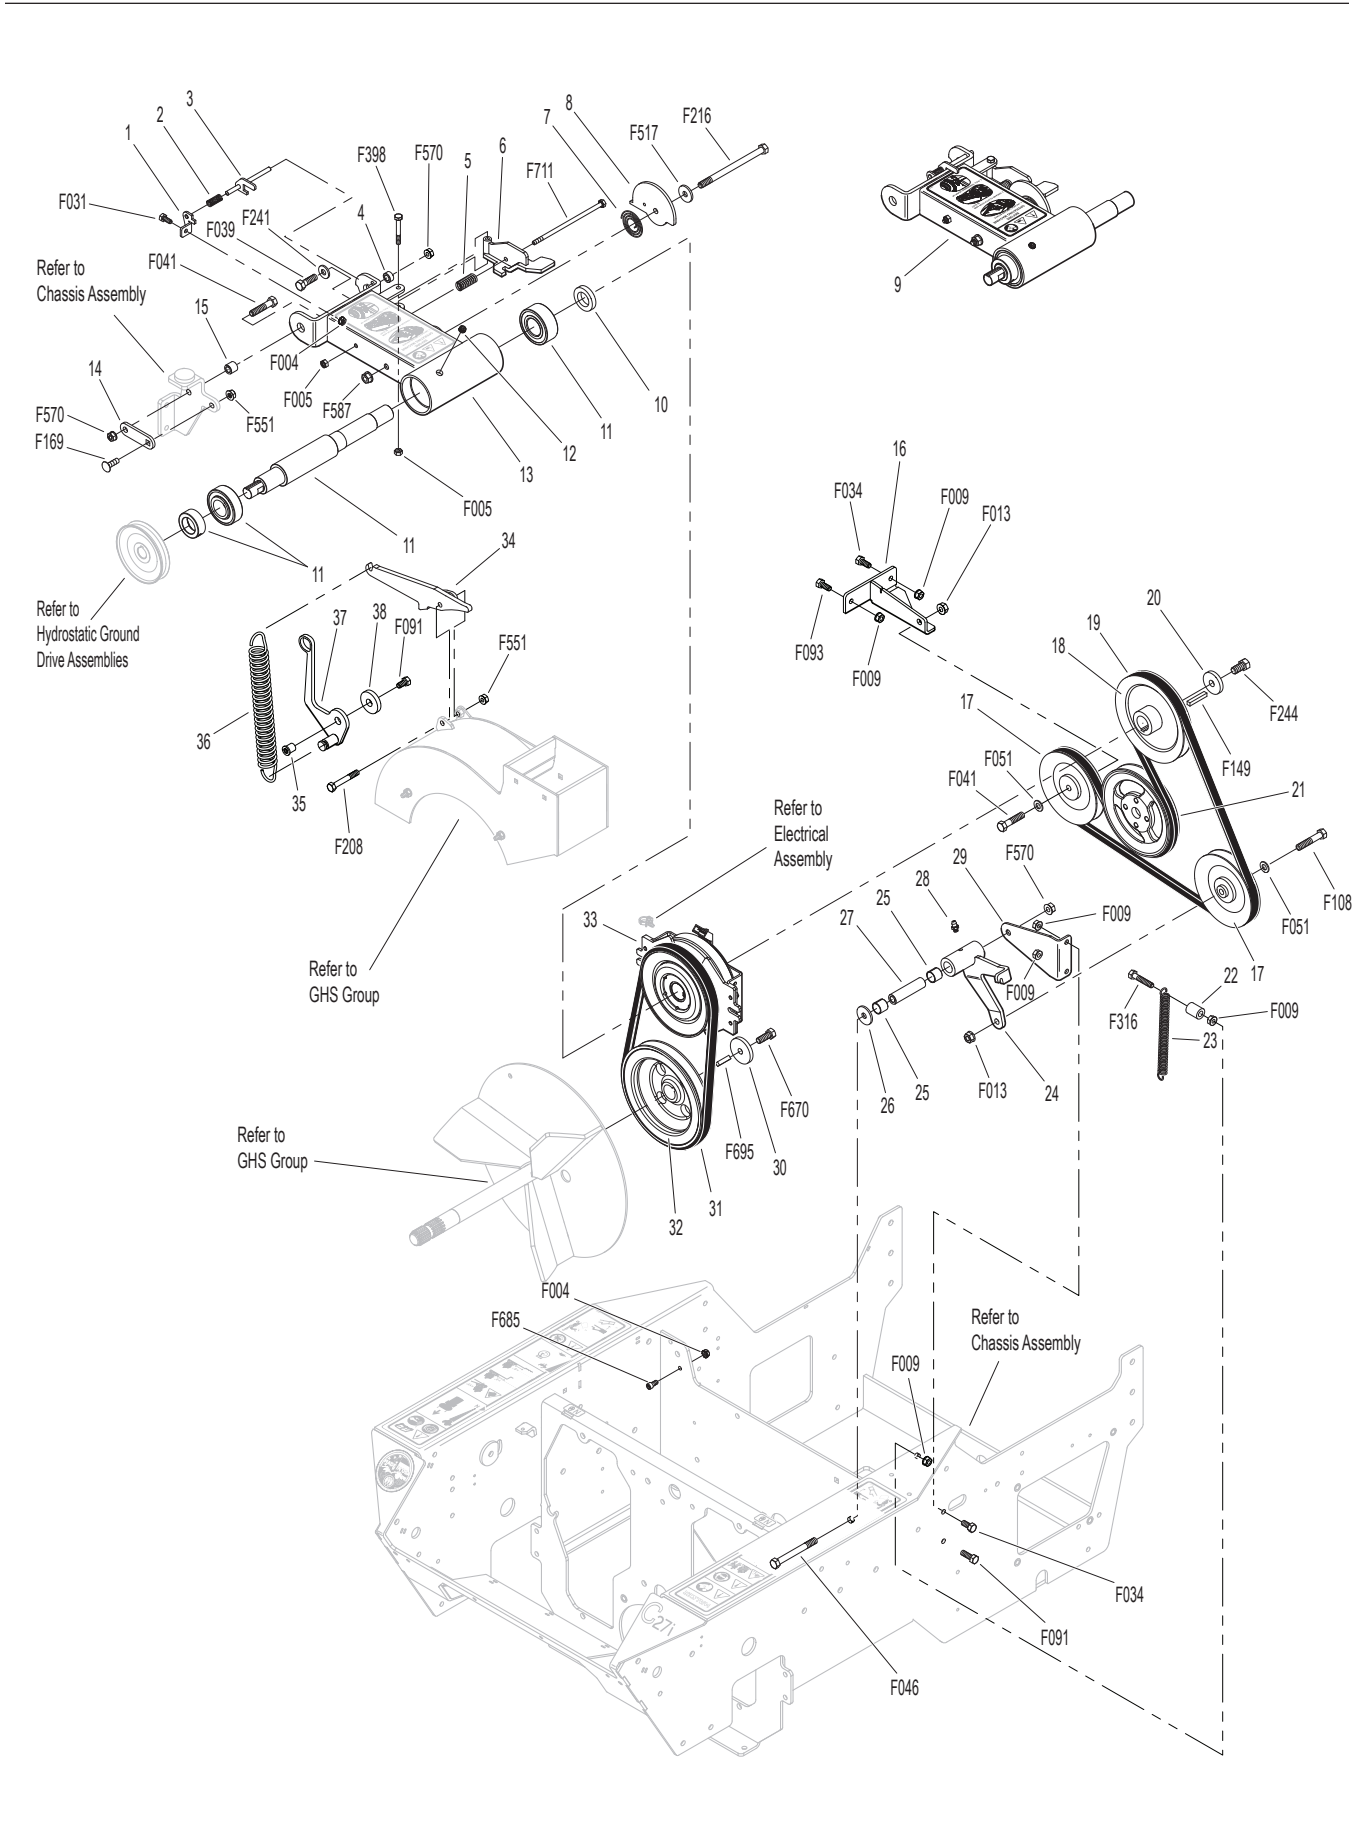

ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Engine Assembly				42	M381	EVAP Line (5/32 x 15-1/2")	1**
1	6013-41	Heat Shield O2 Cover (Includes Items # F128 & F568)	1	43	M247	Fuel Line, Tank (5/16 x 16-1/2")	1**
2	6013-38	Heat Shield (Includes Items # 1, F128 & F568)	1	44	8018-9	Fuel Pump Module Cover	1
3	6342-6	Motor Brace	1	45	M246	Fuel Line (1/4 x 3-1/2")	1**
4	NS	Sensor, Oxygen (Rehiko/Kohler)	1	46	8018-8	Fuel Module Standoff	3
5	8014-15	Extended Spark Arrestor	1	47	8046-17	Quick Coupler Straight (5/16 x 5/16)	1
6	NS	27 HP Engine, EFI (Rehiko/Kohler)	1	48	8055-1	Fuel Tank, 4.7 Gallon, Gas (Black) (Includes Items # 34, 49, 50 & 52-55)	1
7	5879-2	Hose Clamp (7/16 Silver)	2	49	5020-2	Fuel Filter, In Tank	1
8	5879-3	Hose Clamp (1/2)	4	50	5086-7	Hose (1/4 x 6)	1
9	M265	Insultherm (3/8 x 8")	1	51	5082-4	2-1/4 Ratchet Fuel Cap	1
Remote Oil Cooler Assembly				52	5977-7	Roll Over Grommet (.900 x 1-1/2)	1
10	NS	Oil Cooler Hose	2***	53	5083-1	Bushing, Rubber	1
11	NS	Clamp	4***	54	8055-2	Fuel Tank Gauge	1
12	NS	Oil Cooler	1***	55	8043-8	Roll Over Valve	1
13	8016-15	Oil Cooler Mount	1	Fasteners			
Precleaner Assembly				F004	1/4-20 Keps Nut		2
14	6087-10	Air Intake Hose	1	F005	1/4-20 ESNA Nut		4
15	6029	Hose Clamp (1-13/16 to 2-3/4)	1	F013	3/8-16 Whiz Locknut		6
16	2088-2	Air Cleaner Cap	1	F029	1/4-20 x 1/2 Hex Bolt		2
17	2090-1	Air Cleaner Cartridge	1	F031	1/4-20 x 5/8 Hex Bolt		4
18	2090-3	Safety Filter Insert	1	F040	3/8-16 x 1-1/2 Hex Bolt		4
19	5088-3	Air Cleaner Band	1	F050	1/4 SAE Washer		3
20	5091-16	Street Elbow 90° (1/8 x 1/8)	1	F051	3/8 SAE Washer		2
21	5091-18	Air Flow Indicator (Vacuum 15" H2O)	1	F090	1/4-20 x 2-1/2 Hex Bolt		3
22	2090-4	Low Profile Precleaner Elbow	1	F091	5/16-18 x 5/8 Hex Bolt		2
23	7840	Hose Clamp (1-5/16 to 2-1/4)	1	F128	10-24 x 3/8 PTHMS		2
24	2090-21	Air Cleaner Assembly (Includes Items # 16-19)	*	F140	7/16-14 x 1 Hex Bolt		2
25	7028-7	Precleaner Tube	1	F184	1/4-20 x 1/2 Hex Bolt, SS		2
26	7432	Shock Mount (1.0 OD x .75)	2	F185	1/4 Internal Star Lock Washer, SS		2
27	7840-5	Hose Clamp (1.56 to 2.50)	2	F226	5/16-18 x 7/8 Hex Bolt		4
28	7026-3	Remote Precleaner (Includes Item # 27)	1	F256	7/16 SAE Washer		2
Throttle Assembly				F306	3/8-16 x 3/4 Hex Bolt		2
29	5108-39	Throttle Cable (31")	1	F350	1/4-20 LP Nylock		1
30	5108-5	Throttle Control Knob, Red	1	F551	5/16-18 Flange Top Lock Nut		2
31	5108-20	Control Lever, Throttle	1	F568	10-24 Flange Top Lock Nut		2
32	5108-21	Control Bracket	1	F569	1/4-20 Flange Top Lock Nut		7
33	5108-10	Friction Washer (.125)	2	F638	1/4-20 x 1 Carriage Bolt		1
Fuel Tank Assembly				F642	1/4 x .042 Belleville Washer		1
34	5083-8	Tank Tube (13")	1	F698	#8 x 1/2 Hex Head Drilling Screw		1
35	M246	Fuel Line (1/4 x 4")	1**	* Service Part Only			
36	5020-3	Fuel Filter, EFI (9-12 Micron)	*	** Required hose specifications:			
37	M113	Fuel Line (3/16 x 10")	1**	M113 – 3/16" ID fuel/oil/vapor hose			
38	M246	Fuel Line (1/4 x 2-1/2")	1**	M246 – 1/4" ID low permeation fuel hose			
39	5879-9	Stepless Ear Clamp, Black (15.7)	2	M247 – 5/16" ID low permeation fuel hose			
40	8046-14	Quick Connector, Male (5/16)	1	M381 – 5/32" EVAP hose			
41	NS	Clamp (Rehiko/Kohler)	1	*** Use the engine model and spec number from Rehiko/Kohler to order this item.			

ENGINE GROUP

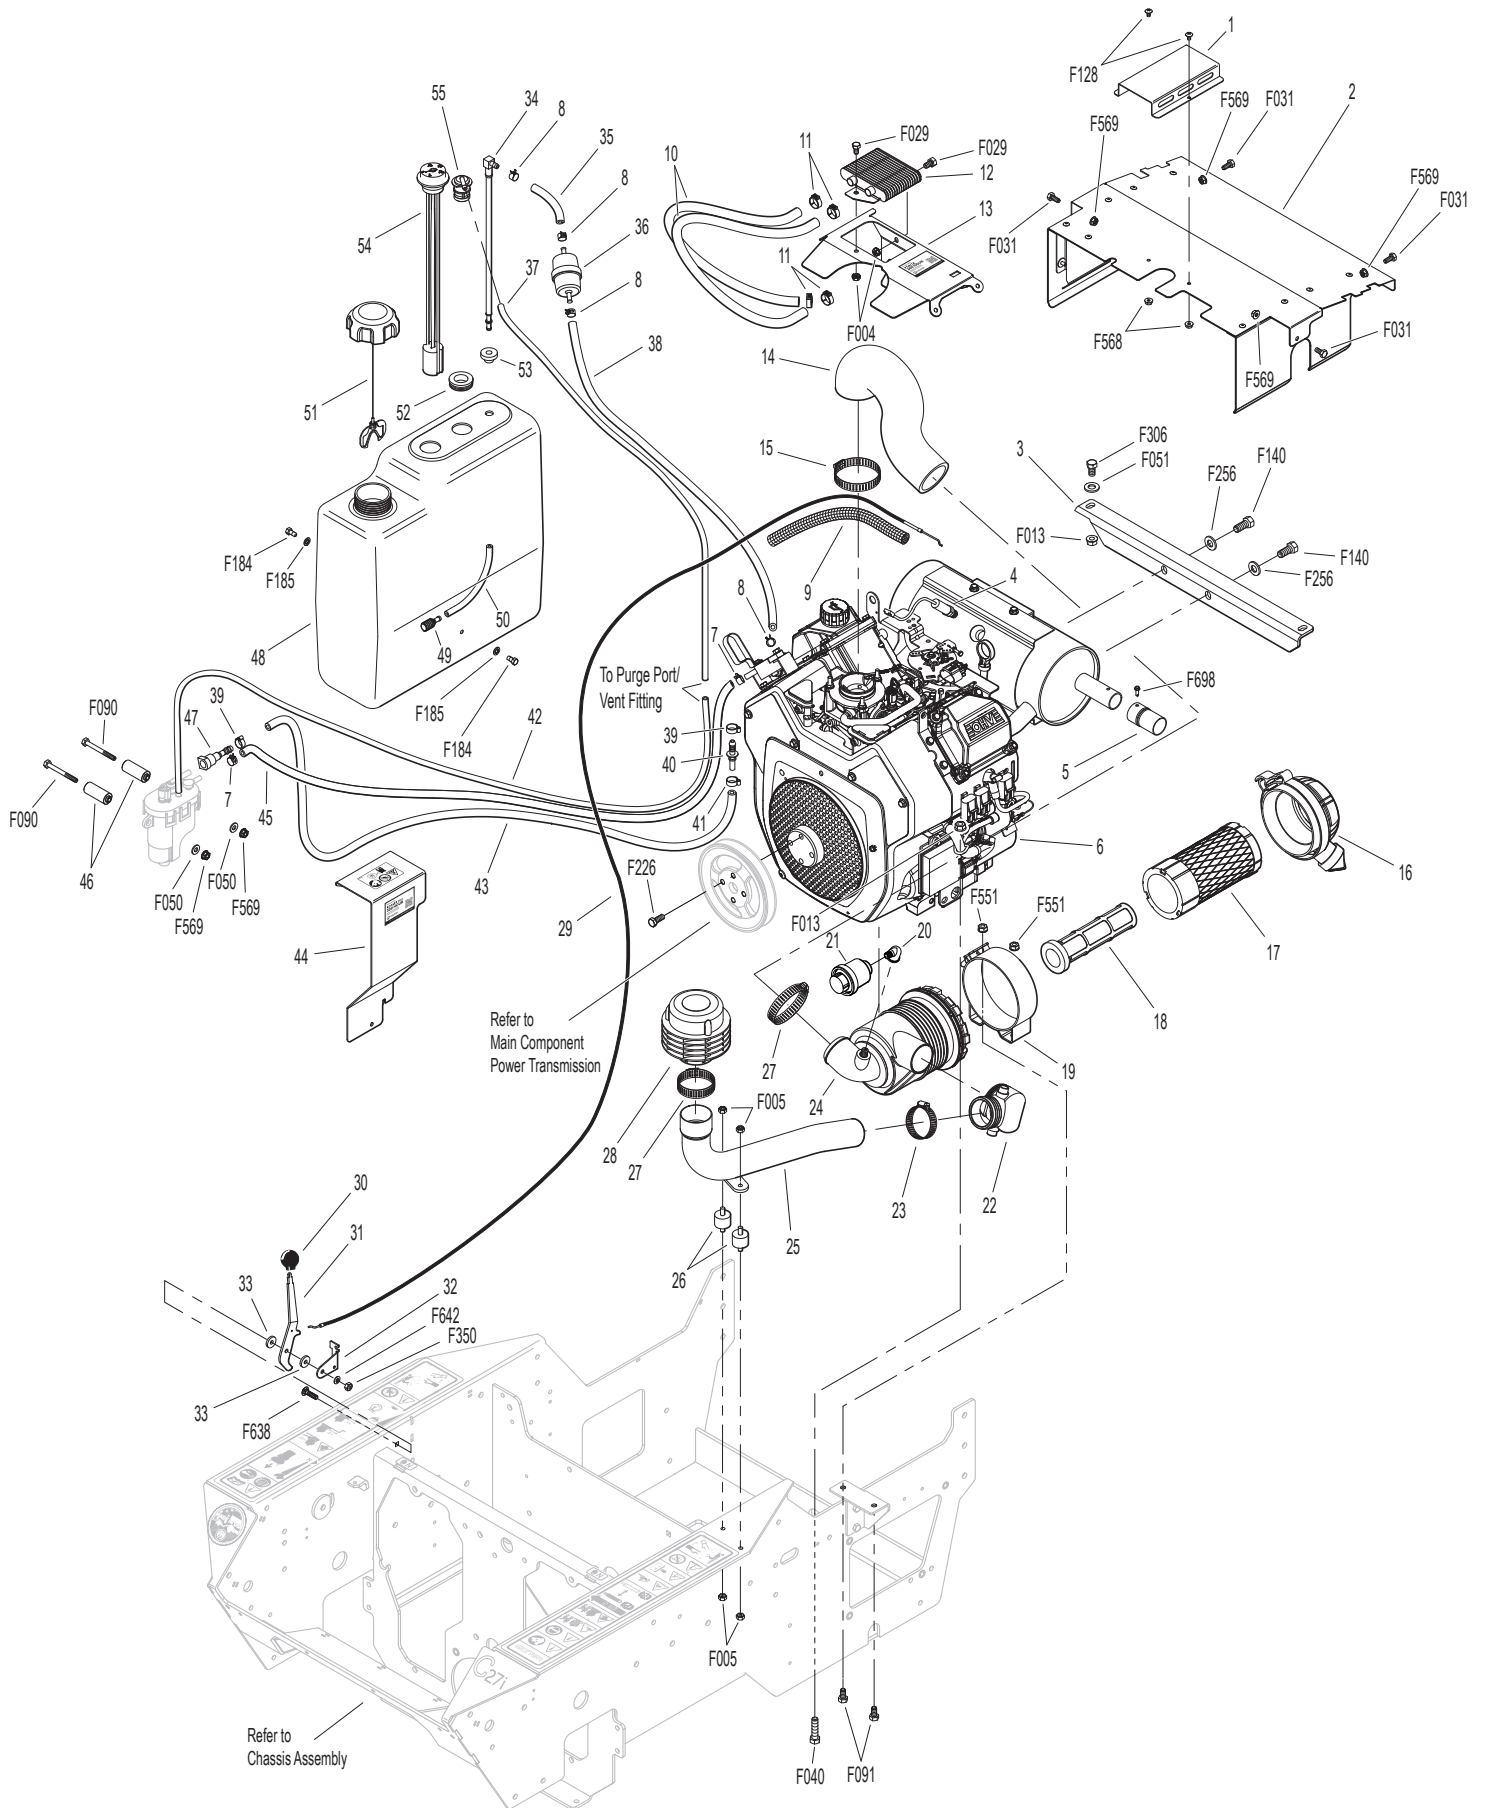

HYDROSTATIC GROUND DRIVE ASSEMBLIES


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transaxle Reservoir Assembly				Wheel Assembly			
1	6215-33	Steering Dampener Mount	1	42	5076-9	Wheel & Tire (20 x 10.00-10) Black	2
2	5830	Grease Fitting	2	Fasteners			
3	7364-3	Idler Spring Bushing	1	F005	1/4-20 ESNA Nut		2
4	7364-2	Torsion Spring	1	F009	5/16-18 Whiz Locknut		6
5	2025-17	Straight Thread Hose Fitting	2	F013	3/8-16 Whiz Locknut		5
6	5879-2	Hose Clamp (7/16 Silver)	4	F015	1/2-20 Wheel Lug Nut		8
7	M111	Hose (1/4 x 9-3/4")	1*	F029	1/4-20 x 1/2 Hex Bolt		1
8	4023-3	Oil Expansion Reservoir	1	F032	1/4-20 x 3/4 Hex Bolt		2
9	M111	Hose (1/4 x 10-3/4")	1*	F034	5/16-18 x 3/4 Hex Bolt		2
Ground Drive Assemblies				F041	3/8-16 x 1-3/4 Hex Bolt		1
10	4026-18	Fan & Pulley Kit (Includes Items # 11-13)	2	F042	3/8-16 x 2-1/4 Hex Bolt		2
11	4026-13	Hydro Pulley Fan	2	F050	1/4 SAE Washer		2
12	5025-18	Hydro Fan Washer	2	F051	3/8 SAE Washer		1
13	5025-19	Hydro Fan Nut	2	F067	3/16 x 3/16 x 1 Key		1
14	5245	Idler Pulley (3")	1	F182	1/4 x 5/8 x 1/8 Washer		4
15	4407-4	Bow Tie Cotter Pin	4	F312	3/8 x 3/8 Shoulder Bolt		2
16	2028-5	Lockout Arm, LH	1	F350	1/4-20 LP Nylock		2
17	5025-44	Hydro-Gear ZT-3100, LH	1	F388	3/8-16 x 2-1/2 Hex Bolt		2
18	2026-17	Hydro-Gear® Oil Filter	2	F438	5/16-18 x 2-3/4 Hex Bolt		1
19	9430-1	Spacer Tube	4	F489	Washer 1/4 x 7/8 x .090		1
20	6232-10	Ground Drive Idler	1	F533	Socket Cap Bolt, 5/16-18 x 3-1/2		4
21	6325-2	Spacer Bushing (5/16)	1	F551	5/16-18 Flange Top Lock Nut		1
22	4240-1	Drive Pulley (Includes Items # F067 & F718)	1	F582	Washer 5/16 x 7/8 x .125		1
23	6232-1	Ground Drive Belt (AX47 X5)	1	F718	5/16-18 x 5/16 Set Screw (Knurl Point)		2
24	5026-44	Hydro-Gear ZT-3100, RH	1	* Required hose specifications:			
25	2028-6	Lockout Arm, RH	1	M111 – 1/4" ID fuel/oil/vapor hose			
Parking Brake Assembly							
26	4215-13	Dampener	1				
27	5146	10mm Ball Stud	2				
28	5281-2	Clevis Pin (5/16 x 7/8)	2				
29	5270-2	Ball Bearing	1				
30	7201-11	Inner Race (1.938)	1				
31	7406-14	Parking Brake Lever (Includes Item # 2)	1				
32	7406-1	Handle Grip, Red	1				
33	7406-12	Bearing Retainer / Spacer	1				
34	9704-3	Pivot Rod Bushing / Plastic	2				
35	5227-1	Extension Spring (1/2 x 4)	1				
36	5280-4	Clevis Fork	2				
37	5665-1	Compression Spring (2-1/2)	2				
38	5463	Steering Lever Actuator	2				
39	4303-7	Clutch Actuator Bolt (5/16)	2				
40	7406-11	Parking Brake Cross Shaft	1				
41	7406-13	Parking Brake Cross Shaft Bracket	1				

[illegible]

15

STEERING CONTROL ASSEMBLIES


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Steering Lever & FSC Assemblies				Fasteners			
1	5850-2	Handle Grip, Foam (5-1/2)	3	F004	1/4-20 Keps Nut		2
2	4170-2	FSC Lever	1	F005	1/4-20 ESNA Nut		2
3	4219-1	Extension Spring	1	F008	5/16-24 Keps Nut		2
4	4170-3	FSC Linkage	1	F009	5/16-18 Whiz Locknut		4
5	5146	10mm Ball Stud	4	F010	5/16-24 ESNA Nut		2
6	4199-4	Steering Lever Dampener Assembly	2	F024	5/16-24 Jam Nut		2
7	5463-7	Steering Lever Actuator	2	F035	5/16-18 x 1-1/4 Hex Bolt		1
8	5463-5	Steering Arm Pivot Bushing (SS)	2	F044	5/16-24 x 3/4 Hex Bolt		2
9	7201-2	Fiberglide Bearing (1/2")	2	F049	5/16 SAE Washer		2
10	4215-14	Step Washer	2	F050	1/4 SAE Washer		4
11	5665-1	Compression Spring (2-1/2)	2	F060	AN960516 Washer		2
12	5213-7	Control Rod (8-3/8)	2	F146	1/4-20 Jam Nut		1
13	5214-2	Ball Joint (5/16-24) (Nylon Lined)	2	F167	5/16-18 Hex Nut		1
14	2212-3	Seal Retainer	2	F169	5/16-18 x 1 Carriage Bolt		1
15	6212-8	Transmission Control Arm, RH	1	F183	.312 x .700 x .074 Washer		2
16	6212-9	Transmission Control Arm, LH	1	F188	1/4-20 Self-Locking Nut		4
17	6451-7	Steering Pivot Shaft W/Stop	1	F192	3/8-24 Self-Locking Nut		1
18	8201-3	Fiberglide Bearing	4	F211	1/4-20 x 7/8 Hex Bolt		1
19	5830	Grease Fitting	2	F385	1/4 x 1-1/4 Roll Pin		1
20	6451-5	Speed Control Actuator, LH (Includes Items # 18 & 19)	1	F390	1/4-20 x 7/8 Carriage Bolt		4
21	5453-14	Steering Lever Handle, Adjustable (Includes Items # 1, F050, F188 & F390)	2	F392	1/4-20 x 1 Set Screw/SS Cup Point		1
22	5450	D-Clip	2	F407	Belleville Washer 3/8 x 1.187, SS		1
23	5222	Extension Spring (1/2 x 3-1/4)	2	F456	5/16-18 x 3/4 SBH Cap Screw, SS		2
24	6452-1	Steering Lever Tube W/Tab	2	F551	5/16-18 Flange Top Lock Nut		2
25	4452-6	Steering Pivot (1/4-20 x 1-5/8)	2	F571	5/16-18 x 7/8 Carriage Bolt		1
26	6451-10	Speed Control Actuator, RH (Includes Items # 18 & 19)	1	F620	3/8-24 x 1-1/2 Hex Bolt		1
27	6451-9	FSC Friction Actuator	1	F754	5/16-18 x 7/8 Button Head Cap Screw		2
28	4142-1	FSC Cam	1				
29	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	2				
30	5463-8	Pivot Bushing, SS (.5 x .313 x .350)	2				
31	9704-4	Pivot Rod Bushing	2				

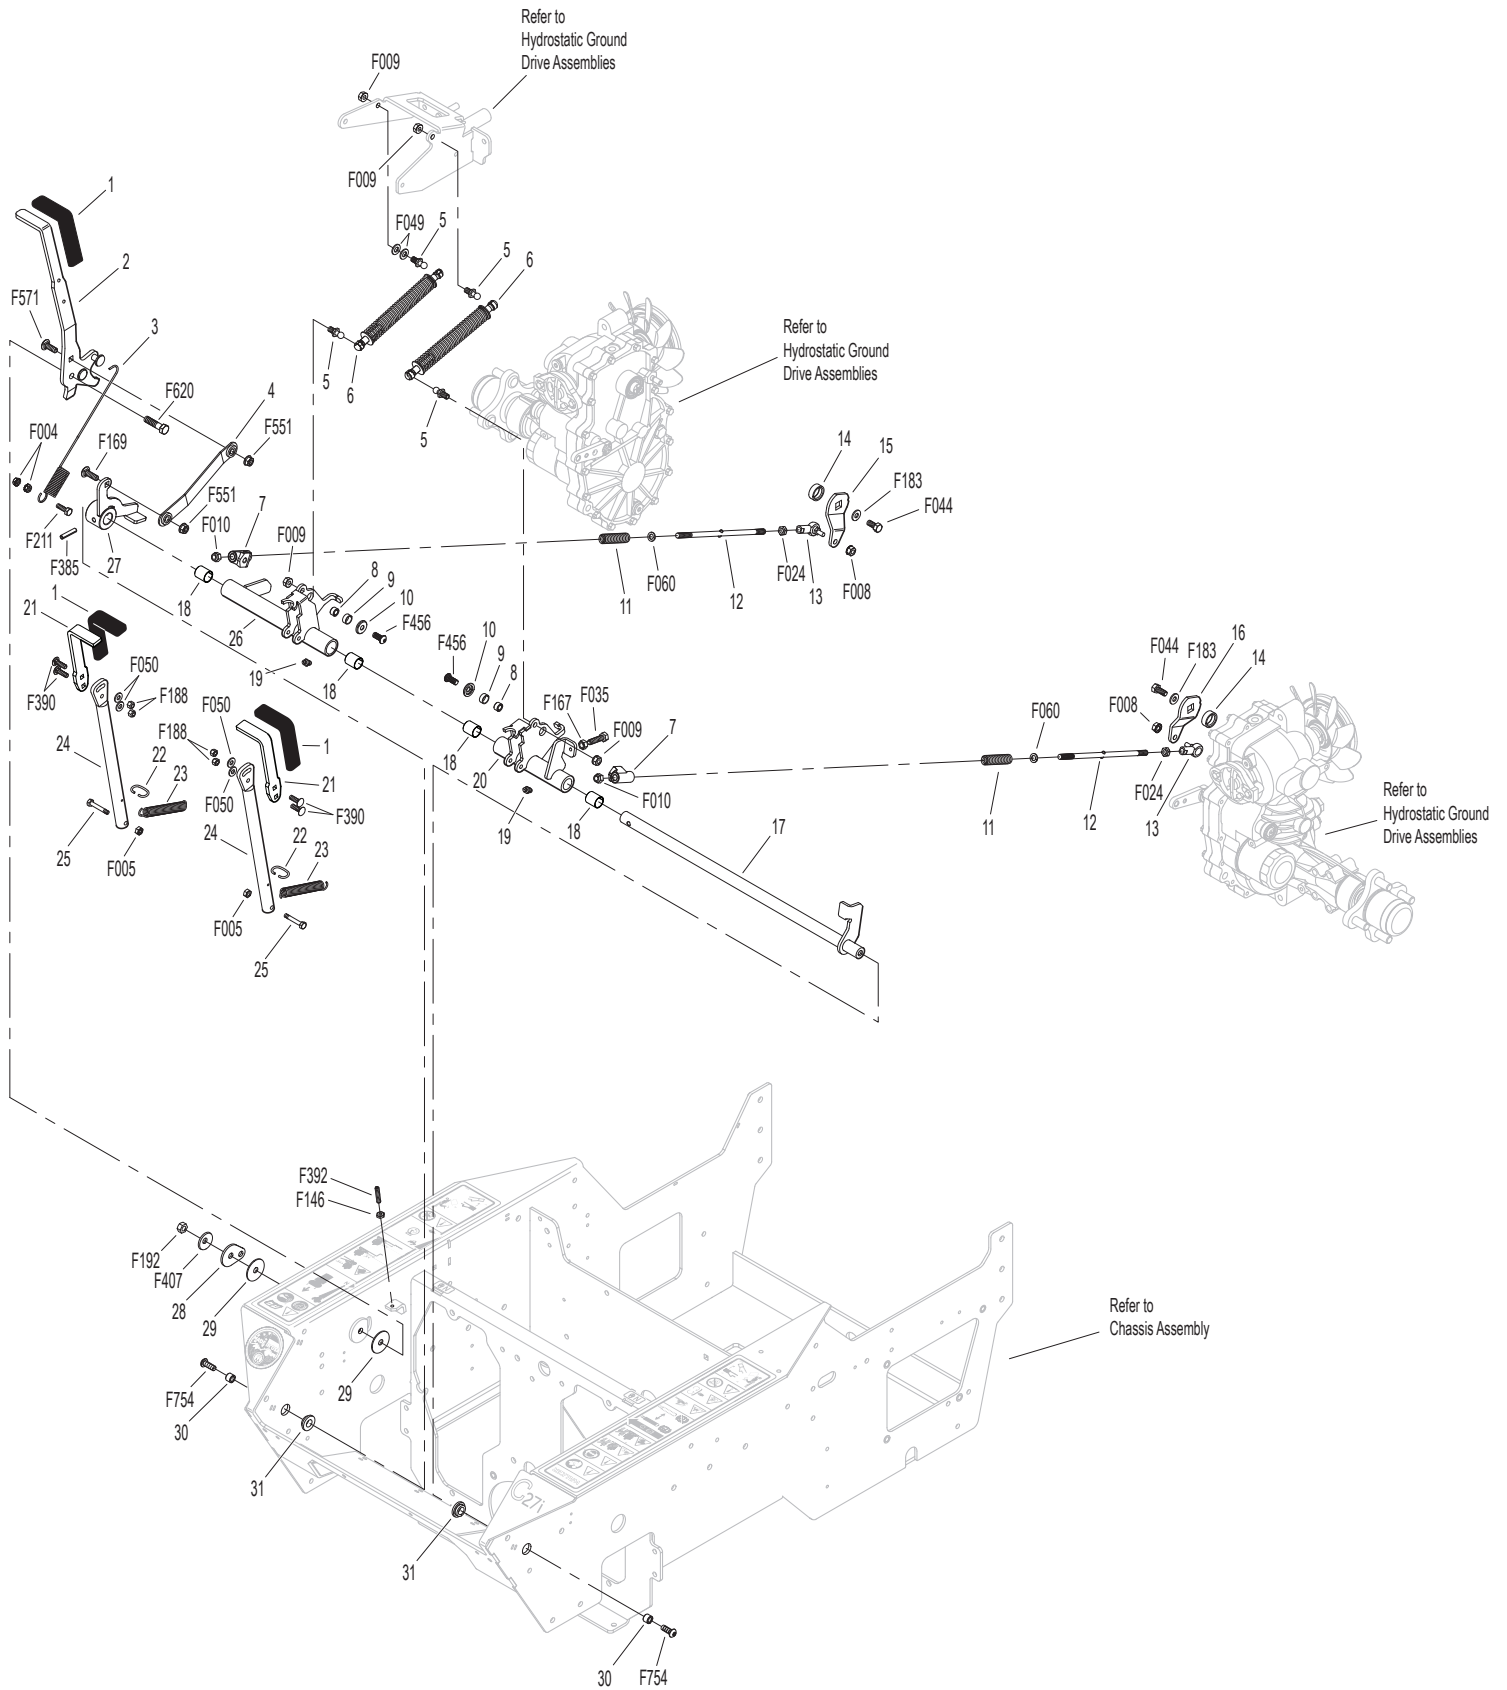

Model C27i Beginning S/N 199071
Use only genuine **Walker®** replacement parts.

GHS GROUP


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Delivery Chute Assembly				Fasteners			
1	5515-4	Elbow Delivery Spout	1	F002	10-24 Keps Nut		2
2	5592-24	Backing Plate, Grass-Pak® Switch	1	F004	1/4-20 Keps Nut		4
3	5592-23	Grass-Pak® Housing Spacer	1	F005	1/4-20 ESNA Nut		2
4	5578	Rear Clip, Chute Mount	1	F009	5/16-18 Whiz Locknut		6
5	5577	Side Clip, Chute Mount	2	F013	3/8-16 Whiz Locknut		2
6	7504-7	Hinge (4")	1	F023	10-24 ESNA Nut		2
7	7504-10	Hinge Spacer	1	F032	1/4-20 x 3/4 Hex Bolt		4
8	6530-7	Body Chute	1	F039	3/8-16 x 1-1/4 Hex Bolt		2
9	5578-10	Front Clip, Chute Mount	1	F087	#10 x 7/8 Fender Washer		1
10	8511-1	Delivery Chute W/Clips (Includes Items # 4, 5, 9, F362 & F411)	1	F091	5/16-18 x 5/8 Hex Bolt		4
Blower Assembly				F129	10-24 x 1/2 PTHMS		2
11	6545-16	Blower Wheel	1	F178	1/4 x 1 Fender Washer		4
12	6349-9	Flanged Bearing (1")	1	F185	1/4 Internal Star Lock Washer, SS		4
13	6545-8	Blower Spacer	1	F208	5/16-18 x 2-1/4 Hex Bolt		1
14	4349-14	Flanged Bearing (1") Machine Flat	1	F223	3/16 x 5/16 Semi-Tube Rivet		14
15	5526-10	Receiver Cone	1	F350	1/4-20 LP Nylock		4
16	7275-3	U-Joint Tube, Splined	1	F362	A/A62D Alum. Pop Rivet (3/16D x 13/32L)		2
17	6543-13	Blower Faceplate Ring	1	F411	3/16 Bulbex Rivet		6
18	5794-8	Fixed Chute	1	F420	5/16-18 x 1-1/4 Carriage Bolt		2
19	6543-16	Blower Weldment, Top (Includes Items # F178, F185, F350, F737 & F741)	1	F426	1/4-20 x 1/2 Carriage Bolt		6
20	6543-17	Blower Weldment, Bottom (Includes Items # F178, F185, F350, F737 & F741)	1	F462	3/16 x .468 (+/- .010) Semi-Tube Rivet		4
Deck Chute Assemblies				F551	5/16-18 Flange Top Lock Nut		6
21	8678-5	Spring Mount, Chute	1	F577	10-24 x 5/8 Carriage Bolt		2
22	7726	Chute Hinge (2 x 11)	1	F651	5/16-18 x 5/8 Carriage Bolt, Gr 2		3
23	7755-1	Chute Lip, Top	1	F737	1/4-20 Center Lock Nut, GR B		4
24	7755-2	Chute Lip, Bottom	1	F741	1/4-20 x 3/4 Undercut Stainless Phillips Flat Head Screw		4
25	7794-2	Discharge Chute W/Spring Mount (C27i / Wide) (Includes Items # 21-24, F223 & F462)	1*	* Used with DC48 deck only			
26	8677	Extension Spring (1 x 6-1/16)	1	** Used with all other decks			
27	5794-11	Discharge Chute W/Spring Mount (C27i / Narrow) (Includes Items # 21, 28-30 & F223)	1**				
28	5726	Chute Hinge (2 x 8)	1				
29	5755-2	Chute Lip, Top	1				
30	5755-3	Chute Lip, Bottom	1				

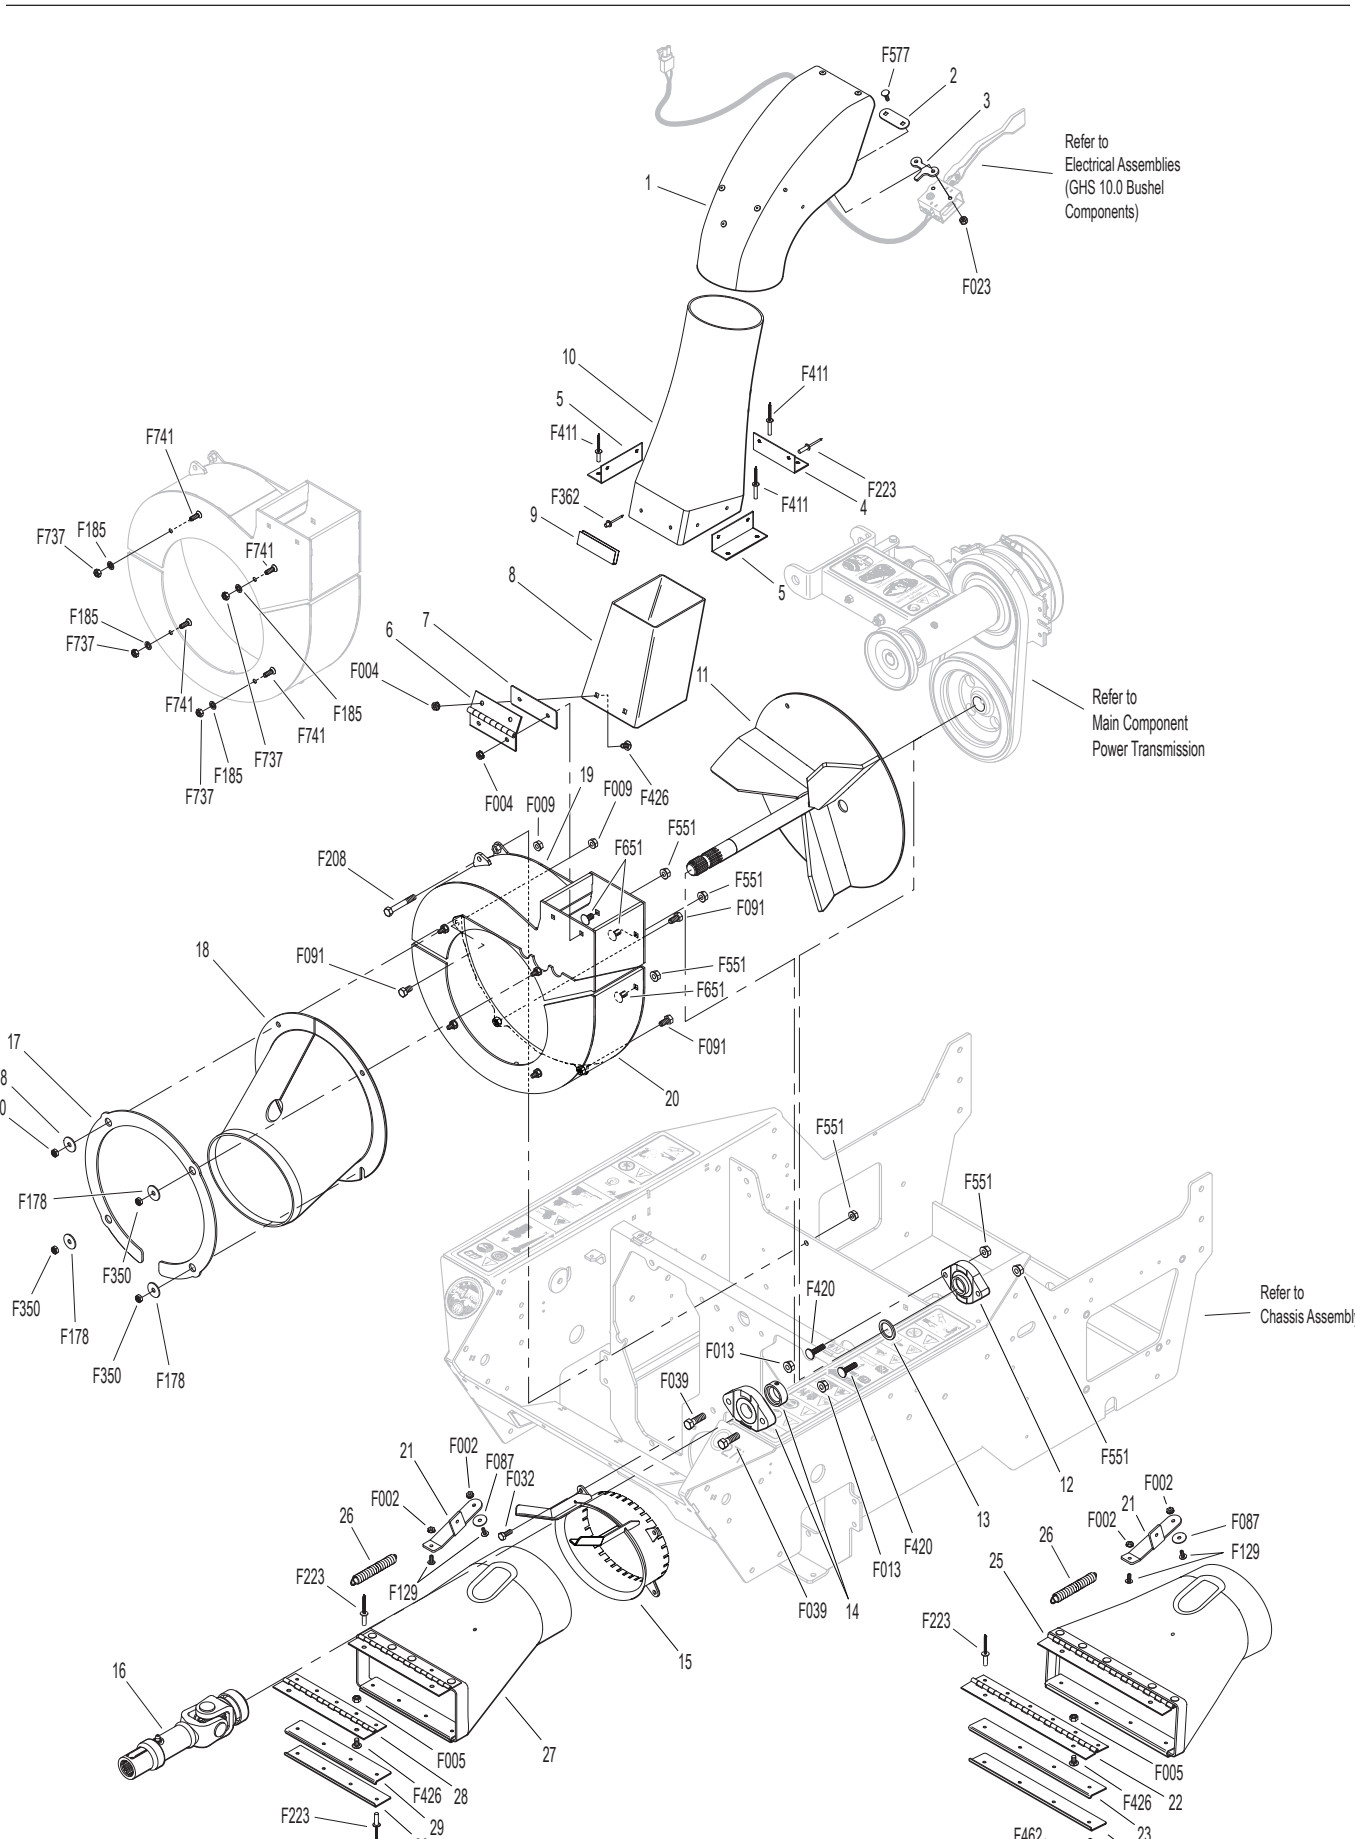

GHS POWERFIL® ASSEMBLY (10.0)


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
10.0 GHS Powerfil® Assembly				Fasteners			
1	5552	Ball Joint (1/4-28)	2		F003	1/4-28 Hex Nut	2
2	5554	Actuator Arm	1		F023	10-24 ESNA Nut	10
3	5551-3	Bearing Cap, Powerfil®	1		F054	AN960616 Washer	2
4	5551-1	Pivot Bearing (#S3PP)	2		F085	3/16 Rivet Backup Washer	1
5	5518-6	Pivot, Delivery Spout	1		F101	10-24 x 1-1/4 SHC Screw	1
6	5517-2	Pivot Mount	1		F109	1/8 x 5/8 Roll Pin	1
7	5553-3	Bushing, Powerfil® Actuator	4		F287	1/4-28 Keps Nut	2
8	5553-1	Compression Spring (1/2 x 2)	2		F612	10-24 x 5/8 Truss Head Torx	7
9	5558-2	Powerfil® Actuator Rod	1		F613	10-24 x 1/2 Truss Head Torx	2
	5549	Actuator Rod Assembly (Includes Items # 1, 7-9, F003, F287 & F704)	*		F704	1/4-28 x 6-1/2 Hex Bolt Grade 5, Clear Zinc	1
10	5519-3	Motor Mount Nut (5/8-24)	*	* Service Part Only			
11	5519-2	Motor Mount Washer	*				
12	5976-2	Grommet (3/16 x 3/4)	1				
13	5519-5	Actuator Motor (12V) (Includes Items # 10 & 11)	1				

GHS POWERFIL® ASSEMBLY (10.0)

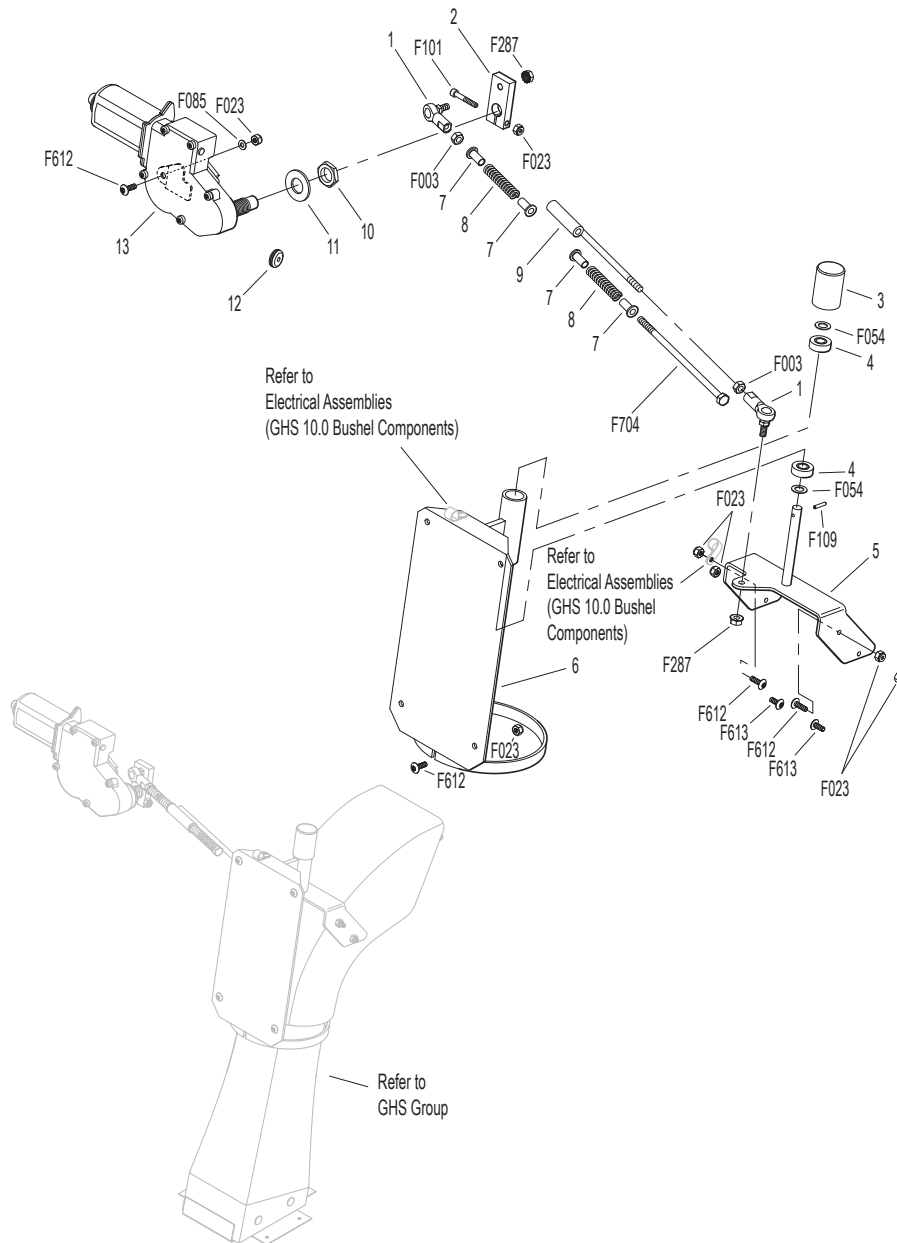

GHS 10.0 BUSHEL CATCHER ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Upper Baffle Screen Assembly (Removable)				46	5976-2	Grommet (3/16 x 3/4)	1
1	7512-8	Removable Screen (3/16 Hole) (Includes Items # 2, 5, F190 & F617)	1**	47	5977-3	Grommet (9/16)	1
2	7506	Knob / Threaded Insert (10-24)	2	48	8602-3	10.0 Catcher W/O Powerfil®, Gray (Includes Door)	*
3	8606-3	Channel Top, LH	1		8602-4	10.0 Catcher W/Powerfil®, Gray (Includes Door)	*
4	8606-2	Channel Bottom	2		8610-5	10.0 Bushel Catcher Box, Gray	*
5	7856-1	Edge Molding (26")	1	49	8607-9	Powerfil® Cover Plate	1
6	7507	Screen Seal (27-1/2)	1	50	8155-2	Gas Spring Cover, RH	1
7	7505	Mustache Spring	2	51	8608-8	Hinge Plate, RH	1
8	8606	C-Channel (10.0)	1	52	8608-9	Torsion Bar	1
	8606-20	C-Channel With Spring (10.0) (Includes Items # 7, 8 & F340)	*	5598-2 Optional Dump Bag (Not Shown)			
9	8606-4	Channel Top, RH	1	May be ordered as an option. Contact your Walker dealer.			
10.0 Exhaust Deflector Door Assembly				Fasteners			
10	8607-16	Upper Seal Support	1		F020	5/16-18 ESNA Nut	2
11	8607-17	Upper Door Seal	1		F023	10-24 ESNA Nut	29
12	8607-18	Backup Plate	1		F024	5/16-24 Jam Nut	4
13	8512-4	10.0 Catcher Box Door, Gray (Includes Items # 10-14, 16, 17, F085, F411, F649 & F654)	1		F029	1/4-20 x 1/2 Hex Bolt	8
14	5583	Handle	1		F032	1/4-20 x 3/4 Hex Bolt	2
15	8607-1	Door Mount, LH	1		F049	5/16 SAE Washer	8
16	8607-12	Upper Door Stiffener	1		F050	1/4 SAE Washer	2
17	8607-7	Lower Door Stiffener	1		F068	1/8 x 1 Cotter Pin	2
18	8607-8	Door Guide	1		F079	A/A66D Aluminum Pop Rivet	5
19	8607-2	Door Mount, RH	1		F085	3/16 Rivet Backup Washer	10
GHS 10.0 Bushel Catcher Assembly					F094	8-32 x 1/2 PTHMS	6
20	8608-13	Center Strap	1		F190	#10 Internal Star Lock Washer	2
21	8608-3	Upper Frame Doubler	2		F195	1/4-20 x 3/4 PPHMS, SS	4
22	8608-1	Outside Box Strap	2		F196	1/4-20 x 1 PPHMS, SS	4
23	8608-2	Lower Frame Doubler	2		F208	5/16-18 x 2-1/4 Hex Bolt	2
24	8608-4	Center Frame Doubler	1		F230	1/4-20 x 1-1/4 PPHMS, SS	4
25	8608-11	Catcher Door Finger	1		F242	1/4-20 x 7/8 PPHMS, SS	8
26	8610-8	Catcher Dump Flap	1		F340	Rivet, Aluminum	4
27	8610-3	Backing Plate, Dump Flap	1		F351	Aluminum Pop Rivet	6
28	7584	Reinforcing Strap	1		F360	1/4-20 x 3/8 Hex Bolt	2
29	5103-5	Pivot Bushing Inner	2		F390	1/4-20 x 7/8 Carriage Bolt	4
30	5801-4	Decal Plate, Round	2		F411	3/16 Bulbex Rivet	21
31	7620-3	Pivot Bushing (1/2 x 9/16)	2		F456	5/16-18 x 3/4 SBH Cap Screw, SS	4
32	8608-7	Hinge Plate, LH	1		F524	3/16 x 3/8 Aluminum Rivet, Black	8
33	5103-7	Outside Torsion Bushing	2		F540	1/4-20 x 1-3/4 PPHMS, SS	1
34	8607-4	Upper Arm	2		F551	5/16-18 Flange Top Lock Nut	4
35	5214-12	Ball Joint (5/16-24)	4		F568	10-24 Flange Top Lock Nut	1
36	5155-12	5/16 Ball Stud	2		F569	1/4-20 Flange Top Lock Nut	27
37	5155-4	Gas Spring	2		F612	10-24 x 5/8 Truss Head Torx	8
38	8155-1	Gas Spring Cover, LH	1		F613	10-24 x 1/2 Truss Head Torx	11
39	8607-3	Lower Arm	2		F617	10-24 x 3/8 Truss Head Torx	4
40	5103-6	Pivot Bushing Outer	2		F618	10-24 x 3/4 Truss Head Torx	6
41	5155-13	10mm Ball Stud, 5/16-18 3/4 Thread	2		F649	3/16 x .510/.625 Grip Range Rivet, SS	4
42	5523-6	Gas Spring Plate	2		F654	3/16 x .510/.625 Grip Range Rivet	7
43	8608-10	Box Support, Gas Spring	2	*	Service Part Only		
44	7532-1	Handle, Catcher Lift	2	**	This screen can be replaced by P/N 7512-11 Removable Screen (3/4" holes) for improved air flow performance in wet conditions.		
45	8117	Wire Harness Channel	1				

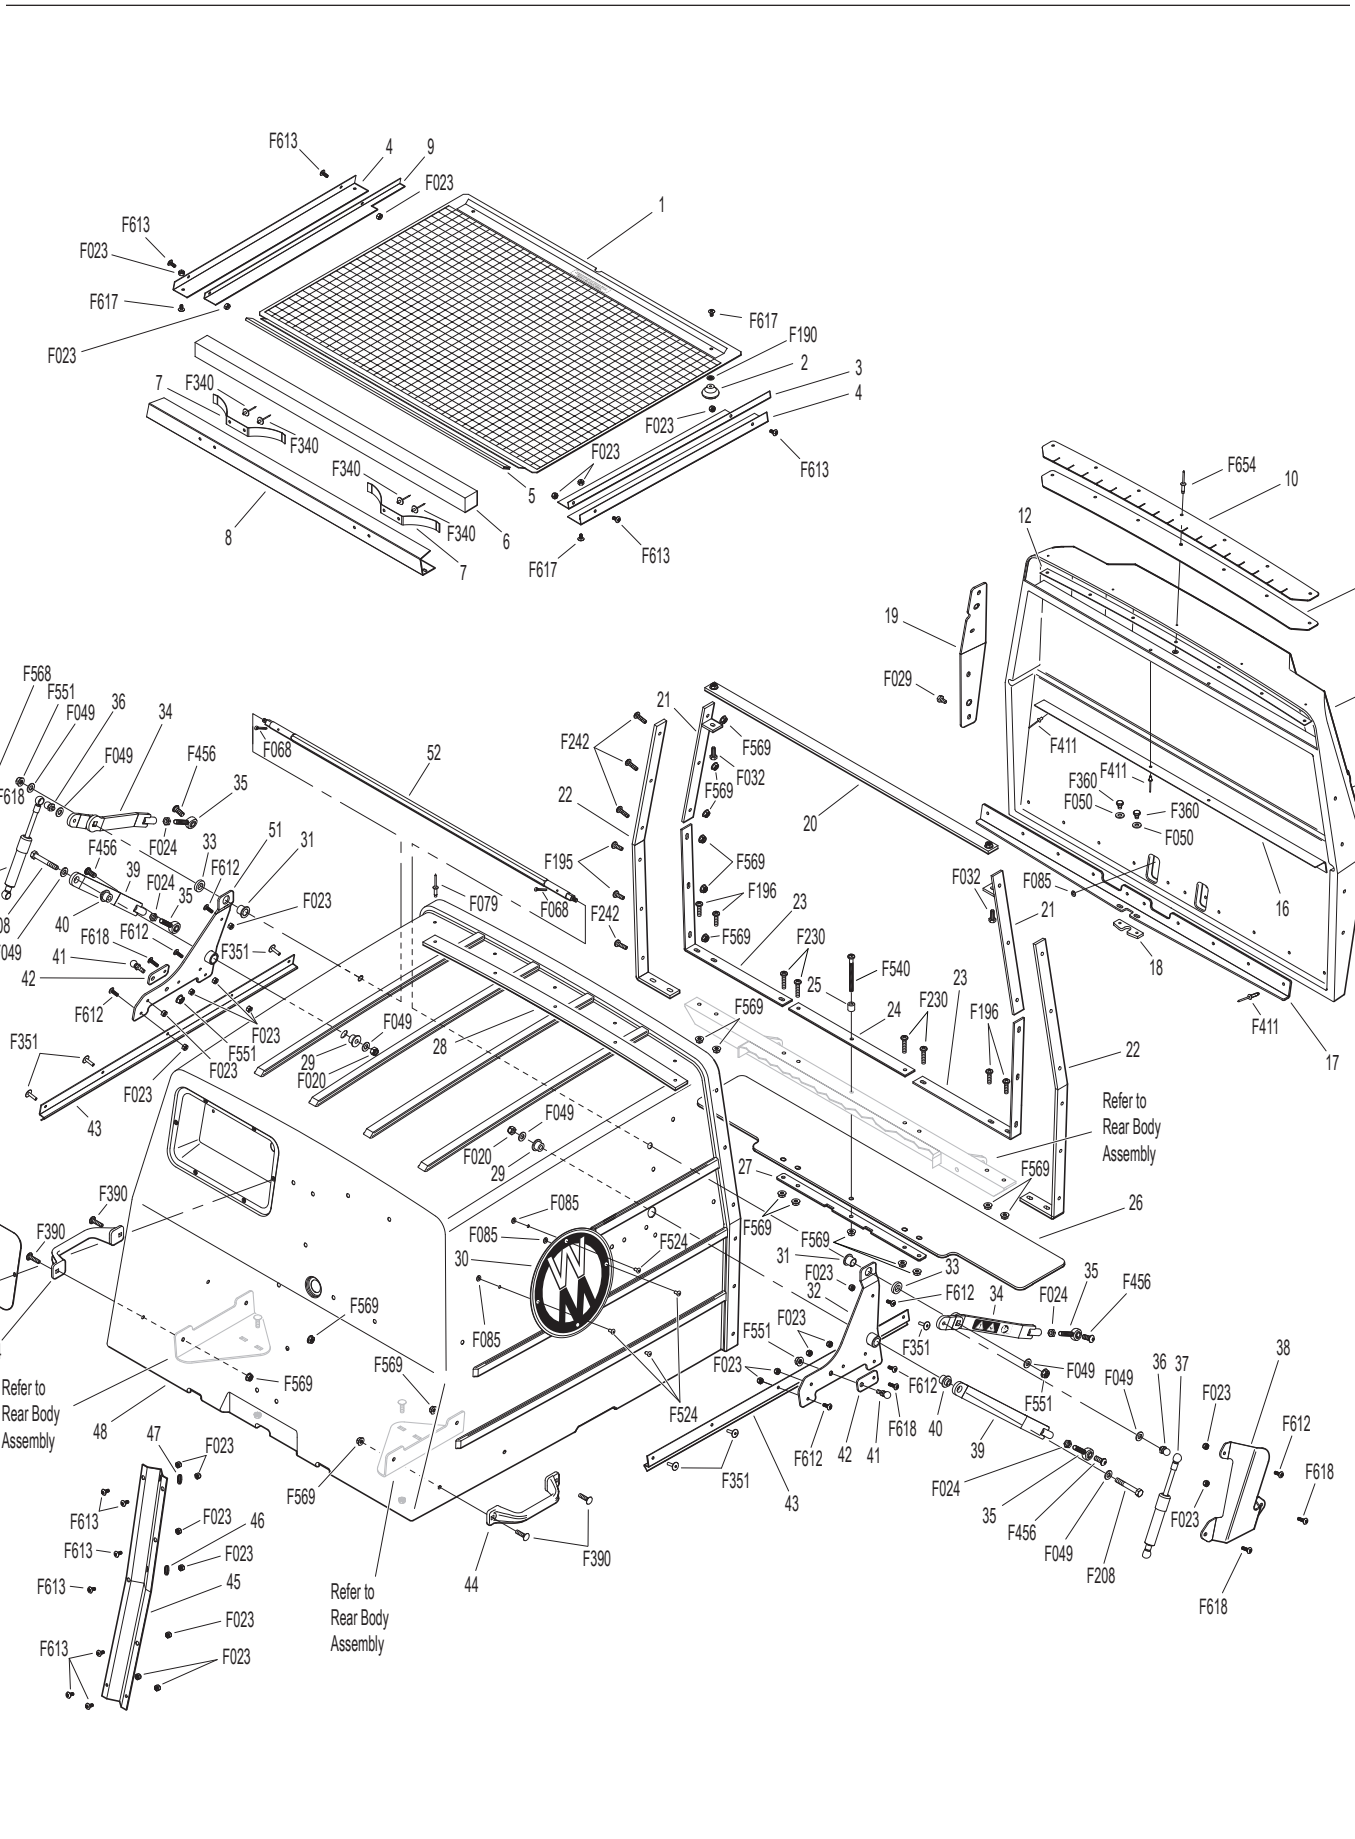

Model C27i Beginning S/N 199071
Use only genuine **Walker®** replacement parts.

ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Electrical Assembly

1	6104-11	Seat Switch, Comfort Seat (NO)	1
2	7834-2	Wire Saddle (2 Wires)	1
3	8990-1	Hourmeter (Global)	1
4	6941-9	Relay Switch 30/40 Amp	4
5	4410-16	Soft Start Control	1
6	7948-6	Time Delay Module	1
7	5975-1	Cable Tie (18# x 3-3/4")	9
8	7834-4	Wire Clamp .197-.354	1
9	5975-3	Cable Tie (50# x 7")	1
10	8404-8	Plastic Cover, Red	2
11	4940-30	Jumper Wire (12GA)	1
12	8941	Circuit Breaker (30 Amp) (Auto Reset/Sealed)	1
13	2940-26	Battery Cable (22") Red	1
14	5932	Battery Terminal Insul., Black (-)	1
15	5933	Battery Terminal Insul., Red (+)	1
16	5839	Hook Bolt	2
17	8790-1	Rubber Strip	1
18	2703-5	Knob, 10-24 x 1/2	2
19	4910-11	Cover Plate With Foam (Includes Item # 17)	1
20	4910-10	Battery Hold Down Bracket	1
21	2940-2	Battery Cable (22")	1
22	7910-3	Battery (12V/350A CCA)	1
23	5910-6	Battery Spacer Pad	1
24	4910-9	Battery Mount	1
25	7977-4	Grommet (7/8 x 1-1/4 x 3/16)	1
26	6342-5	Wiring Channel	1
27	5835-6	Clamp Half (5/8) .280 Hole	2
28	5942-10	Safety Switch (NC), Delta Side Mount	1
29	8536-2	Warning Horn Assembly	1
30	8536-5	Warning Horn Bracket	1
31	6940-29	Wire Harness Assembly	1
32	5942-20	Safety Switch (NO)	1
33	8960-15	Ignition Switch (With Keys) (Includes Items # 34, 35 & F349)	1
34	7854	Plastic Tip / Red	1
35	8960-3	Key Set W/Umbrella	1
36	8996-9	Red Indicator Light Assembly	1
37	4950	PTO Switch	1
38	4950-11	PTO Switch Spacer	1


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Fasteners

F002	10-24 Keps Nut	12
F004	1/4-20 Keps Nut	6
F009	5/16-18 Whiz Locknut	2
F019	1/4-20 ESNA Wing Nut	2
F025	10-24 x 3/8 PPHMS	2
F026	10-24 x 1/2 PPHMS	10
F029	1/4-20 x 1/2 Hex Bolt	1
F031	1/4-20 x 5/8 Hex Bolt	4
F034	5/16-18 x 3/4 Hex Bolt	2
F050	1/4 SAE Washer	2
F104	1/4-20 x 3/4 PFH Bolt	1
F182	1/4 x 5/8 x 1/8 Washer	2
F232	10-32 Keps Nut	2
F349	Washer .835 ID 1.122 OD, SS	1
F505	6-32 x 7/8 Hex Trim MS, SS	4
F506	6-32 Nylock Nut	4

NOTE: Decals for this assembly are not shown here. Refer to **TRACTOR DECALS**, Page 2, for Decal listing and placement information.

ELECTRICAL ASSEMBLY

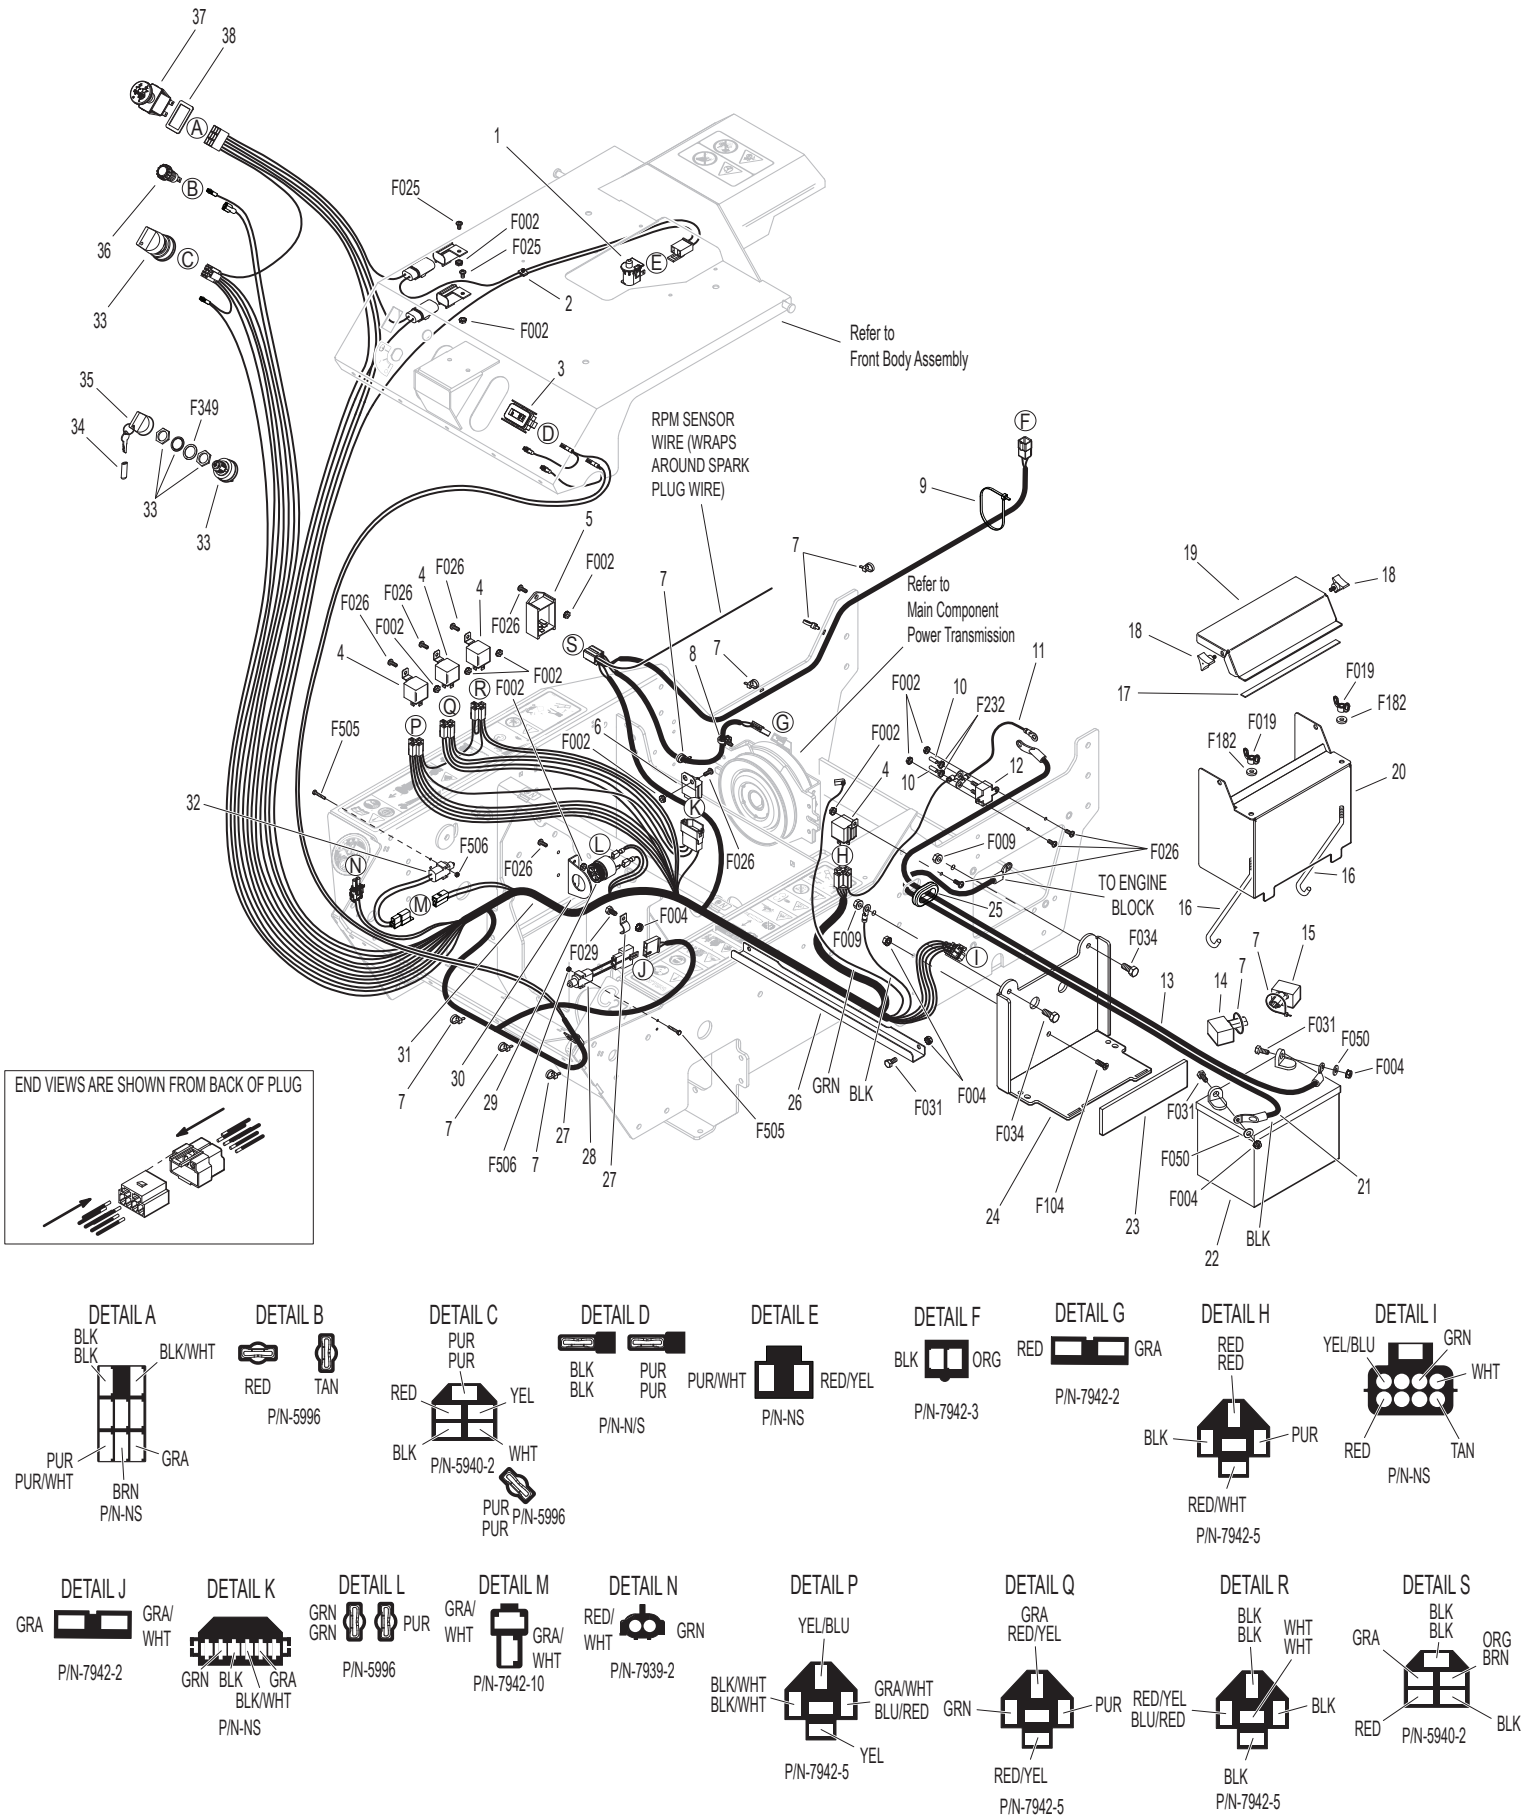

Model C27i Beginning S/N 199071
Use only genuine **Walker**® replacement parts.

ELECTRICAL ASSEMBLIES (GHS 10.0 BUSHEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Horn & Harness Channel Assemblies

1	5977-2	Grommet, Cut (1/8 x 3/8)	2
2	5975-1	Cable Tie (18# x 3-3/4")	1
3	5975-3	Cable Tie (50# x 7")	1
4	5536-2	Horn, Full Signal	*

Harness & Grass-Pak® Switch Assemblies

5	8950-4	Powerfil® Wire Harness (7.0 / 10.0)	1
6	5594-7	Grass-Pak® Shaft	1
7	5592-40	Grass-Pak® Switch Assembly	1
8	5833	Cable Clamp (1/4)	2


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Fasteners

F002	10-24 Keps Nut	1
F023	10-24 ESNA Nut	3
F025	10-24 x 3/8 PPHMS	1
F508	4-40 Keps Nut, SS	2
F612	10-24 x 5/8 Truss Head Torx	1
F613	10-24 x 1/2 Truss Head Torx	2
F712	4-40 x 3/8 Hex Head, SS	2
F713	Washer #4, SS	2

* Service Part Only

ELECTRICAL ASSEMBLIES (GHS 10.0 BUSHEL COMPONENTS)

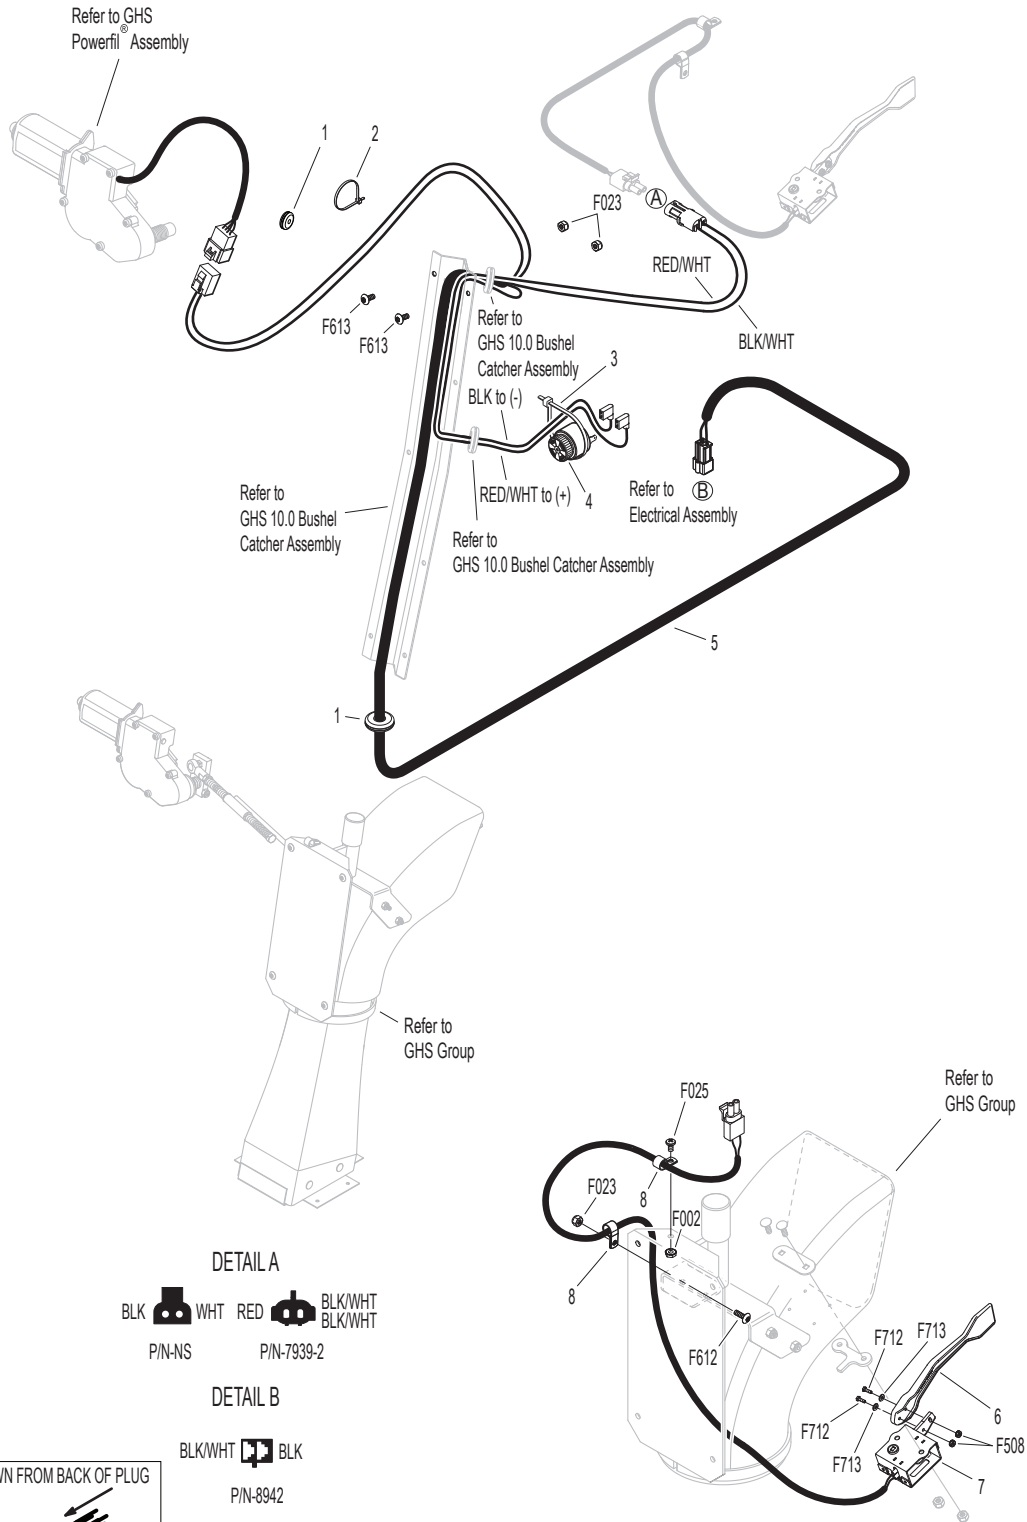

LUBRICATION POINTS

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points			
1	Steering Lever Pivot	Grease	2
2	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1
3	Deck Support Arm Pivot	Grease	2
4	Universal Joint Tube Assembly	Grease*	1
5	Universal Joint Quick Connect Spline (Grease Slide Area)	Grease	1
6	Throttle Control Cable Ends	Oil	2
7	Throttle Control Pivot	Oil	1
8	Seat Panel Latch Pivot	Oil	2
9	Engine Oil Fill	Oil**	1
10	Tail Wheel Caster Fork Pivot	Grease	2
11	Catcher Hinge Point	Oil	2
12	Rear Wheel Bearing	Grease	2
13	Rear Axle Pivot	Grease	1
14	Engine Dipstick	Oil**	1

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
15	Engine Idler Pivot	Grease	1
16	Jackshaft Tensioner Lever*** (Grease Contact Point)	Grease	1
17	Parking Brake Lever Pivot	Grease	1
18	Ground Drive Idler Pivot	Grease	1
19	Transaxle Oil Reservoir	Oil/20W-50	1


* Grease every 25 hours.

** Refer to C27i **Operator's Manual** for procedure for checking and changing oil in Engine Crankcase.

*** Contact point located under jackshaft. Access with jackshaft in raised position.

NOTE: See Model C27i **Operator's Manual** (6000-56) for proper lubrication intervals.

LUBRICATION POINTS

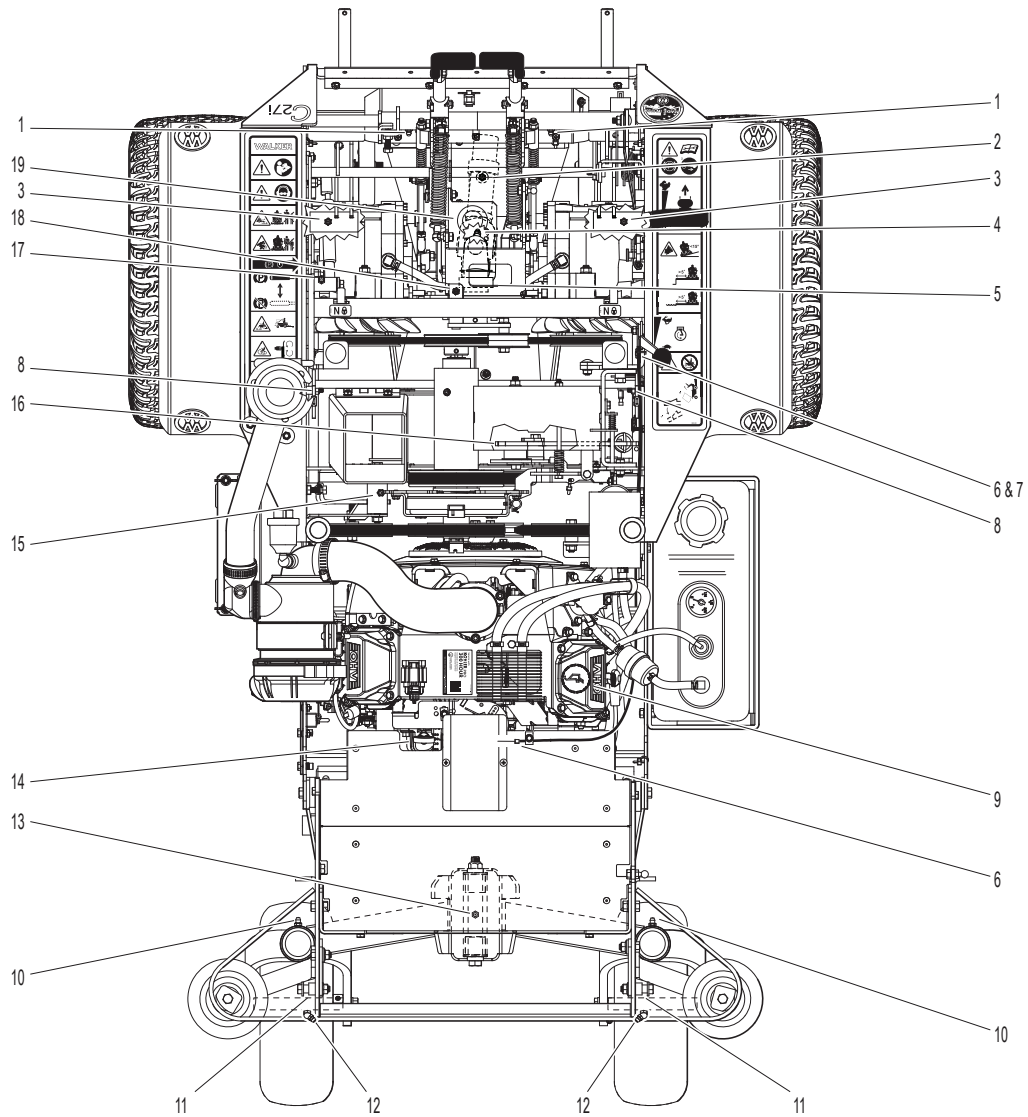

CASTER WHEEL FORK INSTALLATION


ITEM NO.	DESCRIPTION	ITEM NO.	DESCRIPTION
----------	-------------	----------	-------------

Caster Wheel Fork Assembly


- 1 Installing the Caster Fork with a Belleville Washer:
 - a. Install the fork up into the bearing housing through the lower and upper tapered roller bearings. Rotate the fork as the seal is engaging onto the shaft to prevent the seal lip from rolling.
 - b. Place a Belleville washer onto the fork shaft with the cupped side of the washer down against the bearing, and thread the slotted hex nut finger-tight onto the shaft.
 - c. Using a wrench or socket, tighten the slotted hex nut by hand only until the Belleville washer is fully compressed, which is felt as a distinct increase in the amount of force required to turn the nut.
 - d. Back the nut off one to two notches until the cotter pin hole is visible, and install the cotter pin to lock the nut in place.

NOTE: The tension of the compressed Belleville washer provides the correct amount of bearing pre-load and will remain consistent with use. Do not over-tighten the nut, which will bind the caster pivot and cause unnecessary turning friction.

Tail Wheel Pivot Assembly

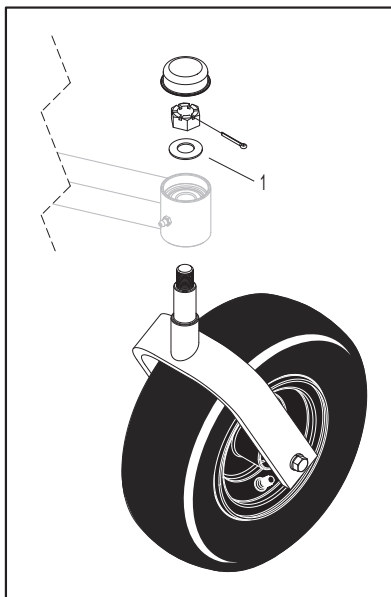

WIRING SCHEMATIC

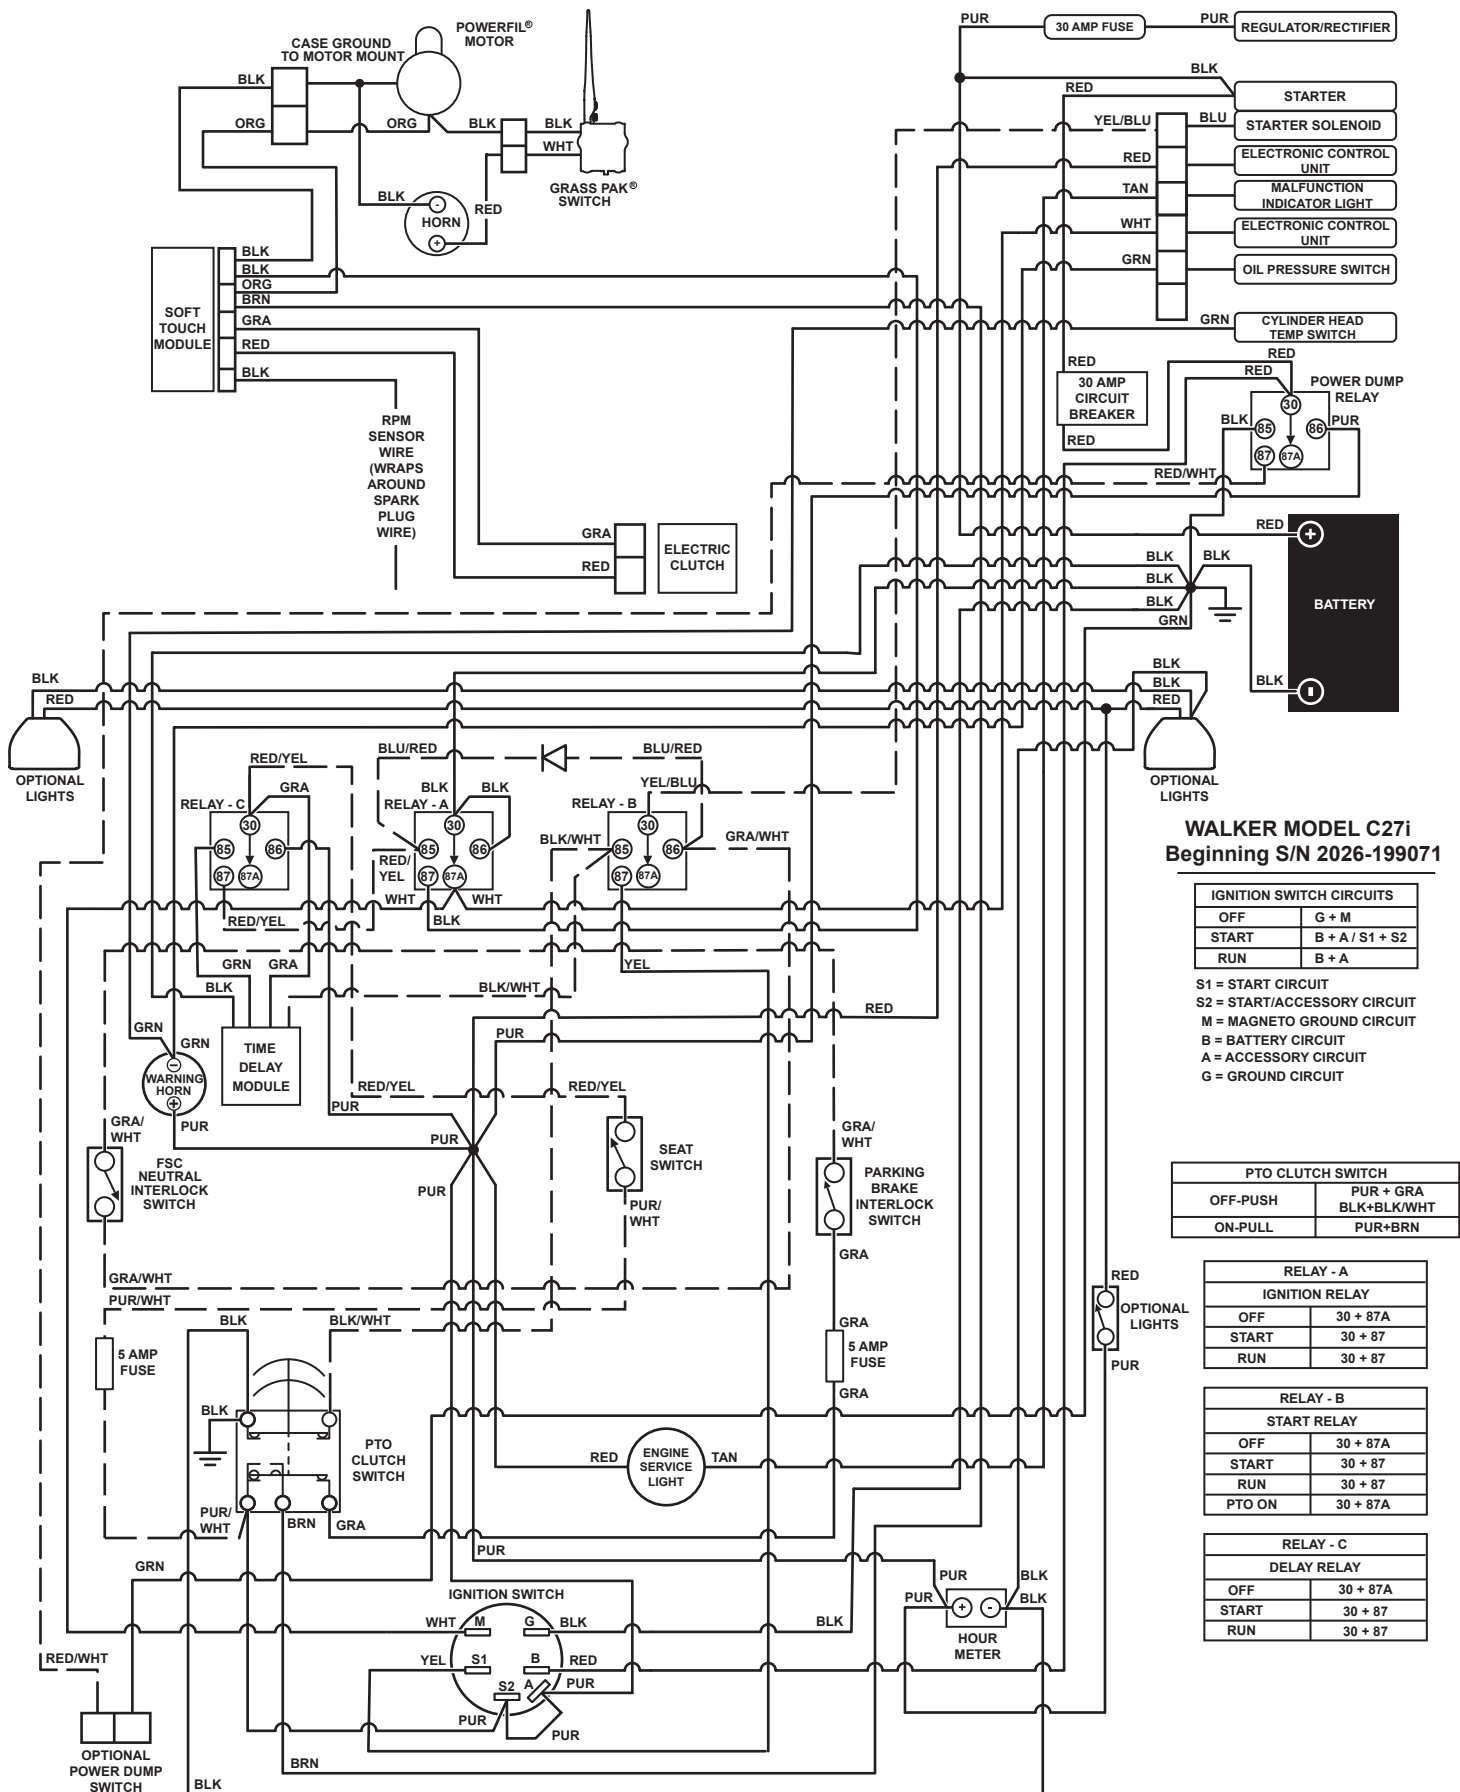

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

LIMITED WARRANTY FOR WALKER MODEL C27i RIDER MOWERS

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within two (2) years* after the date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Rehiko/Kohler Engine

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

The Fulbat battery comes with a one (1) year warranty from the date of sale to the original retail purchaser. Warranty claims for the battery are administered through Walker Manufacturing.

★ Extended warranties are offered for the following powertrain components:

- Hydro-Gear offers a two (2) year or 2000 hour (whichever comes first) warranty for the ZT-3100 Hydrostatic transaxle which covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 2000 hours. This warranty is administered through Walker Manufacturing.

2. WHAT THIS WARRANTY DOES NOT COVER:


- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Owner's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

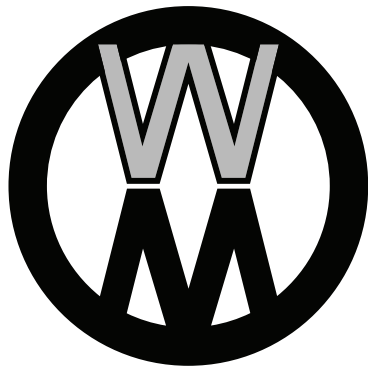

WALKER

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 092926 PRINTED IN USA www.walker.com ©2026 WALKER MFG. CO