

# Walker Rider Lawnmowers

## OWNER'S MANUAL


Safety, Assembly, Operating, and Maintenance Instructions

Model MT (23.0 HP)

Model MTL (25.0 HP)

Model MTEFI (26.0 HP)

Model MTLEFI (31.0 HP)

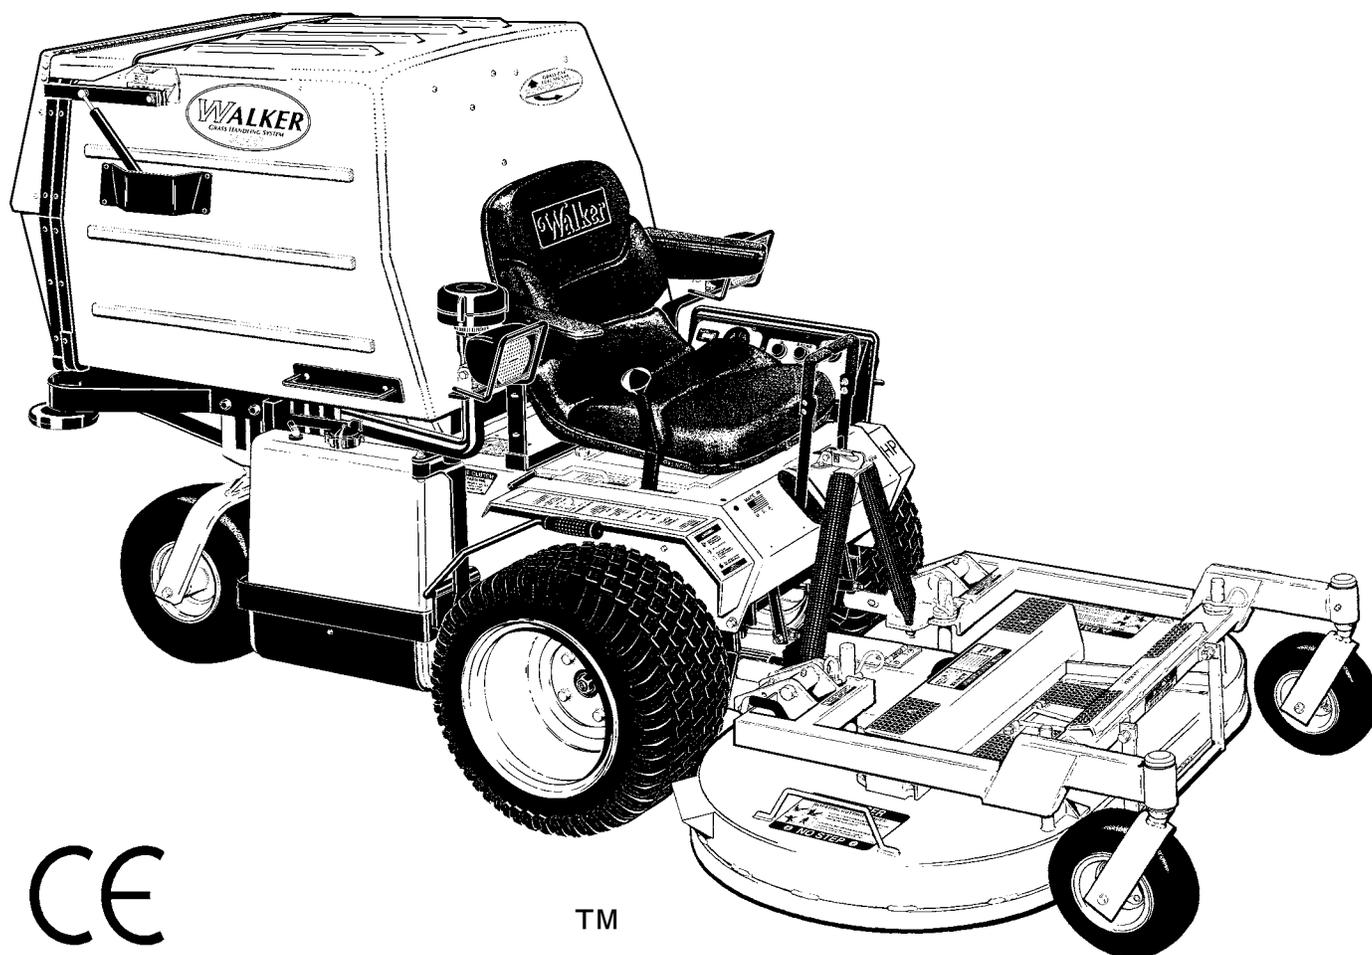

CE

TM

**Please Read and Save These Instructions**

For Safety, Read All Safety and Operation  
Instructions Prior to Operating Machine

Effective Date: 04-01-07

P/N 8000-14



## Foreword

**Thank you.** . .for purchasing a Walker mower. Every effort has been made to provide you with the most reliable mower on the market, and we are sure you will be among our many satisfied customers. If for any reason this product does not perform to your expectations, please contact us at (970) 221-5614. Every customer is important to us. Your satisfaction is our goal.

**Please.** . .read this manual thoroughly! This manual is to be used in conjunction with the engine manufacturer's manual for the specific engine on the mower model you have purchased. Before you operate your new mower, please read this entire manual. Some of the information is crucial for proper operation and maintenance of this mower - it will help protect your investment and ensure that the mower performs to your satisfaction. Some of the information is important to your safety and must be read and understood to help prevent possible injury to the operator or others. If anything in this manual is confusing or hard to understand, please call our service department, at (970) 221-5614, for clarification before operating or servicing this mower.

This manual covers Model MT with the Kohler Command Pro CH23 (23.0 HP) gasoline engine, or optional Kohler Command Pro CH26 (26.0 HP) Electronic Fuel Injection (EFI) gasoline engine, or optional Kohler Aegis LH685 (25.0 HP) gasoline engine (liquid cooled), or optional Kohler Aegis LH775 (31.0 HP) Electronic Fuel Injection (EFI) gasoline engine (liquid cooled).

**All shields and guards must be in place for the proper and safe operation of this machine.** Where they are shown removed in this manual, it is for illustration purposes only. **Do not operate this machine unless all shields and guards are in place.**

Specifications given are based on the latest information available at the time this manual was produced.

Walker Mfg. Co. is continually striving to improve the design and performance of its products. We reserve the right to make changes in specifications and design without thereby incurring any obligation relative to previously manufactured products.

Sincerely,  
WALKER MANUFACTURING COMPANY

Bob Walker, President

# Table of Contents

|  |    |
|--|----|
| <b>General Information</b> _____                               | 1  |
| <b>HIGHLIGHTED INFORMATION</b> _____                           | 1  |
| <b>GLOSSARY</b> _____  | 1  |
| <b>IDENTIFYING NUMBER LOCATIONS</b> _____                      | 1  |
| <b>ENGINE SERIAL NUMBER LOCATION</b> _____                     | 2  |
| <b>SERVICING OF ENGINE AND<br/>DRIVETRAIN COMPONENTS</b> _____ | 2  |
| <b>Specifications</b> _____                                    | 3  |
| <b>ENGINE</b> _____  | 3  |
| <b>ELECTRICAL SYSTEM</b> _____                                 | 4  |
| <b>TRANSMISSION</b> _____                                      | 4  |
| <b>BLADE DRIVE</b> _____                                       | 5  |
| <b>TIRE SIZE</b> _____   | 5  |
| <b>TIRE PRESSURE</b> _____                                     | 5  |
| <b>DIMENSIONS (Tractor and Mower)</b> _____                    | 5  |
| <b>MOWER DECK</b> _____  | 6  |
| <b>CURB WEIGHT</b> _____                                       | 6  |
| <b>DRIVE BELTS</b> _____                                       | 6  |
| <b>GHS SYSTEM (Optional)</b> _____                             | 6  |
| <b>SEAT</b> _____  | 7  |
| <b>FRAME/BODY CONSTRUCTION</b> _____                           | 7  |
| <b>Component Identification</b> _____                          | 8  |
| <b>Safety Instructions</b> _____                               | 14 |
| <b>BEFORE OPERATING</b> _____                                  | 14 |
| <b>OPERATING</b> _____   | 15 |
| <b>MAINTENANCE</b> _____                                       | 17 |
| <b>SAFETY, CONTROL,<br/>AND INSTRUCTION DECALS</b> _____       | 18 |
| <b>Assembly Instructions</b> _____                             | 20 |
| <b>SETUP INSTRUCTIONS</b> _____                                | 20 |
| <b>Tire Installation (Tractor)</b> _____                       | 20 |
| <b>Battery Service</b> _____                                   | 20 |
| <i>Wet Battery Service</i> _____                               | 20 |
| <i>Dry Battery Service</i> _____                               | 20 |
| <i>Battery Charging</i> _____                                  | 21 |
| <i>Battery Installation</i> _____                              | 22 |
| <b>Mower Deck Assembly</b> _____                               | 22 |
| <i>Deck Caster Wheels Installation</i> _____                   | 22 |
| <i>Deck Discharge Chute Installation</i> _____                 | 22 |
| <i>Deck Discharge Shield Installation</i> _____                | 23 |
| <i>PTO Shaft Guard Installation</i> _____                      | 23 |
| <i>Tilt-Up Roller Wheel Installation</i> _____                 | 23 |
| <b>Mower Deck Installation on Tractor</b> _____                | 23 |
| <i>Deck Installation</i> _____                                 | 23 |
| <i>Deck Leveling</i> _____                                     | 25 |
| <b>PREOPERATING CHECKLIST</b> _____                            | 26 |

|   |    |
|---|----|
| <b>Operating Instructions</b> _____                                       | 29 |
| <b>CONTROL IDENTIFICATION,<br/>LOCATION, AND FUNCTION</b> _____           | 29 |
| <b>Operating Controls</b> _____   | 29 |
| <i>Engine Choke - (Model MT and MTL only)</i> _____                       | 29 |
| <i>Engine Throttle</i> _____  | 30 |
| <i>Forward Speed Control (FSC)</i> _____                                  | 30 |
| <i>Steering Levers</i> _____  | 30 |
| <i>Blade Clutch (PTO)</i> _____   | 30 |
| <i>Parking Brake</i> _____  | 30 |
| <i>Front Body Latch Release</i> _____                                     | 32 |
| <i>Transmission Lockout Levers</i> _____                                  | 32 |
| <i>Optional Cold Start Lever<br/>(Jackshaft Drive Belt Release)</i> _____ | 32 |
| <i>Suspension Seat (MTL and MTLEFI)</i> _____                             | 33 |
| <b>Instrument Panel</b> _____   | 35 |
| <i>Hourmeter</i> _____  | 37 |
| <i>Voltmeter</i> _____  | 37 |
| <i>Oil Pressure Warning Light</i> _____                                   | 37 |
| <i>Over Temperature Warning Light<br/>(Model MT and MTEFI Only)</i> _____ | 37 |
| <i>Water Temperature Warning Light<br/>(Model MTL)</i> _____              | 38 |
| <i>Water Temperature Gauge (Model MTL)</i> _____                          | 38 |
| <i>Engine Service Light (Model MTEFI)</i> _____                           | 38 |
| <i>Ignition Switch</i> _____  | 38 |
| <i>Light Switch (For Optional Lights)</i> _____                           | 38 |
| <i>Warning Horn</i> _____   | 38 |
| <i>Circuit Breakers</i> _____   | 39 |
| <b>STARTING THE ENGINE</b> _____  | 39 |
| <b>ADJUSTING GROUND<br/>SPEED AND STEERING</b> _____                      | 40 |
| <b>ENGAGING THE MOWER</b> _____   | 41 |
| <b>STOPPING THE MACHINE</b> _____   | 42 |
| <b>ADJUSTING CUTTING HEIGHT</b> _____                                     | 43 |
| <b>TRANSMISSION LOCKOUT</b> _____   | 43 |
| <b>RECOMMENDATIONS FOR MOWING</b> _____                                   | 44 |
| <b>RECOMMENDATIONS FOR TILT-UP DECK<br/>OPERATION/TRANSPORT</b> _____     | 45 |
| <b>GRASS HANDLING SYSTEM (GHS)</b> _____                                  | 46 |
| <b>General Information</b> _____  | 47 |
| <b>Clogging Checklist</b> _____   | 48 |
| <b>Using the Tilt-Up Deck</b> _____                                       | 49 |
| <b>Using the GHS Catcher</b> _____  | 49 |
| <i>Powerfil®</i> _____  | 49 |
| <i>"Full" Signal Horn</i> _____   | 49 |
| <b>Cleaning the GHS Exhaust Screen</b> _____                              | 49 |
| <b>Dumping the Catcher</b> _____  | 50 |
| <i>Tailgate Dumping</i> _____   | 50 |
| <i>Using the Dump Bag</i> _____   | 50 |
| <i>Power Dump Option</i> _____  | 51 |
| <i>Hi-Dump® Option</i> _____  | 52 |

# Table of Contents

|   |    |
|---|----|
| <b>Maintenance Instructions</b>                         | 55 |
| <b>MAINTENANCE SCHEDULE CHART</b>                       | 55 |
| <b>IMPORTANT TIPS FOR CARE<br/>OF THE KOHLER ENGINE</b> | 56 |
| Fuel System   | 56 |
| Starting/Stopping                                       | 56 |
| Cooling System - MT, MTEFI                              | 56 |
| Cooling System - MTL                                    | 56 |
| Air Cleaner System                                      | 56 |
| Oil   | 57 |
| <b>LUBRICATION</b>                                      | 57 |
| <b>Engine Oil</b>                                       | 57 |
| Engine Break-In Oil                                     | 57 |
| Checking Engine Crankcase Oil Level                     | 57 |
| Changing Engine Crankcase Oil/Oil Filter                | 58 |
| <b>Mower Deck Gearbox Lubrication</b>                   | 58 |
| <b>DSD52 or DSD62</b>                                   |    |
| <b>Mower Deck Lubrication</b>                           | 59 |
| <b>Tractor PTO Gearbox Lubrication</b>                  | 60 |
| Checking Gearbox Oil Level                              | 60 |
| Changing Gearbox Oil                                    | 60 |
| <b>Gear Axle Lubrication</b>                            | 60 |
| <b>Hydrostatic Transmission Fluid</b>                   | 60 |
| Checking Hydrostatic<br>Transmission Fluid Level        | 60 |
| <b>Grease Fitting and Oil Point Lubrication</b>         | 61 |
| <b>CLEANING</b>   | 64 |
| <b>Engine Air Cleaner System</b>                        | 64 |
| Turbine Precleaner                                      | 64 |
| Donaldson Radialseal™ Air Cleaner                       | 65 |
| <b>Engine Cooling System - MT and MTEFI</b>             | 66 |
| Air Intake System                                       | 66 |
| Cylinder Head Cooling Fins                              | 67 |
| <b>Engine Cooling System - MTL</b>                      | 67 |
| Radiator Screen and Cooling Fins                        | 67 |
| Flushing Radiator and Changing Coolant                  | 68 |
| <b>Grass Buildup in Mower Housing</b>                   | 68 |
| <b>GHS Blower</b>                                       | 69 |
| <b>GHS Exhaust Screen</b>                               | 69 |
| <b>Hydrostatic Transmission Cooling Fins</b>            | 69 |
| <b>CHECKING/SERVICING</b>                               | 70 |
| <b>Engine Cooling System - MTL</b>                      | 70 |
| Coolant Level   | 70 |
| <b>Security of Air Filtration Components</b>            | 70 |
| <b>Battery</b>  | 71 |
| Electrolyte Level                                       | 71 |
| Cleaning the Terminals                                  | 71 |
| Charging the Battery                                    | 71 |
| <b>Tire Pressure</b>                                    | 72 |
| <b>Wheel Bolt Torque</b>                                | 72 |
| <b>Sharpen Mower Blades</b>                             | 72 |
| <b>Drive Belts</b>                                      | 73 |

|  |    |
|--|----|
| <b>Mower Deck Gearbox Oil Seals</b>                                    | 73 |
| <b>Spark Plugs</b>   | 73 |
| <b>Ignition Wires</b>  | 73 |
| <b>Fuel Lines and Clamps</b>   | 73 |
| <b>Radiator Hoses and Clamps - MTL</b>                                 | 74 |
| <b>Blade Brake Action</b>  | 74 |
| <b>PTO U-Joints</b>  | 74 |
| <b>REPLACING/REPAIRING</b>   | 75 |
| <b>Drive Belts</b>   | 75 |
| Engine PTO Drive Belt  | 76 |
| Jackshaft Drive Belt   | 77 |
| GHS Blower Drive Belt  | 78 |
| Hydrostatic Ground Drive Belt  | 79 |
| <b>Fuel Filter - Model MT and MTL</b>                                  | 80 |
| <b>Fuel Filter - MTEFI and MTLEFI</b>                                  | 80 |
| <b>Blade Overload Shear Bolts</b>                                      | 81 |
| <b>PTO Shear Pin</b>   | 81 |
| <b>Mower Blades</b>  | 82 |
| <b>ADJUSTMENTS</b>   | 83 |
| <b>Steering Levers</b>   | 83 |
| <b>Tilt-Up Deck Adjustable Stop</b>                                    | 83 |
| <b>GHS Signal Horn Adjustment<br/>(When Horn Sounds at Wrong Time)</b> | 84 |

## Maintenance And Service

|                         |    |
|-------------------------|----|
| <b>Record Sheet</b>     | 85 |
| <b>Operator's Notes</b> | 86 |
| <b>Warranty</b>         | 87 |

# General Information

## HIGHLIGHTED INFORMATION

Walker Manufacturing recommends that any service requiring special training or tools be performed by an authorized Walker Mower Dealer. There are several general practices to be aware of in the area of safety. Most accidents associated with the operation or maintenance of a Walker Mower are caused by disregarding basic safety precautions or specific warnings. Such accidents, in most cases, can be prevented by being aware of the dangers present.

Information of special importance has been highlighted in bold type in this manual. Refer to **Safety Instructions** for the meanings of **DANGER**, **WARNING**, **CAUTION**, **IMPORTANT**, and **NOTE**.

## GLOSSARY

There are many terms that are either unique to this equipment or that are used as acronyms. The following terms and their definitions will help while using this manual:

- **DECK** is the mowing attachment mounted on the front of the tractor which includes the carrier frame, deck housing, blade drive gearboxes, and cutter blades.
- **ELECTRONIC CONTROL UNIT (ECU)** controls engine functions such as spark timing, fuel/air ratio, etc.
- **FORWARD SPEED CONTROL (FSC)** controls the maximum forward speed of the tractor; functioning as a cruise control.
- **GRASS HANDLING SYSTEM (GHS®)** collects mowed material and deposits it in the catcher.
- **GRASS-PAK® SWITCH** is mounted on the grass delivery spout (in the catcher) and activates the "full" signal horn when the grass catcher is full.
- **GROUND DRIVE** refers to the dual hydrostatic transmissions which drive the main wheels.
- **HYDROSTATIC TRANSMISSION** transmits and controls power from the ground drive belt to the main drive wheel.

- **LEFT HAND (LH)** refers to the left-hand side of the tractor when the operator is seated facing forward in the tractor seat.
- **POWER TAKE-OFF (PTO)** transmits engine power to run the cutter blades and GHS blower.
- **POWERFIL®** spreads the mowed material throughout the interior of the grass catcher by an oscillating delivery spout.
- **RIGHT HAND (RH)** refers to the right-hand side of the tractor when the operator is seated facing forward in the tractor seat.
- **SIDE DISCHARGE (SD)** mows but does not collect the mowed material.
- **STEERING LEVERS** steer the tractor by controlling the dual hydrostatic transmissions.
- **TRACTOR** is the prime mover, including the engine, drive train, operator seat, and controls to operate the mower.
- **TRANSMISSION LOCKOUT** releases the hydrostatic transmissions to permit freewheeling the tractor.


## IDENTIFYING NUMBER LOCATIONS

The tractor serial number plate is affixed to the tractor body just below the left rear corner of the seat. The mower deck serial number plate is affixed alongside the angle iron framing on the LH side of the LH mower blade drive. Model and serial numbers are helpful when obtaining replacement parts and maintenance assistance. For ready reference, please record these numbers in the space provided.


|                    |       |
|--------------------|-------|
| Tractor Model No.  | _____ |
| Tractor Serial No. | _____ |
| Deck Serial No.    | _____ |
| Engine Model No.   | _____ |
| Engine Serial No.  | _____ |
| Date of Purchase   | _____ |

**Fill In By Purchaser**

# General Information

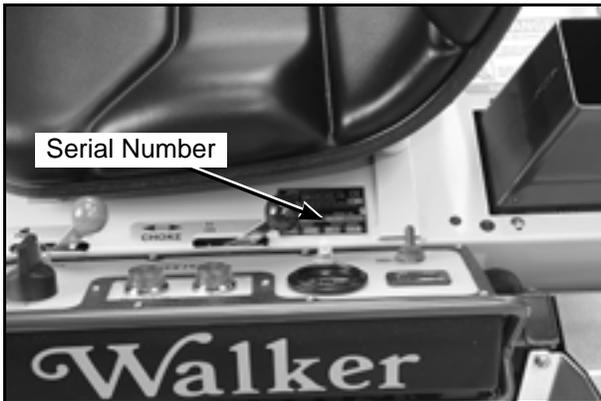


**Tractor Serial Number Location**

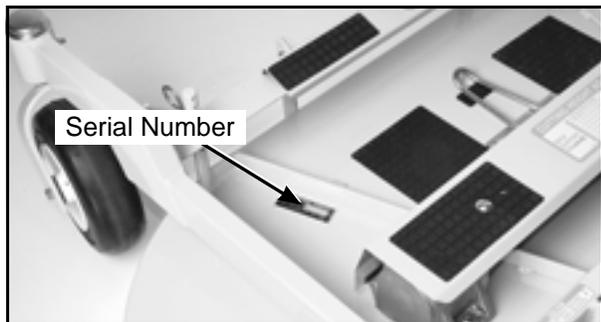


**Mower Deck Serial Number Location**

## ENGINE SERIAL NUMBER LOCATION

Refer to the engine manual that accompanies this manual for the location(s) of the engine serial number. For the mower model(s) covered by this manual, an engine manual is available from Kohler covering the Kohler engines.

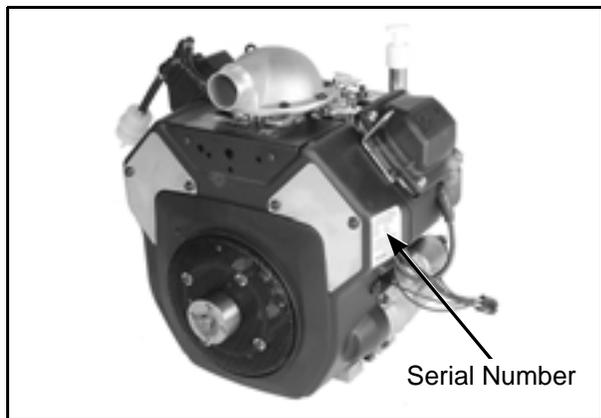

**Engine Serial Number Location  
(MT and MTEFI)**

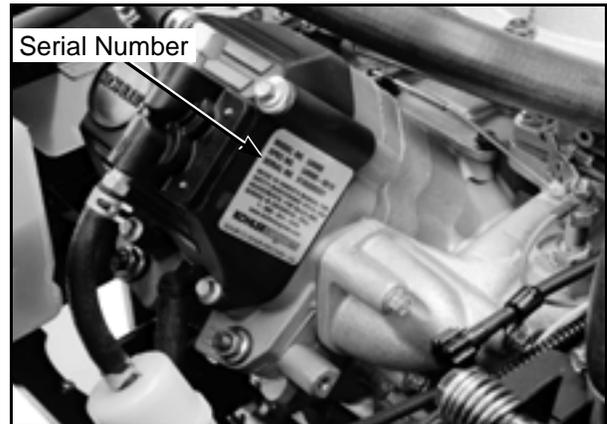

**Engine Serial Number Location  
(MTL and MTLEFI)**

## SERVICING OF ENGINE AND DRIVETRAIN COMPONENTS

The detailed servicing and repair of the engine, hydrostatic transmission, and gearboxes are not covered in this manual. Only routine maintenance and general service instructions are provided. For the service of these components during the limited warranty period, it is important to find a local, authorized servicing agent of the component manufacturer. **Any unauthorized work done** on these components during the warranty period **may void the warranty**. If you have any difficulty finding an authorized outlet or obtaining warranty service, please contact our Service Department for assistance:

**Walker Manufacturing Company**  
5925 E. Harmony Road  
Fort Collins, CO 80528  
1-970-221-5614

Service manuals are available for each of these components from their respective manufacturers as follows:

Kohler Engines

**Kohler Company**  
Kohler, WI 53044  
www.kohlerengines.com  
800-544-2444

Hydrostatic  
Transmissions

**Eaton Corporation**  
15151 Highway 5  
Eden Prairie, MN 55344

Gearboxes (Deck)

**Tecumseh Power Co.**  
1555 S. Jackson Street  
Salem, IN 47167  
812-883-3575

# Specifications

| MODEL                                | AIR COOLED<br>MT (23.0 HP)<br>MTEFI (26.0 HP)   | LIQUID COOLED<br>MTL (25.0 HP)<br>MTLEFI (31.0 HP)  |
|--------------------------------------|---|---|
| <b>ENGINE</b>                        |   |   |
| Manufacturer/Model                   | Kohler Command Pro <sup>®</sup><br>CH23, 2 Cyl., Gasoline<br>(Air Cooled)   | Kohler Aegis <sup>™</sup> LH685, 2 Cyl.,<br>Gasoline (Liquid Cooled)  |
|                                      | Kohler Command Pro <sup>®</sup><br>CH26, 2 Cyl., Gasoline (Air<br>Cooled), Electronic Fuel<br>Injection (EFI)                                 | Kohler Aegis <sup>™</sup> LH775, 2 Cyl.,<br>Gasoline (Liquid Cooled),<br>Electronic Fuel Injection (EFI)                                      |
| Displacement                         | CH23 41.1 cu. in. (674 cc)  | 41.1 cu. in. (674 cc)   |
| Displacement                         | CH26 44.0 cu. in. (725 cc)  |   |
| Displacement                         | LH685   | 41.1 cu. in. (674 cc)   |
| Displacement                         | LH775   | 45.6 cu. in. (748 cc)   |
| HP (@ 3600 RPM)                      | CH23 23.0   |   |
| HP (@ 3600 RPM)                      | CH26 26.0   |   |
| HP (@ 3600 RPM)                      | LH685   | 25.0  |
| HP (@ 3600 RPM)                      | LH775   | 31.0  |
| Max. RPM (No Load)                   | 3750  | 3750  |
| Governed RPM                         | 3600  | 3600  |
| Max. Torque [ft-lb (N·m) @ RPM]      |   |   |
|                                      | CH23 37.9 (51.4) @ 2400   |   |
|                                      | CH26 41.6 (56.4) @ 2700   |   |
|                                      | LH685   | 40.1 (54.4) @ 2200  |
|                                      | LH775   | 45.4 (33.5) @ 2400  |
| Idle RPM                             | 1200 ±75  | 1200 ±75  |
| Spark Plug Type                      | Champion <sup>®</sup> RC12YC  | Champion <sup>®</sup> RC14YC  |
| Spark Plug Gap                       | .030 in. (.76 mm)   | .030 in. (.76 mm)   |
| Crankcase Capacity                   | 1.7 qts (1.6 liters)  | 1.7 qts (1.6 liters)  |
| Crankcase Lubricant                  | API SG, SH, SJ or higher<br>Grade Oil Only with 10W-30<br>Viscosity above 0° F (-18° C),<br>or 5W-20 or 5W-30 Viscosity<br>below 32° F (0° C) | API SG, SH, SJ or higher<br>Grade Oil Only with 10W-30<br>Viscosity above 0° F (-18° C),<br>or 5W-20 or 5W-30 Viscosity<br>below 32° F (0° C) |
| Oil Filter                           | 12 050 01 S   | 12 050 01 S   |
| Cooling System                       | CH23 Air Cooled   |   |
| Cooling System                       | CH26 Air Cooled   |   |
| Cooling System                       | LH685   | Liquid Cooled   |
| Cooling System                       | LH775   | Liquid Cooled   |
| Cooling System Capacity<br>(Approx.) | LH685/LH775   | 1.25 Gallons (4.73 liters)  |
| Coolant                              |   | 50/50 Pre-Mix Anti-freeze/<br>water   |
| Cooling Fan                          |   | Electric radiator cooling fan<br>with reversible self-cleaning<br>action  |
| Fuel Tank Capacity                   | 5 Gallons (19.0 liters)   | 5 Gallons (19.0 liters)   |
| Fuel                                 | Regular Grade Unleaded<br>Gasoline (87 Octane)  | Regular Grade Unleaded<br>Gasoline (87 Octane)  |

# Specifications

| MODEL                        | AIR COOLED<br>MT (23.0 HP)<br>MTEFI (26.0 HP)                                   | LIQUID COOLED<br>MTL (25.0 HP)<br>MTLEFI (31.0 HP)                              |
|------------------------------|---|---|
| <b>ELECTRICAL SYSTEM</b>     |   |   |
| Battery                      | 12 Volt, 35AH, 295 CCA  | 12 Volt, 41AH, 340 CCA<br>(Interstate U1-SP40)                                  |
| Charging System              | Flywheel Alternator   | Flywheel Alternator   |
| Charging Output              | 15 Amp DC (Regulated)<br>25 Amp DC (Regulated)                                  | 25 Amp DC (Regulated)   |
|                              | CH23<br>CH26  |   |
| System Polarity              | Negative Ground   | Negative Ground   |
| Ignition                     | Electronic Capacitive<br>Discharge  | Electronic Capacitive<br>Discharge  |
| Starter                      | 12 Volt Electric Ring-Gear<br>Type, Solenoid Shift                              | 12 Volt Electric Ring-Gear<br>Type, Solenoid Shift                              |
| Interlock Switch             | Ignition Lockout by Seat<br>Switch, Transmission Neutral<br>and Blade Clutch    | Ignition Lockout by Seat<br>Switch, Transmission Neutral<br>and Blade Clutch    |
| Circuit Breaker              | Auto Reset (30A)  | Auto Reset (30A)<br>Auto Reset (40A)  |
|                              | LH685<br>LH775  |   |
| <b>TRANSMISSION</b>          |   |   |
| Manufacturer/Model           | Dual Hydrostatic, Eaton<br>Model 7, Each Wheel<br>Independently Driven          | Dual Hydrostatic, Eaton<br>Model 7, Each Wheel<br>Independently Driven          |
| Steering                     | Hand Lever Control /<br>Individual Wheel  | Hand Lever Control /<br>Individual Wheel  |
| Forward Speed Control        | Precision Friction Lock Lever,<br>Cruise Control, with<br>Neutral-Park Position | Precision Friction Lock Lever,<br>Cruise Control, with<br>Neutral-Park Position |
| Service Brake                | Dynamic Braking through<br>Hydrostatic Transmission                             | Dynamic Braking through<br>Hydrostatic Transmission                             |
| Parking Brake                | Mechanical Pin Lock in<br>Transmission Gear                                     | Mechanical Pin Lock in<br>Transmission Gear                                     |
| Neutral                      | Transmission Release by<br>Manual Dump Valve                                    | Transmission Release by<br>Manual Dump Valve                                    |
| Final Drive                  | Gear Drive Axle   | Gear Drive Axle   |
| <b>Transmission Fluid</b>    |   |   |
| Factory Service              | Mobil 1 Synthetic Motor Oil<br>(15W50)  | Mobil 1 Synthetic Motor Oil<br>(15W50)  |
| Alternate Transmission Fluid | SAE 30W Straight Viscosity<br>Motor Oil   | SAE 30W Straight Viscosity<br>Motor Oil   |
| Transmission Fluid Capacity  | 1 qt (1 liter)  | 1 qt (1 liter)  |
| Transmission Cooling         | Cooling Fan Mounted on<br>Drive Pulley  | Cooling Fan Mounted on<br>Drive Pulley  |

# Specifications

| MODEL   | AIR COOLED<br>MT (23.0 HP)<br>MTEFI (26.0 HP)   | LIQUID COOLED<br>MTL (25.0 HP)<br>MTLEFI (31.0 HP)  |
|---|---|---|
| <b>TRANSMISSION (continued)</b>                                 |   |   |
| <b>Ground Travel Speed</b>                                      |   |   |
| Forward m.p.h. (km/h)   | 0-5 (0-8) Infinitely Variable*  | 0-7 (0-11) Infinitely Variable  |
| Reverse m.p.h. (km/h)   | 0-5 (0-8) Infinitely Variable   | 0-7 (0-11) Infinitely Variable  |
|   | * 6.5 m.p.h. with Optional Speed-Up Kit   |   |
| <b>BLADE DRIVE</b>  |   |   |
| PTO Shaft   | Quick Disconnect Splined Shaft with Two High-Speed U-Joints   | Quick Disconnect Splined Shaft with Two High-Speed U-Joints   |
| Blade Spindle   | Each Blade (2) Mounts Direct on Peerless Right Angle Gearbox with Tee Gearbox in Center Connected to PTO Shaft (Complete Geared Drive, Peerless Model 1000 Gearboxes) | Each Blade (2) Mounts Direct on Peerless Right Angle Gearbox with Tee Gearbox in Center Connected to PTO Shaft (Complete Geared Drive, Peerless Model 1000 Gearboxes) |
| Blade Drive Clutch and Brake                                    | Manual Belt Tightener Clutch and Band Brake (Stops Blades within Five (5) Seconds of Disengagement)   | Manual Belt Tightener Clutch and Band Brake (Stops Blades within Five (5) Seconds of Disengagement)   |
| Max. Blade Speed<br>[22 in. (56 cm) Blade]<br>@ 3600 RPM Engine | 2900 RPM<br>[16700 FPM (5090 m/min)]  | 2900 RPM<br>[16700 FPM (5090 m/min)]  |
| <b>TIRE SIZE</b>  |   |   |
| Deck Caster Wheel<br>36, 42, 48, 56<br>52, 62, 74               | 8 x 3.00-4 Pneumatic (4-Ply)<br>11 x 4.00-5 Pneumatic   | 8 x 3.00-4 Pneumatic (4-Ply)<br>11 x 4.00-5 Pneumatic   |
| Deck Caster Wheel (Optional)<br>36, 42, 48, 56                  | 8 x 3.00-4 Foamed Rubber  | 8 x 3.00-4 Foamed Rubber  |
| Drive   | 18 x 9.50-8 (4-Ply)   | 18 x 9.50-8 (4-Ply)   |
| Rear (Dual)   | 13 x 5.00-6 (4-Ply)   | 13 x 5.00-6 (4-Ply)   |
| <b>TIRE PRESSURE</b>  |   |   |
| Deck Caster Wheel   | 20 PSI (137 kPa)  | 20 PSI (137 kPa)  |
| Drive   | 15 PSI (103 kPa)  | 15 PSI (103 kPa)  |
| Drive (Optional Wide Tire)                                      | 18 x 9.50-8 (4-Ply)   | 18 x 9.50-8 (4-Ply)   |
| Rear  | 20 PSI (137 kPa)  | 20 PSI (137 kPa)  |
| <b>DIMENSIONS (Tractor and Mower)**</b>                         |   |   |
| Length  | 91 in. (231 cm)   | 91 in. (231 cm)   |
| Width   | 49 in. (124 cm)   | 49 in. (124 cm)   |
| Height  | 49 in. (124 cm)   | 49 in. (124 cm)   |
| Wheel Base (Tractor)  | 42-1/4 in. (107 cm)   | 42-1/4 in. (107 cm)   |
| Tread Width (Tractor)   | 29-3/4 in. (76 cm)  | 29-3/4 in. (76 cm)  |

# Specifications

| MODEL                            | AIR COOLED<br>MT (23.0 HP)<br>MTEFI (26.0 HP)   | LIQUID COOLED<br>MTL (25.0 HP)<br>MTLEFI (31.0 HP)  |
|----------------------------------|---|---|
| <b>MOWER DECK</b>                |   |   |
| Width of Cut SD/GHS              | 42 or 48 in. (107 or 122 cm)  | 42 or 48 in. (107 or 122 cm)  |
| Cutting Height                   | 1 to 4 in. (3 to 10 cm)   | 1 to 4 in. (3 to 10 cm)   |
| Height Adjustment                | 7 Positions - 1/2 in. (1 cm)<br>Increment Hitch Pins Installed<br>in Multi-Position Deck Support                        | 7 Positions - 1/2 in. (1 cm)<br>Increment Hitch Pins Installed<br>in Multi-Position Deck Support                        |
| <b>Blade Size (Typical)</b>      |   |   |
| 42 in. (107 cm) SD               | 22 in. (56 cm)<br>2 in. (5 cm) Center Overlap<br>(Two Blades, CW Rotation)  | 22 in. (56 cm)<br>2 in. (5 cm) Center Overlap<br>(Two Blades, CW Rotation)  |
| 48 in. (122 cm) GHS              | 25 in. (64 cm)<br>2 in. (5 cm) Center Overlap<br>(Two Blades, Counter Rotate)   | 25 in. (64 cm)<br>2 in. (5 cm) Center Overlap<br>(Two Blades, Counter Rotate)   |
| Deck Suspension                  | Torsion-Flex Frame with<br>Caster Wheels and<br>Counterweight Springs   | Torsion-Flex Frame with<br>Caster Wheels and<br>Counterweight Springs   |
| <b>CURB WEIGHT (Approximate)</b> |   |   |
| SD Tractor Only                  | 664 lb (301 kg) MT<br>672 lb (305 kg) MTEFI   | 706 lb (320 kg) MTL<br>718 lb (326 kg) MTLEFI   |
| GHS Tractor Only                 | 786 lb (357 kg) MT<br>796 lb (361 kg) MTEFI   | 829 lb (376 kg) MTL<br>841 lb (382 kg) MTLEFI   |
| Tractor and Mower**              | 984 lb (446 kg) MT<br>994 lb (451 kg) MTEFI   | 1027 lb (466 kg) MTL<br>1039 lb (471 kg) MTLEFI   |
| <b>DRIVE BELTS</b>               |   |   |
| Engine PTO                       | Walker P/N 8230   | Walker P/N 8230   |
| Jackshaft Drive                  | Gates 3VX375<br>(or Walker P/N 6250)  | Gates 3VX375<br>(or Walker P/N 6250)  |
| Ground Drive, Micro-V            | Walker P/N 7248   | Walker P/N 7248   |
| Blower (GHS Model)               | Gates 3VX280<br>(or Walker P/N 7234-1)  | Gates 3VX280<br>(or Walker P/N 7234-1)  |
| <b>GHS SYSTEM (Optional)</b>     |   |   |
| Blower                           | 4-1/2 x 10-1/2 x 1/2 in.<br>(11 x 27 x 1 cm) Three-Blade<br>Paddle Wheel (Driven by<br>Mower Engine)                    | 4-1/2 x 10-1/2 x 1/2 in.<br>(11 x 27 x 1 cm) Three-Blade<br>Paddle Wheel (Driven by<br>Mower Engine)                    |
| Blower Brake                     | Band Brake (Works in Combi-<br>nation with PTO Clutch, Stops<br>Blower within Five (5) Seconds<br>of PTO Disengagement) | Band Brake (Works in Combi-<br>nation with PTO Clutch, Stops<br>Blower within Five (5) Seconds<br>of PTO Disengagement) |
| Max. Blower Speed                | 3600 RPM  | 4000 RPM  |
| Grass Catcher Capacity           | 89 Gallons (392 liters)/<br>9.5 Bushels   | 89 Gallons (392 liters)/<br>9.5 Bushels   |

# Specifications

| MODEL                                       | AIR COOLED<br>MT (23.0 HP)<br>MTEFI (26.0 HP)  | LIQUID COOLED<br>MTL (25.0 HP)<br>MTLEFI (31.0 HP)   |
|---|--|--|
| <b>GHS SYSTEM (Optional) (continued)</b>    |  |  |
| Optional Grass Catcher Capacity             | 65 Gallons (246 liters)/<br>7.0 Bushels  | 65 Gallons (246 liters)/<br>7.0 Bushels  |
| Full Signal (Grass-Pak <sup>®</sup> Switch) | Oscillating Vane Switch<br>Mounted on Grass Delivery<br>Spout Triggers Horn Signal   | Oscillating Vane Switch<br>Mounted on Grass Delivery<br>Spout Triggers Horn Signal   |
| Powerfil <sup>®</sup>                       | Oscillating Delivery Spout<br>Driven by 12 Volt Electric<br>Gearmotor Spreads Material<br>throughout Interior of Catcher<br>@ 25 Cycles/Minute | Oscillating Delivery Spout<br>Driven by 12 Volt Electric<br>Gearmotor Spreads Material<br>throughout Interior of Catcher<br>@ 25 Cycles/Minute |
| <b>SEAT</b>                                 |  |  |
|   | Contour-Molded, with Nylon<br>Backed Vinyl Cover and<br>Integral Foam Cushion  | Contour-Molded, with Nylon<br>Backed Vinyl Cover and<br>Integral Foam Cushion  |
| <b>FRAME/BODY CONSTRUCTION</b>              |  |  |
| Frame                                       | All Welded Unitized Steel<br>Chassis   | All Welded Unitized Steel<br>Chassis   |
| Body  | 14 Gauge Steel   | 14 Gauge Steel   |
| Deck  | 11 Gauge Steel   | 11 Gauge Steel   |
| GHS Catcher and Chutes                      | Molded Cross-Linked<br>Polyethylene (UV Stabilized)  | Molded Cross-Linked<br>Polyethylene (UV Stabilized)  |

\*\*Dimensions and weight shown are for 48 in. (122 cm) GHS Model (typical).

Dimensions for Tractor and Mower with 42 in. (107 cm) deck are:

Length = 88 in. (224 cm)

Width = 43 in. (110 cm)

For SD Models, subtract 7 in. (18 cm) from the height.

Deck weight for 48 in. (122 cm) Tilt-Up deck = 205 lb (93 kg). Deck sizes range from 42 to 74 in.


(107 to 188 cm), with corresponding deck weights ranging from 170 to 400 lb (77 to 181 kg).

Optional (7.0 Bushel) Grass Catcher subtracts approx. 5 lb (2 kg) and 5 in. (13 cm) in Height

**NOTE:** The manufacturer reserves the right to make changes in specifications shown herein at any time without notice or obligation.


# Component Identification

**NOTE:** Control Identification shown in **Operating Instructions** section.

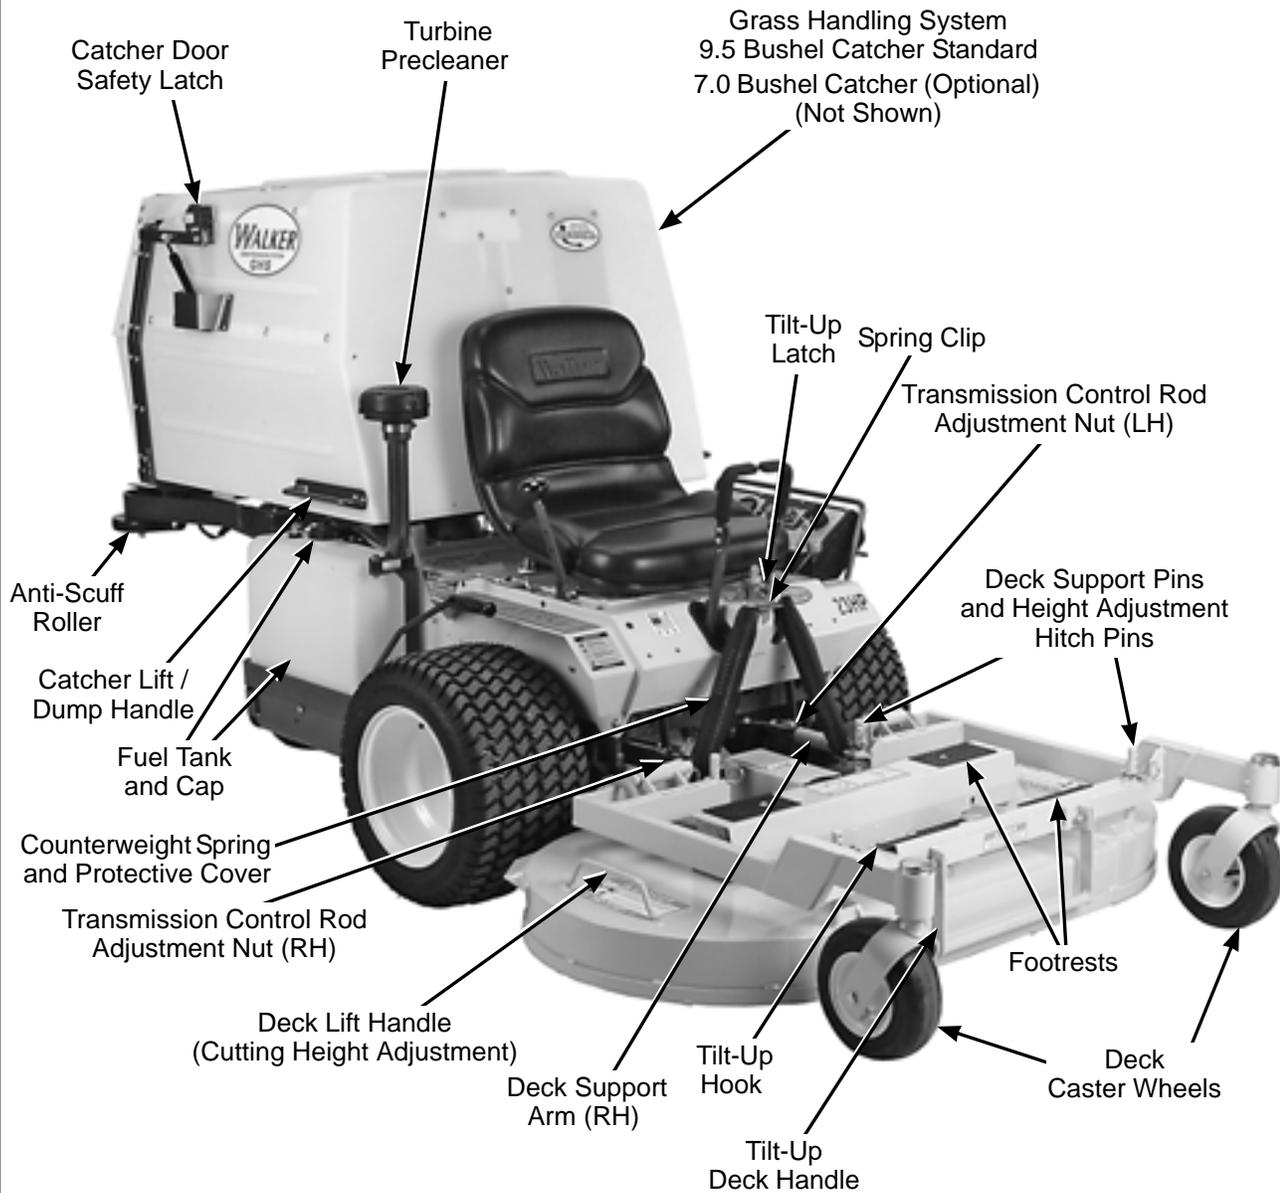

**Front View and Right Side View**


# Component Identification

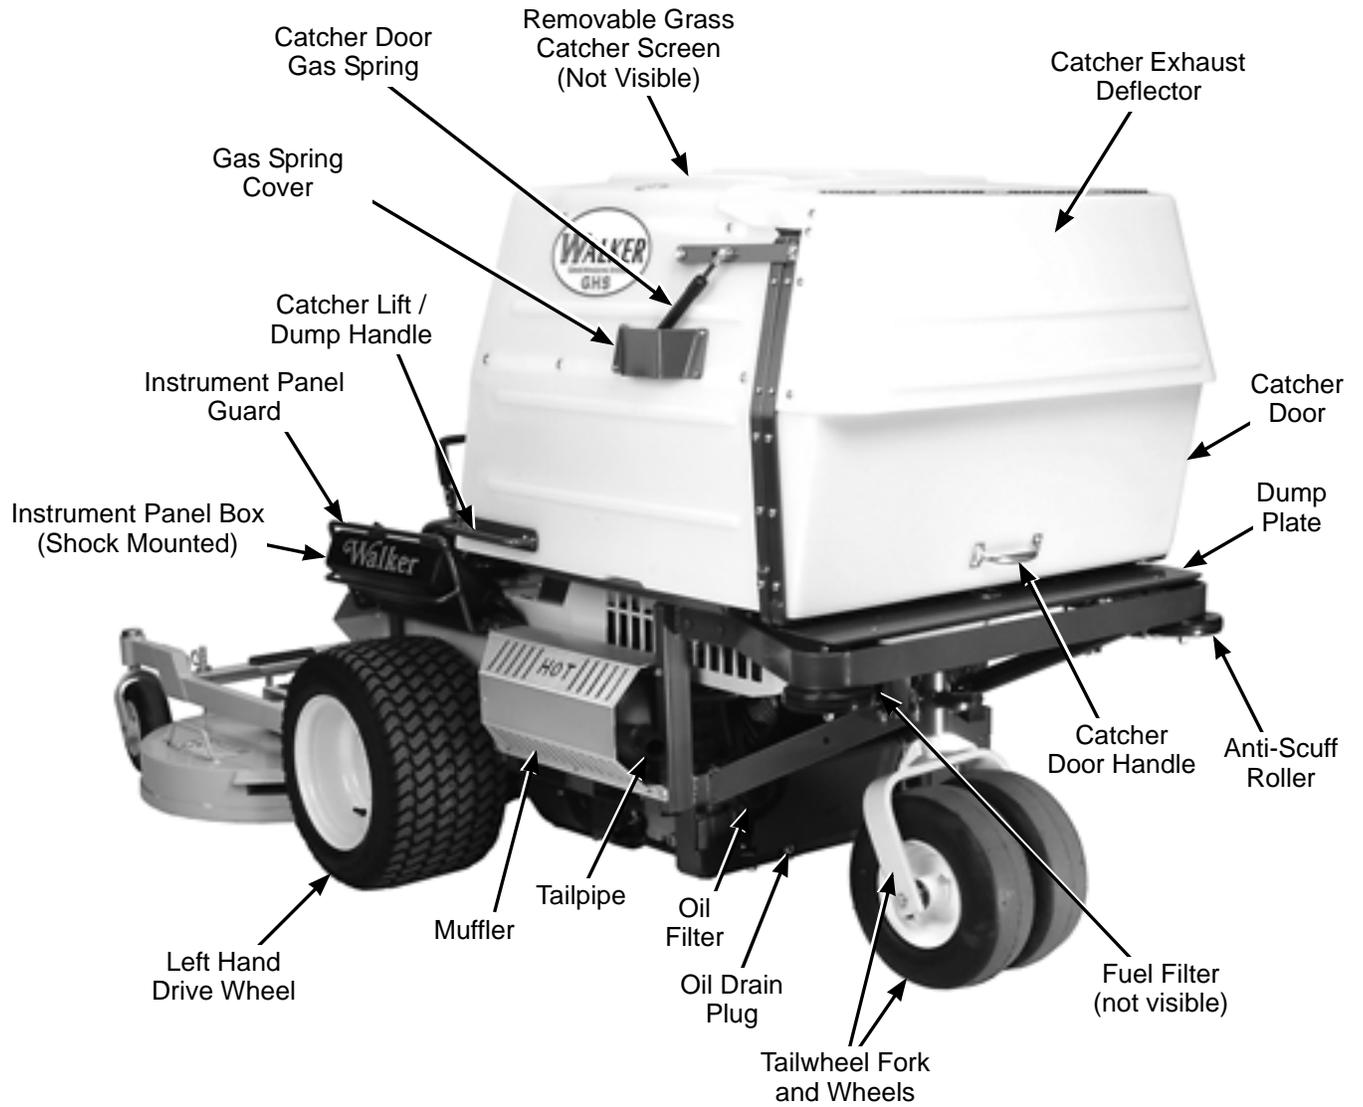

Rear View and Left Side View

# Component Identification


## Model MT

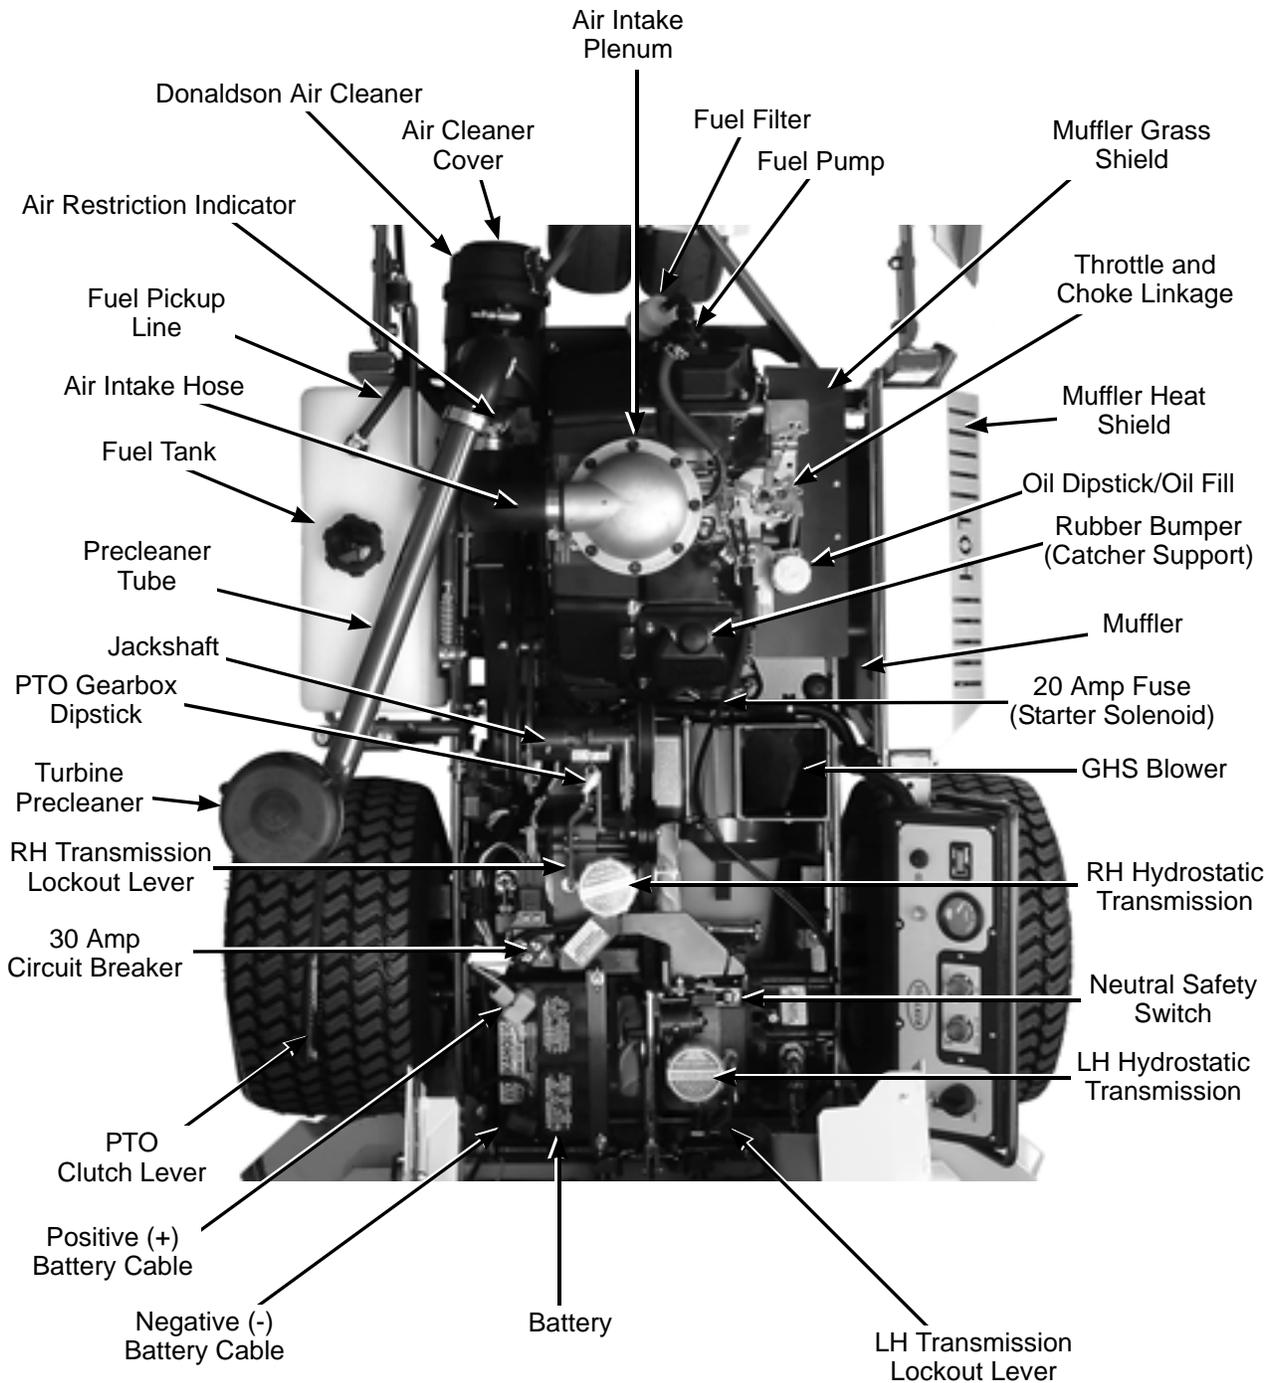

Top View (Engine Compartment) Model MT

# Component Identification


Model MTL

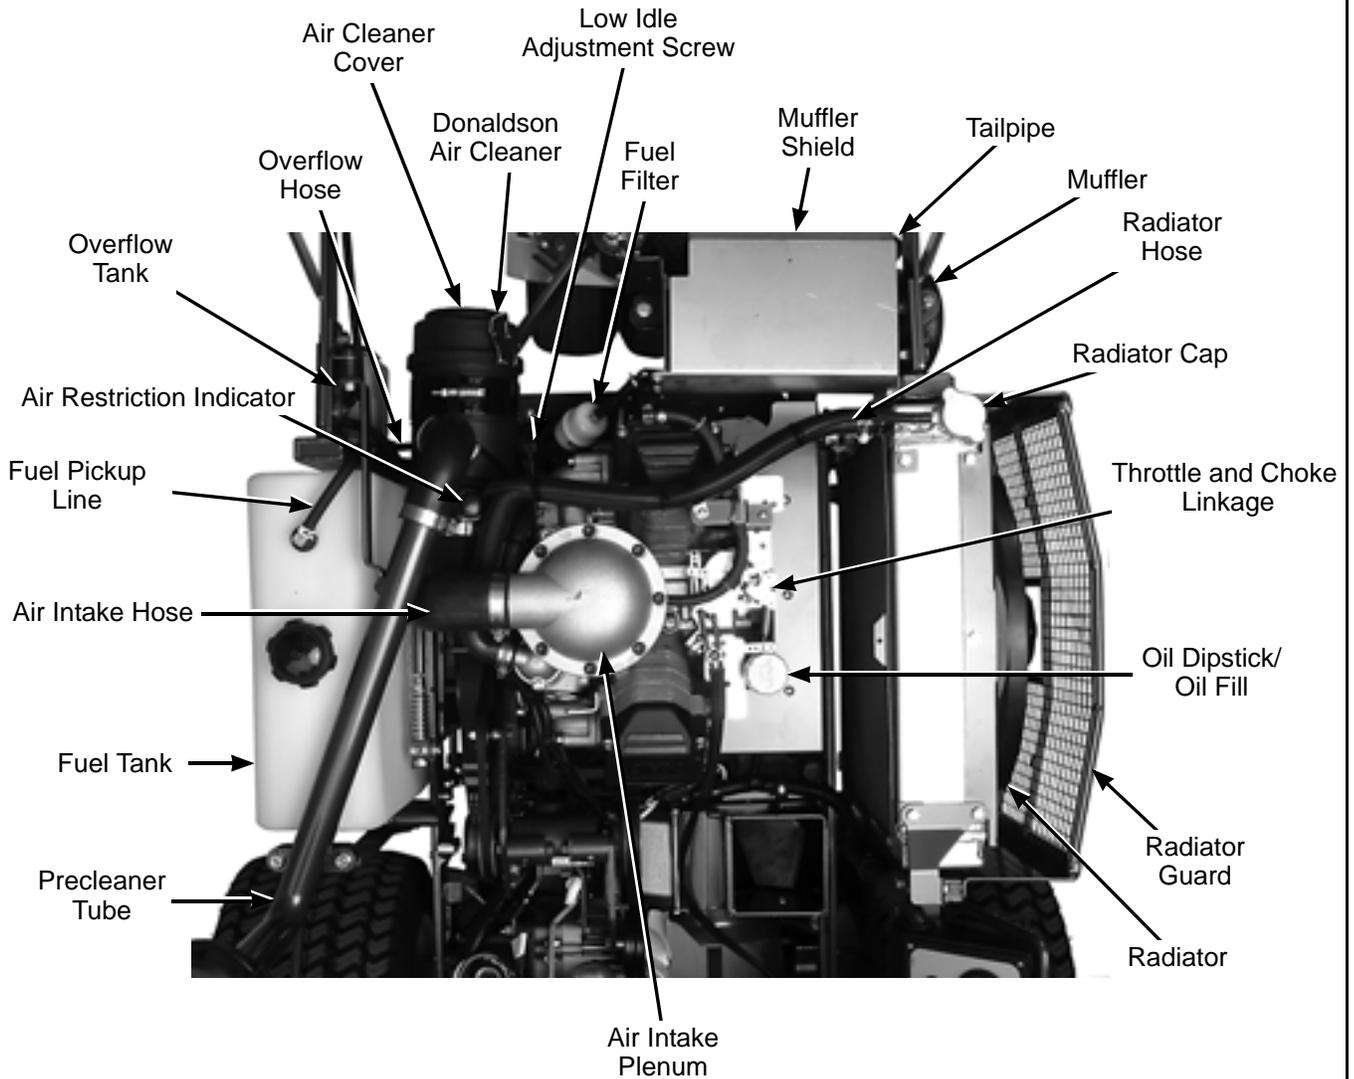

Top View (Engine Compartment) Model MTL

# Component Identification


Model MTEFI

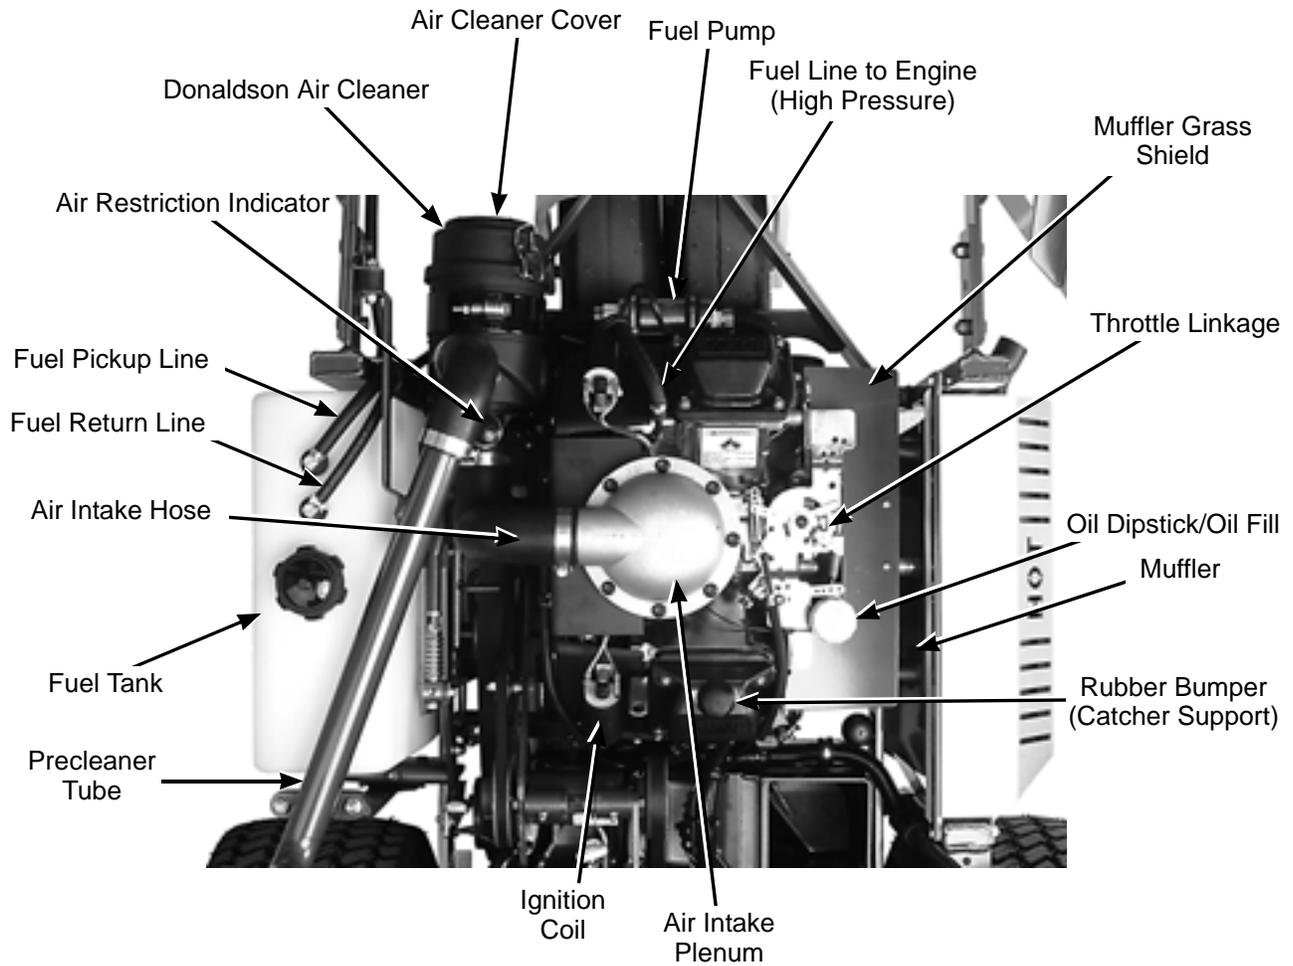

Top View (Engine Compartment) Model MTEFI

# Component Identification

Model MTLEFI

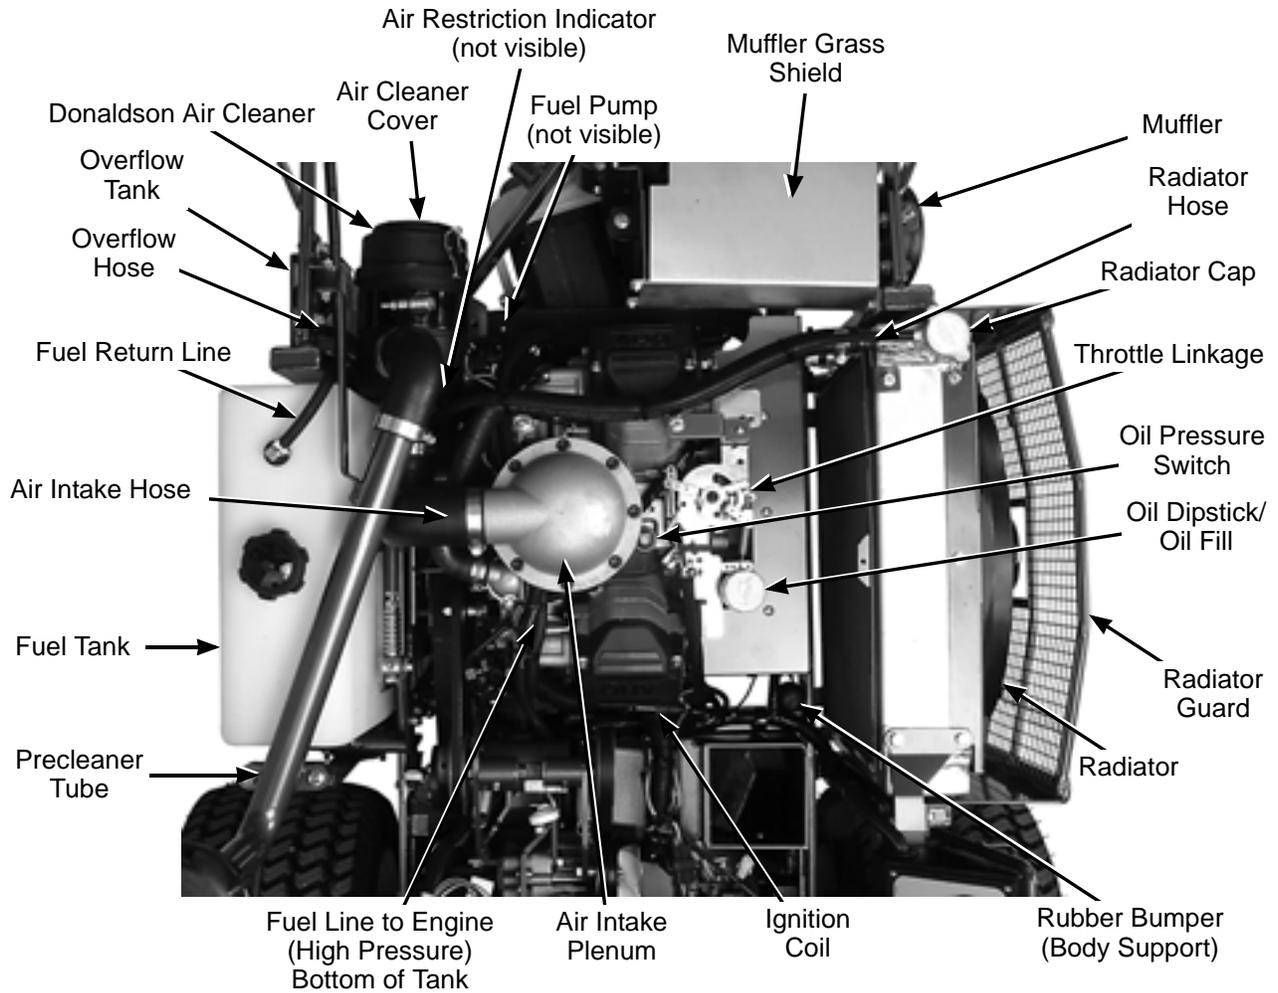

Top View (Engine Compartment) Model MTLEFI

# Safety Instructions

Pay particular attention to any information labeled **DANGER, WARNING, CAUTION, IMPORTANT,** and **NOTE** in this manual.

When you see the Safety Alert Symbol (  ), read, understand, and follow the instructions. Failure to comply with safety instructions may result in personal injury.

The seriousness or degree of importance of each type of information is defined as follows:

## **DANGER**

An **IMMEDIATE** hazard that **WILL** result in severe personal injury or **DEATH**, if warning is ignored and proper safety precautions are not taken.

## **WARNING**

A **POTENTIAL** hazard that **COULD** result in severe personal injury or **DEATH**, if warning is ignored and proper safety precautions are not taken.

## **CAUTION**

Possible hazards or unsafe practices that **MAY** result in **MODERATE** personal injury or property damage, or machine damage, if warning is ignored and proper safety precautions are not taken.

**IMPORTANT:** Identifies mechanical information demanding special attention, since it deals with the possibility of damaging a part or parts of the machine.

**NOTE:** Identifies information worthy of special attention.

Walker Manufacturing cannot predict every potentially dangerous situation. Therefore, items labeled as such in this manual do not cover all conceivable situations. Any person using procedures, tools, or control techniques not recommended by Walker Manufacturing must take full responsibility for safety.

The Walker Rider Lawnmower has been designed with many safety features to protect the operator from personal harm or injury. However, it is necessary for the operator to use safe operating procedures at all times. **Failure to follow safety instructions contained in this manual may result in personal injury or damage to equipment or property.**

If you have any questions concerning setup, operation, maintenance, or safety, please contact your authorized Walker Mower Dealer or call Walker Manufacturing Company at (970) 221-5614.

### **BEFORE OPERATING**

1. **Read and understand the contents of this Owner's Manual before starting and operating the machine.** Become thoroughly familiar with all machine controls and how to stop the machine and disengage the controls quickly. Replacement Owner's Manuals are available by sending the Model and Serial Number to:  

**Walker Manufacturing Company**  
5925 East Harmony Road  
Fort Collins, CO 80528
2. **Never allow children to operate rider mower.** Do not allow adults to operate without proper instruction.
3. **Clear the area to be mowed of any foreign objects** which may be picked up and thrown by cutter blades. Pick up all sticks, stones, wire, and any other debris.
4. Keep everyone, especially children and pets, a safe distance away from the area being mowed. **Do not mow with bystanders in the area.**
5. Do not operate the machine barefoot or wearing sandals, sneakers, tennis shoes, or similar lightweight footwear. **Wear substantial protective footwear.**

# Safety Instructions

6. Do not wear loose fitting clothing that could get caught in moving parts. Do not operate this machine while wearing shorts; **always wear adequate protective clothing**, including long pants. Wearing safety glasses, safety shoes, and a helmet is advisable and required by some local ordinances and insurance regulations.
7. Prolonged exposure to loud noise can cause impairment or loss of hearing. **Operator hearing protection is recommended**; particularly for continuous operation of the GHS Model due to blower noise level. Wear a suitable hearing protective device, such as earmuffs or earplugs.
8. **Keep all protective shields and safety devices in place.** If a protective shield, safety device, or decal is damaged, unusable, or missing, repair or replace it **before** operating the machine.
9. **Be sure interlock switches are functioning correctly**, so the engine cannot be started unless the Forward Speed Control lever is in the **NEUTRAL-PARK** position, and the PTO clutch is in the **DISENGAGED** position. Also, the engine should stop if the operator lifts off the seat with the PTO clutch in the **ENGAGED** position.
10. **Handle gasoline with care.** Gasoline is highly flammable and its vapors are explosive:
  - a. Use an approved fuel container.
  - b. Never add fuel to a running engine or hot engine (allow hot engine to cool several minutes).
  - c. Keep matches, cigarettes, cigars, pipes, open flames, or sparks away from the fuel tank and fuel container.
  - d. Always fill the fuel tank outdoors using care. Fill to about one inch from the top of the tank. Use a funnel or spout to prevent spilling.
  - e. Replace the machine fuel cap and container cap securely and clean up any spilled fuel before starting the engine.
11. **Never attempt to make any adjustments while the engine is running**, except where specifically instructed to do so.

12. The electrical system battery contains sulfuric acid. Avoid any contact with skin, eyes, and clothing. Keep the battery and acid out of reach of children.



## WARNING

**The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.**

## OPERATING

1. **Operate the mower only in daylight** or in good artificial light with good visibility of the area being mowed.
2. Sit on the seat when starting the engine and operating the machine. Keep feet on the deck footrests at all times when the tractor is moving and/or mower blades are operating. **Never operate the tractor without a deck or implement installed.**
3. For a beginning operator, **learn to steer (maneuver) the tractor with a slow engine speed before attempting any mowing operation.** Be aware that, with the front mounted mower configuration, the back of the tractor swings to the outside during turns.
4. Remember, for an emergency stop, the forward motion of the tractor can always be stopped by pulling the Forward Speed Control (FSC) into the **NEUTRAL-PARK** position.
5. In case either of the transmission drive belts break during operation, and if the machine is on a slope, the machine will freewheel down the slope. **To maintain control**, immediately (1) Release the steering levers and simultaneously (2) Move the FSC to the **NEUTRAL-PARK** position. When the machine is stopped or moving slowly, engage the parking brake.

**NOTE:** The emergency stop procedure is exactly the same procedure as used to normally stop and park this machine.

# Safety Instructions

6. Disengage the blade clutch and put the FSC in the **NEUTRAL-PARK** position before starting the engine (an ignition interlock switch normally prevents starting of the machine if these controls are in the **OPERATING** position).
7. **Do not run the engine in a confined area without adequate ventilation.** Exhaust fumes are hazardous and can be deadly.
8. **Do not carry passengers** - maximum seating capacity is one (1) person.
9. Watch for holes, rocks, and roots in the terrain and for other hidden hazards. When mowing tall grass, mow higher than desired to expose any hidden obstacles. Then, clean the area and mow to the desired height.
10. **Avoid sudden starts or stops.** Before backing the machine up, look to the rear to be sure no one is behind the machine. Watch carefully for traffic when crossing or working near roadways.
11. Disengage the blade drive when transporting the machine across drives, sidewalks, etc. **Never raise the mower deck while blades are rotating.**
12. **The maximum recommended side slope operating angle is 20 degrees or 33% grade.** When operating the machine on a slope, reduce speed and use caution to start, stop, and maneuver. To prevent tipping or loss of control of the machine, avoid sharp turns or sudden changes in direction.
13. **Never adjust cutting height with the engine running.** Before adjusting cutting height or servicing, disengage the blade clutch (PTO), stop the engine, and remove the ignition key. Wait for all movement to stop before getting off the seat.  
  
**NOTE:** A blade/blower brake should normally stop drive line rotation within five (5) seconds of disengaging the PTO clutch.
14. For side discharge mower decks, **do not operate with the grass deflector chute removed.** Keep the deflector in the lowest possible position.
15. For tractors equipped with tilt-up deck, **observe the following recommendations:**
  - a. Do not move tractor with deck in tilt-up position.
  - b. Never tilt body forward with deck in tilt-up position.
16. For GHS equipped models, **do not operate the machine with the grass catcher in the DUMP position or with the back door OPEN.** Dangerous projectiles may be thrown out of the discharge chute or the back of the grass catcher.
17. For GHS equipped models, **use care when closing the grass catcher door.** Keep fingers and hands away from the hinge and pinch points when the door is being closed. Also, keep fingers and hands clear of the door frame. The door is held closed with springs and the door may slam shut with considerable force.
18. **In case of a clogged or plugged mower deck or GHS catching system:**
  - a. Disengage the blade clutch (PTO) and turn the engine off before leaving the seat.
  - b. **LOOK** to make sure blade drive shaft and blower drive pulley movement has stopped before trying to unclog the system.
  - c. Disconnect the spark plug wires.
  - d. Never place hands under the deck or in the GHS blower - use a stick or similar tool to remove clogged material.
19. If the cutting blades strike a solid object or the machine begins to vibrate abnormally, **immediately disengage the blade clutch (PTO), stop the engine, and wait for all moving parts to stop.** To prevent accidental starting, disconnect the spark plug wires. Thoroughly inspect the mower and repair any damage before restarting the engine and operating the mower. Make sure cutter blades are in good condition and blade nuts are torqued to 60 ft-lb (81.3 N·m).
20. **Do not touch the engine or muffler while the engine is running** or immediately after stopping the engine. These areas may be hot enough to cause serious burns.

# Safety Instructions

21. When leaving the machine unattended, **disengage the blade clutch (PTO), stop the engine, and remove the key.**
22. **For Model MTL and MTLEFI, never remove the radiator pressure cap when the engine is hot** (hot water may spray and cause burns).

## MAINTENANCE

1. To prevent accidental starting of the engine when servicing or adjusting the machine, remove the key from the ignition switch and disconnect the spark plug wires.
2. **To reduce fire hazards**, keep the engine free of grass, leaves, excessive grease, and dirt.
3. Keep all nuts, bolts, and screws tight to ensure the machine is in a safe, working condition. Check the blade mounting nuts frequently, making sure they are tight.
4. **Perform only maintenance instructions described in this manual.** Unauthorized maintenance operations or machine modifications may result in unsafe operating conditions.
5. If the engine must be running to perform a maintenance adjustment, keep hands, feet, and clothing away from moving parts. **Do not wear jewelry or loose clothing.**
6. **Always use the proper engine service manual when working on the engine.** Unauthorized maintenance operations or modifications to the engine may result in unsafe operating conditions.
7. Altering the equipment or engine in any manner which adversely affects its operation, performance, durability, or use will **VOID the warranty** and may cause hazardous conditions.
8. Never attempt to disconnect any safety devices or defeat the purpose of these safety devices.
9. Do not change the engine governor settings or overspeed the engine. The governor has been factory-set for maximum-safe engine operating speed.

10. **Use genuine factory replacement parts.** Substitute parts may result in product malfunction and possible injury to the operator and/or others.

11. **Use care when charging the battery** or performing maintenance on the battery and electrical system:

- a. Make sure the battery charger is unplugged before connecting or disconnecting cables to the battery.
- b. Charge the battery in a well-ventilated space, so gases produced while charging can dissipate. Make sure the battery vents in the caps are open.
- c. Keep sparks, flames, and smoking materials away from the battery at all times. To avoid sparks, use care when removing battery cables from posts.
- d. Disconnect both battery cables before unplugging any wiring connectors or making repairs on the electrical system.

**IMPORTANT:** Keep all applicable manuals immediately accessible to anyone who may operate or service this machine.

# Safety Instructions

## SAFETY, CONTROL, AND INSTRUCTION DECALS

Safety, Control, and Instruction Decals are installed on the machine; if any are missing, illegible, or damaged, a replacement should be ordered and installed before putting the machine into operation. The Decal Part Number is listed below and in the Parts Manual.



Each End of Mower Deck (5808 All Decks Except 52, 56, 74)  
(5808-1 52, 56, 74 Decks)



Adjacent to Blower Discharge Chute through Body (5804)



SD Deck Discharge Shield (5848)




On Body Adjacent to Clutch Control Lever (5806)



Front Body Adjacent to RH Steering Lever (7818)



Right Side, Behind Operator Seat (8400-6)



Engine Shroud (5855)



Rear Cross Member of Front Body (8825)



Battery Hold-Down Bar (MTEFI and MTLEFI only, 5844-2)



Rear of Grass Catcher Exhaust Screen (5869)



Right Side, Below Operator Seat (7809)



Left Side of Operator Seat (8819)



Left Side of Operator Seat (7819)


# Safety Instructions

## SAFETY, CONTROL, AND INSTRUCTION DECALS

Safety, Control, and Instruction Decals are installed on the machine; if any are missing, illegible, or damaged, a replacement should be ordered and installed before putting the machine into operation. The Decal Part Number is listed below and in the Parts Manual.



Bridge Assembly and LH Gear Axle (5810-3)

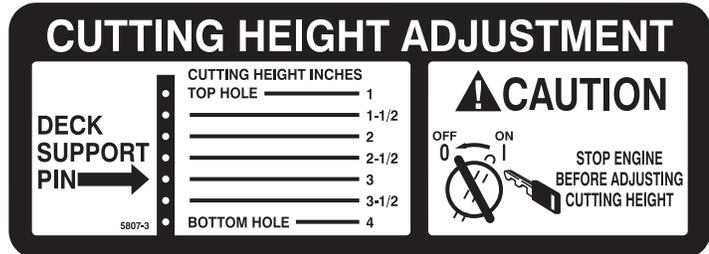

Deck Gearbox Cover (5807-3)



Deck Carrier Frame (8647)



On Engine (6810)



Deck Carrier Frame (8653)



Deck Carrier Frame (5865)



Top of Blower Housing (5819)



Catcher Safety Latch, RH Side (5874)



Hydrostat Oil Reservoir (5810-2)




Gear Axle (5810-1)




Jackshaft Support Adjacent to Dipstick (7827)



Catcher Door Hinge Bar, LH and RH Sides (5868)

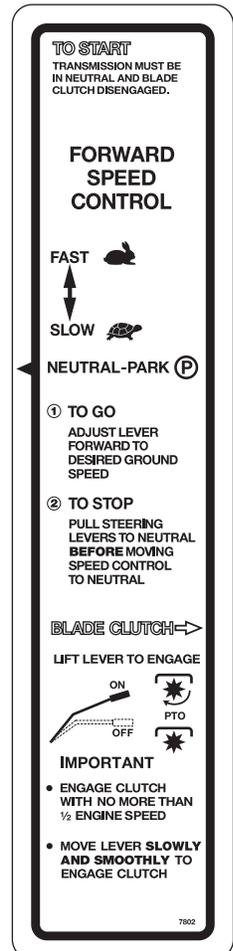

Fender, RH Side (7802)

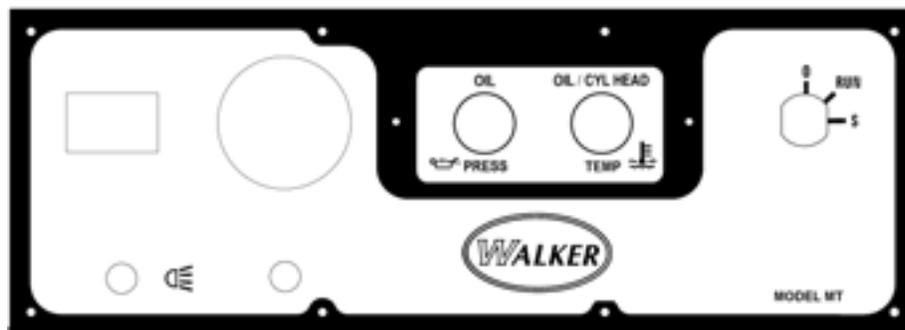

Instrument Panel MT (8823-2), MTEFI (8823-3), MTL (8823-4), MTLEFI (8823-5)

# Assembly Instructions

## SETUP INSTRUCTIONS

Walker Mowers are shipped partially assembled. After uncrating the tractor and mower deck, initial setup is required.

**NOTE:** During the process of unpacking, any damaged or missing parts should be noted and reported to the delivering carrier immediately (put in writing within 15 days). The carrier will provide directions for proceeding with a claim to receive compensation for damage.

### Tire Installation (Tractor)

- Install the drive tires using the eight (8) lug bolts that are supplied with the owner's packet of materials. Bolts are torqued to 75 to 85 ft-lb. Drive tires are 18 x 9.50-8, 4-ply; rear tires are 13 x 5.00-6, 4-ply.
- Check and adjust the inflation of the tires. The tire inflation recommendations are:

Drive = 15 PSI (103 kPa)

Rear = 20 PSI (137 kPa)

### Battery Service



#### CAUTION

##### Important Battery Service, Installation, and Changing Tips for MTEFI:

- Do not allow the battery cables to touch opposing terminals. When connecting battery cables attach the positive (+) cable to positive (+) battery terminal first, followed by negative (-) cable to negative (-) battery terminal.
- Never start the engine when the cables are loose or poorly connected to the battery terminals.
- Never disconnect battery while engine is running.
- Never use a quick battery charger to start the engine.
- Never "jump start" the engine using another source. Electricity fluctuations can damage the ECU (Electronic Control Unit).
- Do not charge battery with key switch "on."
- Always disconnect negative (-) battery cable lead before charging battery, and also unplug harness from ECU before performing any welding on equipment.

Raise front mower body up for battery access (refer to *Front Body Latch Release* in **Operating Instructions**). Check the battery for electrolyte level and charge. The electrolyte level should be at the bottom of the vent wells [1/4 to 1/2 in. (6 to 13 mm) above plates]. If the specific gravity is less than 1.225, the battery needs charging. If the battery has been shipped dry, or is wet but needs service, refer to the following instructions.

**IMPORTANT:** Make sure battery is securely mounted in the frame. A loose battery may cause damage to the case resulting in acid leakage and severe damage to the machine. A hazard may be created by damage to critical working parts and safety systems.

#### Wet Battery Service

If the battery has been shipped wet, but the electrolyte level is low or the battery needs to be charged then:

1. Fill each battery cell with drinking water to the bottom of the vent wells.
2. Charge battery. Refer to *Battery Charging* in this section.

#### Dry Battery Service



#### DANGER

Activating a battery can be dangerous. The battery should be taken to a reliable service station, battery store, or power equipment dealer where a trained technician can activate the battery safely. **DO NOT** attempt to activate the battery unless you are experienced in battery service work. The following activation and charging instructions are provided for use by a trained battery technician.

# Assembly Instructions



## **DANGER**

Battery electrolyte is a poisonous and corrosive sulfuric acid solution.

- Avoid spillage and contact with skin, eyes, and clothing - causes severe burns.
- To prevent accidents, wear safety goggles and rubber gloves when working with electrolyte.
- Neutralize acid spills with baking soda and water solution.

To fill (activate) battery with electrolyte (if battery has been shipped dry):

1. Remove the battery hold down bar, disconnect the battery cables and lift the battery out of the tray.

**IMPORTANT:** Battery must be removed from the mower before filling with electrolyte.

**IMPORTANT:** Obtain and use only battery grade sulfuric acid electrolyte with a 1.265 specific gravity to activate the battery. **DO NOT** use water or any other liquid during initial activation.

2. Remove the filler caps and carefully fill each cell until the electrolyte is just above the plates.
3. After the battery is filled with electrolyte, replace the filler caps and charge the battery. Refer to *Battery Charging*.

## *Battery Charging*



## **DANGER**

### **BATTERIES PRODUCE EXPLOSIVE GASES**

- Charge the battery in a well-ventilated area, so that gases produced while charging can dissipate.
- Keep sparks, flames, and smoking materials away from the battery at all times.
- Make sure the battery cap vents are open after the battery is filled with acid (check manifold vent on each cap).
- Make sure the battery charger is unplugged before connecting or disconnecting cables to the battery.

**IMPORTANT:** On MTEFI and MTLEFI models, always disconnect the negative (-) battery terminal before charging. Failure to do so can result in damage to the ECU.

1. Charge the battery at 15 amps for 10 minutes. **DO NOT** exceed 20 amps maximum recommended charging rate. Charge until specific gravity is at least 1.250. Total charging time should not exceed one (1) hour.
2. After charging the battery, adjust the electrolyte level to the bottom of the vent wells [1/4 to 1/2 in. (6 to 13 mm) above the plates].

**IMPORTANT: DO NOT** overfill the battery. Electrolyte will overflow through the vented caps onto parts of the machine and **WILL** result in severe corrosion.

3. Install battery.

# Assembly Instructions

## Battery Installation


**IMPORTANT:** Make sure battery is securely mounted in the frame. A loose battery may cause damage to the case resulting in acid leakage and severe damage to the machine. A hazard may be created by damage to critical working parts and safety systems.

Install the battery in the mower as shown in **Battery Installation** photo. Connect the positive (+) first and then the negative (-) cables to the proper battery terminal [red cable and boot connects to the **Positive (+) terminal**]. Slide the rubber boot up and over the battery post, making sure it covers the post completely to **prevent an electrical short**.



### WARNING

Make sure the battery cap vents are open. Improper venting of the battery **COULD** cause a battery explosion.

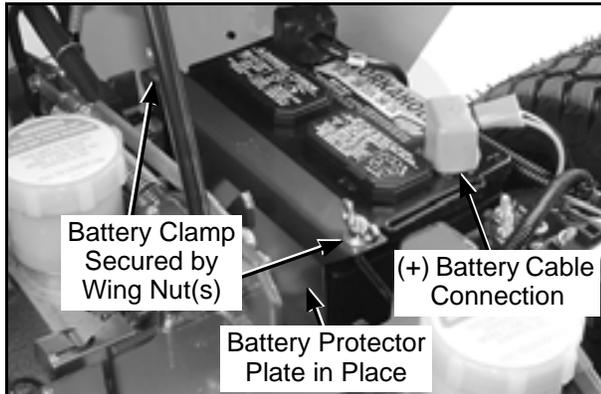

**Battery Installation**

## Mower Deck Assembly


### Deck Caster Wheels Installation

1. Remove the bolt, nut, axle spacer tube, and spacer washers from each deck caster wheel fork.

**NOTE:** Spacer washers are used only when the optional foamed rubber deck wheels (8 x 3.00) are installed.

2. Fit the axle spacer tube through the wheel hub, position the spacer washer on each side of the hub (if used), and fit the assembly into the wheel fork.

3. Insert the 3/8-16 x 4-1/2 in. bolt through the wheel fork with the bolt head to the outside and install the 3/8-16 in. Keps nut.
4. Tighten the bolt and nut until the axle spacer tube bottoms against the inside of the wheel fork (will not turn) while the wheel and spacer washers (if used) spin freely without binding.

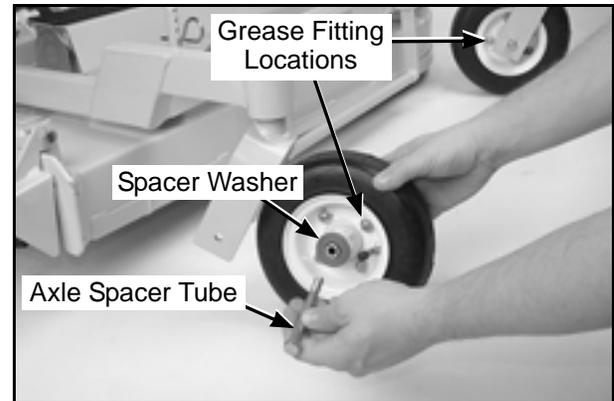


**Deck Caster Wheel Installation**

5. Grease the caster wheel bearings and caster pivot bearings - one grease fitting for each wheel and each pivot.

### Deck Discharge Chute Installation (GHS Rear Discharge Models Only)

Mount the discharge chute hinge on top of the deck discharge opening using the 1/4-20 x 1/2 in. socket button head bolt and 1/4-20 ESNA nut. Position the bolt with the head inside of the chute and the nut on the outside. Attach spring for tilt-up action from chute to bracket on deck.

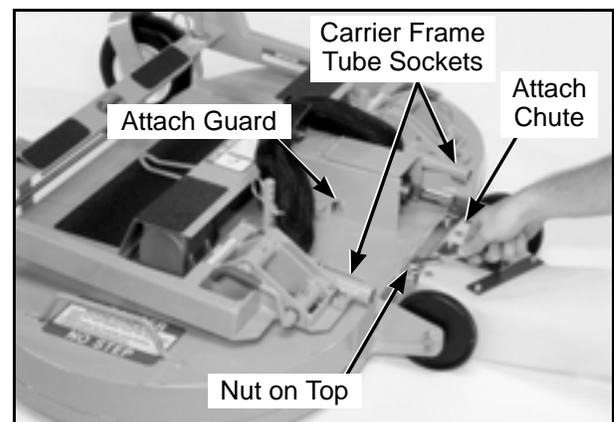

**Discharge Chute and PTO Shaft Guard Installation on Rear Discharge Deck**

# Assembly Instructions


## Deck Discharge Shield Installation (Side Discharge Models Only)

Attach the deck side discharge shield by positioning the shield hinge lug in **front** of the deck mount and fastening with two (2) 3/8-16 x 1-1/4 in. bolts, 3/8-16 ESNA nuts, and 3/8 in. wave spring washers. The wave washers fit between the two hinging surfaces. Tighten the nuts until the shield moves freely but is not loose.



### WARNING

**DO NOT** operate the machine without the grass deflector chute attached and in the lowest possible position.

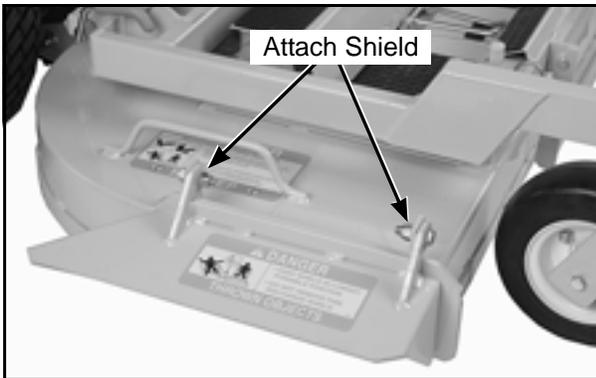


### Discharge Shield Installation on Side Discharge Deck

#### PTO Shaft Guard Installation

Position the shaft guard and mount with two (2) 1/4-20 x 1/2 in. bolts.

#### Tilt-Up Roller Wheel Installation

Mount the two (2) tilt-up roller wheels on the brackets on the rear skirt of the deck housing using the P/N 8490 axle bolt, 3/8 in. wave spring washer and 3/8-16 in. Whiz locknut. Tighten the axle bolt until the wheel rolls freely, but is not loose.

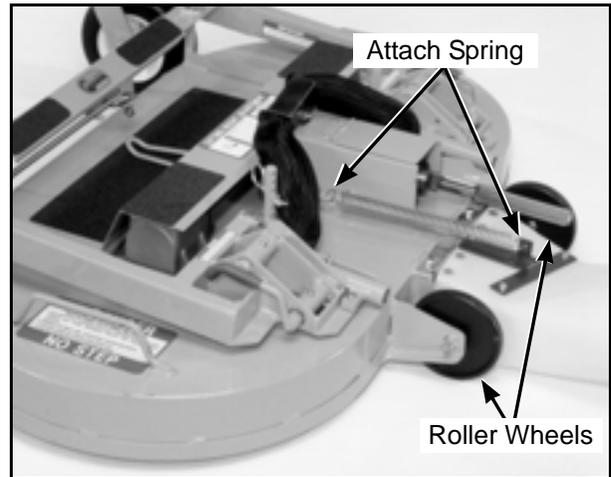


### Tilt-Up Spring and Roller Wheel Installation on Rear Discharge Deck

## Mower Deck Installation on Tractor

### Deck Installation

1. Lightly grease each deck support arm (2) on the tractor. Refer to **Mower Deck Installation** photo for location of deck support arm.
2. Engage the deck carrier frame tube sockets on the tractor support arms (refer to **Discharge Chute and PTO Shaft Guard Installation** photo for socket location), slide the deck onto the support arms approximately 3 in. (76 mm).
3. Retract spring-loaded coupler ring on the PTO Tube (provided in Owner's Packet) and insert coupler tool. Refer to **Quick Coupler Installation Tool** photo.

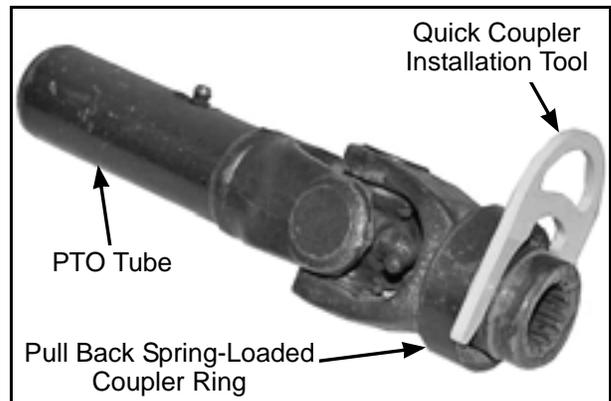


### Quick Coupler Installation Tool

# Assembly Instructions

4. Reaching under the tractor, join the PTO tube to the PTO shaft (align arrow decals). Slide the PTO tube onto the spline shaft on the tractor PTO gearbox.

**NOTE:** When installing the DSD52 Mower deck, make sure to retract the dolly wheel after mounting the deck on the tractor.

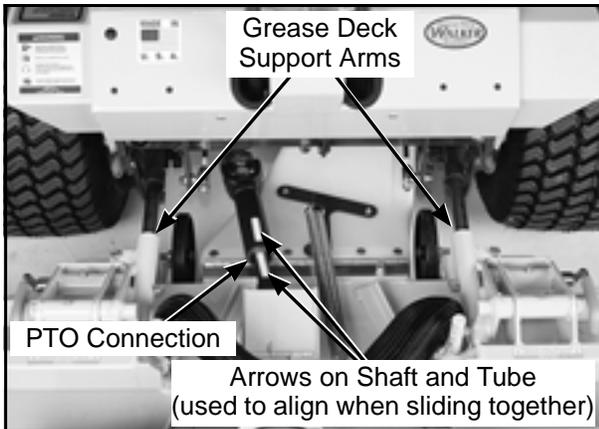

## Mower Deck Installation (PTO Shaft Connection)

5. Slide the deck the rest of the way on the deck arms. If the deck is rear discharge (GHS equipped model), the rear discharge chute will need to be **aligned** and connected to the blower inlet during the last 2 in. (51 mm) of slide action on the support arms.

**NOTE:** Raising the mower body may be helpful in fitting and guiding the deck chute into the blower.

6. Install the hitch pin through the hole on the end of each support arm to lock the deck in place (refer to **Deck Counterweight Spring Installation** photo). Two (2) hitch pins are included in the owner's packet of materials.
7. Remove Installation Tool from coupler ring and make sure the ring has "snapped" securely on the spline shaft.


**IMPORTANT: DO NOT** operate tractor with Quick-Coupler Installation Tool installed.

**IMPORTANT:** To prevent damage to the mower, make sure the PTO shaft assembly is securely locked on the tractor, with the locking balls fully seated in the groove and the ring in the full forward position (refer to the **Coupler Ring "Locked" Position** photo). After installation, pull on the shaft to check for security.



## Coupler Ring "Locked" Position

8. Raise the mower body (instead of lifting the front of deck) and clip the counterweight springs to the receptacle on front of body. Lower the body to tension the springs. (Refer to **Deck Counterweight Spring Installation** Photo.)
9. With the counterweight springs connected, the weight on the deck caster wheels should be 15 to 25 lb (6.8 to 11.3 kg). Check this weight by lifting on the front of the deck carrier frame. If required, the spring tension can be adjusted by tightening or loosening the elastic stop nuts located underneath the lower spring hook. Refer to **Deck Counterweight Spring Installation** photo.

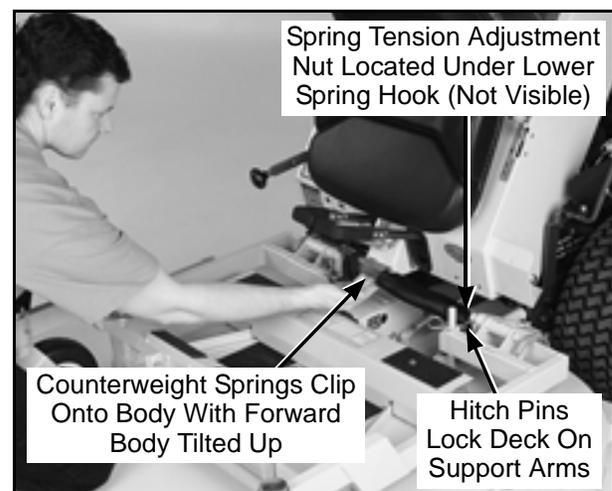

## Deck Counterweight Spring Installation

# Assembly Instructions

## Deck Leveling

1. Position mower on a smooth, level surface. Set the cutting height to the highest position - 4 in. (102 mm) - for easy access under the deck to measure blade height. Refer to **ADJUSTING CUTTING HEIGHT** in **Operating Instructions**.

**NOTE:** A block of wood cut **4 in. (102 mm)** high is a convenient gauge to measure blade height above ground during the leveling process.




### WARNING

The machine must be shut off during this procedure.

2. Check the side-to-side level. **Rotate each blade sideways** and measure the distance from blade tip to ground on each side. If measurements vary more than 1/8 in. (3 mm), add a washer shim under the deck support pins on the low side to level the deck.
3. Check the front-to-rear level. **Rotate the blades to point forward**. Measure the distance from blade tip to ground on the front and rear. The rear of the blade should be 1/8 to 1/4 in. (3 to 6 mm) higher than the front of the blade; shim the rear (or front) deck support pins equally to achieve **at least** 1/8 in. (3 mm) difference.

**NOTE:** The mower deck and support frame are jig welded; within normal tolerances, very little, if any, shimming should be required to level the deck. Tire pressure will influence the levelness of the deck. Check the tire pressure as a possible cause of the deck not being level.

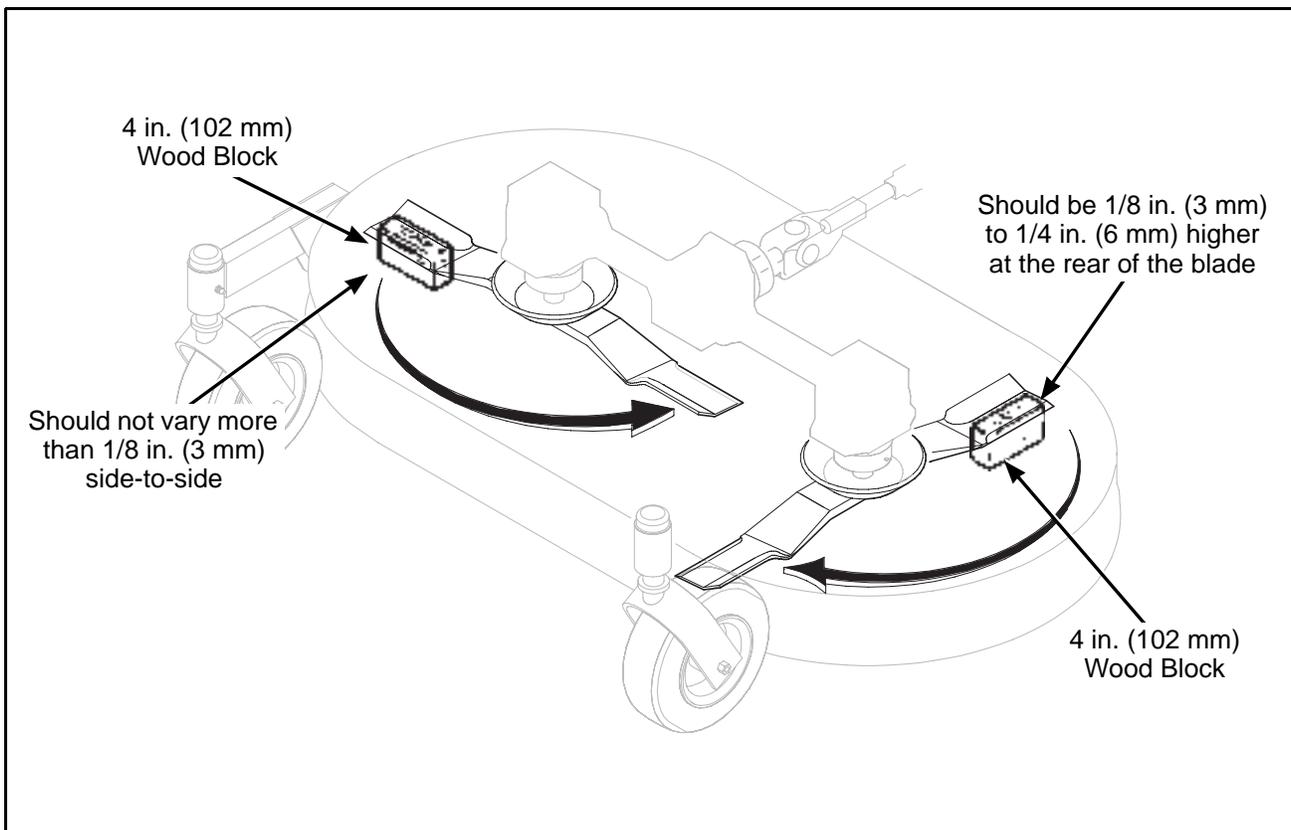

Deck Leveling

# Assembly Instructions

## PREOPERATING CHECKLIST

Before operating the mower for the first time, and as a routine before daily operations, it is important to make sure the mower is properly prepared and ready for operation. The following is a list of items to be checked. (For a mower with frequent operation, some of these items will not need to be checked every day, but the operator should be aware of the condition of each.)

For proper fuels and lubricants refer to **Specifications**.

FILL FUEL TANK

Fill the fuel tank using clean, fresh automotive grade **unleaded** gasoline (87 octane rating minimum).



### **DANGER**

Handle gasoline with care. Gasoline is highly flammable and its vapors are explosive. Use safe refueling procedures:

- **DO NOT** fill fuel tank with the engine running.
- If the engine is hot, allow to cool before refueling.
- Use an approved fuel container.
- Fuel the mower outdoors.
- **DO NOT** smoke while refueling.
- Avoid spilling fuel; use a funnel or spout.
- **DO NOT** overfill the fuel tank; fill up to about 1 in. (25 mm) below the top of tank.

**IMPORTANT:** **DO NOT** permit dirt or other foreign matter to enter the fuel tank. Wipe dirt from around the filler cap before removing. Use a clean fuel storage container and funnel.

**IMPORTANT:** **DO NOT** mix oil with gasoline. Always use fresh, automotive grade gasoline. **DO NOT** use premium, white, or high-test gasoline. **DO NOT** use additives, such as carburetor cleaners, decicers, or moisture removing agents. **DO NOT** use gasoline blended with methyl alcohol.

CHECK ENGINE CRANKCASE OIL LEVEL

Check the engine crankcase oil level before use and **after each 8 hours** of continuous operation. Refer to **LUBRICATION** for *Checking Engine Crankcase Oil Level* in **Maintenance Instructions**.

CHECK AND SERVICE ENGINE AIR CLEANER SYSTEM

- Check air restriction gauge to make sure there is no red indication showing.
- Check condition, cleanliness, and security of the complete air cleaner system (clean air filter **every 100 hours**). For detailed procedures, refer to **CLEANING** the **Engine Air Cleaner System** in **Maintenance Instructions**.

CHECK ENGINE COOLING SYSTEM - Model MT and MTEFI

Check that the engine cooling air intake screen is free of obstruction by grass clippings or debris and clean if required. Also, cylinder head cooling fins should be inspected and cleaned if any build-up of debris is noted [remove two (2) cylinder head access panels to inspect and clean].

Check performance of the cooling system by starting the engine, holding a hand adjacent to the cylinder heads, and feeling the cooling airflow.



### **DANGER**

**Make sure to keep hands clear of exhaust pipe, muffler, and moving parts when checking airflow.**

# Assembly Instructions

CHECK ENGINE COOLING SYSTEM - Model MTL

- Check the radiator air intake screen to make sure the screen is clean and free of obstruction. Also, the radiator cooling fins should be inspected and cleaned if there is any buildup of dirt or debris. (Remove the intake screen assembly to inspect and clean.)
- Check the coolant levels in the radiator and overflow tank. If additional coolant is needed, refer to **CHECKING/SERVICING the Engine Cooling System - MTL** in **Maintenance Instructions**.

 **WARNING**

**DO NOT** remove the radiator pressure cap when engine is hot.

CHECK GEAR AXLE OIL LEVEL

Refer to **LUBRICATION** for **Gear Axle Lubrication** in **Maintenance Instructions**.

INSPECT FOUR (4) DRIVE BELTS

Engine PTO Drive, Jackshaft Drive, Hydrostatic Ground Drive, and GHS Blower Drive (if equipped).

CHECK HYDROSTATIC TRANSMISSION OIL LEVEL

Refer to **LUBRICATION** for *Checking Hydrostatic Transmission Fluid Level* in **Maintenance Instructions**.

CHECK FUNCTIONS OF INSTRUMENT PANEL AND WARNING HORN

Turn the ignition key to the **RUN** position. Voltmeter, Oil Pressure Light, and Warning Horn should all operate, indicating normal function.

CHECK TIRE PRESSURE

Deck Caster Wheel = 20 PSI (137 kPa)  
Drive = 15 PSI (103 kPa)  
Rear = 20 PSI (137 kPa)


CHECK AND CLEAN GRASS BUILDUP UNDERNEATH MOWER DECK (and inside GHS blower, if equipped)

Refer to **CLEANING the GHS Blower** in **Maintenance Instructions** for blower cleaning information.

 **DANGER**

**Never operate cutter blades with deck in raised position because it is hazardous.**

The tilt-up deck can be secured in the raised position by unlocking the deck lock levers on each side of the carrier frame and inserting the deck hook into the tilt-up latch on the tractor body. Before operating the tractor, make sure to re-engage the deck lock levers after lowering the deck to the normal operating position.

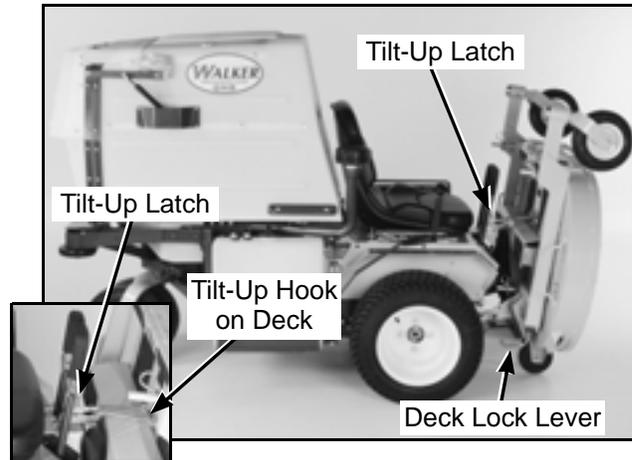

**Deck Secured in TILT-UP Position**

 **CAUTION**

**Do not operate machine with deck tilt-up pivot joint unlocked.**

 **DANGER**

**Do not operate the mower with deck in tilt-up position. Do not move the tractor with the deck in the tilt-up position.**

# Assembly Instructions

- CHECK MOWER BLADE CONDITION, SHARPNESS, AND SECURITY OF MOUNTING

The blade mounting nut should be tightened to 60 ft-lb (81.3 N·m). If blade sharpening is required, refer to **CHECKING/SERVICING** for **Sharpen Mower Blades** in **Maintenance Instructions**.

- ADJUST MOWER CUTTING HEIGHT, IF REQUIRED

Position the hitch pins in the four deck support pins. Refer to the "Cutting Height Adjustment" decal on the deck gearbox cover.

- CHECK DRIVE WHEEL BOLT TORQUE

The lug bolts mounting the drive tires should be tightened to 75 to 85 ft-lbs. (101.7-115.2 N·m).

- PERFORM ANY ADDITIONAL PROCEDURES called for on the **MAINTENANCE SCHEDULE CHART** in **Maintenance Instructions**.

# Operating Instructions

## CONTROL IDENTIFICATION, LOCATION, AND FUNCTION

### Operating Controls


#### CAUTION

Before operating the mower, become familiar with the location and function of all operator controls. Knowing the location, function, and operation of these controls is important for safe and efficient operation of the mower.

### Engine Choke - (Model MT and MTL only)


The choke control lever (black knob) is located on the left side of the seat. To start a cold engine, move the choke control forward to the **ON** position. After engine starts, move the choke control toward the **OFF** position, keeping enough choke to allow the engine to run smoothly as it warms up. As soon as possible, move the choke to the **OFF** position. A warm engine requires little or no choke for starting.

**IMPORTANT:** Make sure the choke is in the **OFF** position during normal engine operation; running with the choke in the **ON** position **CAN** damage the engine.

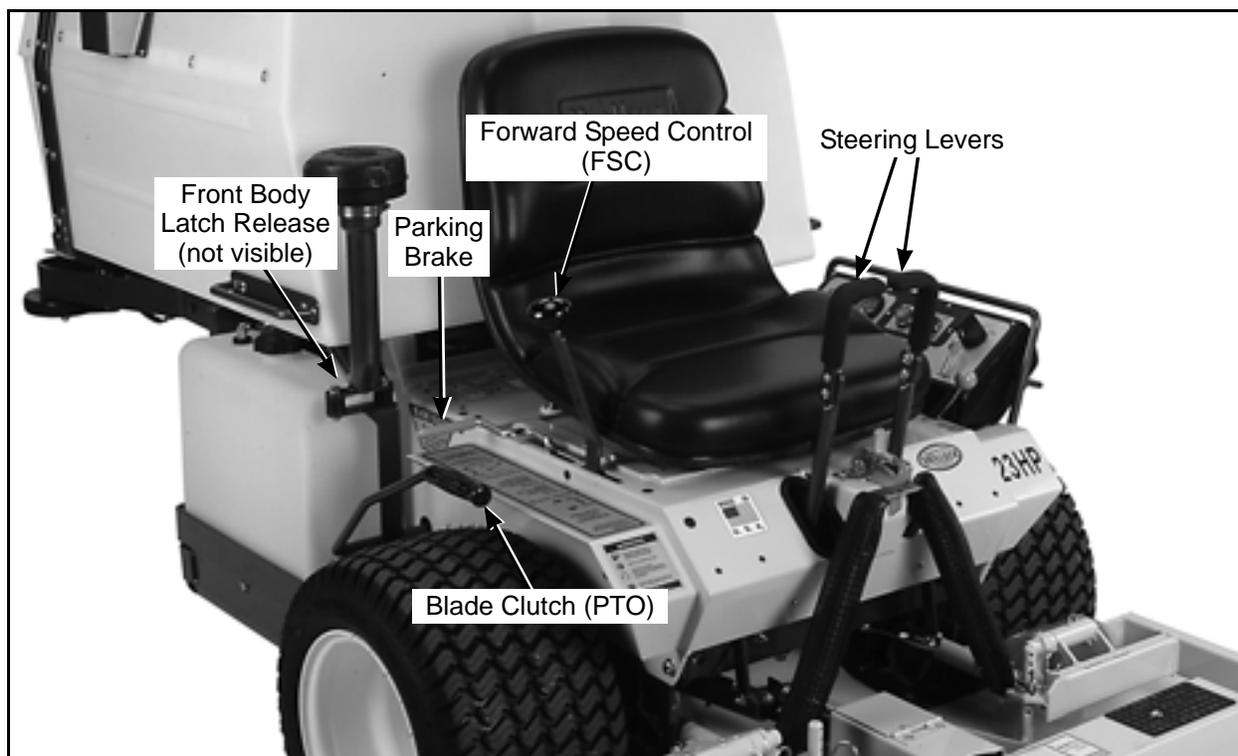

Operating Controls

# Operating Instructions

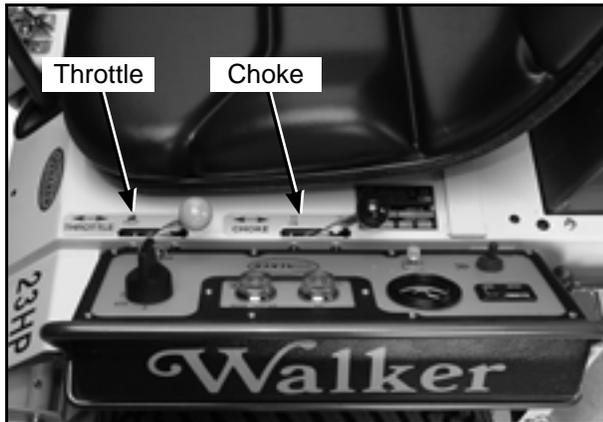

**Choke and Throttle Location (MT and MTL)**

## *Engine Throttle*

The throttle control lever (red knob) is located on the left side of the seat and is used to control engine speed. Moving the lever **forward** toward the **FAST** position **increases** engine speed; moving it **backward** toward the **IDLE** position **decreases** engine speed.

## *Forward Speed Control (FSC)*

Forward Speed Control (FSC) has two functions: One is to set forward travel speed, and the other is to establish the **NEUTRAL-PARK** position. When the FSC lever is moved into the **FORWARD** position, a friction lock holds any forward speed setting from 0 to 5 mph (0 to 8 km/h). The ground speed is proportional to the lever position; the further the lever is advanced forward, the faster the tractor moves. It is not necessary to hold the FSC in position since the friction lock maintains the selected lever position. Pulling back on the steering levers overrides the FSC setting and slows or stops forward travel. Releasing the steering levers allows the tractor to resume forward travel at the speed set by the FSC lever. To stop and park the machine, the FSC lever is moved backward to the **NEUTRAL-PARK** position.

## *Steering Levers*

Each drive wheel is controlled by its own independent steering lever, for both steering function and **FORWARD/REVERSE** motion. The FSC lever sets the maximum forward speed, and also sets the forward position of the steering levers. The steering levers operate **only with a backward pulling** movement of the lever, which causes the drive wheel for that lever to first slow down, stop, and then reverse with a full backward lever stroke. The levers are released to the **FORWARD** position for "straight-ahead" ground travel.

**NOTE:** Pushing forward on the steering levers will not cause **any** change in tractor motion - there will be no steering lever reaction and there will be no machine damage.

## *Blade Clutch (PTO)*

The blade clutch lever has two positions. Pulling the lever **UP engages** the PTO that drives the mower blades. Pushing the lever **DOWN disengages** the PTO and engages the blade brake.

**NOTE:** On GHS equipped models, the Powerfil<sup>®</sup> motor and Grass-Pak<sup>®</sup> full signal switch are activated by engaging the blade clutch. Refer to **Using the GHS Catcher** in this section for a complete description of GHS operation.


## *Parking Brake*

The parking brake functions by locking a pin into the hydrostatic transmission pinion gear teeth. Moving the lever **FORWARD engages** the parking brake; moving the lever **BACKWARD releases** the brake.

**IMPORTANT:** Stop the tractor completely before engaging the parking brake. The parking brake uses a positive mechanical lock similar to the **PARK** position on an automotive automatic transmission. If the tractor is moving when the brake is engaged, it will result in sudden stoppage and possible internal damage to the axle drive.

**NOTE:** If pressure on the parking brake pin (e.g. parked on a hill) makes it impossible to release the parking brake with the parking brake lever, move the mower gently forward or backward to release the pin.


# Operating Instructions

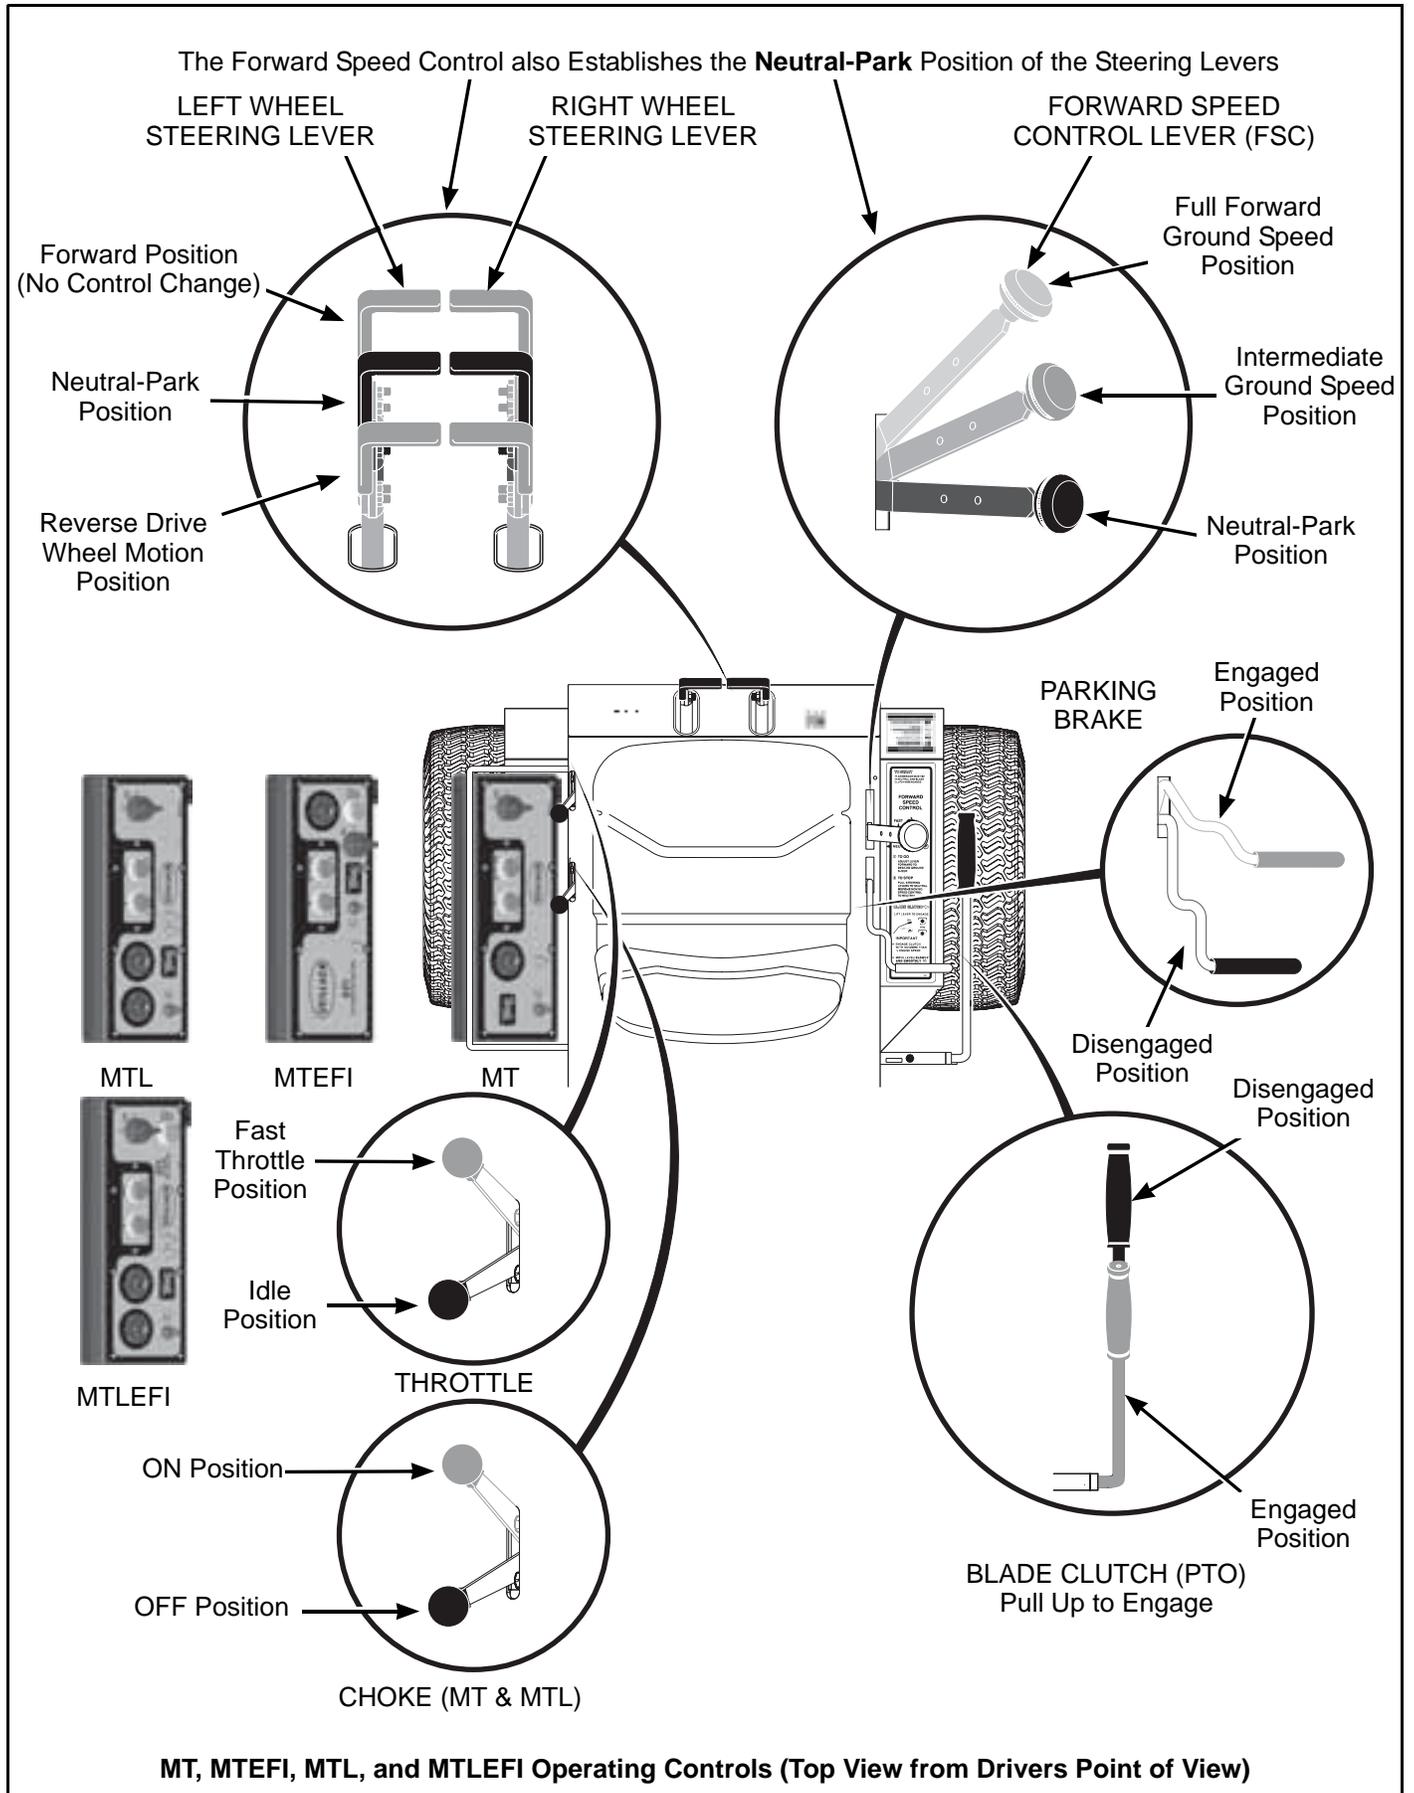

# Operating Instructions

## Front Body Latch Release


The front portion of the tractor body hinges forward for maintenance access and is latched down in the **OPERATING** position. To raise the body, move the latch release forward.

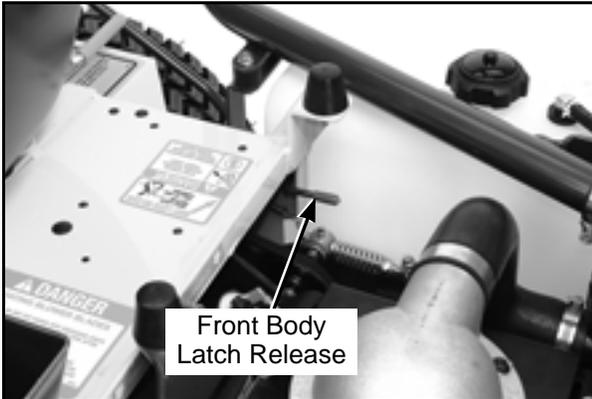

**Front Body Latch Release**

## Transmission Lockout Levers

The transmission lockout levers disengage the hydrostatic transmissions. By **lifting** the lever on top of the transmission and locking it into place with the lockout cam, the hydrostatic transmissions are released to permit freewheeling. By releasing the cam and **lowering** the lever, the transmissions are engaged for normal operation. The transmission lever in the **LOCKOUT** position is used to enable moving the machine without the engine running (e.g., for service). Refer to **TRANSMISSION LOCKOUT** in this section for operating instructions.

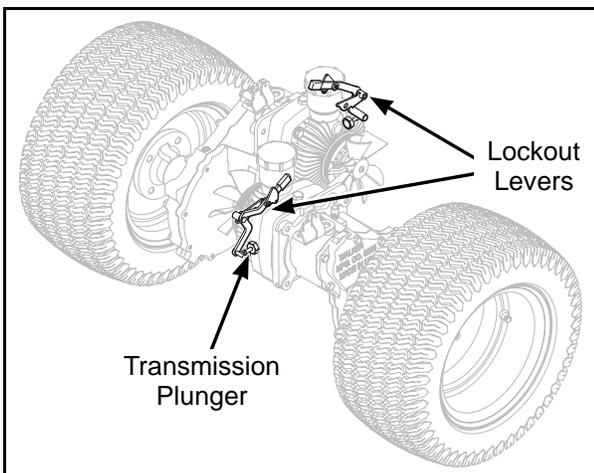


**Lockout Lever Location**


**NOTE:** The transmission plunger on the side of the transmission case (activated by the **LOCKOUT LEVER**) must be completely released during operation of the mower, otherwise operation of the transmission will be erratic.

## Optional Cold Start Lever (Jackshaft Drive Belt Release)

The cold start lever is used for starting the machine in cold weather [below 40° F (4° C)]. Pulling the lever **UP disengages** the jackshaft drive belt. When the jackshaft drive belt is released, the hydrostatic transmissions are removed from the engine starter cranking load.

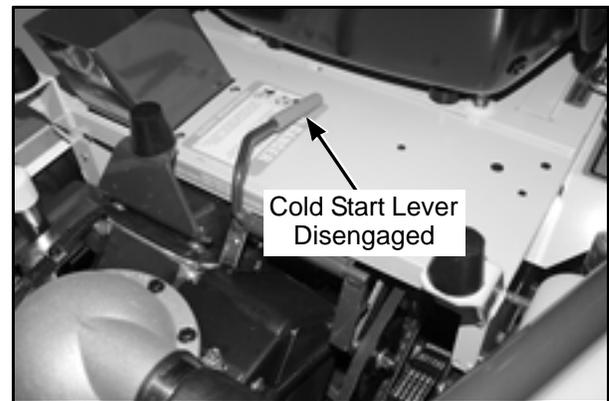

**Optional Cold Start Lever  
Normal Operating Position**

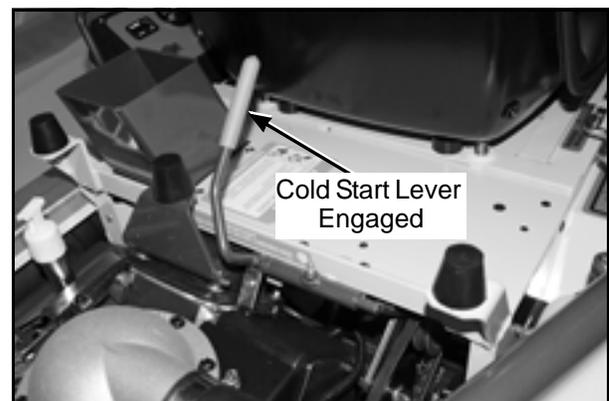

**Optional Cold Start Lever  
Cold Start Position**

# Operating Instructions

## *Suspension Seat (MTL and MTLEFI)*

A fully adjustable suspension seat is standard on Models MTL and MTLEFI. This seat is adjustable for back pitch, weight, lumbar support and armrest inclination. Proper adjustment for each operator is essential to safe operation and operator comfort.

Read operating instructions in full before you use the seat.

**NOTE:** Driver seats that have been adjusted incorrectly have a smaller swinging range. To prevent damage to the driver's back and to the seat, the seat must be adjusted for the driver's weight **before use** and **before every change of driver**. To prevent injury, **no objects should be placed within the swinging range** of the driver seat.

To prevent injury, **no objects should be placed within the moving area** of the driver seat.



### **CAUTION**

**To eliminate any risk of accident, the settings must be checked to ensure they are correctly engaged before the mower is driven.**

Adjustments must **not** be made **while driving**.

**If you make any changes to the standard seat** (for example fitting parts which are not original **GRAMMER** parts) it may no longer meet the safety standards to which it is tested. **Functions may be impaired**, threatening your **safety**. For this reason, **any change in design of the seat** must be approved by **GRAMMER**.

**IMPORTANT:** Fasteners must be **checked regularly for tightness**. If the seat wobbles there may be loose bolts or other faults.

If you note that the seat does not function correctly (for example a defective seat suspension; improper curving of the lumbar support or damaged bellows), **contact your Walker Dealer immediately** to arrange for repairs to be carried out. If you fail to do so, your health may be affected and the **risk of accident increased**.

**IMPORTANT:** Before the tractor is used, the safety switch must be checked for **proper function**. If a malfunction is detected the tractor must not be driven, it should be repaired or replaced before operating the mower.



### **CAUTION**

**Except for the driver's weight during normal use, no loads must be placed on seats with a built-in switch detecting seat occupation, as the vehicle may otherwise start to move by itself.**

If you take off the weight from the seat while driving, this will cause the machine to stop.

**IMPORTANT:** Do not indent the bellows while there is load on the driver's seat.

**For armrest inclination adjustment**, the inclination of the armrests can be modified by turning the adjustment knob. Refer to **Figure 1**.

Turning the knob to the right lifts the armrest in front, turning it to the left, lowers it in front.

**For weight adjustment**, the weight of the respective driver must be set while sitting on the seat. Fold out the weight adjustment handle completely, hold it at the front and move it upwards or downwards (10 movements from minimum to maximum).

Before every new movement, bring the handle back to the starting position (audible locking sound). The driver's weight has been set correctly, when the arrow is in the middle of the viewing window. Refer to **Figure 2**.

**IMPORTANT:** To prevent damage to the health and material, the setting for the driver's weight must be checked and adjusted as necessary before the mower is driven.

When the minimum/maximum has been reached, you can notice an empty movement in the handle.

When you have set the weight, fold the handle completely into the locking.

# Operating Instructions

**For Backrest adjustment**, moving the adjustment handle upwards loosens the notching of the backrest adjustment. Refer to **Figure 3**.

After the adjustment, the handle must lock in the desired position. It should not be possible to move the backrest into another position when it is locked.

**For Armrest adjustment**, the armrests can be folded back if required and the height individually adjusted.

For adjusting the height of the arm rest, lever out the round cap (arrow) of the cover and loosen the hexagon nut (size 13mm) situated behind it. Set the arm rests in the desired position (5 steps) and tighten the hexagon nut. Replace the cap onto the nut. Refer to **Figure 4**.

**For Lumbar Support adjustment**, turning the knob upwards sets the curve in the upper part of the back upholstery. Turning the knob downwards sets the curve in the lower part of the upholstery. Refer to **Figure 5**.

**IMPORTANT:** Dirt can impair the function of the seat, so make sure you keep your seat clean!

Upholstery can be quickly and simply removed from the seat frame for easy cleaning, or replacement.



## CAUTION

**Take care with the backrest frame - it may jerk forward and cause injury!**

**IMPORTANT:** Do not clean the seat with a pressure washer!

**IMPORTANT:** During cleaning the upholstery should not be soaked through.

**For cleaning**, use a standard commercially available **upholstery or plastics cleaning agent**. **Test first for compatibility** on a small, concealed area.



Figure 1

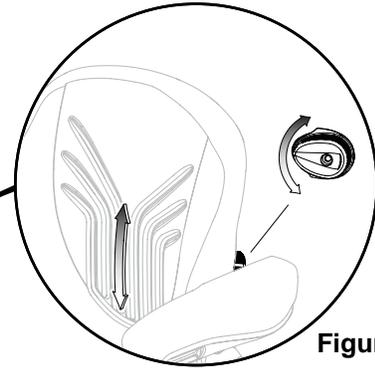
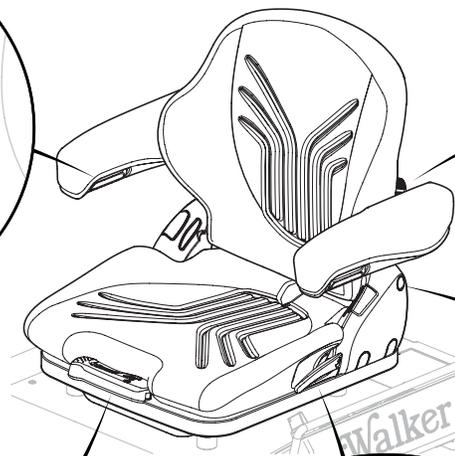


Figure 5

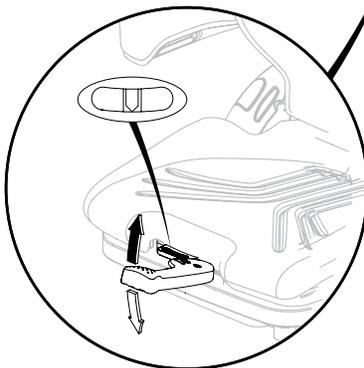


Figure 2

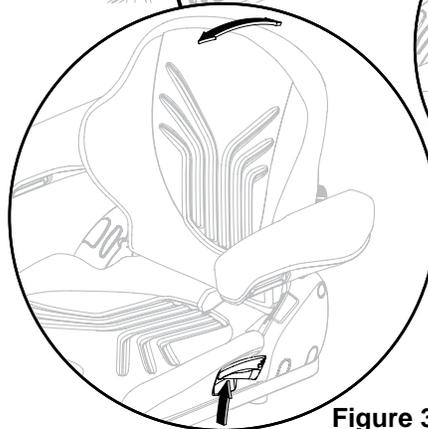


Figure 3



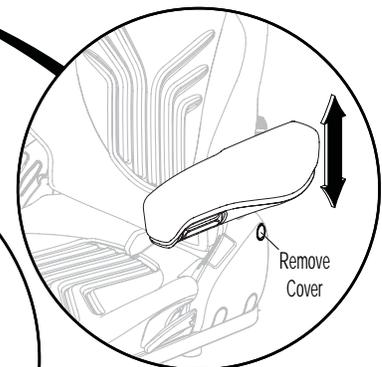


Figure 4

# Operating Instructions



## Instrument Panel

This illustration shows the configuration of the **switches and indicators** located on the instrument panel.

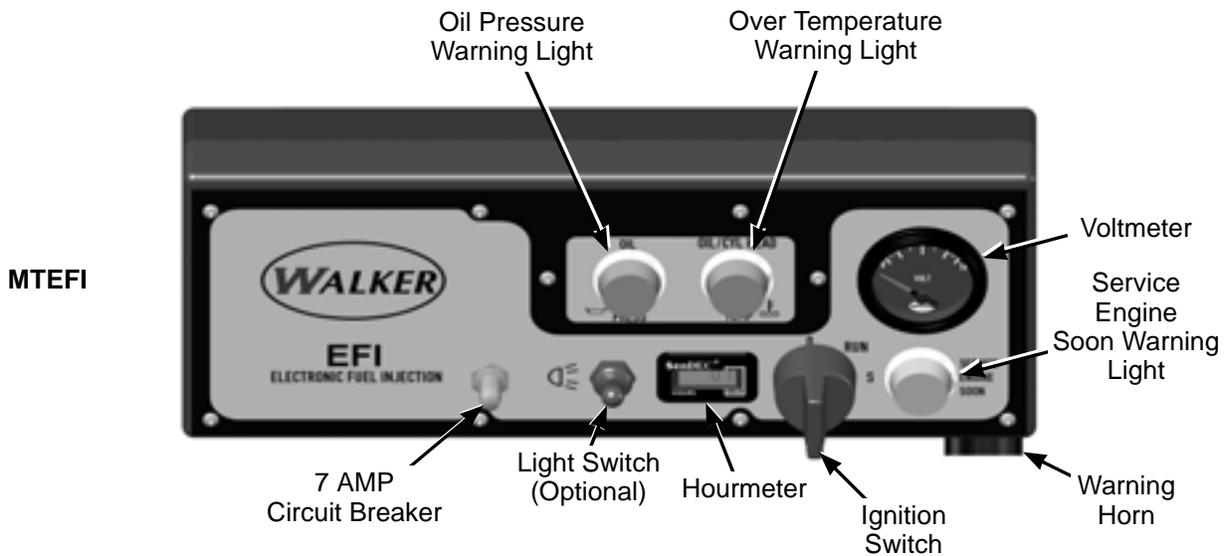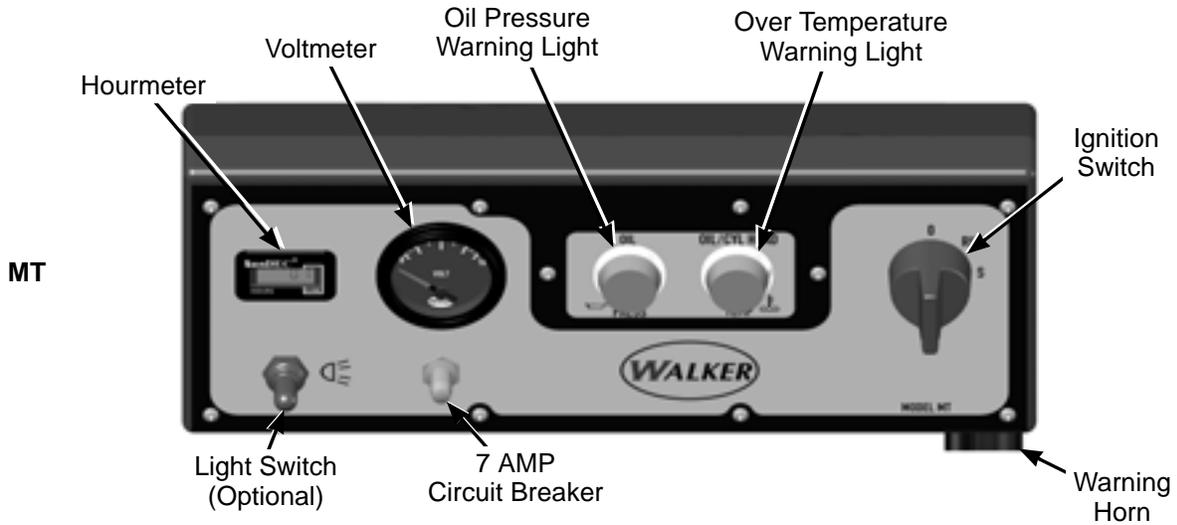

Instrument Panel

# Operating Instructions

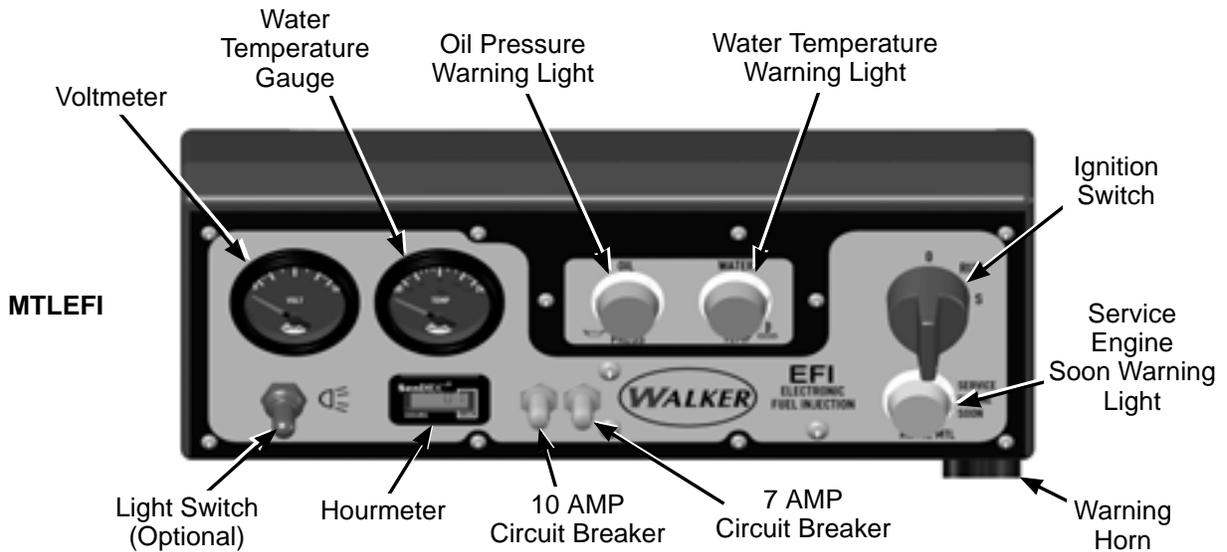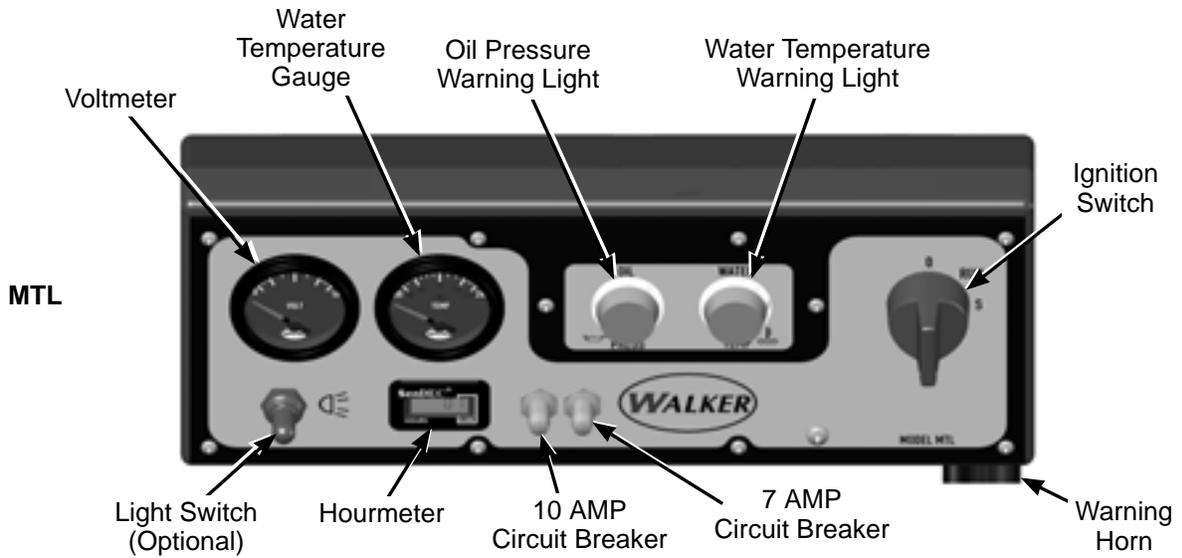

# Operating Instructions

## Hourmeter

The hourmeter, which is located on the left front of the body, displays **operating time** accumulated while the ignition switch is in the **ON** position.

The hourmeter provides maintenance reminders after certain hours of operation. The hourmeter screen will start flashing the reminder one hour prior to the recommended interval and will continue until one hour after the recommended interval (two hours). The hourmeter **does not have a manual reset function**.


| Procedure                  | Interval*      | Reminder |
|----------------------------|----------------|----------|
| Oil Change (Break-In)**    | 4-6 Hours      | CHG OIL  |
| Lubricate and Check Levels | 24-26 Hours    | LUBE     |
| Oil Change                 | 49-51 Hours*** | CHG OIL  |

\* These intervals reflect the actual time that the reminder will flash (one hour prior to and one hour after the recommended interval).

\*\* This reminder is only used one time.

\*\*\* In normal operating conditions, oil changes in 100-hour intervals are acceptable. Walker and the engine manufacturers recommend engine oil changes every 50 hours in extremely dirty or dusty conditions or for units with less than 100 hours annual use.

**NOTE:** The blinking hour glass on the display means that the meter is operating properly.

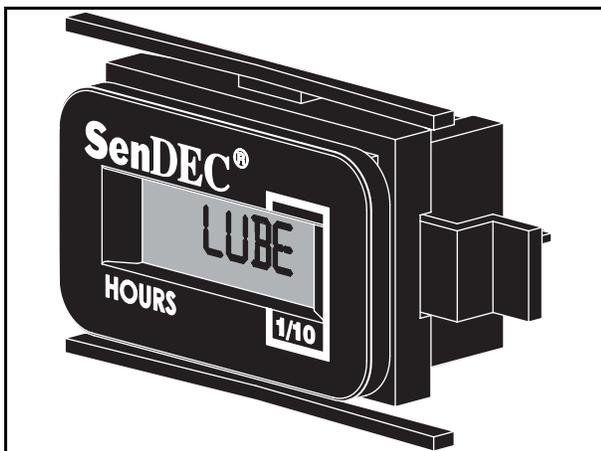

Hourmeter

## Voltmeter

The voltmeter displays battery and charging system voltage. An indication of low or high voltage (the red area) indicates an **electrical system failure**. The cause of the failure should be determined and corrected.

## Oil Pressure Warning Light

The oil pressure warning light indicates that engine oil pressure is below the safe operating level [below 3 to 5 PSI (21 to 34 kPa)]. This **light (and warning horn)** will come on when the ignition is turned **ON**, but should go off after the engine is started. If the light fails to come on when the ignition switch is turned **ON**, it could indicate a burned out bulb. If the light comes on during engine operation, stop the engine immediately and correct the source of the problem before further engine operation.

**IMPORTANT:** Continued operation of the engine with an illuminated oil pressure warning light **MAY** cause severe engine damage (if a low oil pressure condition exists).

## Over Temperature Warning Light (Model MT and MTEFI Only)

The over temperature warning light indicates that engine oil temperature and/or cylinder head temperature are above the safe operating limit and the **engine is overheating** [above 305° F (152° C) oil or 450° F (232° C) cylinder head]. If this light comes on, there may be a problem with:

- Engine cooling system (material packed into cylinder head cooling fins, clogged air intake screen)
- Low oil level in crankcase

Stop the engine and correct the source of the problem before further operation.

**IMPORTANT:** Continued operation of the engine with an illuminated over temperature warning light **MAY** cause severe engine damage (if a high oil temperature or head temperature condition exists).

# Operating Instructions

## Water Temperature Warning Light (Model MTL)

The water temperature warning light indicates that engine coolant temperature is above the safe operating limit and the **engine is overheating**. If this light comes on, there may be a problem with:

- Radiator cooling air flow (material packed into radiator cooling fins, clogged air intake screen)
- Cooling fan not operating
- Low coolant quantity in cooling system

## Water Temperature Gauge (Model MTL)

The water temperature gauge monitors engine **cooling system temperature**. If engine coolant temperature exceeds 230° F (110° C), an overheating condition exists; the water temperature **light will come on** and the **warning horn will sound**.



### WARNING

If engine cooling system overheating is indicated, continued operation of the engine, even for a short time, **COULD** result in fire, risk of personal injury, and severe damage to equipment.


## Engine Service Light (Model MTEFI)

The engine service light indicates the Engine Control Unit (ECU) has detected a fault in the engine performance. When this light illuminates during operation, contact an authorized Kohler Service dealer to diagnose the fault.

**IMPORTANT:** Continued operation of the engine with an illuminated engine service light will result in sub-standard performance and **MAY** cause engine damage if not corrected as soon as possible.

## Ignition Switch

The ignition switch is used to start and stop the engine. The switch has three positions: "O" is the **OFF** position, **RUN** is the position the key returns to after starting, and "S" is the **START** position. When starting the engine, turn the key clockwise to the "S" position. Do not hold the key in the "S" position longer than 10 seconds. If the engine does not start, return the key to the "O" position for at least 60 seconds before making a restart attempt. Prolonged cranking can damage the starter motor and shorten battery life. Release the key when the engine starts, and it will return to the "RUN" position. To stop the engine, rotate the key counterclockwise to the "O" position.

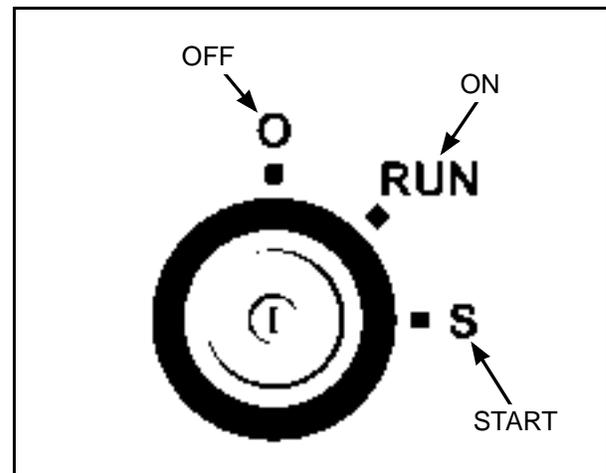

Ignition Switch

## Light Switch (For Optional Lights)

Operates headlights (when installed).

## Warning Horn

The warning horn sounds to alert the operator that an **unsafe engine condition** is being indicated - when engine temperature is too high or engine oil pressure is too low. If the horn sounds, check the indicator lights and correct the problem before further operation.

# Operating Instructions

## Circuit Breakers

Depending on model, either one or two manual reset circuit breakers are located on the instrument panel. Each has a button that pops out if the circuit breaker trips. For Models MT, MTEFI and MTLEFI, the 7 amp circuit breaker protects the safety circuits and GHS. For Model MTL, the 7 amp circuit breaker protects the warning lights/horn, safety circuits and GHS. For Model MTL, the 10 amp circuit breaker protects the headlights. For Model MT, the 30 amp circuit breaker (located near the battery) protects the instrument panel and headlights. For Model MTL, the two 30 amp circuit breakers protect the instrument panel, starter solenoid and 'fan' control module. For Models MTEFI and MTLEFI, the 30 amp circuit breaker protects the instrument panel, headlights, starter solenoid and ECU.

## STARTING THE ENGINE



### CAUTION

Before operating the mower, read and understand all Safety Instructions and Operating Instructions.



### WARNING

**NEVER** run the engine in an enclosed or poorly ventilated area. Engine exhaust contains carbon monoxide, an odorless and deadly gas.

1. Before attempting to start the engine, make sure the operator is in the seat, the Forward Speed Control is in **NEUTRAL-PARK** position, and the blade clutch and parking brake are **DISENGAGED**.

**NOTE:** Release parking brake to prevent extra load on the starter if the transmission neutral is slightly out of adjustment.



### CAUTION

A safety interlock switch system **PREVENTS CRANKING** the engine with either the Forward Speed Control or the blade clutch (PTO) out of neutral. If the engine cranks otherwise, the safety system is not working and should be repaired or adjusted before operating the mower. **DO NOT disconnect safety switches; they are for the operator's protection.**

**NOTE:** For starting in cold weather [below 40° F (4° C)], use the optional cold start lever to release the jackshaft drive belt and remove the hydrostatic transmission from the starter cranking load. After the engine has been started and warmed up, lower the lever to re-engage the jackshaft drive belt.



Optional Cold Start Lever

2. For Model MT and MTL, move the choke lever to the **ON** position and move the throttle 1/4 to 1/2 open (toward **FAST**). Turn the ignition switch to the **START** position to start the engine. Release the key to **RUN** position as soon as the engine starts.

**NOTE:** For Model MT and MTL, the choke may not be required if the engine is warm.

**IMPORTANT:** If the engine fails to start after approximately 10 seconds of cranking, the engine should be checked before further cranking. Turn the key to the **OFF** position and allow a 60 second cool-down period between starting attempts. Failure to follow these guidelines can damage the starter motor and shorten battery life. Consult your Walker dealer or Authorized Kohler dealer for additional help.

# Operating Instructions

3. After the engine starts, make sure the oil pressure light goes off. If not, stop the engine immediately and find the cause of the problem. Make sure the oil pressure light is off prior to engaging the mower blades and beginning operation.
4. For Model MT and MTL, gradually move the choke to the **OFF** position, keeping enough choke on to allow the engine to run smoothly as it warms up. As soon as possible, move the choke to the **OFF** position.

**IMPORTANT:** For Model MT and MTL, make sure the choke is in the **OFF** position during normal engine operation; running with the choke in the **ON** position **CAN** damage the engine.

## ADJUSTING GROUND SPEED AND STEERING

**IMPORTANT:** If the DSD52 or DSD62 Mower deck is installed on the tractor, make sure the dolly wheel is retracted **BEFORE** moving.



### CAUTION

Learn to **START, STOP, and MANEUVER** the mower in a large, open area.

If the operator has not operated a machine with **LEVER STEERING OR DUAL HYDROSTATIC TRANSMISSIONS**, steering and ground operation should be learned and practiced until the operator is completely comfortable handling the machine **BEFORE ATTEMPTING TO MOW**.



### DANGER

Keep feet on footrests at all times when the machine is moving. Never operate the tractor without a deck or implement installed.

1. Move the FSC out of **NEUTRAL-PARK** position to the desired forward speed. **DO NOT** hold forward on steering levers. It is not necessary to hold the FSC lever in position since a friction lock maintains the selected lever position (and forward travel speed).

**NOTE:** If the FSC lever will not stay in the selected position, the friction lock needs to be adjusted. Contact your Walker Dealer.

2. Steer by pulling the lever on the side of desired direction of turn, e.g., pull the **LH** lever to **turn left**. To minimize the possibility of overcontrol, use only one hand on both steering levers.

### Beginning Recommendations are:

◆ Learn operation of the mower in an open area away from buildings, fences, and obstructions. Learn operation on flat ground **BEFORE** operating on slopes.

◆ Start maneuvering the mower with **SLOW** engine speed and **SLOW** Forward Speed Control setting until familiar with all operating characteristics.

◆ Remember it is not necessary to hold the steering levers forward (a unique Walker feature); always **PULL** on the levers for steering or for reverse motion of the mower.

◆ Learn to operate the mower with your left hand on the steering levers and right hand on Forward Speed Control. The use of two hands on the steering levers tends to cause overcontrol.

◆ Learn to operate the steering levers with smooth action. Jerky movements are hard on the transmission and lawn. For sharp turns, do not allow the inside wheel to stop and twist on the grass. Pull the steering lever controlling the inside wheel into reverse for a smooth “rolling” turn (one wheel rolling forward while the other rolls backward).

◆ Practice maneuvering the mower until you can make it go exactly where you are aiming.

◆ Remember, for an emergency stop, or in case of loss of control, machine movement can always be stopped quickly by pulling the Forward Speed Control into the **NEUTRAL-PARK** position.

# Operating Instructions



**Correct Operator Hand Position on the Controls**

3. Reverse direction of the mower by pulling both levers backward.

**NOTE:** Smooth action on the steering levers will produce smooth mower operation. Remember to keep the engine and ground speed slow until learning the control response.

4. The FSC may be adjusted forward for faster ground speed and backward for slower ground speed. When mowing, ground speed should be adjusted to match the load on the cutter blades, i.e., as the engine pulls down in heavy cutting, pull back on the FSC lever to reduce ground speed. Adjusting ground speed helps maintain a balance between engine power and blade speed for high-quality cutting action.
5. Stop ground travel by pulling both steering levers backward to the **NEUTRAL** position (tractor not moving) and then moving the FSC lever to the **NEUTRAL-PARK** position.

**NOTE:** If the tractor creeps forward or backward with the FSC lever in the **NEUTRAL-PARK** position, the transmission control needs to be adjusted. Contact your Walker Dealer.

## ENGAGING THE MOWER

1. Set the engine throttle at about 1/3 speed. **Do not attempt to engage the blade clutch at high engine speeds.** This will drastically shorten drive belt life. Use only moderate engine speed when engaging the blade clutch.
2. Pull the blade clutch lever **SLOWLY** up to engage the mower blades.

### **CAUTION**


A safety interlock switch (seat switch) will cause the engine to stop if the blade clutch is engaged and the operator is not in the seat. The function of this switch should be checked by the operator raising off the seat and engaging the blade clutch; the engine should stop. If the switch is not working, it should be repaired or replaced before operating the mower. **DO NOT** disconnect the safety switches; they are for the operator's protection.

**IMPORTANT:** **DO NOT** engage the blade clutch when transporting the mower across drives, sidewalks, loose materials, etc. **DO NOT engage the blade clutch with the PTO shaft disconnected** (the mower deck removed from tractor).


### **CAUTION**

If the cutting blades strike a stationary object while mowing, stop the mower immediately, disconnect the spark plug wires, lift the deck, and inspect the deck and blades thoroughly for damage. Make sure that the blade timing has not been disturbed (the blades should be at 90 degrees to each other). Refer to **REPLACING/REPAIRING the Blade Overload Shear Bolts in Maintenance Instructions** if blades are out of time. Also, make sure the blade retaining nuts are torqued to 60 ft-lb (81.3 N·m).

# Operating Instructions

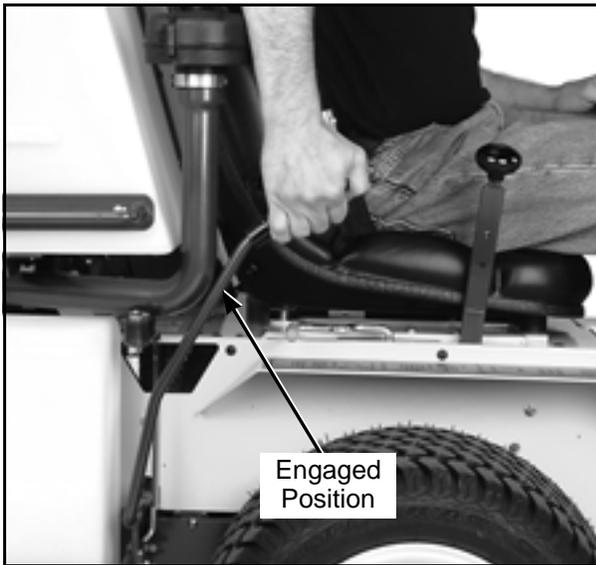

Blade Clutch Engaged

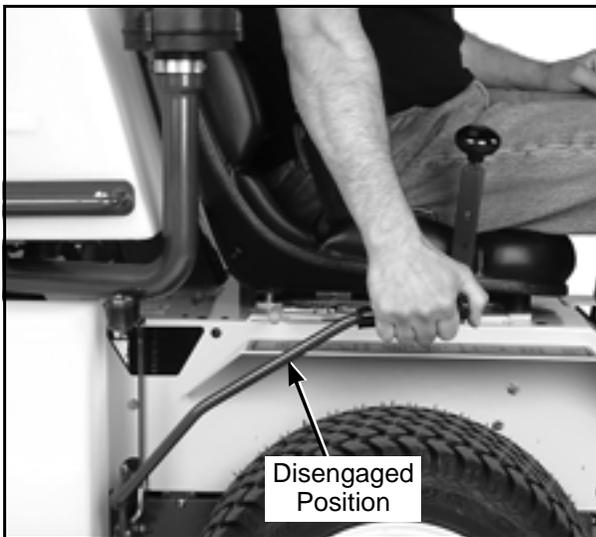

Blade Clutch Disengaged

## STOPPING THE MACHINE

1. Slow the engine to a fast idle; put the throttle in the 1/2 throttle position.
2. Pull the steering levers to the **NEUTRAL** position and then move the FSC lever backward to the **NEUTRAL-PARK** position.
3. Disengage the blade clutch.

**IMPORTANT:** DO NOT disengage the blade clutch with high engine speed (above 1/2 throttle) since the brake action on the blade drive will cause premature wear of the brake band.

## **WARNING**

A brake stops the cutter blades (and blower on GHS equipped models) from free-wheeling within five (5) seconds after disengaging the clutch. If the brake system malfunctions and the blades do not stop within five (5) seconds, the brake should be adjusted or repaired before operating the mower. Contact your Walker Dealer.

4. Turn the ignition switch **OFF**. When stopping the engine, do not reduce the throttle below 1/2 speed. Since the engine is equipped with a shutdown solenoid, stopping at low idle may cause engine run-on or backfiring.

## **WARNING**

Remove the key from the ignition switch when leaving the mower unattended. This will prevent children and inexperienced operators from starting the engine.

5. Engage the parking brake.

**IMPORTANT:** The hydrostatic transmissions lock to prevent the mower from rolling freely with the engine stopped. However, if the mower is parked on a slope, it is necessary to **ENGAGE** the parking **BRAKE** to prevent the mower from creeping. This is due to a small amount of slippage in the hydrostatic transmissions, especially when transmission fluid is warm.

## **WARNING**

In case either of the transmission drive belts break during operation, and if the machine is on a slope, the machine will freewheel down the slope. To maintain control, immediately (1) Release the steering levers and simultaneously (2) Move the FSC to the **NEUTRAL-PARK** position. When the machine is stopped or moving slowly, engage the parking brake.

**NOTE:** The emergency stop procedure is exactly the same procedure as used to normally stop and park the machine.

# Operating Instructions


## ADJUSTING CUTTING HEIGHT



### WARNING

The engine must be stopped before adjusting cutting height. Disengage the blade clutch (PTO), stop the engine, and remove the ignition key. Wait for all movement to stop before getting off the seat.

Cutting height is adjusted by positioning the four retainer hitch pins in a series of seven vertical holes on the deck support pins. Lift handles have been provided on each end of the deck to assist in raising the deck while positioning the hitch pins. Cutting heights range from 1 in. (25 mm) [top holes] to 4 in. (102 mm) [bottom holes] in 1/2 in. (13 mm) increments.

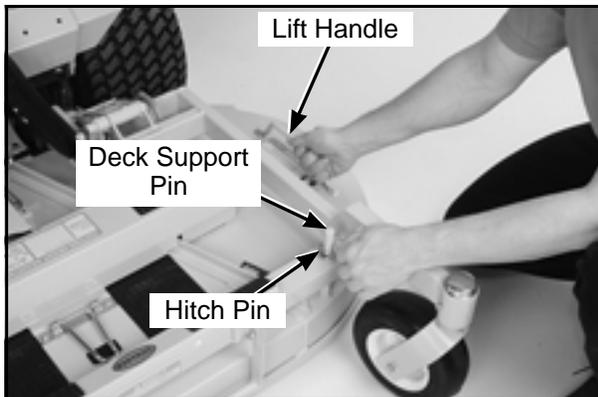

Cutting Height Adjustment


## TRANSMISSION LOCKOUT

**IMPORTANT: DO NOT TOW** the tractor with the transmission lockout engaged. Towing can produce excessive internal pressure and damage the transmission.

To move the mower with the engine **NOT** running (dead battery, maintenance, etc.), the hydrostatic transmissions are unlocked (released).


1. Raise the front body.
2. Lift the transmission lockout lever on both the RH and LH transmissions and secure into place with the locking cam.

3. The mower will “freewheel” with the levers in the **LOCKOUT** position. The levers must be in the highest position to completely unlock the transmissions.

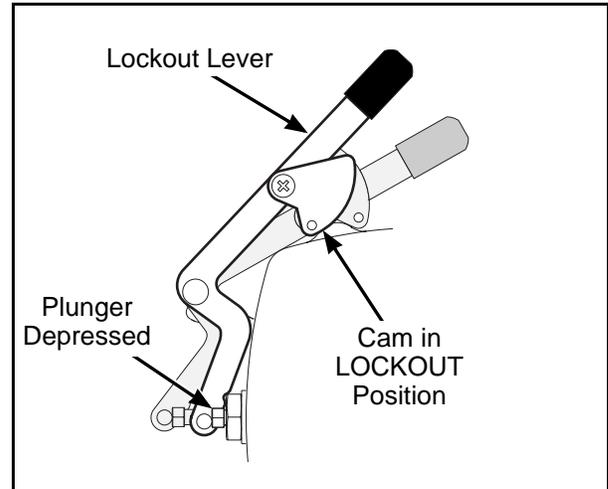

Lockout Lever - Freewheel Position

4. After moving the mower, release the locking cam, placing the lever **DOWN** in the normal **OPERATING** position. Make sure the transmission lockout plunger on the side of the transmission case (activated by the lockout lever) is **completely released**, otherwise the transmission operation will be erratic.

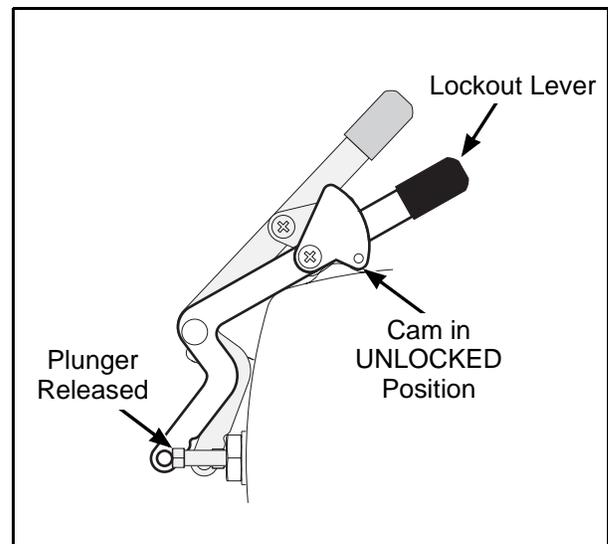

Lockout Lever - Normal Operating Position

# Operating Instructions

## RECOMMENDATIONS FOR MOWING

**IMPORTANT:** Operate the engine at **full speed** when mowing, to allow the engine to produce full horsepower and to increase efficiency of the engine cooling system.


- Keep the mower deck and discharge chute clean.
- Mow with **sharp blades**. A dull blade tears the grass (resulting in poor lawn appearance) and uses extra power (slowing the mowing speed).
- It is preferable to cut grass when it is **dry and not too tall**. Mow frequently and do not cut grass too short. (For best appearance, cut off 1/3 or less of existing grass height.)
- When mowing, operate the engine at or near **full throttle** for the best cutting action and performance of the grass handling system (GHS). Mowing with a lower engine RPM causes the mowing blade to not cut clean and tear the grass. The engine is **designed to be operated at full speed**.
- When mowing in adverse conditions (tall and/or wet grass), mow the grass twice. Raise the mower to the highest setting - 4 in. (102 mm) - for the first pass and then make a second pass cutting to the desired height.
- Use a **slow** setting on the FSC for **trimming** operations.
- Make sure the mower is **leveled properly** for a smooth cut. Refer to *Deck Leveling in Assembly Instructions*.
- Use an alternating **stripe mowing pattern** for **best appearance** and vary the direction of the stripe each time the grass is mowed to avoid wear patterns in the grass.
- Avoid damage to the grass by slipping and skidding of the drive tires. Use **smooth control movements** of the steering levers since the hydrostatic transmissions are "power boosted controls" and jerking the levers can easily slip the tires. For sharp turns, do not allow the inside wheel to stop and twist on grass; pull inside steering lever into reverse for a smooth "rolling" turn (one wheel rolling forward while the other rolls backward).

- When using a side discharge mower deck, the side discharge shield **must not be removed** and must be kept in the lowest possible position to deflect grass clippings and thrown objects downward. Orient the side discharge away from sidewalks or streets to minimize cleanup of clippings. When mowing close to obstacles, orient the side discharge away from obstacles to reduce the chance of damage to property by thrown objects.



**Side Discharge Shield in Lowest Position**

- When operating on a slope, **reduce speed and use caution** to start, stop, and maneuver. Avoid sharp turns or sudden changes in direction. The **maximum recommended side slope operating angle is 20 degrees or 33% grade**.

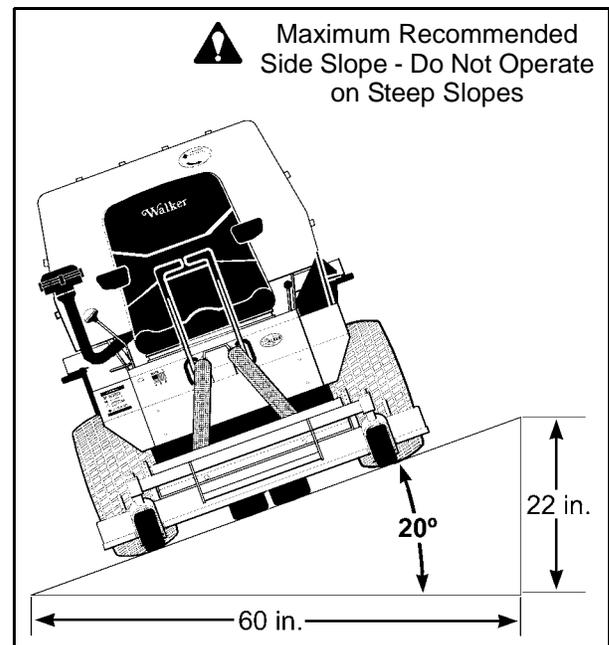

**Maximum Recommended Side Slope**

# Operating Instructions


## RECOMMENDATIONS FOR TILT-UP DECK OPERATION/TRANSPORT

To avoid potential deck and/or tractor damage while using the tilt-up deck, the following recommendations are offered:

- **Do not move the tractor** with the deck in the tilt-up position since both the roller wheels (on the back of the deck) and the GHS discharge chute may be damaged by moving the tractor. The tilt-up configuration should only be used when the tractor is parked.
- The tractor **body should never be tilted forward** with the deck in the tilt-up position. This can cause the deck to unhook from the tractor and fall with considerable force, potentially causing deck or tractor damage and/or bodily injury.
- When transporting a tractor with the deck in the tilt-up position (on a truck or trailer), the **deck should be secured** to the vehicle with a strap or rope (stop vertical movement). This will prevent the deck from bouncing on the rear roller wheels (causing breakage). This will also prevent the deck from unhooking from the tractor and falling, potentially causing deck or tractor damage. Damage to other items parked in front of the deck may also occur.

# Operating Instructions

## GRASS HANDLING SYSTEM (GHS) GHS Model Only

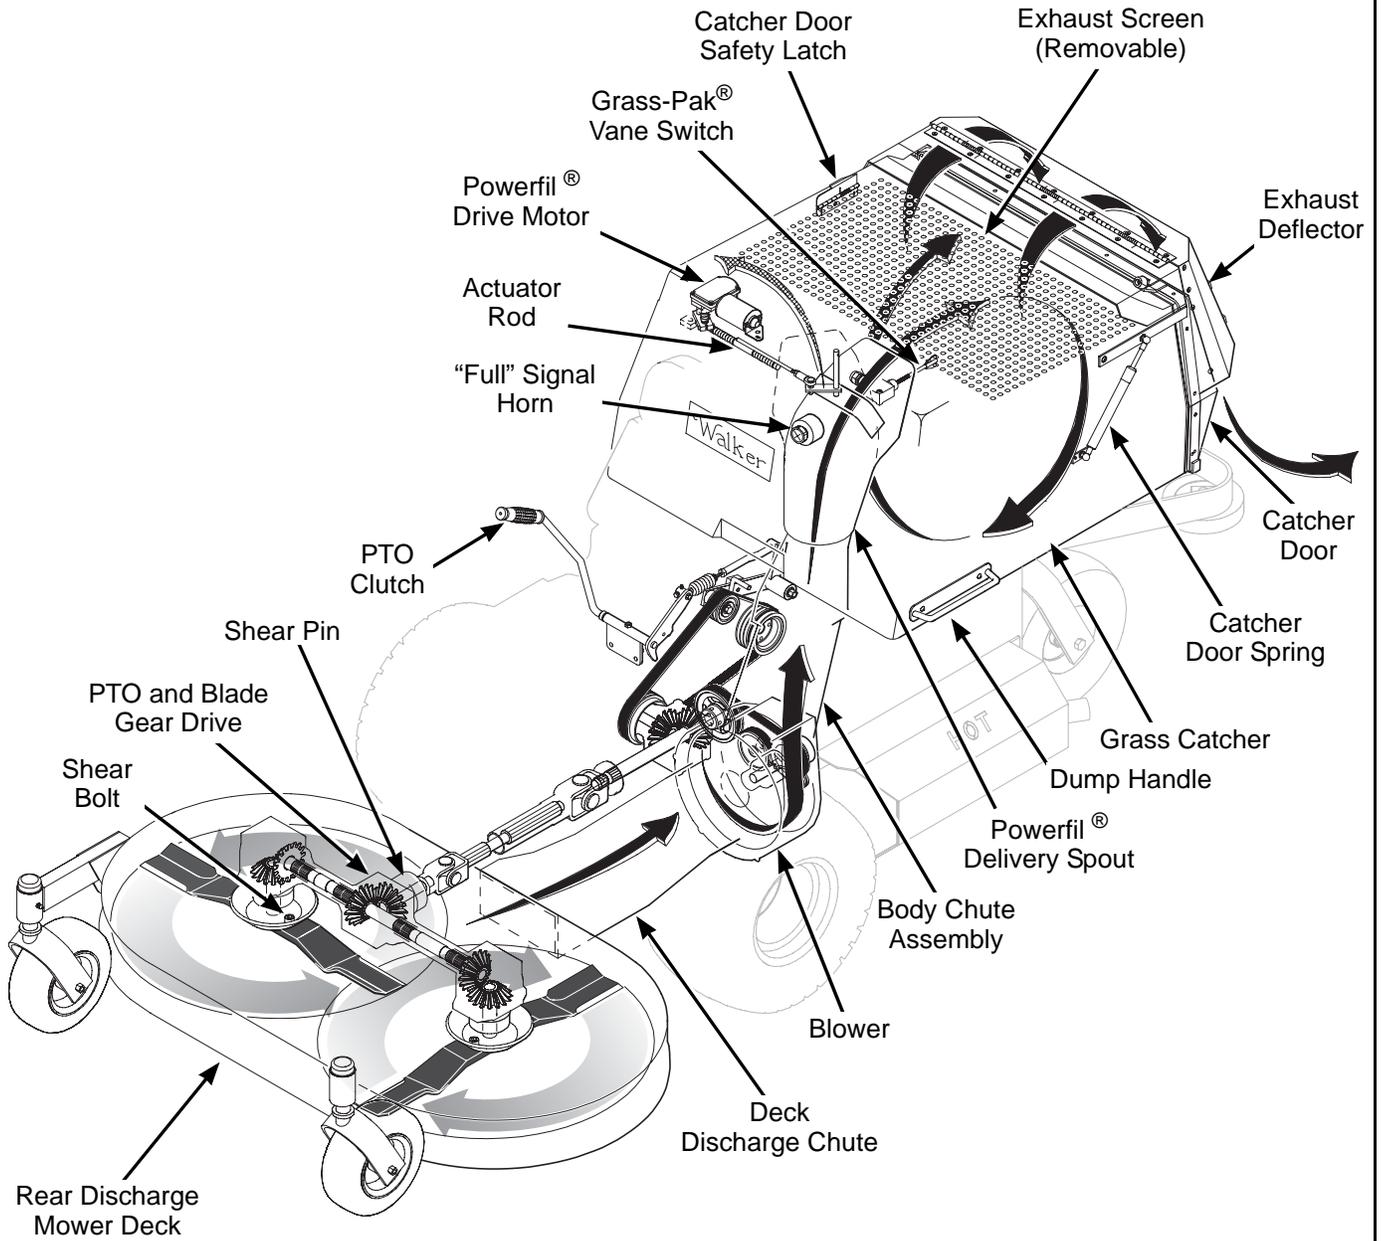

GHS Flow and Components

# Operating Instructions

## General Information

The Grass Handling System (GHS) consists of a rear discharge mower deck connected to a 10.5 in. (27 cm) blower and a rear mounted grass catcher with 9.5 bushel (335 liters) capacity or optional 7.0 bushel (246 liters) capacity. The GHS blower operates any time the mower blade clutch is engaged and moves grass through the rear discharge deck chute into the grass catcher. Blower airflow is exhausted out the back of the grass catcher, through a filtering screen. When the grass catcher is full and needs to be emptied, a **“full” signal horn alerts the operator**. When the “full” signal horn sounds, it is important to stop mowing to prevent overfilling and clogging of the blower system.

**IMPORTANT:** Normally, the GHS blower operates with no maintenance or cleaning required. However, under certain operating conditions, the inside of the blower housing may accumulate a deposit of dirt, causing wear and binding of the blower wheel. Normally, dirt buildup occurs when mowing a **combination of dirty and damp grass**, especially in the springtime. When operating in these conditions, **check the blower wheel frequently** for binding and clean the blower housing as required. Refer to **CLEANING the GHS Blower** in **Maintenance Instructions**.


**NOTE:** In Autumn, when using the GHS mower to vacuum leaves, it is recommended to raise the **front** of the mower deck 2 to 3 notches [1 to 1-1/2 in. (25 to 38 mm)] **higher than the rear**. This will avoid “bulldozing” leaves, particularly when the leaves are piled in a thick layer. To make this adjustment, the hitch pins in the **two (2) front** deck support pins are repositioned 2 to 3 notches higher while leaving the rear pins in their original position.



### **DANGER**

**NEVER** operate the GHS catcher with the back door open. Objects may be thrown out the back of the catcher with sufficient force to cause serious injury to bystanders or property damage. **NOTE:** For non-catching operation, the “No-Catch” Deflector is an available accessory item.

**NOTE:** When a side discharge or mulching mower deck is installed on the GHS model, a blower intake cover should be installed in the blower intake tube. This cover “unloads” the blower and seals the intake to effectively eliminate power loss and blower noise when the blower is not being used.

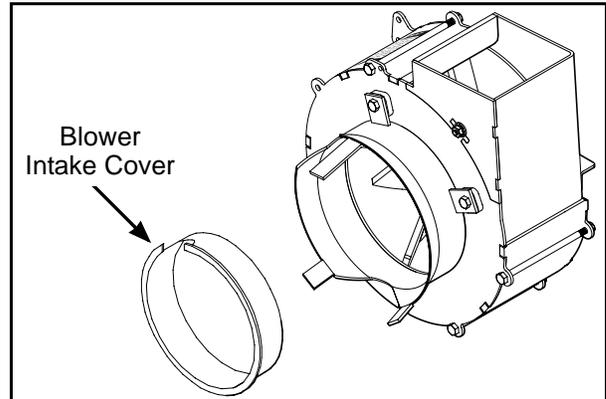

**Blower Intake Cover**

**NOTE:** An alternative to using the blower intake cover when a side discharge or mulching deck is installed on a GHS model is the blower lockout kit (P/N 7541). The blower lockout kit releases tension on the blower drive belt and does not require the blower intake cover.



### **DANGER**

#### **ROTATING BLOWER BLADES**

**NEVER** operate the GHS blower with the blower discharge chute uncovered (grass catcher in the dump position) since dangerous projectiles may be thrown. **NEVER** put hands into the blower discharge chute for any reason. Use a stick or similar instrument to remove any material if clogging has occurred.



### **CAUTION**

**NEVER** leave grass clippings in the grass catcher after mowing. Damp clippings generate heat as they decompose. This **MAY** cause spontaneous combustion.

# Operating Instructions

## Clogging Checklist

In case of clogging, there will be a **distinct change in the sound** of the blower, i.e., the blower sound will stop. Also, the mower deck will begin to leave a trail of grass clippings. When this occurs, stop the engine, disconnect the spark plug wires, and make **sure all movement has stopped before attempting to unclog**.




### DANGER

**NEVER** place hands under the mower deck or in the GHS blower discharge chute. Use a stick or similar tool to remove any clogged material.

Normally, any clogging will first develop at the back of the mower deck in the discharge opening into the blower chute. Clogging at this point **does not indicate a particular problem in this part of the system, but is a symptom of something restricting the flow of material** throughout the entire system. The following list of items should be checked if a pattern of clogging begins to develop. All of these items are capable of causing clogging at the back of the deck.

- Check to see if the RH and LH mower blades are installed **for the correct rotation** - install blades so the cutting edges move toward each other.

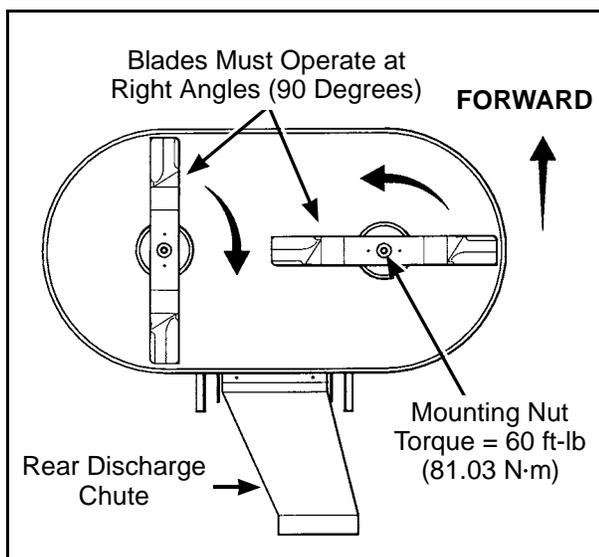

**Blade Rotation for GHS Mower Deck  
(view from underneath)**

- Check the amount of **flat section** remaining at blade tip. This is the area that is ground away (removed) when the blades are sharpened. If too much of the flat section is removed, the “air lift” performance or “shovel” effect of the blade deteriorates to the point that discharge of grass clippings into the blower chute is marginal. Replace cutter blades if less than 3/4 in. (19 mm) flat section remains at the blade tip.

- Check that the interior of the deck housing and baffling is reasonably **clean and free of grass and dirt buildup**. While some degree of material buildup can be tolerated, a point is finally reached where the flow of air and grass clippings is restricted.

**NOTE:** One condition that quickly causes a buildup of material in the deck housing is mowing grass and/or weeds which are “juicy.” The material collects under the deck with sticky, green juice. Clover and weeds are especially a problem. The mower deck will need to be cleaned frequently when operating in these conditions.

- Check the deck cutting height setting. When working in thick, tall grass, **lower deck settings [1 to 2 in. (25 to 51 mm) cutting heights] tend to restrict airflow** from moving into and under the deck. Raising the deck cutting height will significantly increase airflow and reduce clogging when working in thick, tall grass.

- Check the interior of the chute connecting the mower deck to the blower for **smoothness and freedom from obstruction**.

- Check the blower wheel for **bent blades and excessive clearance** between the blade tip and the blower housing. A clearance greater than 1/8 in. (3 mm) will cause a significant loss of blower performance.

- Check the blower discharge chute into the grass catcher for **smoothness and freedom from obstruction**.

- Check the elbow inside the grass catcher for a **buildup of material in the radius** of the elbow. In certain conditions (damp/dirty grass) a considerable “clump” of material can accumulate at this point, greatly restricting material and airflow.

# Operating Instructions

- Check that the **openings in the removable air exhaust screen** in the grass catcher are not plugged. If the screen is clogged, refer to **Cleaning the GHS Exhaust Screen** in this section.

**NOTE:** An optional exhaust screen with larger holes (3/4") is available for use when mowing in wet grass; the screen provides less airflow restriction and more clog resistance (use standard screen in dry conditions to avoid excessive material blowing out of the catcher).

Remember, anything that restricts airflow or material flow along the entire path from the mower deck to the grass catcher can cause clogging.

## Using the Tilt-Up Deck

Refer to **CLEANING of Grass Buildup in Mower Housing** in **Maintenance Instructions**.

## Using the GHS Catcher

### *Powerfil®*

The GHS catcher has an oscillating grass delivery spout (**POWERFIL®**) which is designed to spread grass clippings throughout the interior of the grass catcher (even when mowing wet, heavy grass). The oscillating action may be checked by turning the ignition switch to the **ON** position and moving the blade clutch to the **ENGAGED** position. The spout should oscillate approximately 25 cycles per minute.

**NOTE:** If the grass spout fails to oscillate, the clutch switch should be checked for function (the switch closure is adjustable).

### *"Full" Signal Horn*

The GHS catcher has a **"full" signal horn** to alert the operator to **dump the catcher when it is full** (to prevent overfilling and clogging). The "full" signal horn is activated by a vane switch (Grass-Pak® switch) mounted on the grass delivery spout. Oscillating action of the spout triggers the vane switch as grass begins to fill in around the spout when the catcher is almost full.

The "full" signal function may be checked by turning the ignition switch **ON**, engaging the blade clutch (engine not running), opening the catcher back door, and triggering the Grass-Pak® vane by hand as it oscillates. The horn should sound as the switch is moved in both directions.



## **WARNING**

**DO NOT test the Grass-Pak® switch with the engine running. Projectiles may be thrown out of the grass delivery spout, and COULD cause serious injury.**


The "full" signal horn is designed to operate (sound) when the grass catcher is **almost full**. The timing of the signal is adjustable by changing the position of the vane on the Grass-Pak® switch. If the signal is coming on too soon (catcher not completely full) or too late (grass clogging in catcher spout and delivery chute), contact your Walker Dealer.

**NOTE:** The horn signal should be adjusted to sound **BEFORE the catcher is completely full** to give the operator time to react and stop mowing. An indication the horn signal is coming on too late (delayed too much) is if grass clippings are falling out of the grass catcher delivery chute when the catcher is dumped.

## **Cleaning the GHS Exhaust Screen**

To remove the grass catcher screen for cleaning, open the catcher door, push forward and pull down on the grass catcher screen knobs (on either side of the screen), and slide the screen out. Use a high pressure washer or water spray and brush to clean the screen.

Keeping the catcher exhaust screen clean and open is essential to good performance of the catching system. In some mowing conditions, e.g., wet and dirty, it will be necessary to clean the screen frequently to avoid clogging the mower deck, blower, and chutes due to airflow restriction.

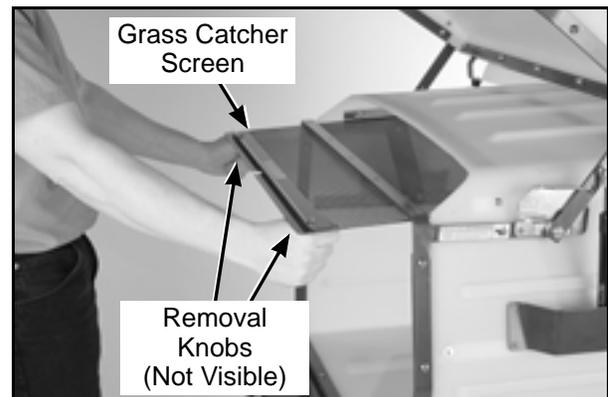

**Grass Catcher Screen Removal for Cleaning**

# Operating Instructions

## Dumping the Catcher


For dumping, the catcher either tailgate dumps into a disposal area or dumps into the optional dump bag. The dump bag is a **reusable** nylon fabric bag designed to conveniently move grass clippings from the catcher to a remote disposal area or container.

### Tailgate Dumping

1. Open the back door by lifting on the door handle.

**NOTE:** To prevent accidental door closure, a **safety latch locks the door open** in the fully opened position while the catcher is being dumped.

2. Tilt the catcher back to dump by lifting on the catcher lift handle on the lower front corner of the catcher.
3. Lower the catcher smoothly down to the normal operating position. **DO NOT allow the catcher to drop down - the gas spring, that holds the catcher in the raised position, is not a shock absorber for lowering the catcher.**
4. Close the door by holding the door handle with the left hand and releasing the safety latch on the door hinge mechanism with the right hand. The safety latch is released by pressing in on the top of the latch. The door will close smoothly with the assistance of the gas springs. If the dampening springs are not functioning properly, they should be replaced to prevent the door from slamming closed and possibly causing a pinch point.

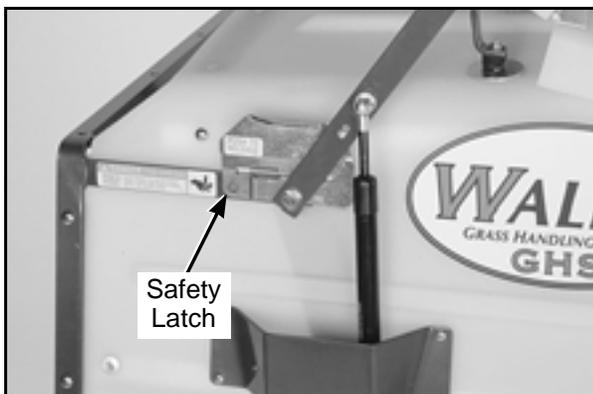

Catcher Door Safety Latch

## Using the Dump Bag

1. Open the back door by lifting on the door handle.

**NOTE:** To prevent accidental door closure, a **safety latch locks the door open** in the fully opened position while the catcher is being dumped.

2. Orient the dump bag with one (or two) of the handle straps on the bag opening facing up.



### Positioning Dump Bag on Catcher

3. Hook the bottom of the bag over the rear bumper while lifting on the handle strap(s).
4. Tilt the catcher back to dump into the bag by **lifting on the catcher lift handle** on the lower front corner of the catcher **with the one hand** while continuing to **hold up on the bag strap(s) with the other hand**. Refer to photos for positioning the bag and dumping.

# Operating Instructions



**Dumping Catcher into Dump Bag**

5. Lower the catcher smoothly down to the normal operating position. **DO NOT allow the catcher to drop down - the gas spring, that holds the catcher in the raised position, is not a shock absorber for lowering the catcher.**
6. Close the door by holding the door handle with the left hand and releasing the safety latch on the door hinge mechanism with the right hand. The safety latch is released by pressing in on the top of the latch. The door will close smoothly with the assistance of the gas springs. If the dampening springs are not functioning properly, they should be replaced to prevent the door from slamming closed and possibly causing a pinch point.

## *Power Dump Option*

When equipped with the optional power dump system, the operator dumps the catcher while sitting in the seat. A toggle switch operating a power ram is used to raise and lower the catcher. The back door automatically opens and closes during the dump cycle.

Hold the toggle switch **UP** or **DOWN** to **RAISE** or **LOWER** the catcher. When the catcher reaches the full raised or lowered position, the power ram clutch will make a ratcheting sound. Release the toggle switch as soon as this sound is heard. **DO NOT operate the ram with the clutch ratcheting for an extended time** as this will cause extra wear on the clutch mechanism.



## **CAUTION**

**The operator should be in the seat and bystanders stay clear when the power dump is operating. The power dump is used ONLY for tailgate dumping. Do not attempt to use the optional dump bag or any other bag with the power dump.**


**NOTE:** If grass tends to hang up in the catcher after raising the catcher with the power dump, “jiggle” the steering levers and make the tractor bounce a little to unstick the grass and make it slide out of the catcher.

**NOTE:** With the power dump mechanism in the normal operating position (catcher down), the catcher can be **manually raised** for access to the engine and the catcher can be **manually dumped**.

# Operating Instructions

## Hi-Dump<sup>®</sup> Option

When equipped with the optional Hi-Dump<sup>®</sup> system, the operator raises and dumps the catcher while sitting in the seat. Two toggle switches operate independent hydraulic cylinders to raise and lower the catcher. The back door automatically opens and closes during the dump cycle.

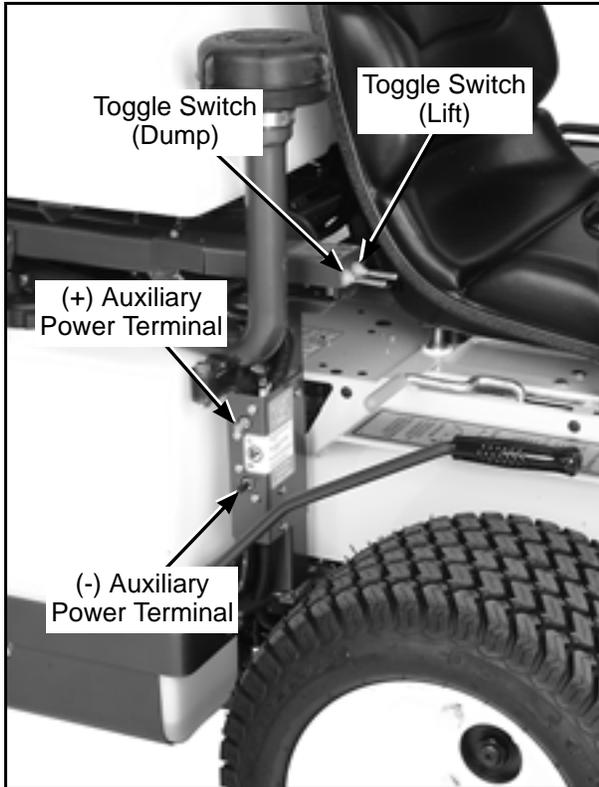

**Lift/Dump Control Switches and Auxiliary Power Terminals**

Hold the Lift toggle switch **UP** or **DOWN** to **RAISE** or **LOWER** the catcher.




## CAUTION

**The operator should be in the seat and bystanders stay clear when the Hi-Dump<sup>®</sup> is operating. The Hi-Dump<sup>®</sup> is used ONLY for tailgate dumping. Do not attempt to use the optional dump bag or any other bag with the Hi-Dump<sup>®</sup>.**


**NOTE:** If grass tends to hang up in the catcher after raising the catcher with the Hi-Dump<sup>®</sup>, “jiggle” the steering levers and make the tractor bounce a little to unstick the grass and make it slide out of the catcher.

**NOTE:** With the Hi-Dump<sup>®</sup> mechanism in the normal operating position (catcher down), the catcher cannot be **manually raised**. In the case of a dead battery, use the auxiliary power terminals to charge/jump the battery to operate the Hi-Dump<sup>®</sup>.

# Operating Instructions

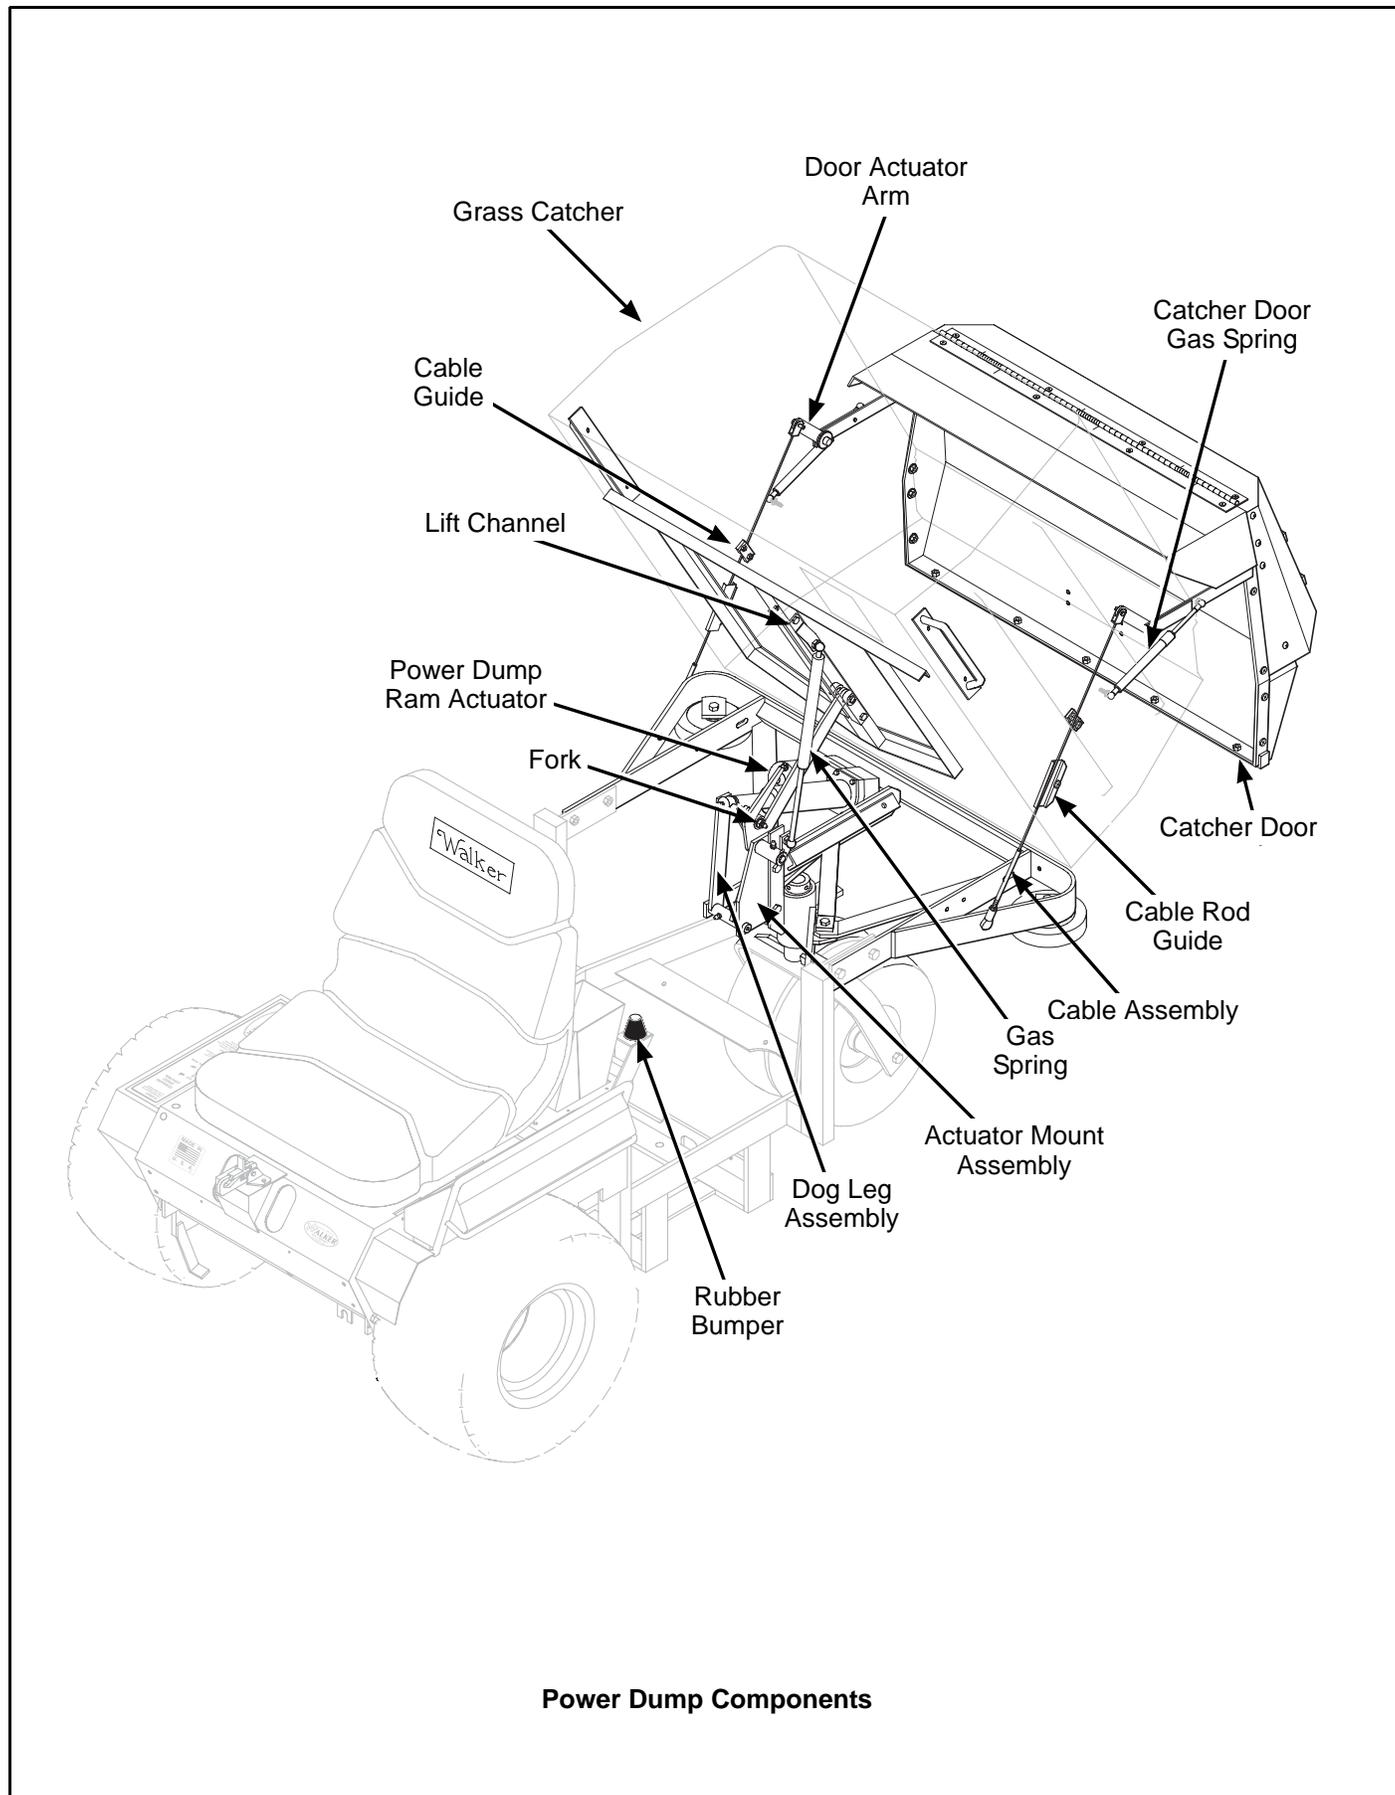

# Operating Instructions

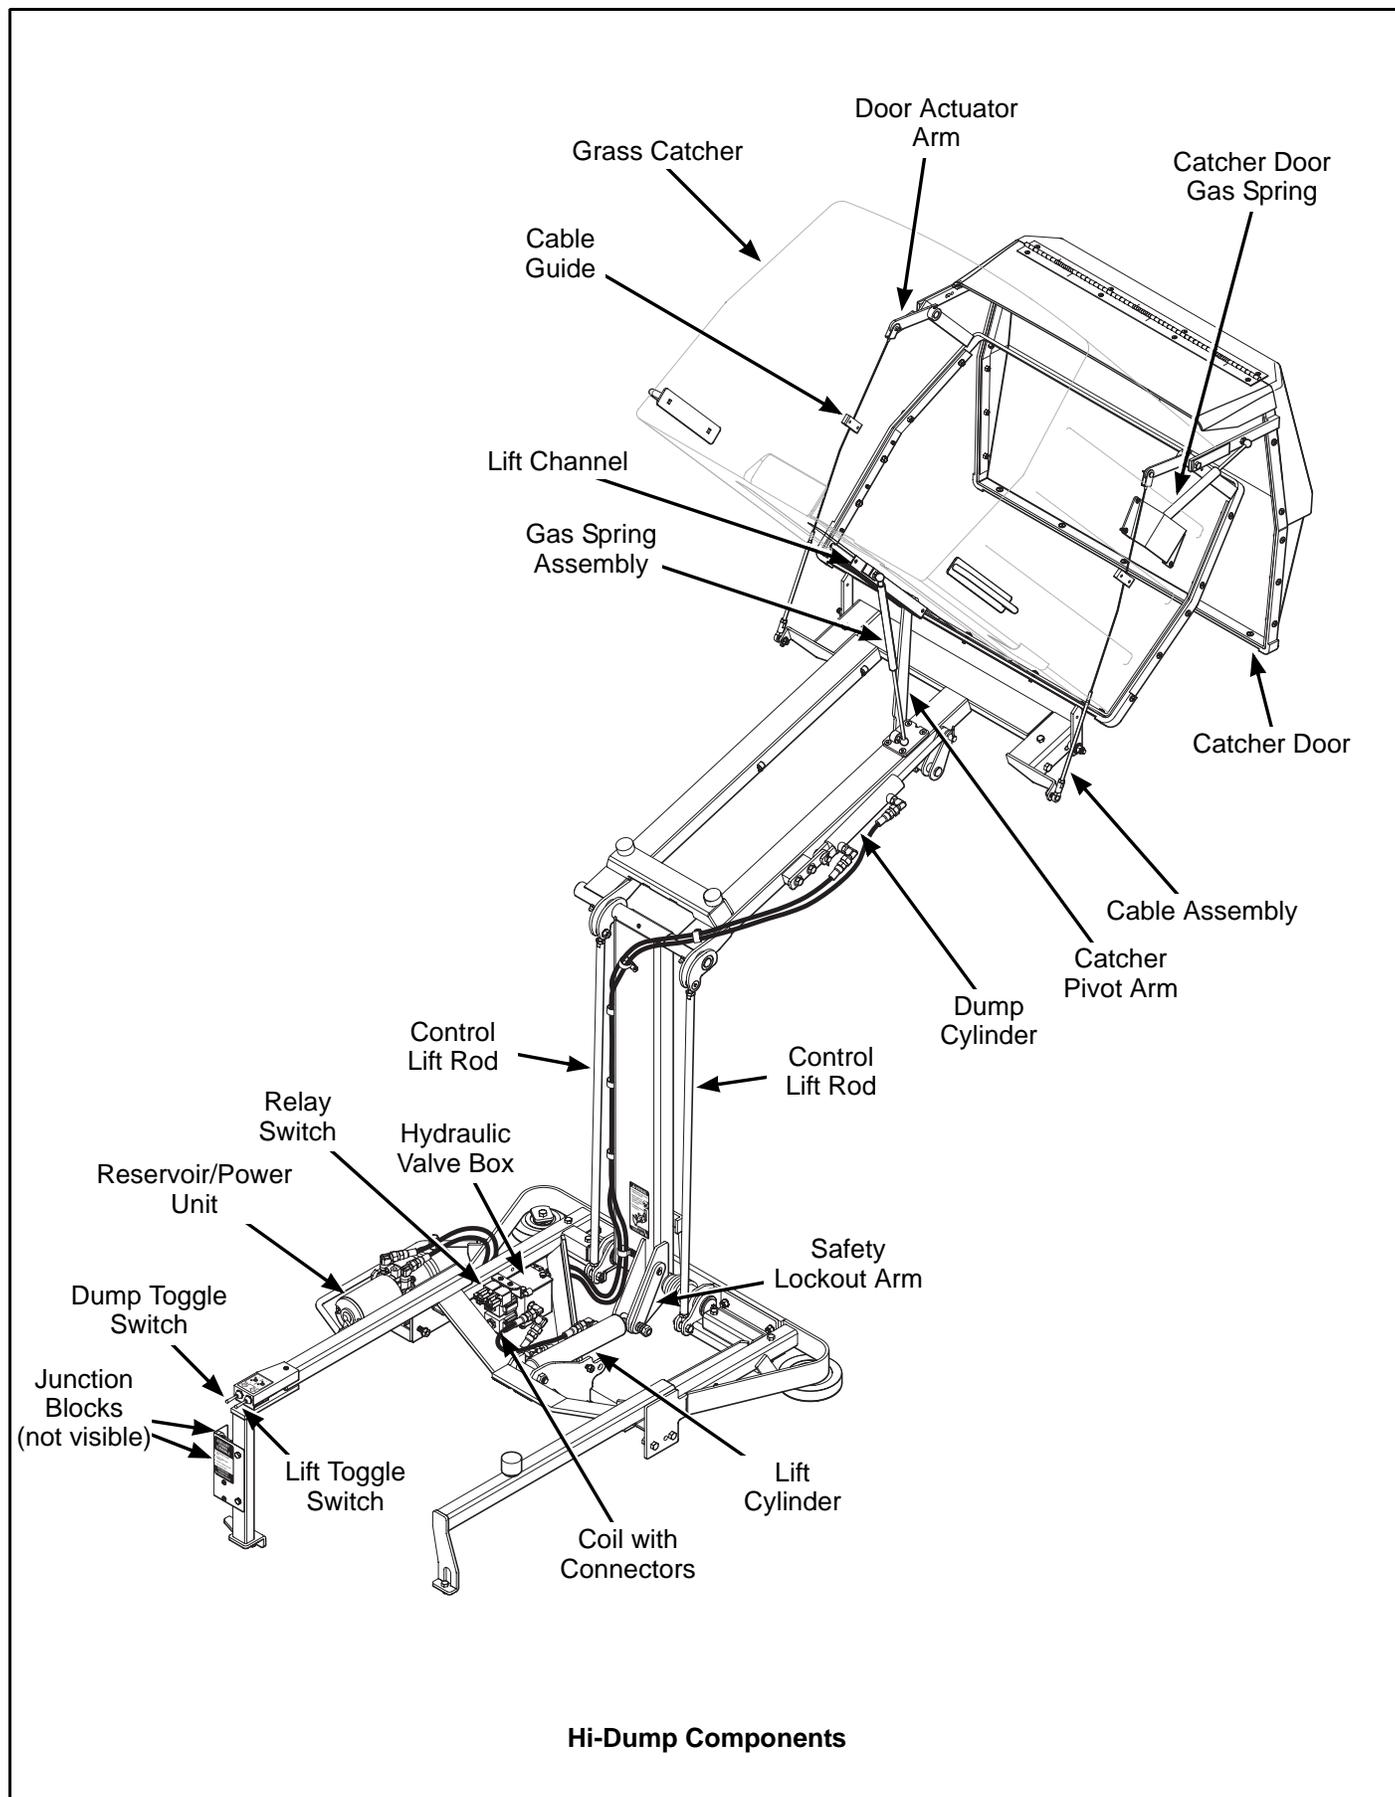

# Maintenance Instructions



**Maintenance procedures requiring special training or tools should be performed by a trained technician.**

## MAINTENANCE SCHEDULE CHART - RECOMMENDED SERVICE INTERVALS - MODEL MT, MTL, MTEFI, MTLEFI

| Service Item  | Daily | 25 Hours | 100 Hours | 200 Hours | Yearly | Every 2Years | Ref. Page |
|---|-------|----------|-----------|-----------|--------|--------------|-----------|
| Check Engine Crankcase Oil Level                                    | x     |          |           |           |        |              | 57        |
| Check/Clean Engine Air Cooling System*                              | x     |          |           |           |        |              | 66        |
| Check Coolant Level, Radiator/Overflow Tank MTL                     | x     |          |           |           |        |              | 70        |
| Clean Radiator Screen and Cooling Fins* MTL                         | x     |          |           |           |        |              | 67        |
| Check Security of Air Filtration Components                         | x     |          |           |           |        |              | 70        |
| Check Air Filter Restriction Gauge                                  | x     |          |           |           |        |              | 65        |
| Clean Grass Buildup Under Deck                                      | x     |          |           |           |        |              | 68        |
| Clean GHS Exhaust Screen*   | x     |          |           |           |        |              | 49        |
| Clean GHS Blower*   | x     |          |           |           |        |              | 69        |
| Service Mower Blades  | x     |          |           |           |        |              | 72        |
| Check Functions of Instrument Panel and Warning Horn                | x     |          |           |           |        |              | 27        |
| Lubricate Grease Fittings and Oil Points*                           |       | x        |           |           |        |              | 61        |
| Check PTO Gearbox Oil Level**                                       |       | x        |           |           |        |              | 60        |
| Check Battery Electrolyte Level                                     |       | x        |           |           |        |              | 71        |
| Check Hydrostatic Transmission Fluid                                |       | x        |           |           |        |              | 60        |
| Check Tire Pressure   |       | x        |           |           |        |              | 72        |
| Check Drive Belts (Jackshaft, Engine PTO, GHS Blower, Ground Drive) |       | x        |           |           |        |              | 73        |
| Check Gearbox Oil Seals   |       | x        |           |           |        |              | 73        |
| Check Turbine Precleaner*   |       |          | x         |           |        |              | 64        |
| Check/Adjust Blade Clutch (PTO)/Brake Action                        |       |          | x         |           |        |              | ΔΔΔ       |
| Check/Clean Air Filter Element***                                   |       |          | x         |           |        |              | 65        |
| Check Oil Level in Gear Axle  |       |          | x         |           |        |              | 60        |
| Clean Hydrostatic Transmission Cooling Fins                         |       |          | x         |           |        |              | 69        |
| Clean Engine Cooling Fins MT, MTEFI                                 |       |          | x         |           |        |              | 67        |
| Change Engine Crankcase Oil MT, MTEFI <sup>Δ</sup>                  |       |          | x         |           |        |              | 58        |
| Check Wheel Bolt Torque (75 to 85 ft-lb)                            |       |          | x         |           |        |              | 72        |
| Change Engine Oil Filter MT, MTEFI <sup>Δ</sup>                     |       |          |           | x         |        |              | 58        |
| Change Engine Crankcase Oil MTL <sup>Δ</sup>                        |       |          |           | x         |        |              | 58        |
| Change Engine Oil Filter MTL <sup>Δ</sup>                           |       |          |           | x         |        |              | 58        |
| Check Radiator Hoses and Clamps (MTL)                               |       |          |           | x         |        |              | 74        |
| Check/Regap Spark Plugs   |       |          |           | x         |        |              | 73        |
| Replace Air Filter Element, Safety Filter, Vacuator™ Valve***       |       |          |           |           | x      |              | 65        |
| Replace Fuel Filter   |       |          |           |           | x      |              | 80        |
| Flush Radiator and Change Coolant (MTL)                             |       |          |           |           | x      |              | 68        |
| Service Battery   |       |          |           |           | x      |              | 71        |
| Check/Adjust FSC Friction Lock                                      |       |          |           |           | x      |              | ΔΔΔ       |
| Service Solenoid Shift Starter                                      |       |          |           |           | x      |              | ΔΔΔ       |
| Check PTO U-Joints for Wear/Looseness                               |       |          |           |           | x      |              | 74        |
| Check Fuel Lines and Clamps   |       |          |           |           | x      |              | 73        |
| Change Gear Axle Oil <sup>ΔΔ</sup>                                  |       |          |           |           |        | x            | 60        |
| Change Hydrostatic Transmission Fluid <sup>ΔΔ</sup>                 |       |          |           |           |        | x            | ΔΔΔ       |
| Replace Radiator Hoses and Clamps (MTL)                             |       |          |           |           |        | x            | 74        |
| Replace Fuel Lines and Clamps                                       |       |          |           |           |        | x            | 73        |
| Replace Ignition Wires  |       |          |           |           |        | x            | 73        |

- \* **More often in extremely dusty or dirty conditions (refer to notes about air cleaner element in IMPORTANT TIPS FOR CARE OF KOHLER ENGINE)**
- \*\* **Change PTO gearbox oil after first 100 hours of operation (break-in period)**
- \*\*\* **Air cleaner is remote mounted Donaldson Radialseal™ unit, replace filter every year or after 6 cleanings**
- Δ **Change engine oil and filter after first 5 hours of operation of a new engine (break-in period)**
- ΔΔ **Change every 2 years or 1000 hours**
- ΔΔΔ **See your Walker Dealer for this service**

## IMPORTANT TIPS FOR CARE OF THE KOHLER ENGINE

### Fuel System

- Fuel must be clean - free from water, dirt, and organic material.
- Change fuel filter on a regular basis and when contamination is suspected or found in the fuel.
- On the Model MTEFI, the fuel system is pressurized. Do not attempt to service this fuel system. Contact your Walker dealer or authorized Kohler service dealer for work on the fuel system.

### Starting/Stopping

- For starting in cold weather [below 40° F (4° C)], use the optional cold start lever to release the hydrostatic transmissions from the starter cranking load.
- Start engine with the throttle advanced off idle (1/4 to 1/2 throttle). This will aid starting, especially in cold weather.
- Keep the battery fully charged.
- Match crankcase oil viscosity to the ambient temperature, allowing the engine to crank faster and start easier.
- Use fast idle for stopping engine to avoid run-on or backfiring.

### Cooling System - MT, MTEFI

- Keep engine air intake screen and cylinder head fins free of grass clippings, chaff, and dirt. Inspect intake screen and cooling fins for cleanliness and no damage.
- Periodically remove two access panels in the engine shroud to inspect and clean cylinder head cooling fins.
- Check performance of the cooling system by starting the engine, holding a hand adjacent to the cylinder head, and feeling the cooling airflow.



## DANGER

**Make sure to keep hands clear of exhaust pipe, muffler, and moving parts when checking airflow.**

- Operate the engine at full speed when mowing. This allows the engine to produce full horsepower and move more cooling air through the engine cooling fins.

### Cooling System - MTL

- Fill the cooling system with a **pre-mixed** solution of 50/50 antifreeze (ethylene glycol) and distilled water.

**IMPORTANT:** Solution must be pre-mixed before putting it in the engine (adding pure antifreeze into the radiator may cause damage to the engine by causing overheating).

- **Maintain proper fluid levels** in the radiator and overflow tank.
- Operate the engine at full speed when mowing. This will allow the engine to produce full horsepower and move more cooling air through the radiator.

### Air Cleaner System

- Use **only** Donaldson air cleaner elements. Aftermarket elements may not seal in the air cleaner housing, allowing dirt to enter the engine. Also, aftermarket filters often skimp on the filtration media and require more frequent cleaning and replacement (see following instructions).
- Use the air flow restriction gauge to indicate the need to service the air filter.
- Do frequently check the **Turbine Precleaner** for free movement of the internal fan.
- **DO NOT overservice** or frequently “disturb” the **air filter**. A dirty air filter actually cleans better than a new one. Changing and cleaning the air filter too often can actually reduce filter efficiency and increase the opportunity for traces of dust to enter the engine. Wait until the element really needs servicing as indicated by the air flow restriction gauge.
- When the air filter element is removed or replaced, make sure all **dust is cleaned out** of the **air cleaner housing and hose**. Use a damp cloth and wipe the interior of the canister and hose clean (a little dirt left here will be sucked into the engine and reduce engine life). When the filter is reinstalled, make sure the **element is held tight and straight** in the canister for proper seating and sealing.
- Periodically check the air intake hose for cuts, nicks, etc., and the hose clamps for tightness.

## Oil

- Use only multi-viscosity oils as specified with the viscosity matching ambient temperatures for the engine operating conditions. This will **aid starting** in cold weather and assure proper lubrication in hot weather.
- Use only Kohler oil filters. **Aftermarket filters may not seal properly** and/or have the incorrect pressure relief valve for proper lubrication.

## LUBRICATION

### **WARNING**

**DO NOT attempt to lubricate the machine with the engine running. Disengage the PTO clutch, shut off the machine, and remove the ignition key.**

Proper lubrication is an important maintenance procedure. It reduces wear and makes the machine quieter and easier to operate.

## Engine Oil

### *Engine Break-In Oil*

No special break-in oil is required. The engine is serviced with 10W-30, Service Class SG oil from the factory. Change the oil after the initial engine **break-in period of 5 hours**. Thereafter, change oil **after every 100 hours** of operation (200 hour interval for MTL).

### *Checking Engine Crankcase Oil Level*

Check the engine crankcase oil level before use and **after each 8 hours** of continuous operation.

**IMPORTANT:** The importance of checking and maintaining the proper crankcase oil level cannot be overemphasized. Check the oil level **BEFORE EACH USE**.

1. Park the mower on a **level surface with the engine stopped**. Also, make sure the engine is cool and oil has had time to drain into the sump [allow **at least five (5) minutes** after stopping the engine].


**IMPORTANT: NEVER** check or add oil with the engine running.

2. Before removing the dipstick, clean the area around the dipstick to keep any dirt or debris out of the engine.
3. Remove the dipstick, wipe off with a clean rag, then reinsert the dipstick into the tube and press all the way down.
4. Remove the dipstick again and check the oil level on the dipstick. The oil level should be within the "Operating Range" on the dipstick (between the "L" mark and the "F" mark).

**IMPORTANT: DO NOT** operate engine without a sufficient oil supply in the crankcase. **DO NOT** operate with the oil level below the "L" mark or above the "F" mark on the dipstick.

5. If additional oil is needed, refer to **Specifications** for proper crankcase lubricant. **Fill up to, but not above, the "F" mark on the dipstick.**

**IMPORTANT: DO NOT** overfill the crankcase (oil above "F" mark) as this **CAN** result in engine overheating, loss of power, and possible engine damage.

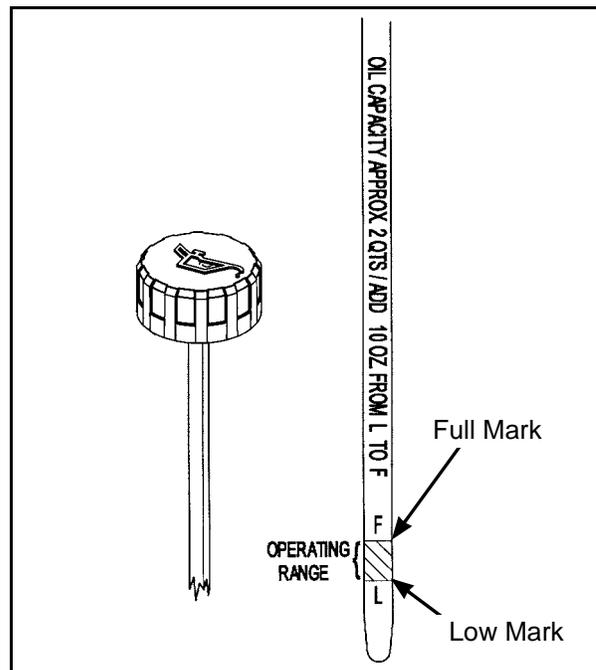


**Dipstick Operating Range**

## Changing Engine Crankcase Oil/Oil Filter

For Model MT and MTEFI, change the engine crankcase oil **after every 100 hours** of operation and replace the oil filter every other oil change (**every 200 hours** of operation).

For Model MTL, change the engine crankcase oil **after every 200 hours** of operation and replace the oil filter at the same time.

1. Park the mower on a **level surface with the engine stopped**. The engine oil should be warm before draining. If not warm from operation, start the engine and run a few minutes to warm the oil.
2. Remove the dipstick and the oil drain plug and drain the oil into a suitable container. Be sure to allow ample time for complete drainage.

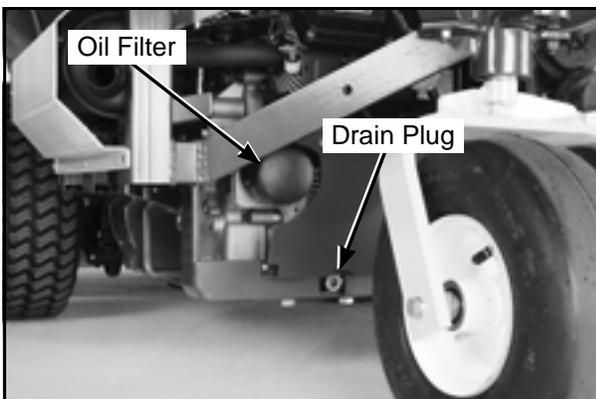

**Oil Drain/Oil Filter Location**

3. Before removing the oil filter, clean the area around the filter to keep dirt and debris out of the engine.
4. Remove the old oil filter and wipe off the filter mounting surface on the engine.
5. Apply a thin coating of clean oil to the rubber gasket on the replacement oil filter.

**IMPORTANT:** Use **ONLY** oil filters from the engine manufacturer (Kohler 12-050-01). After-market oil filters may not seal properly and/or may not have the correct pressure relief valve for proper lubrication.

6. Install the new oil filter on the engine. Turn the filter clockwise until the rubber gasket contacts the sealing surface, then tighten an additional **1/2 turn**.
7. Reinstall the drain plug. Make sure it is tightened to 10 ft-lb (13.6 N·m).
8. Fill the crankcase through the oil filler tube (dipstick opening) with new, clean oil. Use only crankcase lubricants recommended by the engine manufacturer. Refer to **Specifications** in this manual or the engine owner's manual. Use the recommended oil viscosity for the expected ambient temperature. Oil with the correct viscosity will aid starting in cold weather and assure proper lubrication in hot weather. **Fill up to, but not above, the "F" mark** on the dipstick. Crankcase capacity is 1.85 quarts (1.75 liters) plus 1/2 pint (.24 liters) for the new oil filter.

**IMPORTANT:** Check the dipstick reading before adding the last 1/2 pint of oil and **fill only to the "F" mark**. **DO NOT** overfill the crankcase (oil above "F" mark) as this **CAN** result in engine overheating, loss of power, and possible engine damage.


9. Start the engine and check for oil leaks around the oil filter. Stop the engine, recheck the oil level, and add oil if necessary. (When the engine is first operated with a new oil filter, the oil level drops slightly as the filter is filled with oil.)

## Mower Deck Gearbox Lubrication

**NOTE:** These instructions apply to all mower decks with gear-driven blades. Refer to **DSD52 or DSD62 Mower Deck Lubrication** in this section for the DSD52 or DSD62 deck with belt-driven blades.

The mower deck gearboxes (tee gearbox and blade drive gearboxes) are connected as a unitized assembly, and oil flows freely between them. The gearboxes are permanently lubricated (oil filled) and sealed requiring no scheduled lubrication. However, the gearbox oil seals should be checked **every 25 hours** for indication of an oil leak; **particularly the lower seals** on the blade drive gearboxes should be inspected, since they operate in a dirty environment. If an oil leak is noted, replace the oil seal and relubricate the gearbox assembly as follows:

1. Remove gearbox cover (footrest). Deck orientation should be the normal operating position.

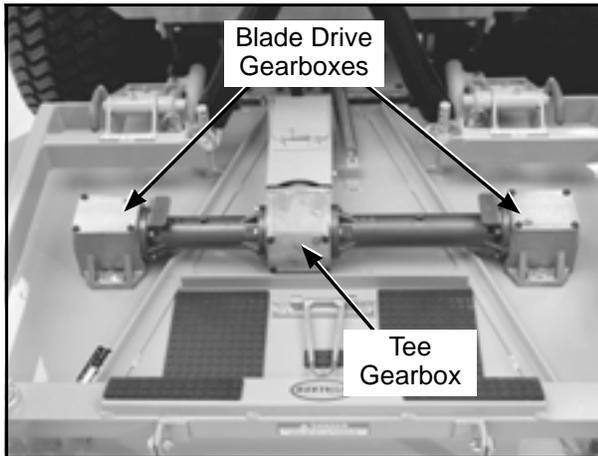

**Mower Deck Gearboxes**  
(shown with gearbox cover removed for clarity)

2. Clean the area around the individual gearbox cover plates to prevent contaminants from entering the gearcase.
3. Remove the screws securing the cover plates on the blade drive gearboxes.
4. Check the level of lubricant in the gearboxes. If the lubricant is low, add SAE E.P. (Extreme Pressure) 80W-90 (API GL-5) gear lube until the oil level is up to (submerges) the horizontal shaft in the gearbox (shaft parallel to cover plate).

**NOTE:** In case the gearboxes are completely drained of oil, approximately 5 fl. oz. (15 cl) of oil per gearbox is required to refill the gear drive assembly.

**NOTE:** Since the gearboxes are connected as a unit by connector tubes, it is necessary to add oil slowly. Allow a few minutes after adding oil for the oil to flow throughout the assembly and the oil level to stabilize before reassembly.


**IMPORTANT: DO NOT** overfill the deck gearboxes. The gearbox assembly is not vented, and overfilling with oil will cause excessive pressure and result in oil leaks.

5. Check condition of the cover gasket and replace if worn or damaged. Reinstall gearbox cover plates; torque screws to 24 in-lb (2.7 N·m).

## DSD52 or DSD62 Mower Deck Lubrication


There are several special lubrication requirements for the DSD52 or DSD62 mower deck in addition to the requirements detailed in the **Chassis and Deck Lubrication** illustration. Lubricate the locations shown in the **Blade Spindle Lubrication** and **Gearbox, Dolly Wheel, and U-Joint Lubrication** photos and check and maintain oil in the belt drive gearbox.

1. Lubricate the blade spindles **every 25 hours** with two (2) shots of SAE general purpose lithium or molybdenum base grease.

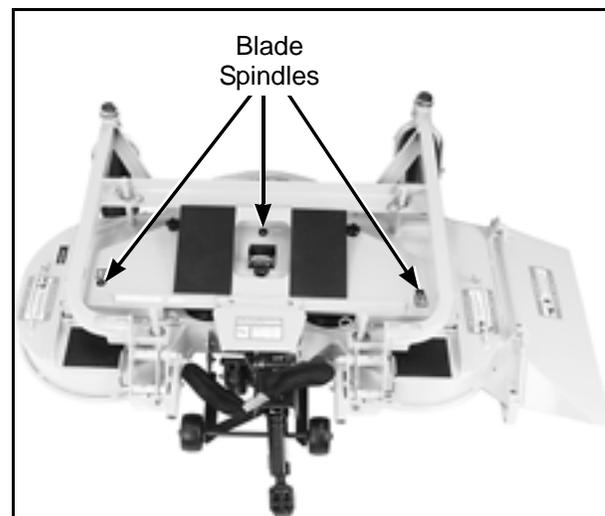

**Blade Spindle Lubrication**

2. Check the oil level in the belt drive gearbox **every 100 hours** (or sooner if a visible oil leak has developed). With the deck in the normal operating position, remove the level plug in the side of the gearcase. Add SAE E.P. (Extreme Pressure) 80W-90 (API GL-5) gear lube to maintain the oil level to the plug. If the oil level is low, check the gearbox for any indication of an oil leak. If an oil leak is noted, the gearbox will need to be removed and rebuilt.
3. Lubricate the dolly wheel pivot **every 25 hours** with general purpose grease.
4. Lubricate the U-Joint in the drive shaft **every 8 hours** with SAE general purpose lithium or molybdenum base grease.

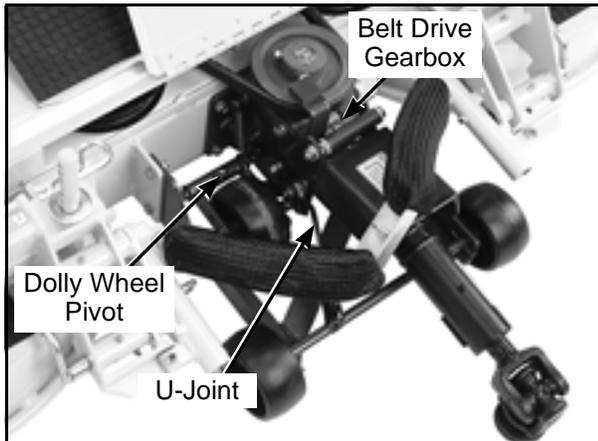

**Gearbox, Dolly Wheel, and U-Joint Lubrication**


## Tractor PTO Gearbox Lubrication

### Checking Gearbox Oil Level

Check the gearbox oil level **every 25 hours**, and if necessary, add oil [SAE E.P. (Extreme Pressure) 80W-90 (API GL-5) gear lube] to maintain oil level to the **FULL** mark on the dipstick.

**IMPORTANT: DO NOT** overfill the PTO gearbox to avoid oil leakage out of the dipstick standpipe.

If the oil level is low, check the gearbox for any indication of an oil leak. If an oil leak is noted, the gearbox will need to be removed and rebuilt.

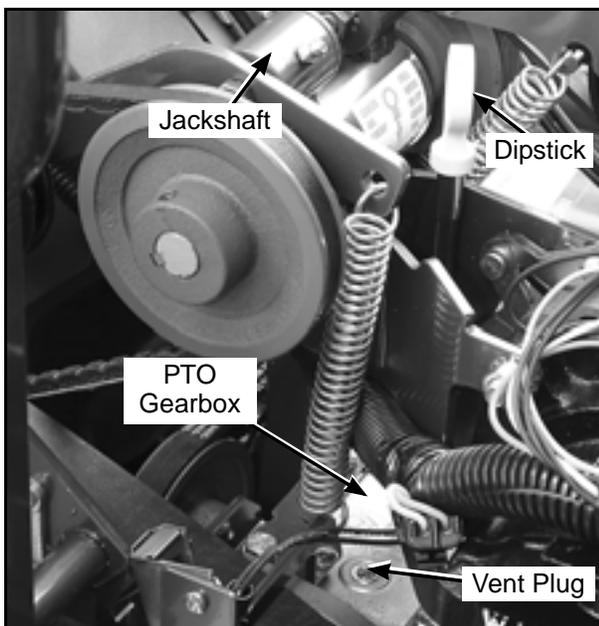

**Dipstick Location, Tractor PTO Gearbox**

### Changing Gearbox Oil

The tractor PTO gearbox is oil filled. No scheduled oil change is required. However, changing the oil **after the first 100 hour break-in period** will extend gearbox life and is recommended.

1. Remove the drain plug in the bottom of the gearcase, drain the oil, and reinstall the plug.
2. Refill the gearbox through the dipstick standpipe using 7 to 8 fl. oz. (21 to 24 cl) of SAE E.P. (Extreme Pressure) 80W-90 (API GL-5) gear lube. Remove plug in top of gearcase to vent air when refilling.
3. Check that the oil level is at the **FULL** mark on the dipstick. **DO NOT** overfill.

### Gear Axle Lubrication

- The gear axle oil lubrication is SAE 80W-90 (API GL-5) gear lube.
- Check the axle oil level **after every 100 hours** of operation by removing the oil level plug. If additional oil is needed, remove the breather vent on top of axle and fill until oil is at the level plug.
- Change axle oil **every 1000 hours** or **two (2) years**.

### Hydrostatic Transmission Fluid

#### Checking Hydrostatic Transmission Fluid Level

Hydrostatic transmission fluid level should be checked **every 25 hours** of machine operation. It is preferable to **check the fluid level when fluid is cold**. Check fluid level as follows:


1. Park the mower on a **level surface**. Stop the engine and wipe dirt and contaminants from around the reservoir cap and air bleed plug.

**IMPORTANT:** Before removing the reservoir cap, clean any dirt from around it. Any dirt or contaminants entering the transmission will accelerate wear and eventually cause loss of power to the drive wheels.

**IMPORTANT:** Removing or breaking the seal within the first 500 hours will void the warranty.

**NOTE:** Check oil level of sealed hydrostatic transmission **after first 500 hours** using a light next to the reservoir.

2. Remove the reservoir cap and check the level of the fluid. The reservoir has a fluid level **COLD** mark and **HOT** mark. The reservoir **oil level should ALWAYS be at or above the COLD mark and NEVER above the HOT mark.**

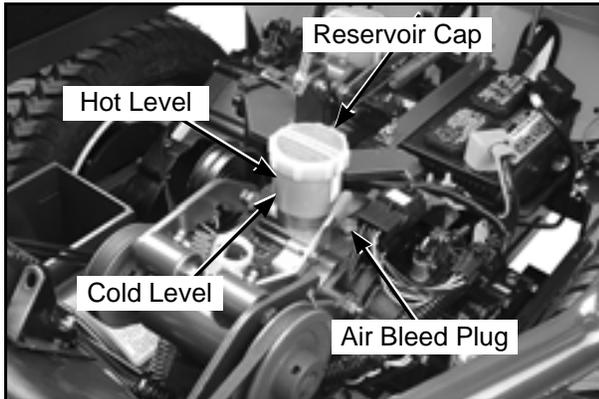

**Transmission Reservoir and Air Bleed Plug Location**

3. If the fluid is below the **COLD** mark (or the transmission is not performing properly), **loosen the air bleed plug** (located on the top of transmission case next to the plastic reservoir).
  - a. If a small amount of fluid leaks from around the air bleed plug:
    - \* The transmission is full of fluid.
    - \* Tighten the plug and fill the reservoir to the **COLD** level mark.
  - b. If no fluid leaks from around the air bleed plug:
    - \* Slowly add fluid into the reservoir until fluid starts to leak from around the plug. (Transmissions are serviced from the factory with **Mobil 1 (15W50) Synthetic Oil**. When it is necessary to add fluid, refer to **Specifications** for the proper fluid.)
    - \* As soon as there is fluid leaking from around the air bleed plug, tighten the plug and fill the reservoir to the **COLD** level mark. Wipe any excess oil off of the transmission housing.

**IMPORTANT: DO NOT overfill** the transmission reservoir. This will result in oil leaking out of the reservoir cap vent when the transmission warms up. It is preferable to add fluid to the transmission when it is cold and **make sure the oil is not above or below the COLD level mark.**

**IMPORTANT:** The transmission reservoir has a fine mesh screen in the bottom to trap dirt and foreign particles from entering the transmission. When filling the reservoir, fluid will **flow quite slowly** through this screen; so it is essential that there is fluid at the bleed plug before the transmission is considered full.

**IMPORTANT:** Any attempt to remove or in any way alter the filtering screen in the transmission reservoir could cause damage to the transmission and will **VOID** any transmission warranty.

### Grease Fitting and Oil Point Lubrication

Lubricate the grease fittings and oil points **after every 25 hours** of operation. Lubricate **more often** when operating in **dusty or dirty conditions**. Use SAE general purpose lithium or molybdenum base grease for grease fittings and light machine oil (SAE 10) to lubricate oil points. **Lubricate the locations shown in the Chassis and Deck Lubrication Points illustration.**

**NOTE:** PTO universal joints (on the deck and tractor) require routine lubrication **after every 8 hours** of running time. Remove tractor PTO quick disconnect tube assembly for easy access to grease fittings.

**NOTE:** The best way to lubricate the PTO tube half of the universal joint assembly is to remove it from the tractor. See instructions for removing and installing PTO quick coupler, refer to *Deck Installation* in **Mower Deck Installation on Tractor** in the **Assembly Instructions**.

| Ident No. | Location   | Lubrication Type | No. Places | Ident No. | Location  | Lubrication Type | No. Places |
|-----------|--|------------------|------------|-----------|---|------------------|------------|
| 1         | Deck Caster Wheel Fork Pivot                             | Grease           | 2          | 25        | Brake Actuator Rod and Brake Band Pivot Pins (Clevis) | Oil              | 3          |
| 2         | Deck Caster Wheel Bearing                                | Grease           | 2          | 26        | Brake Actuator Pivot                                  | Grease           | 1          |
| 3         | Tee Gearbox, Deck  | Oil*             | 1          | 27        | Catcher Hinge Point                                   | Oil              | 2          |
| 4         | Blade Drive Gearbox                                      | Oil*             | 2          | 28        | Rear Wheel Bearings                                   | Grease           | 2          |
| 5         | Universal Joint Shaft Assembly                           | Grease**         | 1          | 29        | Engine Oil  | Oil***           | 1          |
| 6         | Pivot Assembly, Tilt-Up Deck                             | Grease           | 4          | 30        | Choke Control Cable Ends (Models MT and MTL only)     | Oil              | 2          |
| 7         | Deck Support Arm Socket                                  | Grease           | 2          | 31        | Belt Tightener Pivot, Blower Drive (GHS Model Only)   | Grease           | 1          |
| 8         | Body Hinge Point   | Oil              | 2          | 32        | Belt Tightener Pivot, Ground Drive                    | Grease           | 1          |
| 9         | FSC Actuator Rod Pivot Pins                              | Oil              | 2          | 33        | PTO Gearbox Dipstick                                  | Oil***           | 1          |
| 10        | FSC Lever Pivot  | Grease           | 1          | 34        | Hydrostatic Drive                                     | Oil***           | 2          |
| 11        | FSC Lever Fork (Grease Slide Area)                       | Grease           | 1          | 35        | Choke Control Pivot (Models MT and MTL only)          | Oil              | 1          |
| 12        | (FSC) Friction Body Pivot                                | Grease           | 1          | 36        | Throttle Control Pivot                                | Oil              | 1          |
| 13        | Steering Lever Pivot                                     | Grease           | 4          |           |   |                  |            |
| 14        | Deck Support Arm Pivot                                   | Grease           | 2          |           |   |                  |            |
| 15        | Deck-to-PTO Coupling (Grease Slide Area)                 | Grease           | 1          |           |   |                  |            |
| 16        | Universal Joint Tube Assembly                            | Grease**         | 1          |           |   |                  |            |
| 17        | Universal Joint Quick Connect Spline (Grease Slide Area) | Grease           | 1          |           |   |                  |            |
| 18        | Parking Brake Lever                                      | Grease           | 1          |           |   |                  |            |
| 19        | Gear Axle  | Oil***           | 2          |           |   |                  |            |
| 20        | Belt Tightener Pivot, Jackshaft Drive                    | Grease           | 1          |           |   |                  |            |
| 21        | Throttle Control Cable Ends                              | Oil              | 2          |           |   |                  |            |
| 22        | Clutch Actuator Push Rod                                 | Grease           | 2          |           |   |                  |            |
| 23        | PTO Clutch Lever Pivot                                   | Grease           | 1          |           |   |                  |            |
| 24        | Belt Tightener Pivot, PTO Clutch                         | Grease           | 1          |           |   |                  |            |


  

\* Gearboxes are permanently lubricated and sealed requiring no scheduled lubrication. Oil level should be checked only when an oil leak is noted. Refer to **Mower Deck Gearbox Lubrication** in this section.

\*\* Grease every eight (8) hours.

\*\*\* Refer to **Gear Axle Lubrication, Engine Oil, Tractor PTO Gearbox Lubrication, and Hydrostatic Transmission Fluid** in this section.

**NOTE:** DGHS42 Tilt-Up Deck is shown for reference. For other Deck Lubrication Points, Refer to Deck and Carrier Frame **Illustrated Parts Manual**.

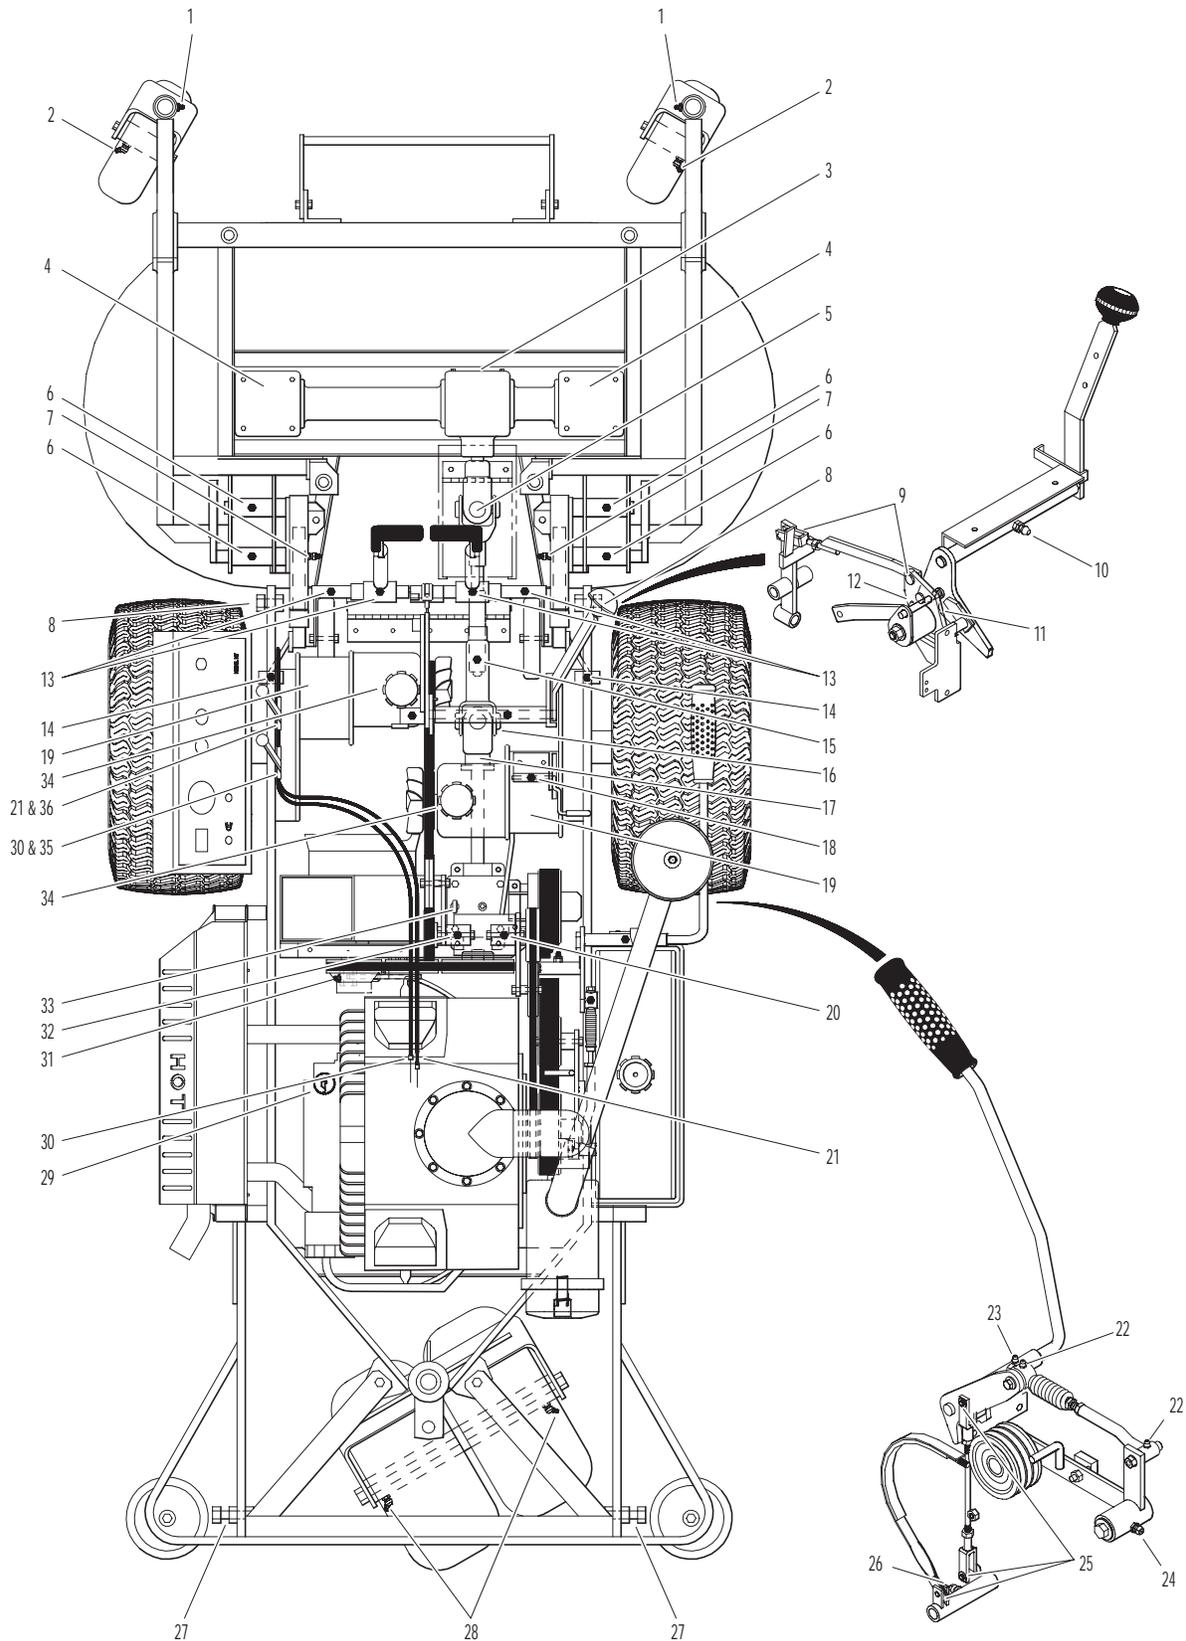

**Chassis and Deck Lubrication Points**

## CLEANING

### Engine Air Cleaner System


There are two main components in the engine air cleaner system: a turbine precleaner and a Donaldson Radialseal™ air cleaner. Each component is checked, cleaned and maintained on a different schedule based on the filtering action required. Each component is serviced as follows:

### *Turbine Precleaner*

The turbine precleaner is mounted on a remote air intake tube connected to the Donaldson air cleaner. A spinning fan driven by the intake airflow separates dust from the air, giving the initial stage of air cleaning. Dust particles are exhausted through a single small vent in the side of the housing. Since no dust is trapped, the precleaner operates without cleaning. The only maintenance required is to check the operation of the internal fan **every 100 hours**. Verify operation:

1. Look into the exhaust vent while shining a light into the intake.
2. Start the engine and watch the fan begin to spin as the throttle is advanced.

If the fan is not spinning, service or replace the pre-cleaner as required.

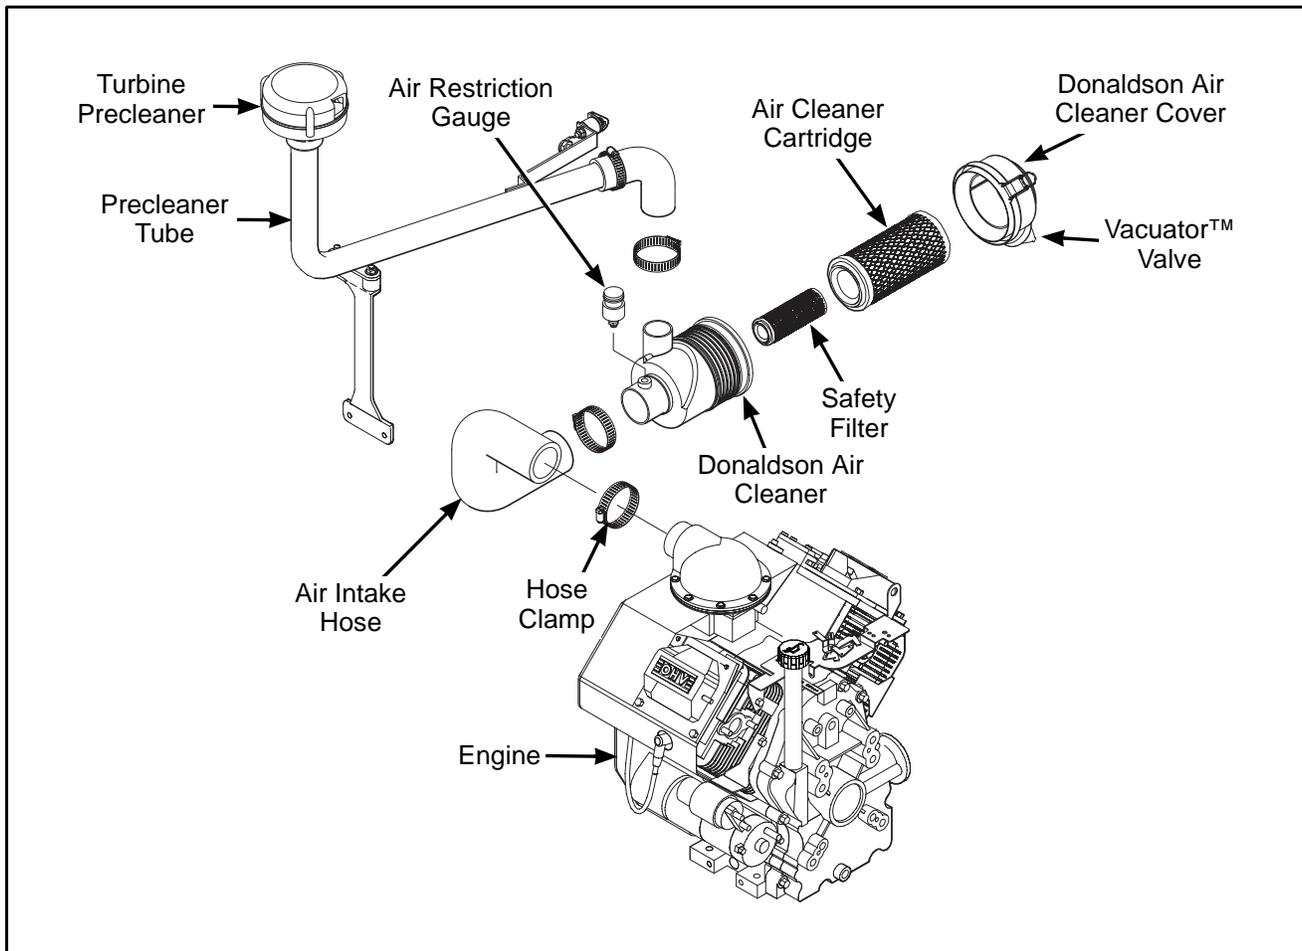


**Engine Air Cleaner System Components**

## Donaldson Radialseal™ Air Cleaner


A remote mounted Donaldson Radialseal™ air cleaner provides the air filtering function. The paper filter element slides over an outlet tube inside the air cleaner canister with **radial** sealing action, eliminating the possibility of dust leaks due to improper filter installation. Intake design, internal baffling, and a Vacuator™ valve provide dust separation and automatic precleaning action. Daily or frequent servicing of the air cleaner **is not required**. Use the air restriction gauge on the air cleaner outlet to indicate when the air filter needs servicing -- a red flag will appear when the filter is overly restricting airflow into the engine.

**IMPORTANT:** Use **only** Donaldson air filter elements for replacement (Donaldson P822686 or Walker 5090-1). Aftermarket filters may not seal properly or filter efficiently.

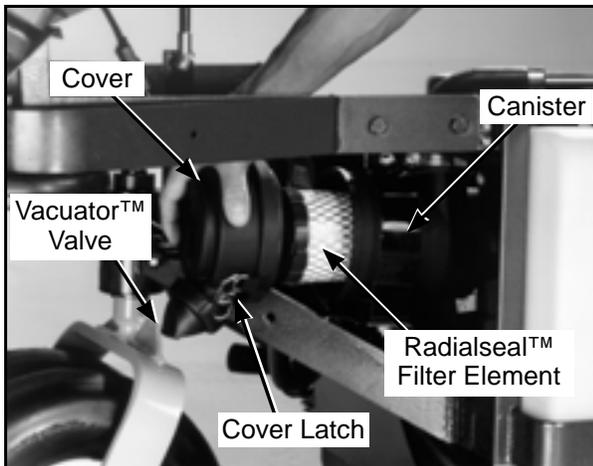

**Air Cleaner Components  
(shown with cover being removed)**

**IMPORTANT:** The Donaldson air cleaner uses a dry paper-type air filter element. **NEVER** apply oil to the paper element.

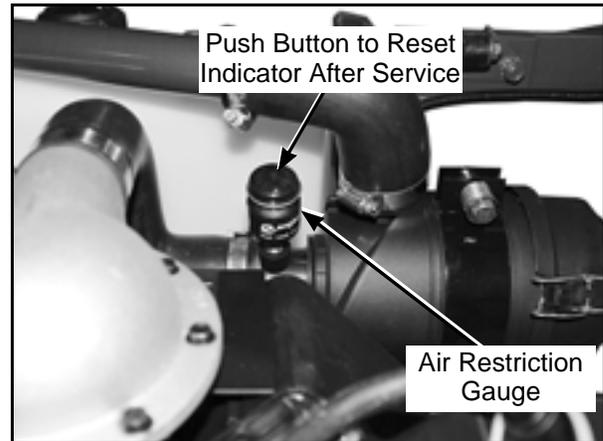

**Air Restriction Gauge Location**

Inspect the paper element **after every 100 hours** of service and **replace** the element and safety filter **yearly** (or when dirty or damaged). More frequent replacement may be required when operating in extremely dusty conditions as indicated by the air restriction gauge. Service the air cleaner as follows:

1. Release the top and bottom cover latches and remove the air cleaner cover. Wash the cover and Vacuator™ valve. Check that these components are in good condition. The Vacuator™ valve is subject to wear and deterioration and should be replaced **yearly** or when damaged. The lips of the valve should close and fit together; any cracks, deformation, or wear in the valve is cause for replacement.
2. Remove the filter element by pulling it out of the canister. There will be some initial resistance as the filter seal breaks loose and slides off of the outlet tube. **Gently** move the end of the filter up and down and side to side or twist to loosen the seal. Use gentle action to minimize the amount of dust dislodged as the filter is removed.
3. Replace the filter element.

**NOTE:** Washing the element in water or cleaning solution is **not recommended**. Do not try to clean the element with compressed air.


4. Use a bright light inside the element to inspect for damage. Check the element very carefully for **pin holes or other damage** that will allow dirt to leak through the paper media. Replace element if necessary.
5. Without removing, visually inspect the condition of the safety filter for damage or holes. The safety filter should only be removed for yearly replacement (or when dirty or damaged).
6. Check the condition and resilience of the radial sealing surface (inside of the open end) of the filter. Replace the filter if any cracks, tears, or other damage to the sealing surface are noted.
7. Use a clean, damp cloth and wipe the interior of the air cleaner canister clean. Use special care to clean **both the inside and outside** surfaces of the outlet tube.

**IMPORTANT:** Any dust left on the inside of the outlet tube will go into the engine and cause wear.

8. Check the outside surface of the outlet tube for smoothness and cleanness (this is the sealing surface).
9. Insert and seat the safety filter and Radialseal™ element carefully into the canister, applying pressure at the outer rim of the filter; not at the flexible center. Make sure the filter element is completely in place before installing the cover.


**IMPORTANT: DO NOT** use the cover latches to force the filter into the canister -- the cover should fit on with **no extra force**.

**NOTE: DO NOT** use petroleum based lubricants on the sealing surfaces of the filter; use talcum powder or dry silicone lubricants if required for filter installation.

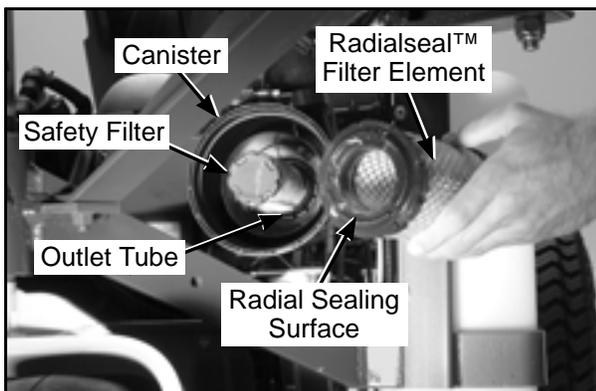

**Air Filter Element Replacement**

10. Install the cover with the word "TOP" properly oriented to the top of the canister. Give the cover a slight twist as it reaches the canister to make sure the tab inside the cover goes into a slot, otherwise the cover will not fit properly. Make sure both the top and bottom cover latches are securing the cover in place.

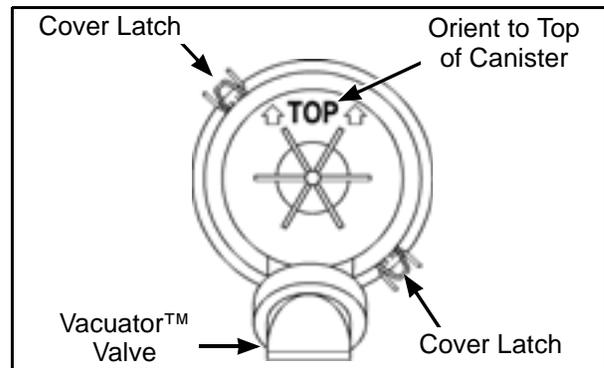

**Proper Orientation of Air Cleaner Cover**

11. Check the air intake hose for cuts, nicks, cracks, etc., and the hose clamps for tightness.
12. Reset the air restriction indicator (press button on the end of indicator).

## Engine Cooling System - MT and MTEFI

### Air Intake System

To prevent engine overheating and possible engine damage, clean grass clippings, chaff, and dirt from the rotating engine air intake screen **after every 8 hours of operation**. In certain mowing conditions (dry grass, leaves, tree "cotton", etc.), it may be necessary to check and clean the screen several times each day to prevent engine overheating.

### CAUTION

**Operating the engine with a blocked air intake screen, dirty or plugged cooling fins, and/or cooling shrouds removed will cause engine damage from overheating.**


## Cylinder Head Cooling Fins

It is essential for performance and longevity of the air-cooled engine to keep the cylinder head cooling fins clean and free of obstruction. After **every 8 hours** of operation, check the performance of the cooling system by starting the engine, holding a hand adjacent to the cylinder head, and feeling the cooling airflow. If there is little or no airflow, clean the cooling fins as described below.


 **DANGER**

**Make sure to keep hands clear of exhaust pipe, muffler, and moving parts when checking airflow.**

**Every 100 hours**, inspect and clean the cooling fins (more often when operating in extremely dusty, dirty conditions). Remove the two (2) cooling fin access panels in the engine shroud and clean the cooling fins and external surfaces using compressed air. Make sure to reinstall the access panels before operating the engine.

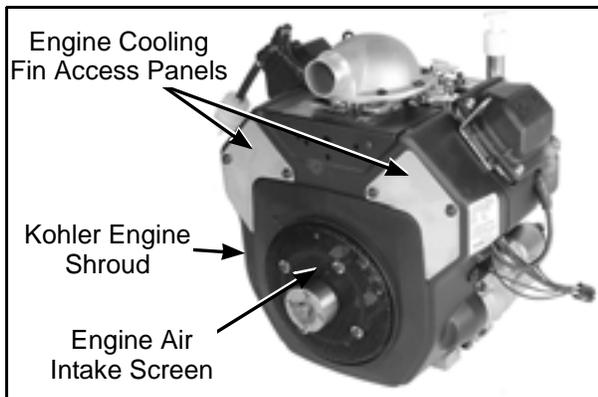

**Engine Air Intake Screen and Cooling Fin Access Panels**

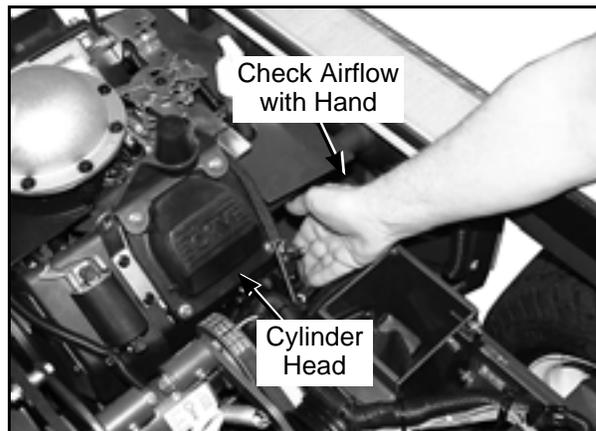

**Cooling System Airflow**

## Engine Cooling System - MTL

### Radiator Screen and Cooling Fins

To prevent the engine from overheating and possible engine damage, clean grass clippings, chaff, and dirt from the fine mesh radiator intake screen **daily**. In certain mowing conditions (dry grass, leaves, tree "cotton", etc.), it may be necessary to check and clean the screen several times during use to prevent engine overheating.

1. Remove the screen. To clean the screen, wash with soapy water or blow out with compressed air.
2. Inspect the radiator cooling fins for material lodged in this area which would restrict cooling airflow. Use pressurized air or water to clean. **DO NOT use any tool, like a screwdriver or knife**, to clean material out of the fins as this may damage the cooling fins. **DO NOT** use cold water on a hot radiator.

**NOTE:** Directing pressurized air or water from the fan side of the radiator outward is recommended to dislodge material packed on the outside of the cooling fins. **DO NOT** use cold water on a hot radiator.

 **WARNING**

**Radiator and engine parts can become extremely hot during operation. Wear gloves and avoid touching hot parts while cleaning the radiator screen and cleaning debris away from the engine and cooling system.**

## Flushing Radiator and Changing Coolant

Change engine coolant **every year**. Drain the coolant from the engine and radiator:

1. Remove the radiator cap.
2. Open the drain cocks on the engine block and radiator (see the Kohler Owner's Manual for location of the drain cocks). Also, drain the coolant recovery tank.
3. If there is any **indication of deposits** or scaling inside the radiator, use a commercial scale remover and **flush the cooling system** thoroughly before adding fresh coolant.

Use a pre-mixed 50/50 solution of antifreeze (ethylene glycol) and distilled water to refill the cooling system.

**IMPORTANT:** The solution of antifreeze and water must be thoroughly pre-mixed before putting it in the engine. Adding pure antifreeze into the radiator may cause damage to the engine from overheating.


**IMPORTANT:** Maintain **proper coolant level** in the radiator and coolant recovery tank. The coolant level should be maintained between **FULL** and **LOW** marks on the coolant recovery tank. **Recheck** the coolant level after the first time the engine has been operated after filling the coolant system (it would be normal to add a little coolant after initial operation).

## Grass Buildup in Mower Housing

### **DANGER**

**Before raising or removing the mower deck for cleaning, stop the engine, remove the ignition key, and disconnect the spark plug wires.**

1. **Raise** the deck lock lever handle on each side of the carrier frame **and pull out** to release carrier frame for tilting action.
2. Using the carrier frame lift handle, raise deck to the **TILT-UP** position and insert the deck hook into the tilt-up latch on the tractor body.

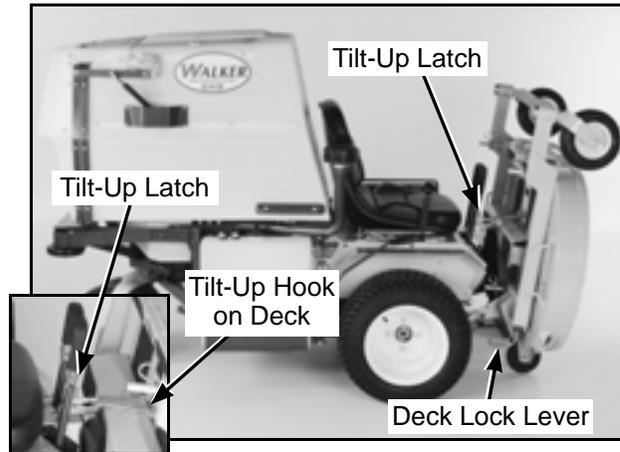

**Deck Secured in TILT-UP Position**

### **DANGER**

**Do not operate the mower with deck in tilt-up position. Do not move the tractor with the deck in the tilt-up position.**

3. Clean grass buildup underneath the deck using a pressure washer (and scraper if required).

**NOTE:** While some degree of material buildup in the mower deck housing can be tolerated, a point is finally reached **where cutting quality deteriorates and clogging begins to occur** because of too much buildup on the baffling and housing.

4. Lower the deck to the normal operating position and re-engage the deck lock levers.

### **CAUTION**

**Do not operate machine with deck tilt-up pivot joint unlocked.**

## GHS Blower

Normally, the GHS blower operates with no maintenance or cleaning. However, when mowing **grass that is dirty and damp** (especially springtime mowing), a deposit of dirt may accumulate inside the blower housing, causing wear and binding of the blower wheel. When operating in these conditions, **inspect the blower frequently for dirt buildup.**

**NOTE:** A visual clue of binding of the blower wheel is the blower **blade tips are polished** from rubbing on dirt.

When a dirt deposit is found, use a high pressure washer or water spray to clean the inside of the housing as follows:




### **DANGER**

**Before attempting to wash the blower, stop the engine, remove the ignition key, and disconnect the spark plug wires.**

1. Remove the GHS blower drive belt tension by depressing the idler pulley on the tightener arm. Roll the belt off the blower pulley. The belt should be clear of the blower pulley, allowing **free movement** of the blower wheel.

**IMPORTANT:** With the belt removed, the blower wheel **must spin freely**. Any binding or dragging of the wheel is an indication of dirt buildup. This **buildup must be cleaned** to avoid abrasive wear of the blower blades, excessive power loss and eventual loss of blower performance (clogging).

2. Use a pressure washer or water spray, and direct the spray inside the blower housing against the blower blades. Water pressure will cause the blower wheel to begin to spin and the combination of spinning action and water will effectively wash the inside of the housing. Spray may be directed against the blower blades vertically and horizontally to cause rotation in both directions for thorough washing action. **Wash blower until the blower wheel spins freely** in both directions.
3. Reinstall the GHS blower drive belt by reversing the removal procedure.

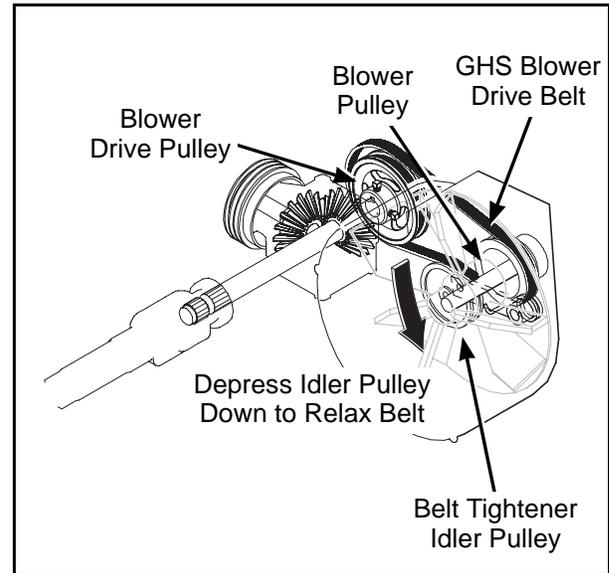

**Collapse Blower Belt Tightener to Remove GHS Blower Drive Belt**

## GHS Exhaust Screen

Refer to **Cleaning the GHS Exhaust Screen** in **Operating Instructions**.


## Hydrostatic Transmission Cooling Fins

Keeping the cooling fins on the hydrostatic transmissions clean and free of obstruction is **essential to avoid overheating** the transmission fluid and shortening transmission life. The cooling fins should be checked **every 100 hours**; and cleaned if necessary.

To clean the fins, use compressed air and/or a pressure washer. The cooling fins extend all the way around the housing -- the fins underneath need to be clean as well as the more visible fins above. Also, pay close attention to the area under the drive pulley.

**IMPORTANT:** In case an oil leak develops on the input shaft, the cooling fan blowing dusty air and oil on the transmission will **quickly** pack the cooling fins with **oily dirt**. If this condition occurs, replace the seal immediately to avoid overheating and damaging the transmission. The input shaft assembly and seal are easily replaced without removing the transmission from the machine.

An additional procedure in maintaining transmission cooling is to inspect the cooling fans. Replace the fan(s) if blades are missing or damaged.

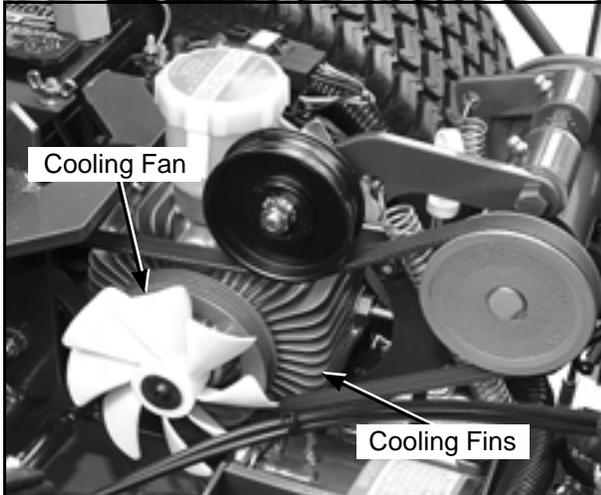

**Hydrostatic Transmission Cooling Fins**

## CHECKING/SERVICING



### **DANGER**

To prevent accidental starting of the engine when servicing or adjusting the machine, remove the key from the ignition switch and disconnect the spark plug wires.


## Engine Cooling System - MTL

### *Coolant Level*



### **WARNING**

**NEVER** remove the radiator pressure cap when the engine is hot — hot water could spray and cause a burn if the cap is taken off too soon.

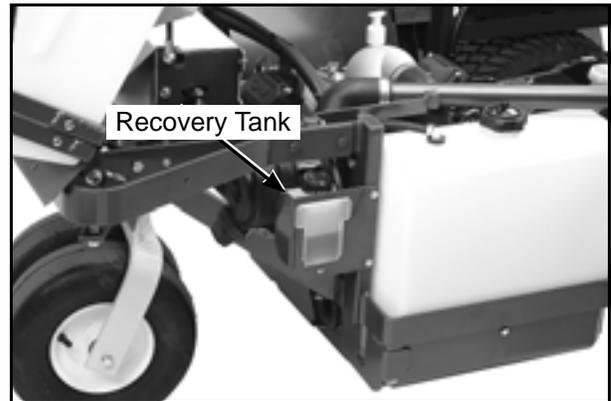

**Model MTL Overflow Tank**

Check the coolant level in the coolant recovery tank and **maintain the coolant level between the FULL and LOW marks on the recovery tank**. When the engine is cold, the coolant level should be at or slightly above the **LOW** mark on the recovery tank.

If the coolant level is low, remove the radiator cap and fill to the overflow port level and then fill the recovery tank above the **LOW** mark. Use a pre-mixed 50/50 solution of antifreeze (ethylene glycol) and distilled water to fill the cooling system.

**IMPORTANT:** The coolant solution of antifreeze and distilled water must be thoroughly pre-mixed before putting it in the engine (adding pure antifreeze into the radiator may cause damage to the engine by causing overheating).

## Security of Air Filtration Components

**NOTE:** The following inspection is **only an external inspection** and should be done without “**disturbing**” the filtration components.

On a daily basis, visually inspect the external condition of the complete air cleaner system. The following items should be inspected:

1. Check the Donaldson Radialseal™ air cleaner canister for damage. Make sure the cover is in place and the cover latches are secure - do not run the engine without the air cleaner cover in place and secure.
2. Inspect both air intake hoses for cracks, nicks, cuts, etc., and check the hose clamps for tightness.
3. Check to make sure the air flow indicator is in place and tight.

## Battery

**NOTE:** For initial battery service during setup, refer to **Battery Service** in **Assembly Instructions**.

**IMPORTANT:** Make sure battery is securely mounted in the frame. A loose battery may cause damage to the case resulting in acid leakage and severe damage to the machine. A hazard may be created by damage to critical working parts and safety systems.



### CAUTION

#### Important Battery Service, Installation, and Changing Tips for MTEFI/MTLEFI:

- Do not allow the battery cables to touch opposing terminals. When connecting battery cables attach the positive (+) cable to positive (+) battery terminal first, followed by negative (-) cable to negative (-) battery terminal.
- Never start the engine when the cables are loose or poorly connected to the battery terminals.
- Never disconnect battery while engine is running.
- Never use a quick battery charger to start the engine.
- Never "jump start" the engine using another source. Electricity fluctuations can damage the ECU (Electronic Control Unit).
- Do not charge battery with key switch "on."
- Always disconnect negative (-) battery cable lead before charging battery, and also unplug harness from ECU before performing any welding on equipment.

#### Electrolyte Level

The battery electrolyte level should be checked **after every 25 hours** of operation. To check electrolyte level:

1. Remove battery cell filler caps.
2. Check the electrolyte level. If the level is below the bottom of the vent well, fill with drinking water to the bottom of the vent wells [1/4 to 1/2 in. (6 to 13 mm) above the plates].
3. Replace filler caps.

**IMPORTANT: DO NOT** overfill the battery. Electrolyte will overflow through the vented caps onto parts of the machine and **WILL** result in severe corrosion.

#### Cleaning the Terminals

If battery terminals are corroded, **remove battery** from the mower. Using a wire brush, remove corrosion with a solution of **one part baking soda and four parts water**. Rinse with clean water. Coat the terminals with petroleum jelly or terminal protector spray to retard further corrosion.

#### Charging the Battery

Check the battery charge by measuring the specific gravity of electrolyte; if specific gravity is less than 1.225, the battery will need to be charged as follows:

1. Charge the battery at 15 amps for 10 minutes. **DO NOT** exceed 20 amps maximum recommended charging rate. Charge until specific gravity is at least 1.250. Total charging time should not exceed one (1) hour.
2. After charging the battery, use drinking water to adjust the electrolyte level to the bottom of the vent wells [1/4 to 1/2 in. (6 to 13 mm) above the plates].



### DANGER

#### BATTERIES PRODUCE EXPLOSIVE GASES

- Charge the battery in a well-ventilated area, so that gases produced while charging can dissipate.
- Keep sparks, flames, and smoking materials away from the battery at all times.
- Make sure the battery cap vents are open (check manifold vent on each cap).
- Make sure the battery charger is unplugged before connecting or disconnecting cables to the battery.

### Tire Pressure

Inflate tires to pressures shown below:

Deck Caster Wheel = 20 PSI (137 kPa)  
 Drive = 15 PSI (103 kPa)  
 Rear = 20 PSI (137 kPa)

### Wheel Bolt Torque

Check **every 100 hours** the eight (8) lug bolts that mount the drive tires. They should be torqued to 75 to 85 ft-lb.

### Sharpen Mower Blades

Check mower blade(s) for **straightness, sharpness, condition of the cutting edge**, and **balance every 10 hours** of operation (or more often when mowing abrasive type grass or operating on sandy soils). **Replace blades if worn, bent, cracked, or otherwise damaged** (refer to **REPLACING/REPAIRING the Mower Blades** in this section). Use the following procedure to check and sharpen blades:

**NOTE: Keep blades sharp** - cutting with dull blades not only yields a poor mowing job but slows the cutting speed of the mower and causes extra wear on the engine and blade drive by pulling hard.

1. Stop the engine, remove ignition key, and disconnect the spark plug wires **before** raising the mower deck to service blades.
2. Raise the deck and secure it in the **TILT-UP** position. Refer to **CLEANING the Grass Buildup in Mower Housing** in this section for deck raising instructions.



### DANGER

**NEVER operate cutter blades with the deck in the raised position.**

**NOTE:** PTO shaft must be **disconnected** before checking blades for straightness.

3. Check the blades for **straightness** by marking the blade tip position inside the deck housing, and then rotating the opposite end of the blade to the same position and comparing. If the difference in blade tip track is **more than 1/8 in. (3 mm)**, the blade is bent and **should be replaced**.



### WARNING

**DO NOT try to straighten a blade that is bent. NEVER weld a broken or cracked blade. ALWAYS replace with a new blade to assure safety.**


4. If the blade cutting edge is **dull or nicked**, it should be sharpened. Remove blades for sharpening by grasping the end of the blade using a rag or a thick, padded glove, while loosening and removing the nut, lock washer, and flat washer that mounts the blade.
5. Grind cutting edge at the same bevel as the original. Sharpen only the top of the cutting edge to maintain sharpness.

**NOTE:** Blades can be sharpened with an electric blade sharpener, conventional electric grinder, or a hand file.




### CAUTION

**ALWAYS wear eye protection and gloves when sharpening a blade.**

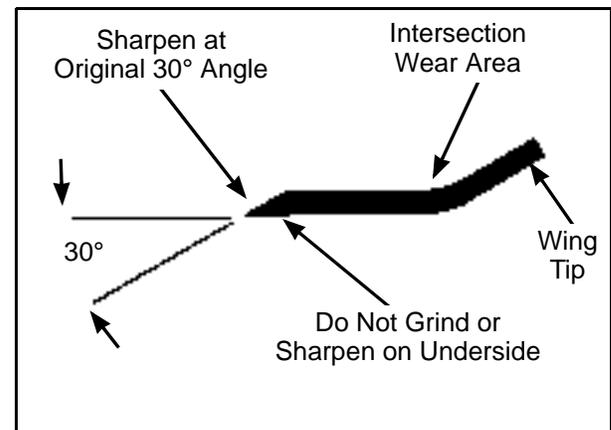

**Mower Blade Profile For Sharpening**

6. Check blade balance by positioning the blade **horizontally** on a blade balancer or use a nail or shaft through the center hole. If either end of the blade rotates downward, grind (remove) metal on that end until the blade will balance. The blade is properly balanced when neither end drops. Balance of a blade is generally maintained by removing an equal amount of material from each end of the blade when sharpening.

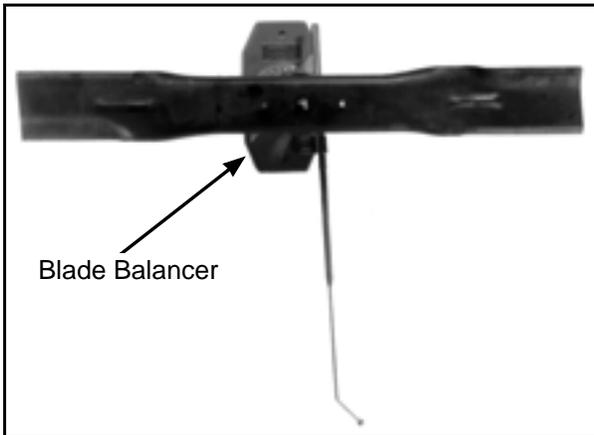

**Blade Balanced on Magnetic Wall-Mounted Balancer**

7. Mount the blade with wing tips pointing up into the housing. Reinstall the blade, washer, lock washer, and nut. **Tighten the nut to 60 ft-lb (81.3 N·m).**

**NOTE:** When reinstalling blades on **GHS** models, remember, the **blades turn toward each other** (counter-rotate) and the RH and LH blade cannot be switched. Check for proper blade rotation before installing blades on the deck. Refer to **Blade Rotation for GHS Mower Deck** illustration shown in **Clogging Checklist** in **Operating Instructions** for correct blade rotation.

### Drive Belts

Raise the body and inspect the condition of the four (4) belts (3 belts on SD models) **every 25 hours** of operation - engine PTO drive, jackshaft drive, hydrostatic ground drive, and GHS blower drive. If the belts show **signs of cracking or deteriorating**, the belts should be **replaced**. Refer to **REPLACING/REPAIRING the Drive Belts** in this section.

### Mower Deck Gearbox Oil Seals

The mower deck gearbox seals should be inspected **every 25 hours** for evidence of oil leaking; **particularly the lower oil seal on the blade drive gearbox**. This seal is protected by the trash guard on the blade hub and seal protector plate on the housing, but is still vulnerable to seal damage due to operating in an adverse environment. The mower blade must be removed for inspection of the seal, so it is recommended to **inspect the gearbox seals when blades are removed for sharpening**. If an oil leak is noted, the seal should be replaced and the gearbox assembly relubricated. Refer to **LUBRICATION for Mower Deck Gearbox Lubrication** in this section.

### Spark Plugs

**Every 200 hours** of operation, remove the spark plugs, inspect, clean, and reset the gap (or replace with **new plugs**). Before removing the spark plugs, clean the area around the base of the plugs to keep dirt and debris out of the engine. Clean spark plugs with a wire brush. **DO NOT** use an abrasive grit type cleaner. If the electrodes are burned short or pitted, replace plugs with Champion® type RC12YC [MT & MTEFI (or equivalent)] or RC14YC [MTL & MTLEFI (or equivalent)]. Check spark plug gap with a wire-type feeler gauge and set the gap at 0.030 in. (.76 mm). Reinstall and tighten to between 18 and 22 ft-lb (24.4 to 29.8 N·m).

### Ignition Wires

Good preventive maintenance calls for complete **replacement** of spark plug wires **every two (2) years**.

### Fuel Lines and Clamps

**NOTE:** The MTEFI system is pressurized and should be serviced by a Walker dealer or Authorized Kohler engine service outlet.

**Every year**, inspect the fuel supply line from the tank to engine for deterioration or damage. Also, inspect the fuel line **clamps for tightness**. Good preventive maintenance calls for complete **replacement** of fuel lines and clamps **every two (2) years**.

### Radiator Hoses and Clamps - MTL

Inspect the radiator hoses **every 200 hours** for deterioration or damage. Also check the tightness of the hose clamps. Good preventive maintenance calls for complete **replacement** of the radiator hoses and clamps **every two (2) years**.

### Blade Brake Action



#### **WARNING**

**It is important to check and maintain blade brake action for safe operation of the machine.**

Check the function of the cutter blade brake (and blower brake on GHS models) by engaging the blade clutch (PTO), operating the engine at full throttle, then disengaging the clutch and measuring how quickly the blades stop. Watch the rotation of the blade drive shaft and blower pulley as a visual indication that movement has stopped. If the brake is **working properly, all rotation will stop five (5) seconds after disengagement** of the clutch. If the brake system malfunctions - blades do not stop in five (5) seconds - adjust or repair the brake before operating the mower.

### PTO U-Joints

The PTO U-joints should be inspected **yearly** for looseness and wear. If either is noticed, the respective shaft or tube should be replaced. A worn U-joint can cause vibration and extensive damage to the PTO and deck gearboxes.

## REPLACING/REPAIRING



### **DANGER**

To prevent accidental starting of the engine when replacing parts or repairing the machine, remove the key from the ignition switch and disconnect the spark plug wires.


**IMPORTANT: ALWAYS** use genuine factory replacement parts. Substitute parts **CAN** result in product malfunction and possible injury to the operator and/or others.

## Drive Belts

There are **four (4) individual belts** on GHS models or **three (3)** belts on SD models:

- Jackshaft Drive Belt
- Engine PTO Drive Belt (3 Groove Power Band)
- GHS Blower Drive Belt (GHS Model Only)
- Hydrostatic Ground Drive Belt

The belts may be removed and replaced using the **procedures described on the following pages.**

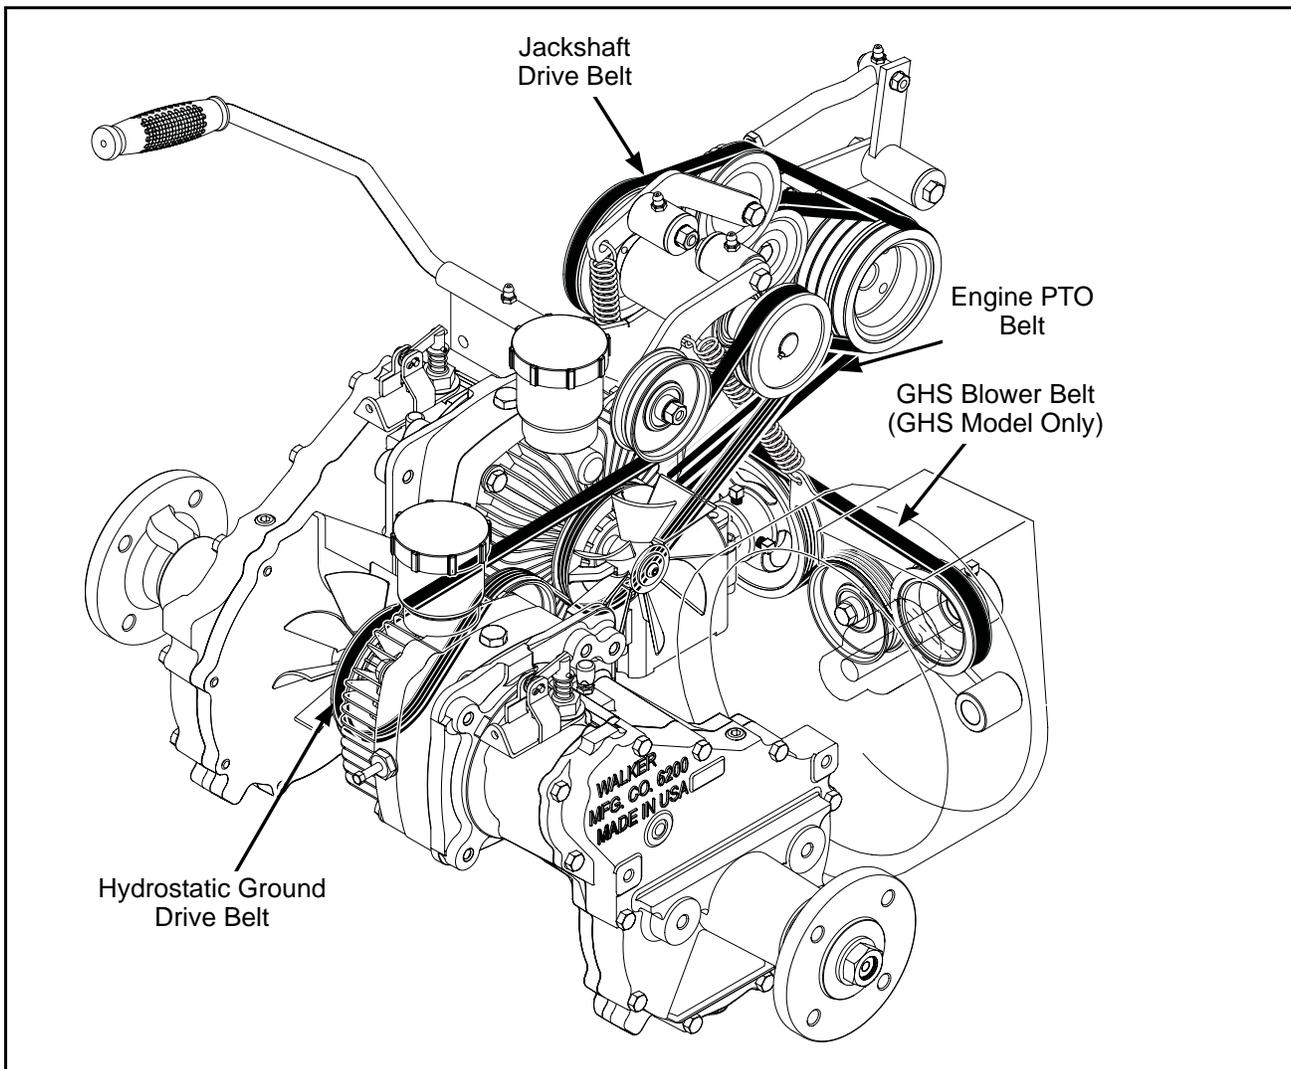

**Belt Locations**

## Engine PTO Drive Belt (3 Groove Power Band)


1. To remove the engine PTO drive belt:
    - a. Remove the jackshaft drive belt from its idler pulley (by pushing down on idler pulley) and let the belt drop down out of the way.
- NOTE:** Step (a) is not essential to removing the PTO belt, but it makes more room to work with the PTO belt.
- b. Push the clutch idler pulley down (until the PTO belt tightener stop block contacts the frame) and then shift the belt off the idler pulley (to the inside).

- c. Raise the clutch lever (engage position) to lift the clutch idler away from the belt.
  - d. Next remove the belt from the engine pulley and then the PTO drive pulley.
2. Install the PTO drive belt by reversing the removal procedure.

**IMPORTANT:** Make sure the belt is installed **inside** the four (4) belt guide pins.

Check and make the following adjustments:

- a. Clutch engagement for proper belt tension.
- b. Clutch disengagement and brake action.

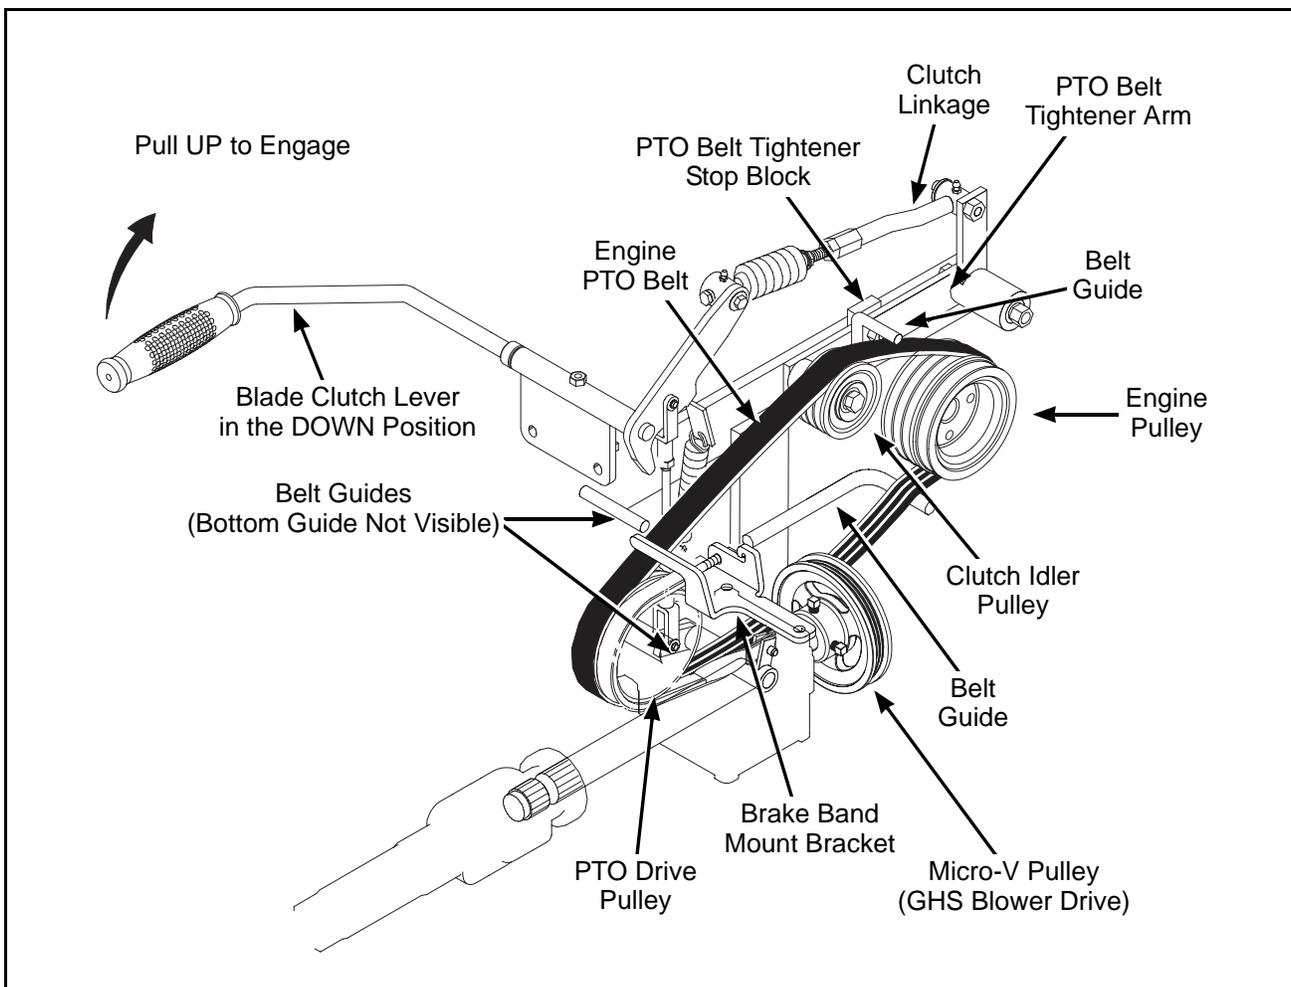

**Engine PTO Drive Belt Removal**


## Jackshaft Drive Belt

1. To remove the jackshaft drive belt:

a. Remove the engine PTO drive belt, as described in previous section.


b. Relax the belt by depressing the spring-loaded idler arm.

c. Roll the belt off the jackshaft pulley and remove.

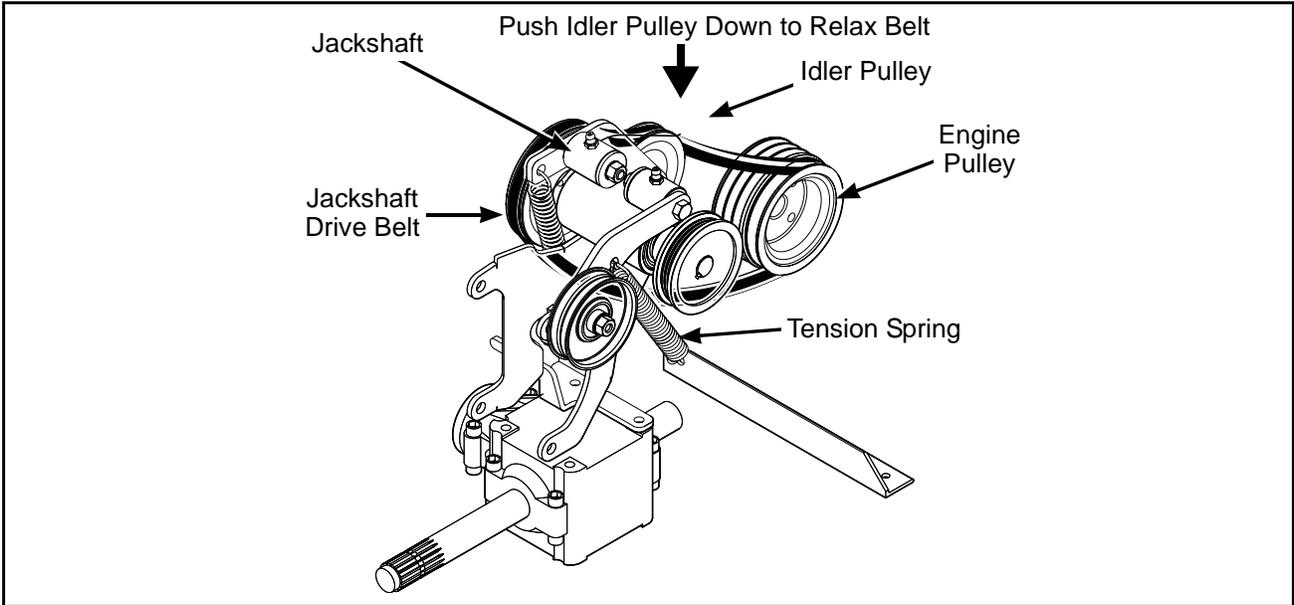

**Jackshaft Drive Belt (Disengaged)**


2. Reverse the removal procedure to replace the jackshaft drive belt.

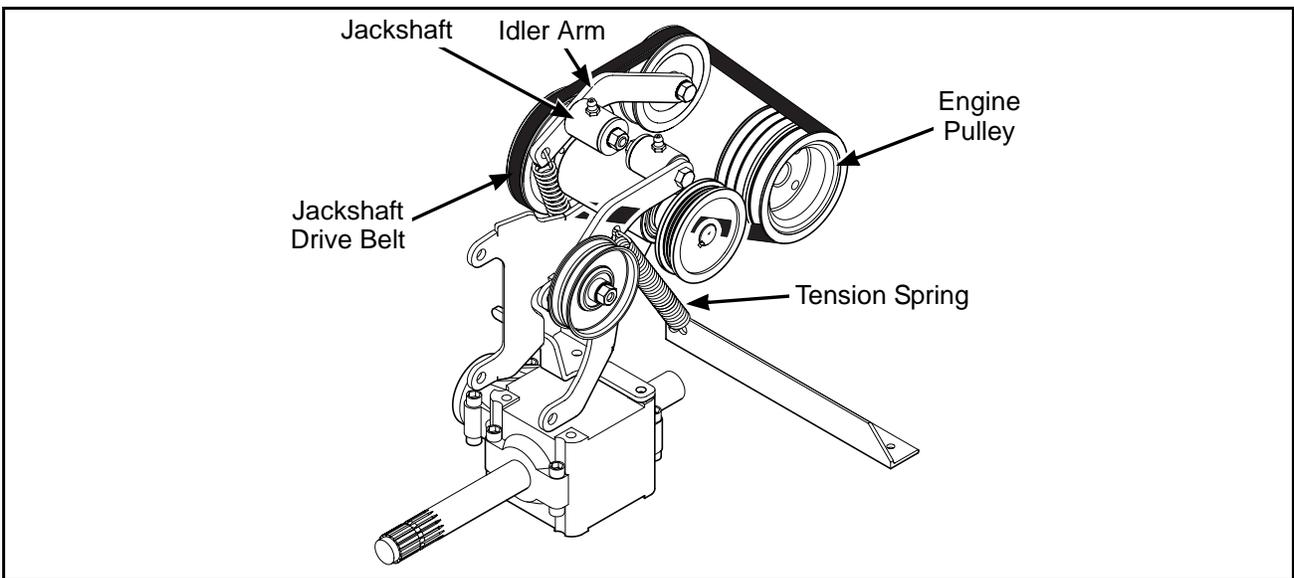

**Jackshaft Drive Belt (Engaged)**


## *GHS Blower Drive Belt*

1. Remove the GHS blower drive belt tension by depressing the idler pulley on the tightener arm. Roll the belt off the blower pulley and remove.

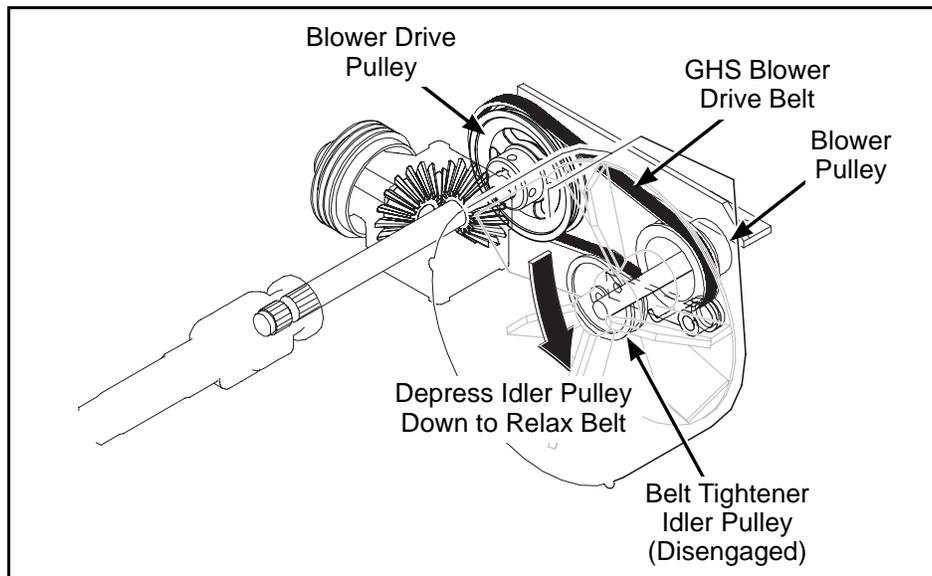

**GHS Blower Drive Belt Assembly (Disengaged)  
Blower Drive Belt Spring Removal**

2. Reverse the procedure to install the GHS blower drive belt.

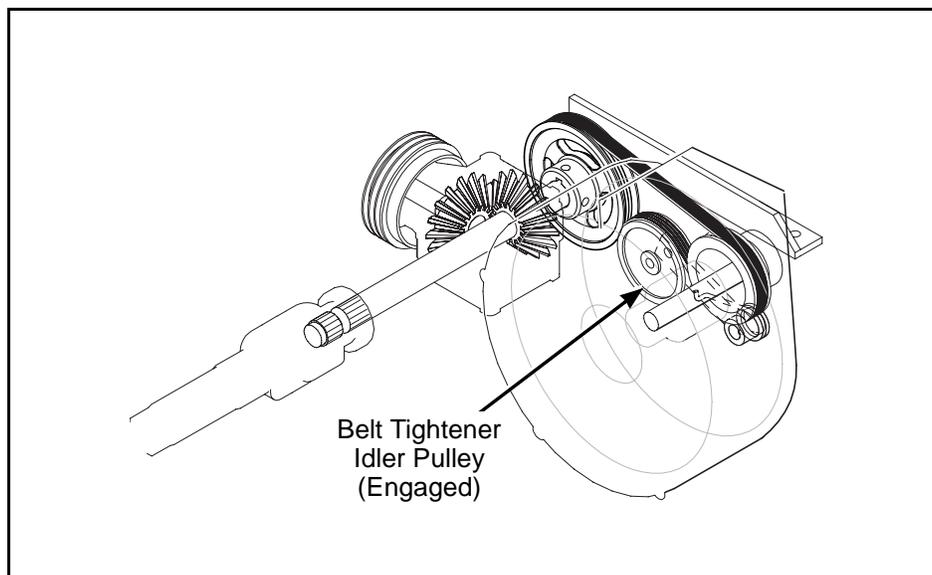


**GHS Blower Drive Belt Assembly (Engaged)**

## *Hydrostatic Ground Drive Belt*

1. To remove the hydrostatic ground drive belt:


- a. Raise the spring-loaded belt tightener arm and idler pulley to relax belt.

b. Slide belt off pulleys, then release the idler.

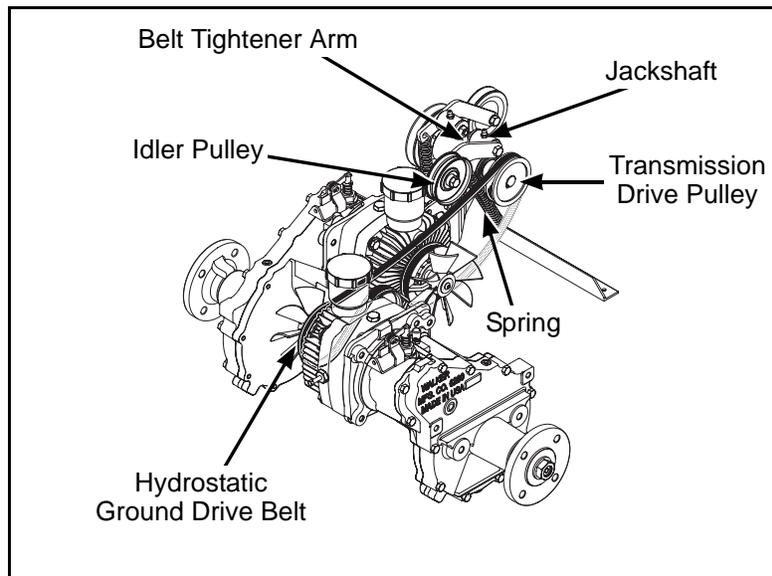

**Hydrostatic Ground Drive Belt Assembly (Disengaged)**


2. Reverse the procedure to install the hydrostatic ground drive belt.

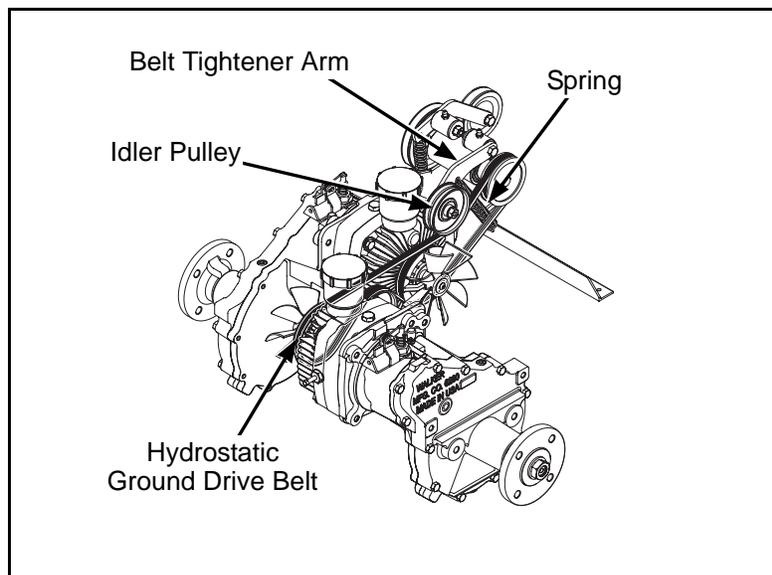

**Hydrostatic Ground Drive Belt Assembly (Engaged)**

## Fuel Filter - Model MT and MTL

Models MT and MTL are each equipped with an in-line fuel filter. Visually inspect the filter periodically, and replace the filter **yearly**.

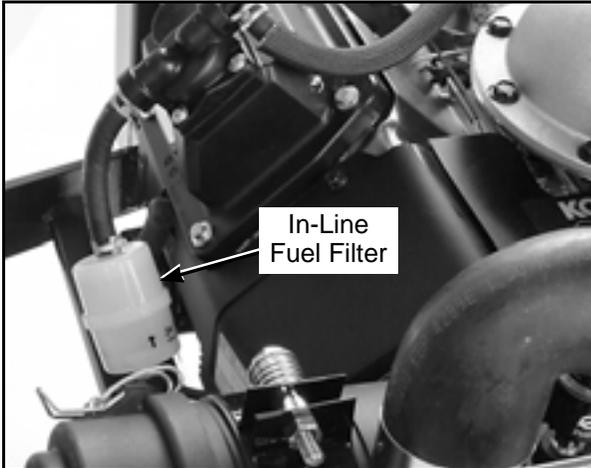

**Fuel Filter Location**

**IMPORTANT:** Replace the fuel filter only in a clean area where the fuel line and connections will not be contaminated by any dust and dirt.

### **DANGER**

**Gasoline is extremely flammable and can be highly explosive. To minimize danger:**

- Use only an approved fuel container for gasoline.
- **DO NOT** allow open flames or sparks near the machine while performing maintenance or refueling; **DO NOT** smoke while working with fuel.
- Wipe up spilled gasoline immediately and completely.

1. Expand and slide clamps on either side of the filter away from filter and pull fuel lines off filter.
2. Replace filter.

## Fuel Filter - MTEFI and MLEFI

### **WARNING**


**The MTEFI fuel system operates under high pressure. This system should be serviced by a Walker dealer or authorized Kohler service dealer.**

Model MTEFI is equipped with a high-volume, high-pressure, 10-15 micron, in-line fuel filter. Replacement of this filter is recommended **every 1500 hours** of operation or more frequently under extremely dusty or dirty conditions. Because the MTEFI has a pressurized fuel system, fuel filter replacement should be done by a Walker dealer or authorized Kohler service dealer.

### Blade Overload Shear Bolts

**NOTE:** Shear bolts are not used on the DSD52 or DSD62 mower deck.

The cutting blade is keyed to the blade hub by **two (2) shear bolts** (10-24 x 5/8 in. stainless steel machine screws). These bolts are designed to shear and protect the blade drive gearbox from damage if the blade encounters a shock load.

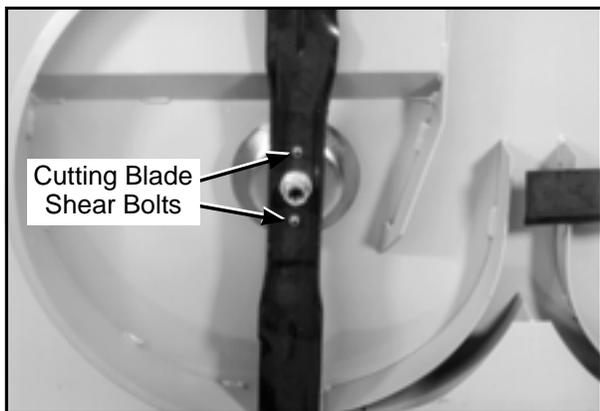

**Cutting Blade Shear Bolts**

**NOTE:** Tightening the **5/8-18 blade mounting nut to 60 ft-lb (81.3 N·m)** is also important for proper shock load protection. It is important to **not over-tighten** the mounting nut since this defeats (over-rides) the function of the shear bolts.

If these bolts shear, remove the blade and install new bolts. Refer to **CHECKING/SERVICING** in this section for **Sharpen Mower Blades** which describes the blade removal and installation procedure.


After reinstalling the blade, check blade timing by moving blades through **one (1) complete revolution**. Make sure blade tips pass clear of each other. If timing is incorrect, contact your Walker Dealer.

### PTO Shear Pin

The PTO drive shaft connection to the deck gearbox has a shear pin to provide shock load protection to the mower deck drive. This system provides **primary shock protection** in case of blade impact and will normally shear before the individual shear bolts on the blade hub.

When the PTO pin has sheared, use the following procedure to replace it:

1. Loosen the two bolts securing the PTO shaft guard on the deck; lift the guard off. (Holes in guard are slotted for easy removal.)
2. Rotate U-joint on shaft to align the shear pin hole with the hole (and shear pin fragment) in the shaft. Use a punch to drive the remaining portion of the old shear pin out.
3. Install new shear pin and secure with cotter pin.

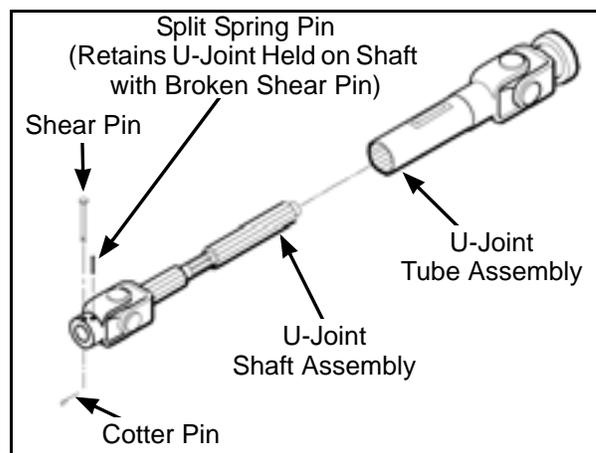

**PTO Shear Pin**

**IMPORTANT:** Use only Walker P/N 8067-13 shear pins for replacement to provide proper shock protection -- these pins are hardened to shear under a specific amount of load.

4. Reinstall the PTO shaft guard.

**NOTE:** Use Walker P/N 8067-10 for heavy duty gearboxes.

Before operating the deck, inspect the blade overload shear bolts and also check blade timing (on gear driven decks) by moving blades through **one (1) complete revolution**. Make sure blade tips pass clear of each other. If timing is incorrect, contact your Walker Dealer.

### Mower Blades

Mower blades are removed and remounted as described in **Sharpen Mower Blades** instructions. During the course of sharpening and inspecting mower blades, if there are **any of the following conditions of wear or damage, blades should be replaced** for reasons of safety and performance of the machine:

- An excessive amount of the **flat section** of the blade has been **ground away** (removed) when the blade is sharpened. Replace the blade **when less than a 3/4 in. (19 mm) flat section remains** at the blade tip.
- Examine ends of the blade carefully, especially the intersection where the flat section of the blade turns up to form the “wing tip” (refer to **Mower Blade Profile for Sharpening** illustration in **Sharpen Mower Blades** instructions). Since sand and abrasive material can wear metal away in this area, the blade should be **replaced when metal thickness has worn to 1/16 in. (1.6 mm) or less.**



#### **DANGER**

When blades are operated over sandy soil, and if blades are allowed to wear, a “slot” may be worn into the wing tip of blade. Eventually a piece of the blade may break off creating a serious potential for injury or damage.

- Check the blades for **straightness** by marking blade tip position inside the deck housing and then rotating the opposite end of the blade to the same position and comparing. If the difference in blade tip track is **more than 1/8 in. (3 mm)**, the blade is bent and **should be replaced.**
- Inspect the blade surface, especially in formed areas, for **cracks**. Replace the blade if any cracks are found.



#### **WARNING**

**DO NOT** try to straighten a blade that is bent. **NEVER** weld a broken or cracked blade. **ALWAYS** replace with a new blade to assure safety.

Reinstall the blades following procedure in **CHECKING/SERVICING** for **Sharpen Mower Blades** instructions. If blades are replaced, always use **Walker original equipment blades** to ensure safety and optimum performance. The quality and performance of **replacement blades offered by other manufacturers** cannot be guaranteed, they could be dangerous.




#### **CAUTION**

**ALWAYS** use genuine factory replacement parts. Substitute parts **CAN** result in product malfunction and possible injury to the operator.

## ADJUSTMENTS

### Steering Levers


An adjustment range of approximately 3 inches is available on the steering levers - the levers can be adjusted forward or aft depending on the arm length of the operator. The levers can be adjusted by loosening the locknut at the pivot point and the locknut holding the lever in position in the adjustment slide. Adjust levers into most comfortable position and tighten both locknuts.

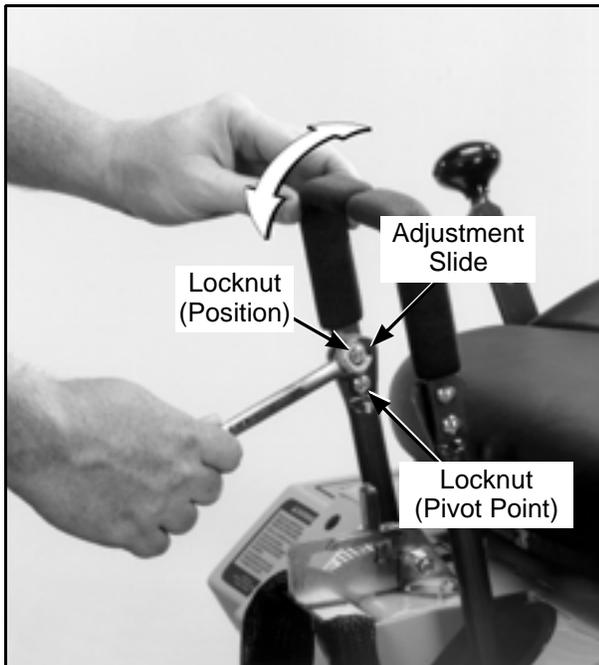

**Steering Lever Adjustment**

### Tilt-Up Deck Adjustable Stop

When the carrier frame hinge joint is properly adjusted, the deck lock levers should move in and out of the engaged and disengaged positions freely. Adjustments are made by loosening the jam nut and tightening or loosening the set screws on the Deck Mount Pivot Brackets. Retighten the jam nut when the adjustment is complete.

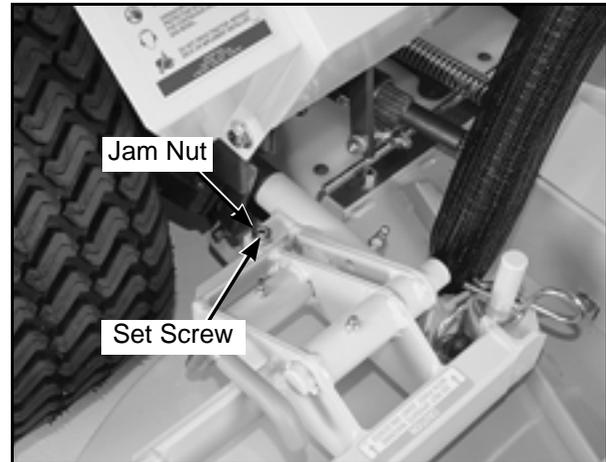

**Tilt-Up Deck Adjustable Stop**

## GHS Signal Horn Adjustment (When Horn Sounds at Wrong Time)

The vertical position of the Grass-Pak<sup>®</sup> switch is critical to make sure the catcher box does not overflow causing the delivery chute to clog. The vertical position can be adjusted by bending the mounting bracket for the Grass-Pak<sup>®</sup> switch.


1. Position the discharge chute so that it is pointing straight back.
  - a. Turn the ignition switch **ON** and move the blade clutch to the **ENGAGED** position (engine not running).
  - b. Open the catcher back door and monitor the spout position (as it oscillates) and move the blade clutch to the **DISENGAGED** position and turn the ignition switch to the **OFF** position.



### **WARNING**

**DO NOT test the Grass-Pak<sup>®</sup> switch with the engine running. Projectiles CAN be thrown out of the grass delivery spout and CAN cause serious injury to bystanders or property damage.**

2. Measure from the exhaust screen (top of catcher) to the top of the Grass-Pak<sup>®</sup> switch actuator vane, as shown. The proper measurement should be between 4 and 4-1/2 inches (10.16 and 11.43 cm).

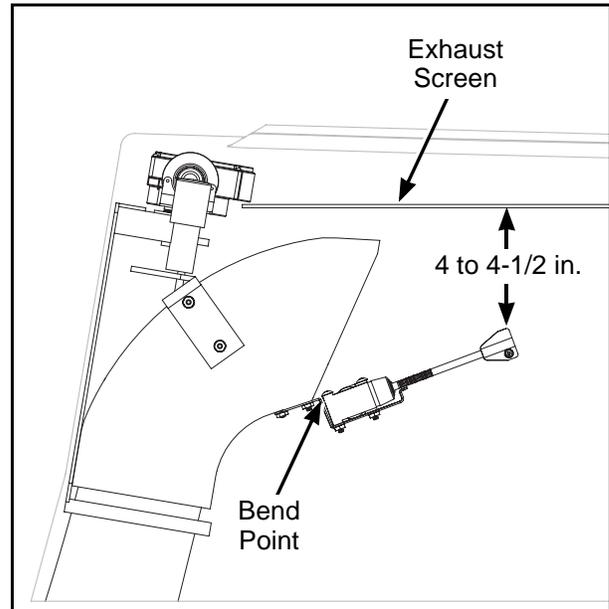


### **Adjusting the Grass-Pak<sup>®</sup> Switch (Side view of Catcher Box)**

3. If adjustment is required, hold the Grass-Pak<sup>®</sup> switch mount bracket firmly, grasp the switch and bracket and bend it down. Adjustments should be done in very small increments checking the measurement each time until the recommended measurement is achieved. This measurement is applicable to all catcher box sizes.

**NOTE:** It will not be possible to adjust the switch to give a signal at the precise instant the catcher is full for a wide variety of mowing conditions. For example, wet heavy grass will fill the catcher differently than dry fluffy grass, causing the signal to come on a little sooner or later than usual. Primarily, the switch should be adjusted to give the "full" signal with a **little advance warning before overflowing and clogging** of the grass delivery chute begins (regardless of mowing conditions).



## Operator's Notes

A large, empty rectangular box with a thin black border, intended for the operator to write notes. The box occupies most of the page below the header.

# LIMITED WARRANTY FOR WALKER COMMERCIAL RIDER MOWER

## 1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within one (1) year\* after date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Kohler Engine  
Kubota Engine  
Kawasaki Engine  
Eaton Hydraulic Transmission  
Peerless Gearboxes  
Battery  
Tires

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

\* An extended three (3) year warranty is offered on the Walker P/N 6200-9 Gear Axle Assembly.

## 2. WHAT THIS WARRANTY DOES NOT COVER:

- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Owner's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

## 3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

## 4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### *Sound - Model MT*

#### Sound Test

Sound test conducted was in accordance with Council Directive 2000/14/EEC and was performed on 28 February 06 under the conditions listed:

**Lwa**  
**100**

General Condition: Clear

**LpA**  
**85**

Temperature: 18° (C), (65 F)

Wind Speed: < 2 m/s

OPERATOR Humidity: 20%

Barometric Pressure: 83.8 kPA

### *Sound - Model MTEFI*

#### Sound Test

Sound test conducted was in accordance with Council Directive 2000/14/EEC and was performed on 28 February 06 under the conditions listed:

**Lwa**  
**100**

General Condition: Clear

**LpA**  
**85**

Temperature: 18° (C), (65 F)

Wind Speed: < 2 m/s

OPERATOR Humidity: 20%

Barometric Pressure: 83.8 kPA

### *Sound - Model MTL*

#### Sound Test

Sound test conducted was in accordance with 79/113/EEC and was performed on 26 June 02 under the conditions listed:

**Lwa**  
**101**

General Condition: Clear

**LpA**  
**90**

Temperature: 50 (F)<sup>o</sup>10 (C)<sup>o</sup>

Wind Speed: < 5 mph (< 8 kmh)

OPERATOR Humidity: 52%

Barometric Pressure: 24.9" HG (759 mmHg)

### *Sound - Model MTLEFI*

#### Sound Test

Sound test conducted was in accordance with Council Directive 2000/14/EEC and was performed on 28 February 06 under the conditions listed:

**Lwa**  
**100**

General Condition: Clear

**LpA**  
**85**

Temperature: 18° (C), (65 F)

Wind Speed: < 2 m/s

OPERATOR Humidity: 20%

Barometric Pressure: 83.8 kPA

### *Vibration - Model MT*

#### Vibration Level

**0.8g**

Vibration levels at the operators handles were measured in the vertical, lateral, and longitudinal directions using calibrated vibration test equipment.

### *Vibration - Model MTEFI*

#### Vibration Level

**0.8g**

Vibration levels at the operators handles were measured in the vertical, lateral, and longitudinal directions using calibrated vibration test equipment.

### *Vibration - Model MTL*

#### Vibration Level

**0.8g**

Vibration levels at the operators handles were measured in the vertical, lateral, and longitudinal directions using calibrated vibration test equipment.

### *Vibration - Model MTLEFI*

#### Vibration Level

**0.4g**

Vibration levels at the operators handles were measured in the vertical, lateral, and longitudinal directions using calibrated vibration test equipment.

# WALKER MOWERS™

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614  
FORM NO. 040107 PRINTED IN USA [www.walkermowers.com](http://www.walkermowers.com) ©2007 WALKER MFG. CO