




WALKER

Illustrated Parts Manual

S14i

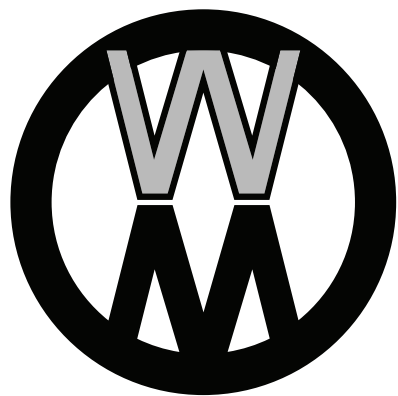

Beginning S/N: 154257
P/N 5000-42

KEY TO ABBREVIATIONS USED IN THIS MANUAL

<i>Abbreviation</i>	<i>What it Represents</i>
° (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
AT	All-Terrain
CCW	Counter-clockwise
Conn.	Connector
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal.	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz.	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt.	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SD	Side Discharge
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
Spg.	Spring
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
Term.	Terminal
V	Volts

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

ILLUSTRATED PARTS LIST


<i>Section of Tractor Covered</i>	<i>Page</i>	<i>Section of Tractor Covered</i>	<i>Page</i>
Decals		Electrical Components	
Tractor Decals	2	Electrical Assembly	22
Body / Chassis Assemblies		Electrical Assemblies (GHS 7.0 Bushel Components).....	24
Body / Chassis Assembly	4	Electrical Connectors.....	26
Rear Body Assembly.....	6	Maintenance	
Tractor Components		Lubrication Points	28
Main Component Power Transmission	8	Wiring Schematic	30
Engine Group	10	Maintenance And Service Record Sheet.....	31
Hydrostatic Ground Drive Assemblies.....	12	Warranty	
Steering Control Assemblies.....	14	Limited Warranty	33
GHS Group	16		
GHS Powerfil® Assembly (7.0)	18		
GHS 7.0 Bushel Catcher Assembly.....	20		

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQ'D GHS
Walker Product Decals				
1	5800-11	Walker (8" Round)	7.0 Bushel Catcher (one on each side)	2
2	5813-2	Decal, 4" Grass-Pak Powerfil®	Powerfil® Cover Plate	1
3	9804-1	Axle Lockout	Chassis	2
4	8600-43	LH Fender	Body, LH near Seat	1
5	8821-22	Decal, S14i	Body	1
6	5856-1	Made in USA	Body	1
7	8600-45	RH Fender	Body, RH near Seat	1
Danger Decals Warning Decals Caution Decals				
8	8600-10	Danger, Pinch Point	7.0 Bushel Catcher Mounting Frame Assembly (one on each side)	2
9	8600-12	Danger, Engine Exhaust	Engine	1
10	8600-4	Danger, Rotating Blower Blades	Body, Near Body Chute	1
Maintenance Decals				
11	5869	Removable Screen	7.0 Bushel Catcher Removable Screen	1
12	5855	Important, Engine Cooling	Engine	1
13	5082-5	Fuel Recommendations	Engine	1
14	5802-4	Engine Service Light	Body	1
15	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1

NOTE: All parts requiring decals are shipped with decals applied.

TRACTOR DECALS

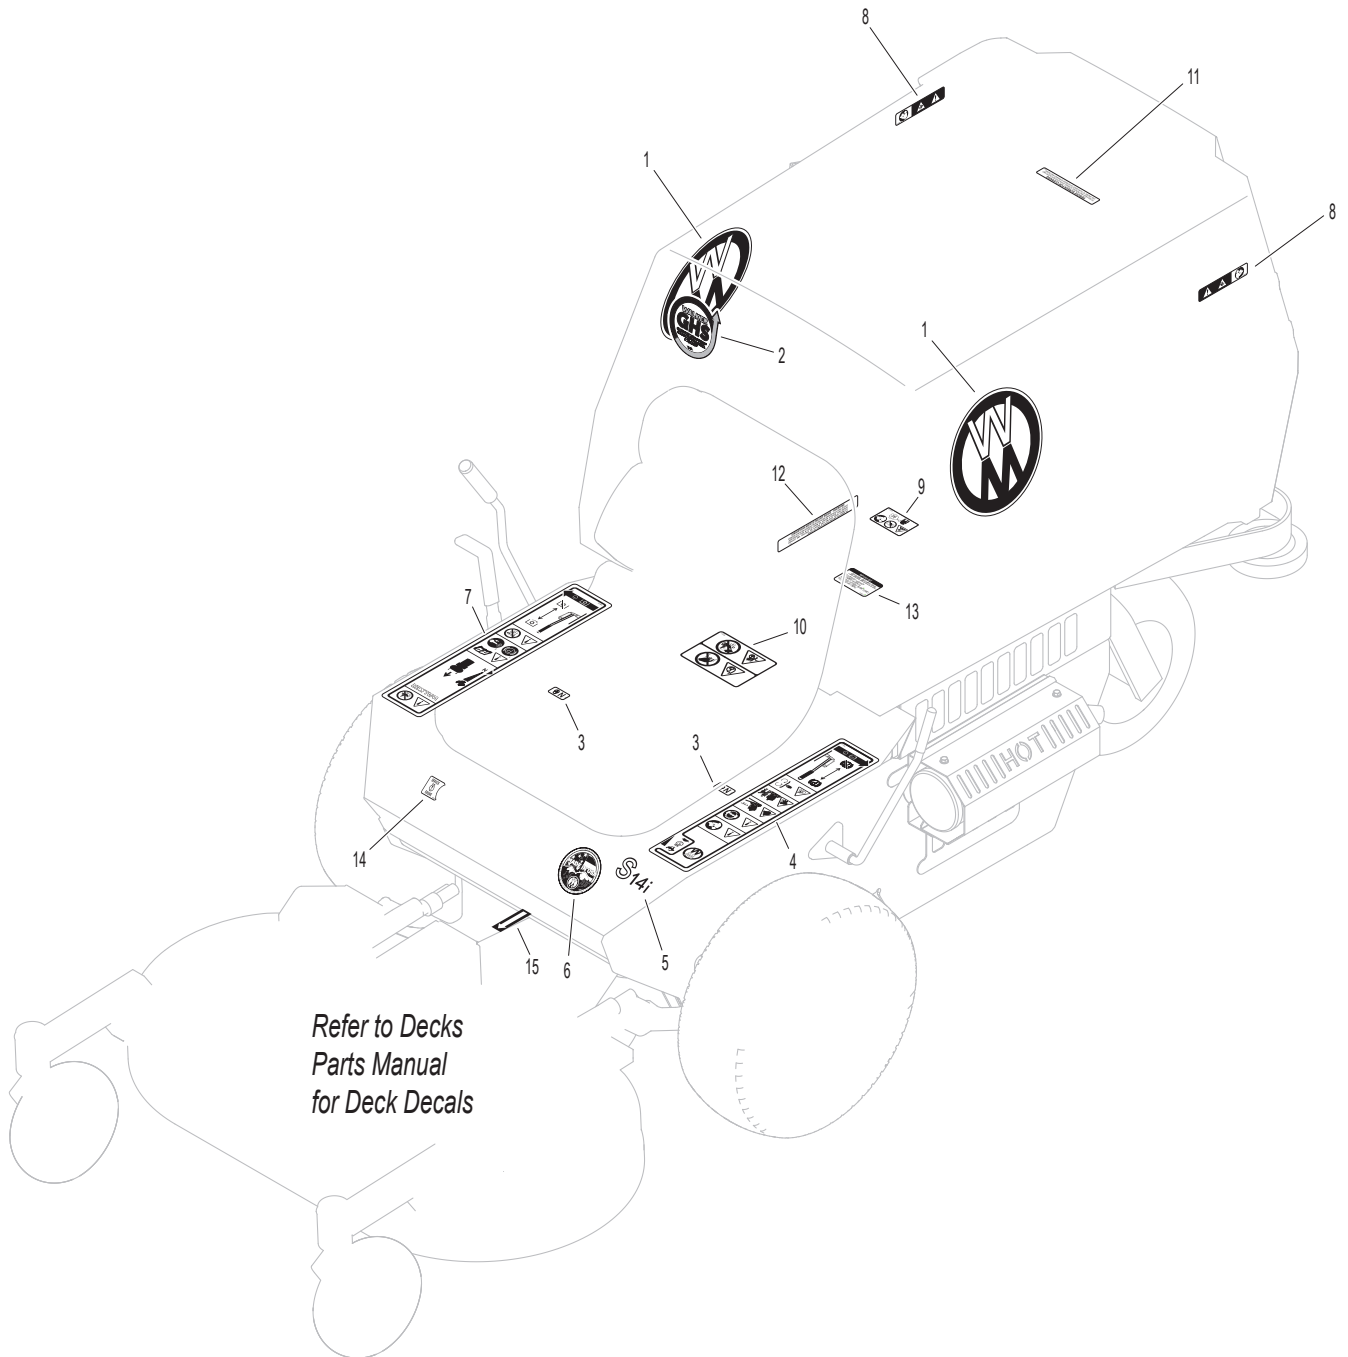

BODY / CHASSIS ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Seat Assembly				43	6431-3	Deck Support Arm, LH (Includes Item # 40) (Prior to SN 158665)	1
1	5103	Seat	1		6431-6	Deck Support Arm, LH (Includes Item # 40) (Beginning SN 158665)	1
2	7223-4	Compression Spring	2	44	5775-2	Hitch Pin (#6)	2
3	5841-1	Retainer Washer	4	45	5303-5	Deck Arm Hydro Mount, LH	1
4	7434	Washer (3/8 x 1-1/4 x 1/4)	2	46	5303-6	Deck Arm Hydro Mount, RH	1
5	7845-1	Rubber Bumper (1.375 x .750)	2	47	6431-4	Deck Support Arm, RH (Includes Item # 40) (Prior to SN 158665)	1
6	7440-5	Shock Mount (1-1/4 x 3/4)	2		6431-6	Deck Support Arm, RH (Includes Item # 40) (Beginning SN 158665)	1
Rear Bumper Assembly				Fasteners			
7	7516-5	Catcher Pivot Bushing	2	F002	10-24 Keps Nut		2
8	5517-11	Rear Bumper	1	F004	1/4-20 Keps Nut		14
9	7517-3	Catcher Pivot Plate	2	F005	1/4-20 ESNA Nut		1
10	5162	Roller Wheel (5" Rubber)	2	F009	5/16-18 Whiz Locknut		20
Body Assembly				F013	3/8-16 Whiz Locknut		2
11	2505	Leaf Spring	1	F014	3/8-16 ESNA Nut		2
12	5100-19	Welded Body	1	F016	1/2-13 Self-Locking Nut		1
13	4102-1	Body Guide, Upper	1	F020	5/16-18 ESNA Nut		1
14	7844	Rubber Bumper (1.25 x .250)	2	F025	10-24 x 3/8 PPHMS		2
15	NS	Body ID Plate	1	F029	1/4-20 x 1/2 Hex Bolt		4
16	5180	Edge Molding, Lever Opening	2	F031	1/4-20 x 5/8 Hex Bolt		8
17	4504-3	Hinge (19")	1	F034	5/16-18 x 3/4 Hex Bolt		8
Tilt-Up Latch Assembly**				F038	3/8-16 x 1 Hex Bolt		2
18	5847	Plastic Tip	1	F041	3/8-16 x 1-3/4 Hex Bolt		2
19	5744-20	Spring Arm, Tilt-Up Latch	1	F042	3/8-16 x 2-1/4 Hex Bolt		2
20	5744-10	Spring Pivot Bushing	1	F048	1/2 SAE Washer		2
21	5744-15	Compression Spring (3/8 x 5/8)	1	F049	5/16 SAE Washer		8
22	5744-13	Mount Angle, LH	1	F053	7/16 Int. Star Lock Washer		2
23	5744-12	Hook, Tilt-Up Latch	1	F059	3/8 Wave Spring Washer		2
24	5744-14	Mount Angle, RH	1	F093	5/16-18 x 1 Hex Bolt		1
Chassis Assembly				F116	1/4-20 x 1-1/4 Hex Bolt		1
25	5300-14	Chassis Side Cover, RH	1	F151	3/8-16 x 7/8 Hex Bolt		2
26	5300-18	Chassis Frame	1	F183	.312 x .700 x .074 Washer		2
27	5267-1	Retainer Collar (1") (Includes Item # F413)	1	F200	7/16-20 x 3 Grade 8 Bolt		2
28	5270-1	Pivot Bearing	2	F206	#2 x 3/16 Drive Pin		2
29	5420-2	Tail Wheel Fork	1	F227	3/8 x 1-1/4 x 1/8 Washer		2
30	5037-1	Bearing, Tail Wheel	2	F241	.375 x .875 x .10 Washer		4
31	5035	Tail Wheel & Tire Assembly (13 x 6.50-6)	1	F246	1/4-20 x 1/2 PTHMS		8
	5035-1	Tail Wheel Tire (13 x 6.50-6)	*	F257	3/8 x 1-11/16 Shoulder Bolt		2
	5036	Tail Wheel & Hub (6 x 4.5)	*	F292	1/2-13 x 8-1/2 Hex Bolt, GR 5		1
32	5038-1	Axle Spacer Tube (6-5/8)	1	F341	Coil Roll Pin (7/64 x 9/16)		1
33	5300-15	Chassis Side Cover, LH	1	F342	5/16 Conical Washer		2
34	5146	10mm Ball Stud	2	F413	5/16-24 x 5/16 Set Screw		2
35	5145-4	Gas Spring Assembly (Includes Item # 34)	1	F438	5/16-18 x 2-3/4 Hex Bolt		4
36	7383-1	Body Latch Hook	1	F477	1/4-20 x 5/8 Carriage Bolt		2
37	7854	Plastic Tip, Red	1	F570	3/8-16 Flange Top Lock Nut		4
38	7222	Extension Spring (1/4 x 3)	1				
39	4102-2	Body Guide, Lower	1				
Deck Support Arm & Hitch Assemblies							
40	5830	Grease Fitting	2				
41	6840-1	Support Arm Bushing (2-1/16)	2				
42	6431-5	Deck Arm Mount	2				

* Service Part Only

** Complete Tilt-Up Latch Assembly Kit available by ordering kit # 5747.

Beginning S/N 154257
Use only genuine **Walker®** replacement parts.

REAR BODY ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Rear Body Assembly


1	6515	Catcher Support Frame	1
2	6832	Cable Clamp (9/16 x 1/4)	2
3	8082-3	Heat Shield	1
4	5100-18	Rear Body Tie-In	1
5	5100-15	Rear Body Panel, LH	1
6	6014-1	Fuel Pump Guard	1
7	5977-8	Grommet (1 x 1-3/4)	1
8	5100-14	Rear Body Panel, RH	1
9	8515-14	Catcher Handle Plate, RH	1
10	8515-13	Catcher Handle Plate, LH	1
11	7147	Spring Clip	2
12	7146	13mm Ball Stud	2
13	7145	Gas Spring Assembly (Includes Items # 11 & 12)	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Fasteners

F002	10-24 Keps Nut	6
F009	5/16-18 Whiz Locknut	10
F023	10-24 ESNA Nut	1
F025	10-24 x 3/8 PPHMS	6
F031	1/4-20 x 5/8 Hex Bolt	1
F032	1/4-20 x 3/4 Hex Bolt	2
F034	5/16-18 x 3/4 Hex Bolt	8
F085	3/16 Rivet Backup Washer	1
F390	1/4-20 x 7/8 Carriage Bolt	2
F569	1/4-20 Flange Top Lock Nut	5
F613	10-24 x 1/2 Truss Head Torx	1
F615	1.0 x .255 x .125 Washer	2


NOTE: Rear Bumper Assembly for GHS Models is not shown here.
Refer to **BODY / CHASSIS ASSEMBLY**, Page 4.

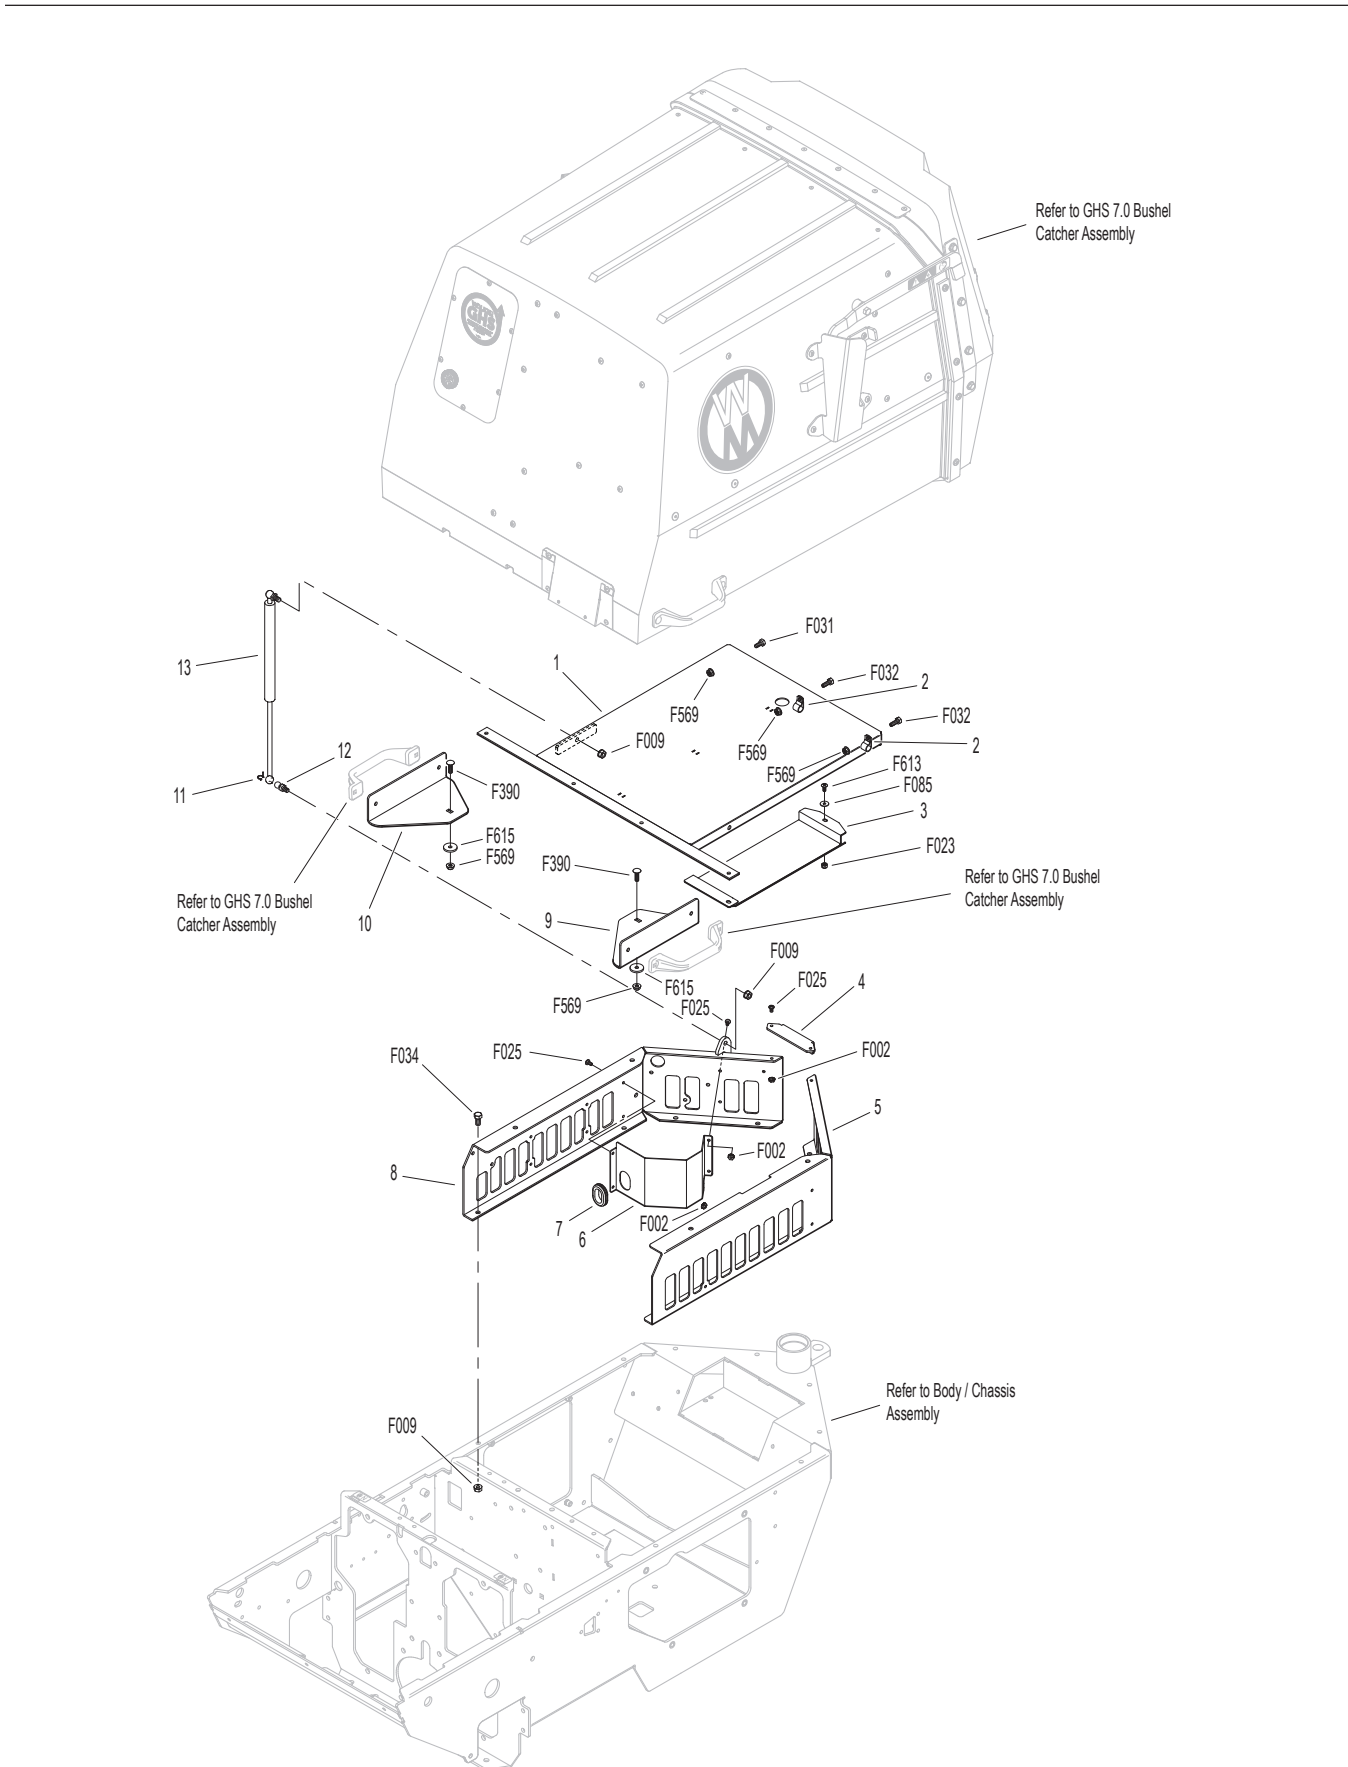

MAIN COMPONENT POWER TRANSMISSION


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
PTO Drive Assembly				Blower Brake Assembly			
1	4850	Handle Grip, Black	1	43	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1
2	6358-29	Clutch Lever	1	44	8304	Brake Band (14-1/2)	1
3	5830	Grease Fitting	2	45	4359-1	Brake Band Link, Front	2
4	4303-7	Clutch Actuator Bolt (5/16)	1	Fasteners			
5	7380	Knuckle Joint	1				
6	5830-4	Grease Fitting (90 Degree)	1	F004	1/4-20 Keps Nut		7
7	2358-6	5/16-18 x 1-3/4 Stud	2	F005	1/4-20 ESNA Nut		1
8	5103-2	Pivot Bushing (5/16 ID)	2	F009	5/16-18 Whiz Locknut		11
9	6325-5	Clutch Arm	1	F010	5/16-24 ESNA Nut		3
10	7377	Plastic Washer (1 x .438 x .025)	2	F012	3/8-16 Keps Nut		2
11	7378	Pivot Bearing (7/16 x 9/16)	1	F019	1/4-20 ESNA Wing Nut		2
12	5214-3	Ball Joint (5/16-24LH) (Nylon Lined)	1	F024	5/16-24 Jam Nut		2
13	6325-6	Clutch Arm Support Bracket	1	F029	1/4-20 x 1/2 Hex Bolt		1
14	6410-3	Clutch Pull Rod 8-5/8	1	F031	1/4-20 x 5/8 Hex Bolt		6
15	5214-2	Ball Joint (5/16-24) (Nylon Lined)	1	F034	5/16-18 x 3/4 Hex Bolt		4
16	5221	Extension Spring (3/4 x 4)	1	F035	5/16-18 x 1-1/4 Hex Bolt		1
17	5214-4	Ball Joint (5/16-24) W/O Stud	1	F040	3/8-16 x 1-1/2 Hex Bolt		2
18	5226-1	Spring (3/4 x 2-1/2)	1	F049	5/16 SAE Washer		1
19	6325-10	Spacer / Stop (3/8 x 7/8 x 1/2)	1	F050	1/4 SAE Washer		2
20	5247-2	V-Groove Idler (4")	2	F051	3/8 SAE Washer		1
21	5234-7	PTO Drive Belt (B31-K)	1	F054	AN960616 Washer		2
22	9051	Washer (5/16 x 1-3/8)	1	F060	AN960516 Washer		2
23	5238-22	PTO Drive Pulley (5/B)	1	F061	1/4 Star Lock Washer		1
24	5830-3	Grease Fitting (45 Degree)	1	F063	3/8 Int. Star Lock Washer		2
25	6358-4	PTO / Clutch / Brake Actuator (Includes Items # 24 & 29)	1	F066	1/4 x 1/4 x 3/4 Key		1
26	5300-11	Guide Top	1	F067	3/16 x 3/16 x 1 Key		1
27	5300-12	Belt Guide Base	1	F069	3/32 x 1/2 Cotter Pin		1
28	6358-6	PTO / Clutch / Brake Support	1	F093	5/16-18 x 1 Hex Bolt		1
29	7201-3	Fiberglide Bearing	2	F106	3/8-16 x 5/8 Hex Bolt		2
30	7201-5	Inner Race (2-1/4)	1	F135	3/16 x 3/16 x 1-3/4 Key		1
31	5303-3	Belt Guide Mount	1	F171	5/16-18 x 3/8 Set Screw		4
Engine Belt Tightener Assembly				F178	1/4 x 1 Fender Washer		1
32	5843-2	Clutch Spacer Washer (1.375 x .375 x .250)	1	F183	.312 x .700 x .074 Washer		1
33	5240-1	Compound Pulley, 4/B (Includes Items # F135 & F171)	1	F241	.375 x .875 x .10 Washer		1
34	5234-6	Engine Drive Belt (BX30-K)	1	F316	5/16-18 x 1-3/4 Hex Bolt		1
35	5103-8	Bushing .500 x .3125 x 1.655-.660	1	F350	1/4-20 LP Nylock		1
36	5495-11	Engine Idler Arm (Includes Item # 3)	1	F373	5/16-24 Hex Nut, LH		1
37	5221-1	Extension Spring (3/4 x 5)	1	F393	3/8-16 x 3-1/4 Hex Bolt		1
38	5237-6	Engine Pulley (4-1/4B) (Includes Items # F066 & F171)	1	F477	1/4-20 x 5/8 Carriage Bolt		2
39	5237-10	Spacer (1.375 x 1.0 x 5/16)	1	F535	5/16-24 x 2-1/2 Hex Bolt		1
40	5268	Bearing W/Collar (3/4)	2	F594	3/8-24 x 1 Hex Bolt		1
41	6394-1	Jackshaft Bearing Housing	1	F595	5/16-18 x 7/8 Hex Bolt Grade 8		1
42	6273-1	Jackshaft (3/4 x 11.750)	1				

MAIN COMPONENT POWER TRANSMISSION

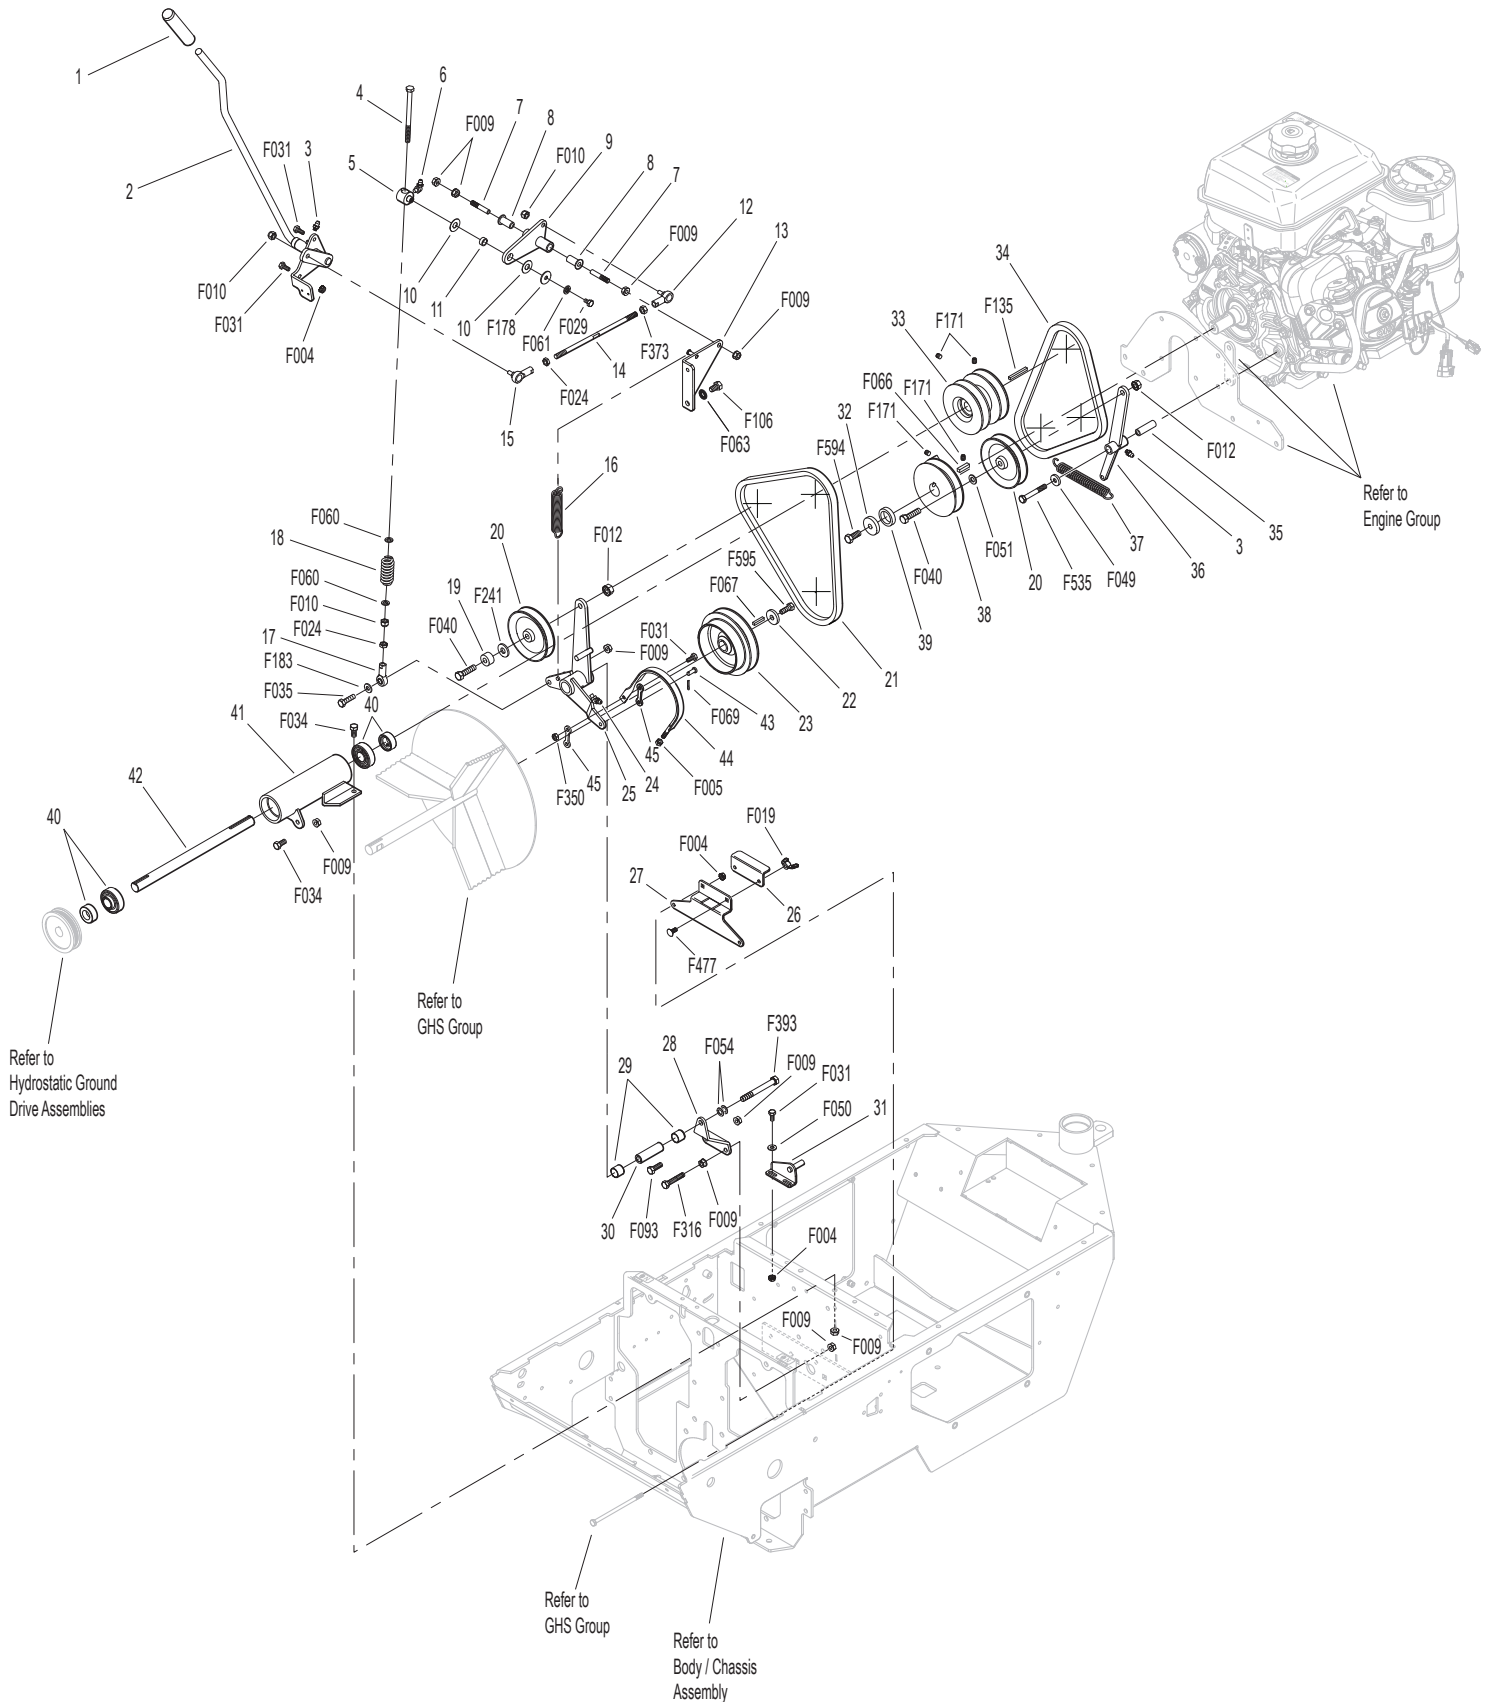

ENGINE GROUP


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fuel Assembly				Exhaust Assembly			
1	5879-4	Hose Clamp (7/16)	1	38	5013-18	Inner Heat Shield	1
2	5832	Cable Clamp (1/2)	3	39	NS	Gasket, Muffler (Kohler)	1
3	5879-5	Stepless Ear Clamp (5/8)	1	40	NS	Sensor, Oxygen (Kohler)	1
4	M113	Fuel Line (3/16 x 10")	1**	41	5011-17	Muffler	1
5	8046-17	Quick Coupler Straight (5/16 x 5/16)	1	42	5013-17	Muffler Heat Shield	1
6	5879-9	Stepless Ear Clamp, Black (15.7)	2	43	NS	Nut (Kohler)	2
7	NS	Fuel Line (Kohler)	1	Fasteners			
8	5832-1	J-Clamp	1		F002	10-24 Keps Nut	18
9	8046-16	Quick Connector (5/16 x 5/16-45)	1		F004	1/4-20 Keps Nut	5
10	6833	Cable Clamp (9/16 x #10)	1		F005	1/4-20 ESNA Nut	1
11	NS	Fuel Valve (Kohler)	1		F009	5/16-18 Whiz Locknut	4
12	5879-3	Hose Clamp (1/2)	7		F013	3/8-16 Whiz Locknut	4
13	5020	Fuel Filter	1		F025	10-24 x 3/8 PPHMS	14
14	5835-3	Cable Clamp (1/2) .218 Hole	4		F026	10-24 x 1/2 PPHMS	2
15	M246	Fuel Line (1/4 x 33")	1**		F031	1/4-20 x 5/8 Hex Bolt	2
16	NS	Fuel Line (Kohler)	1		F034	5/16-18 x 3/4 Hex Bolt	4
17	M111	Fuel Line (1/4 x 10")	1**		F040	3/8-16 x 1-1/2 Hex Bolt	2
18	M246	Fuel Line (1/4 x 17")	1**		F041	3/8-16 x 1-3/4 Hex Bolt	2
19	NS	Pump, Pulse	1		F044	5/16-24 x 3/4 Hex Bolt	2
20	8018-6	1" Spacer	2		F050	1/4 SAE Washer	4
21	NS	Fuel Pump Module (Kohler)	1		F051	3/8 SAE Washer	4
22	8018-2	Fuel Bracket Spacer	3		F052	5/16 Ext. Star Lock Washer	2
Engine Assembly					F164	10-24 x 1/4 x 3/8 SHL Bolt	1
23	NS	14 HP Engine (Kohler) EFI	1		F184	1/4-20 x 1/2 Hex Bolt, SS	4
24	NS	Air Cleaner Cartridge (Kohler)	1		F185	1/4 Internal Star Lock Washer, SS	4
25	5303-7	Engine Spacer	1		F201	1/4 Belleville Spring Washer	2
26	5013-19	Exhaust Pipe Heat Shield	1		F236	1/4-20 x 1-3/4 Hex Bolt	1
27	5013-20	Heat Shield Cover	1		F398	1/4-20 x 2 Hex Bolt	3
28	5303-9	Engine Brace	1		F569	1/4-20 Flange Top Lock Nut	1
Throttle Assembly				* Service Part Only			
29	8108-4	Throttle Cable	1	** Required hose specifications:			
30	5108-19	Control Lever, Throttle and Choke	1	M111 - 1/4" ID fuel/oil/vapor hose (Gates 4219-0103 or equivalent)			
31	5108-5	Throttle Control Knob, Red	1	M113 - 3/16" ID fuel/oil/vapor hose (Gates 4219-0093 or equivalent)			
32	5108-11	Friction Washer (.062)	1	M246 - 1/4" ID low permeation (<15g/m^2/day) fuel hose (Parker 38904 or equivalent)			
33	7108-13	Control Assembly	*				
		(Includes Items # 30, 32, 34-36 & F201)					
	5121-4	Throttle Control and Cable Assembly (Complete Control and Cable Assembly)	*				
34	5108-8	Control Bracket	1				
35	5108-10	Friction Washer (.125)	1				
36	5108-7	Control Lock Tab	1				
37	5172	Bearing, Delrin (.250 x .375 x .250)	1				

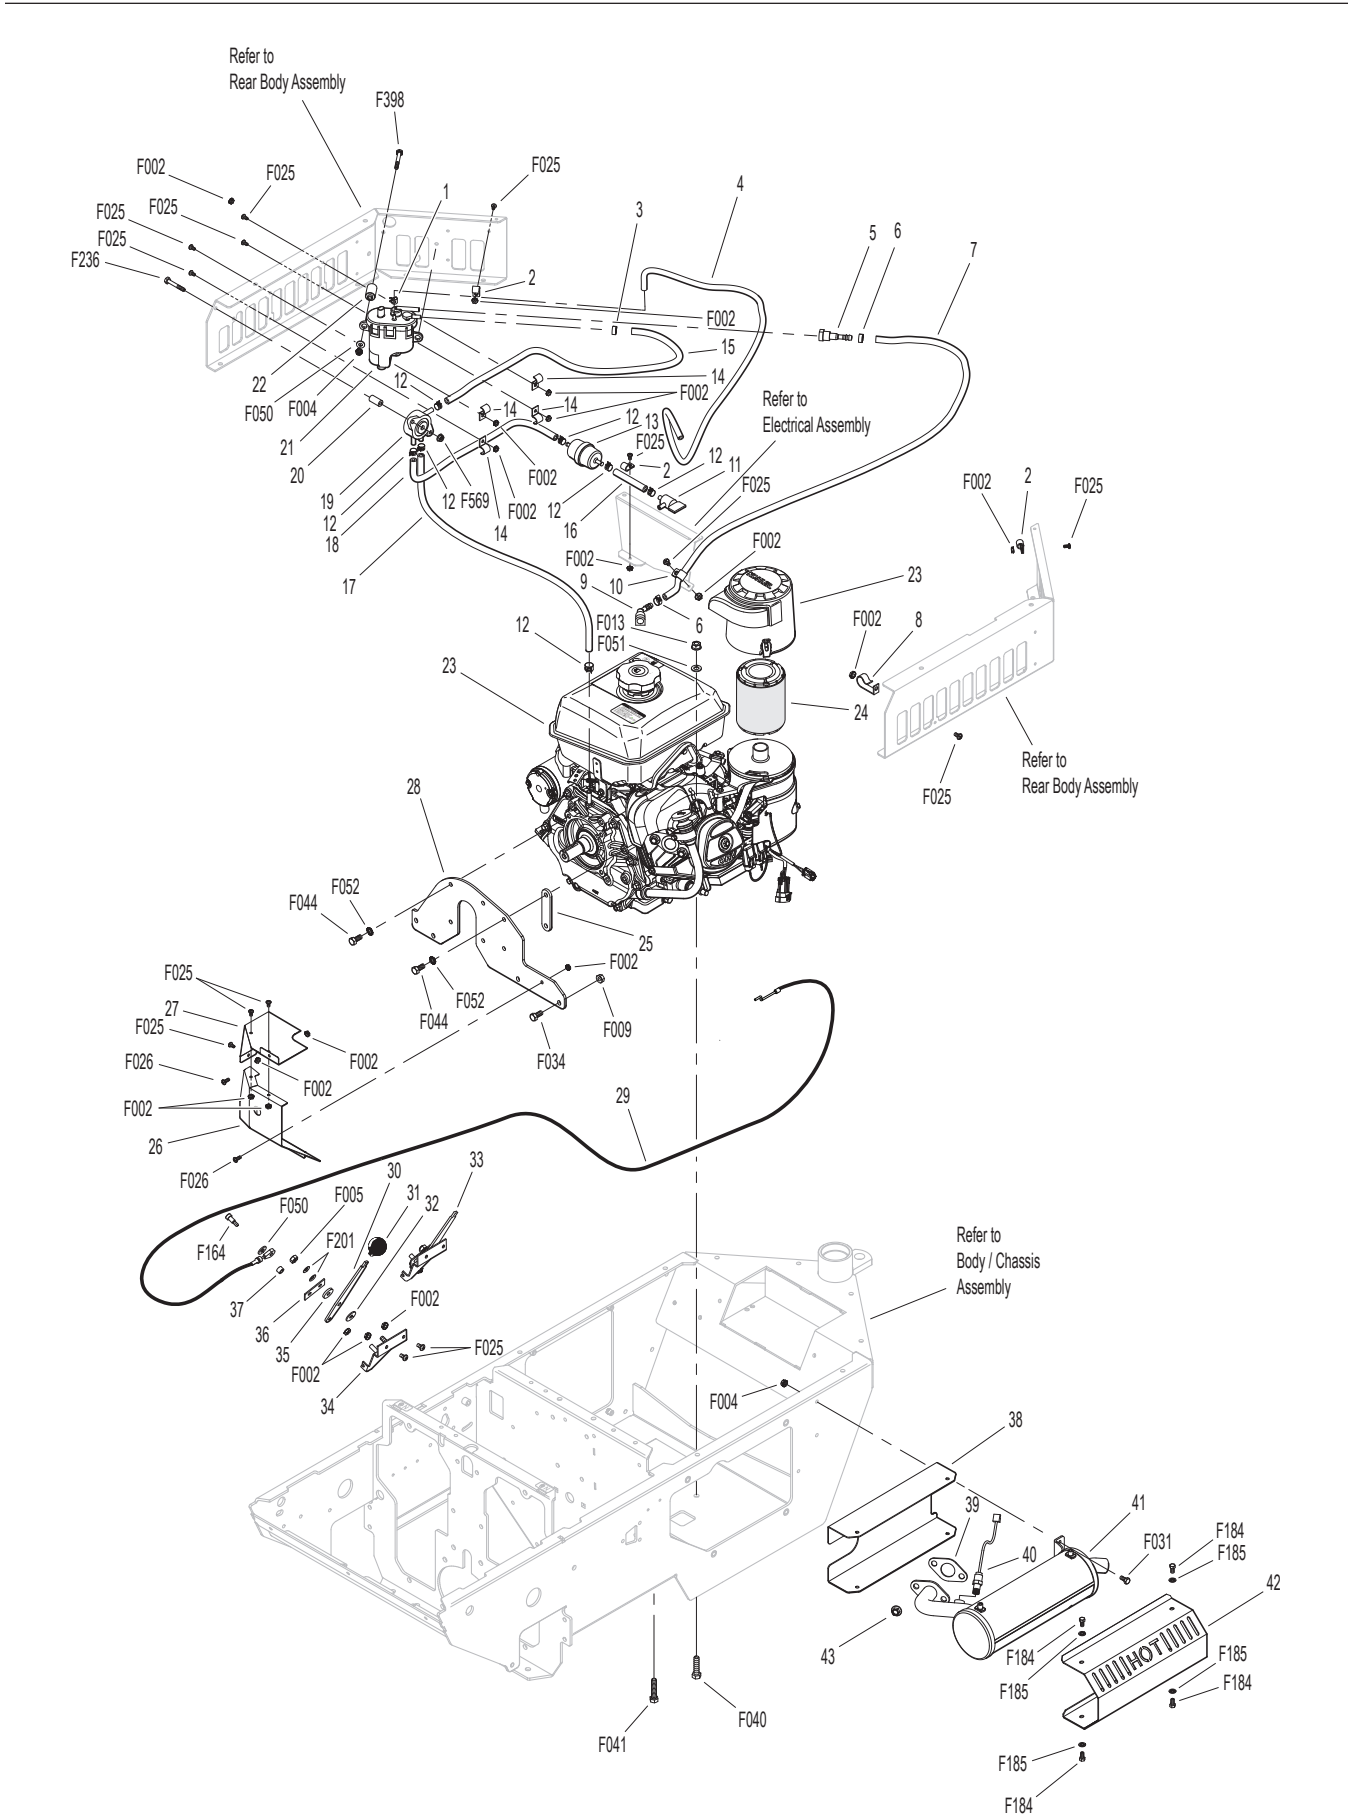

HYDROSTATIC GROUND DRIVE ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transaxle Reservoir Assembly				38	6406-2	Parking Brake Pull Rod	2
1	2025-1	Oil Expansion Reservoir (71327)	1	39	8655-4	Clevis Pin (5/16 x 3/4)	5
2	4025-2	Reservoir Bottle Mount	1	40	6406-4	Parking Brake Pull Mount, Inner	2
3	5879-8	Hose Clamp (13/16)	3	41	6406-5	Parking Brake Pull Mount, Outer	2
4	2025-8	Reservoir Bottom Caps	1	42	5665-1	Compression Spring (2-1/2)	2
5	4025-3	Elbow (1/4 x 1/2)	1	43	5222	Extension Spring (1/2 x 3-1/4)	2
6	5879-3	Hose Clamp (1/2)	4	44	5942-19	Parking Brake Safety Switch Mount	1
7	M111	Hose (1/4 x 14")	1*	45	6406-3	Parking Brake Actuator	1
8	2025-17	Straight Thread Hose Fitting	2	46	2406-4	Clevis Pin (5/16 x 1-1/8)	1
9	5879-4	Hose Clamp (7/16)	2	Wheel Assembly			
10	M111	Hose (1/4 x 6-5/8")	1*	47	5033-6	Wheel & Tire (18 x 7.00-8)	2
11	8043-9	1/4 x 1/4 x 1/4 Tee	1	Fasteners			
12	M111	Hose (1/4 x 1-5/8")	1*	F002	10-24 Keps Nut		2
13	7364-9	Reservoir Hose Guide	1	F004	1/4-20 Keps Nut		7
14	5087-1	Hose (1/2 x 1-3/4)	1	F005	1/4-20 ESNA Nut		2
Ground Drive Assemblies				F009	5/16-18 Whiz Locknut		8
15	5026-14	Hydro-Gear ZT3100, RH	1	F013	3/8-16 Whiz Locknut		5
16	2028-6	Lockout Arm, RH	1	F015	1/2-20 Wheel Lug Nut		8
17	4407-4	Bow Tie Cotter Pin	3	F020	5/16-18 ESNA Nut		2
18	7364-3	Idler Spring Bushing	1	F025	10-24 x 3/8 PPHMS		2
19	7364-2	Torsion Spring	1	F029	1/4-20 x 1/2 Hex Bolt		1
20	6345-4	Idler Arm	1	F031	1/4-20 x 5/8 Hex Bolt		9
21	5025-18	Hydro Fan Washer	2	F034	5/16-18 x 3/4 Hex Bolt		2
22	5025-17	Hydro Fan	2	F041	3/8-16 x 1-3/4 Hex Bolt		1
23	7244-22	Hydro Pulley (4.075) Splined	2	F042	3/8-16 x 2-1/4 Hex Bolt		2
24	5025-19	Hydro Fan Nut	2	F050	1/4 SAE Washer		2
25	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F171)	1	F067	3/16 x 3/16 x 1 Key		1
26	5232-1	Ground Drive Belt (Micro V)	1	F069	3/32 x 1/2 Cotter Pin		5
27	5245-1	Idler Pulley	1	F129	10-24 x 1/2 PTHMS		2
28	6325-2	Spacer Bushing (5/16)	1	F171	5/16-18 x 3/8 Set Screw		2
29	2028-5	Lockout Arm, LH	1	F182	1/4 x 5/8 x 1/8 Washer		2
30	5025-14	Hydro-Gear ZT3100, LH	1	F183	.312 x .700 x .074 Washer		2
31	9430-1	Spacer Tube	4	F316	5/16-18 x 1-3/4 Hex Bolt		1
32	6215	Shock Mount / Body Lift Arm (Includes Item # 33)	1	F336	3/8-16 Jam Nut		1
33	5830	Grease Fitting	2	F388	3/8-16 x 2-1/2 Hex Bolt		2
Parking Brake Assembly				F489	Washer 1/4 x 7/8 x .090		1
34	7406-1	Handle Grip, Red	1	F529	Washer 1.0 OD x .515 ID x 1/8		2
35	6406-6	Parking Brake Lever (Includes Item # 33)	1	F533	Socket Cap Bolt 5/16-18 x 3-1/2		4
36	6406-1	Brake Actuator Pull	1	* Required hose specifications:			
37	2280	Clevis (3/8)	1	M111 - 1/4" ID fuel/oil/vapor hose (Gates 4219-0103 or equivalent)			

HYDROSTATIC GROUND DRIVE ASSEMBLIES

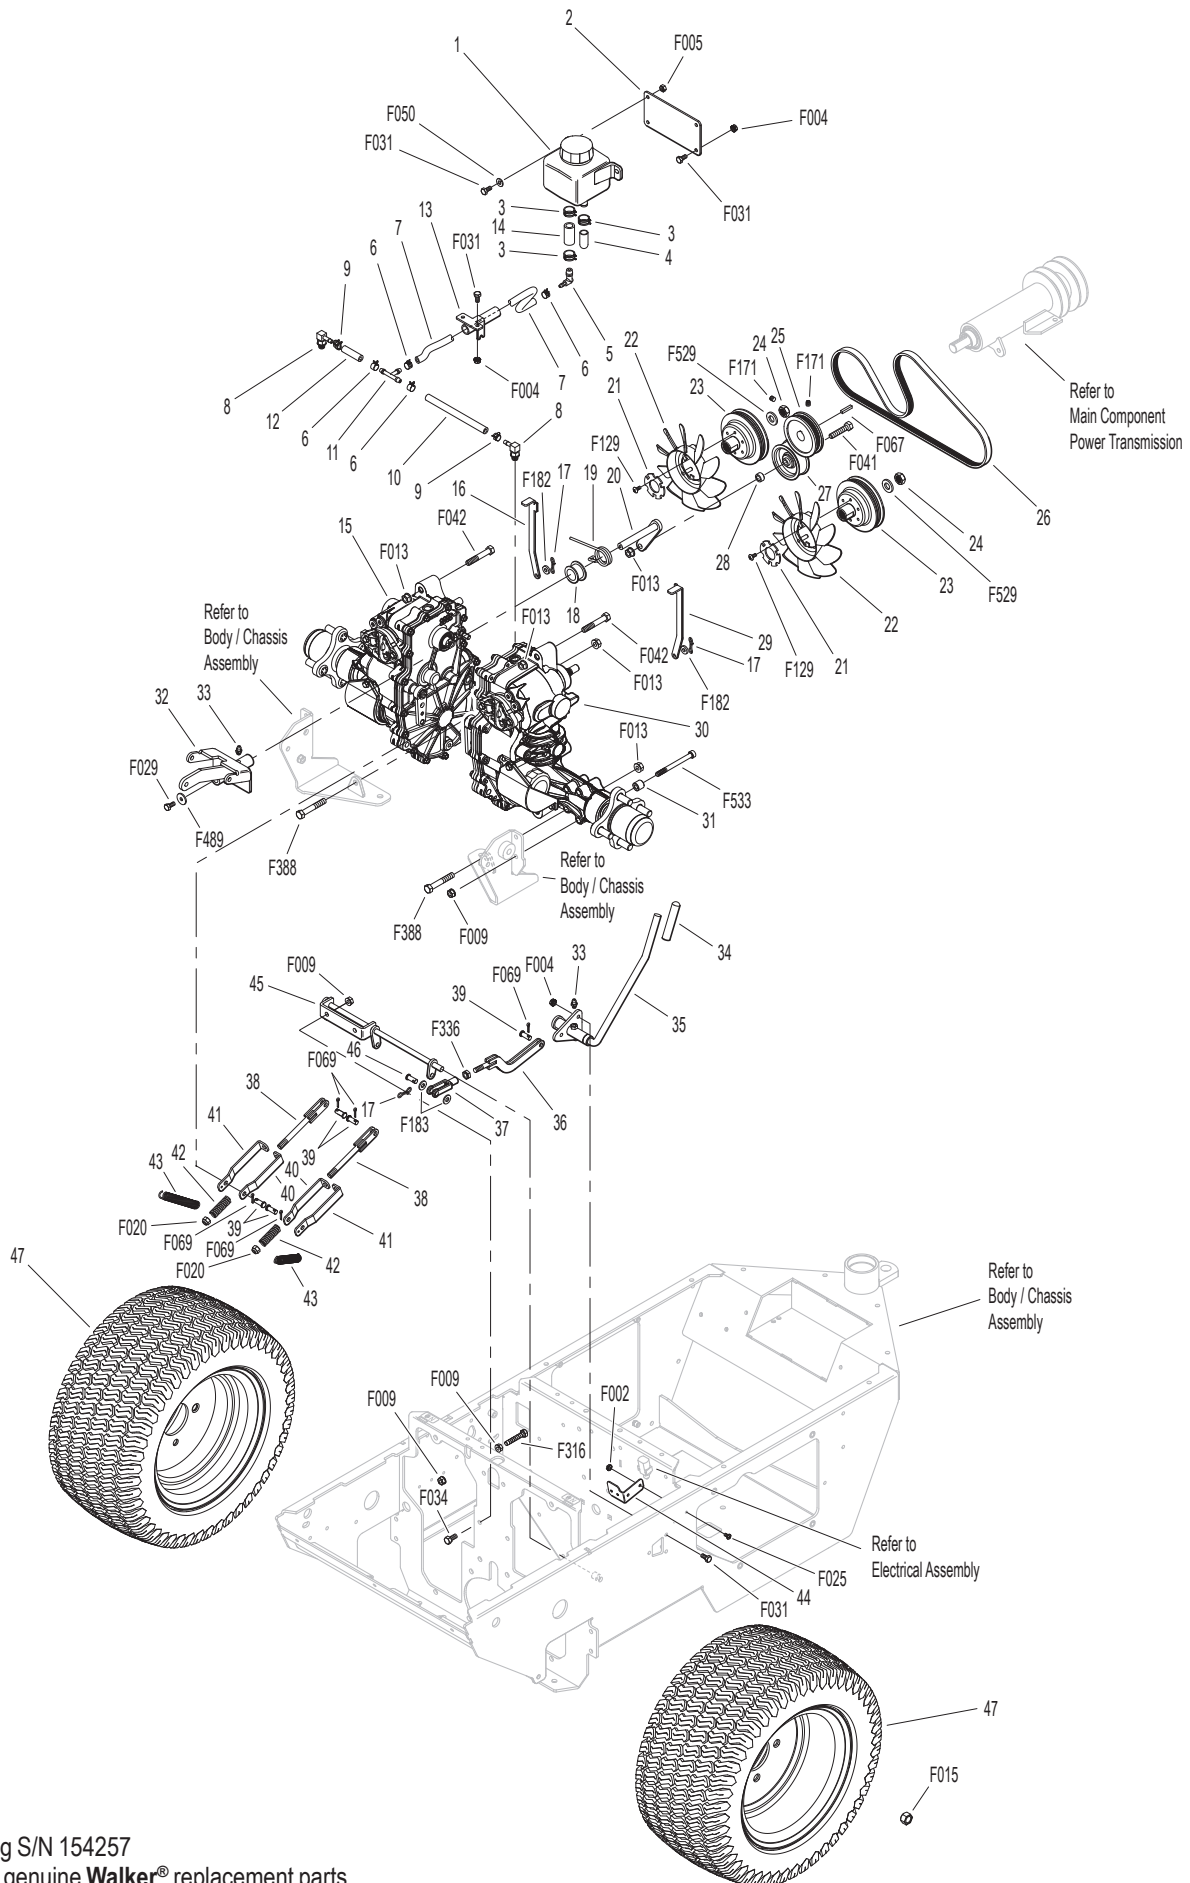


STEERING CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Steering Lever & FSC Assemblies				Fasteners			
1	5850-2	Handle Grip, Foam (5-1/2)	3	F004	1/4-20 Keps Nut		2
2	4170-1	FSC Lever Assembly (Includes Item # 4)	*	F005	1/4-20 ESNA Nut		2
3	2170-1	Step Washer	1	F009	5/16-18 Whiz Locknut		8
4	5830	Grease Fitting	1	F010	5/16-24 ESNA Nut		2
5	5214-4	Ball Joint (5/16-24) W/O Stud	4	F024	5/16-24 Jam Nut		4
6	4173-3	Control Rod (4-7/16)	1	F035	5/16-18 x 1-1/4 Hex Bolt		1
7	4219	Extension Spring (3/4 x 6-1/2)	1	F044	5/16-24 x 3/4 Hex Bolt		2
8	4451-9	FSC Friction Actuator	1	F059	3/8 Wave Spring Washer		1
9	8201-3	Fiberglide Bearing	4	F093	5/16-18 x 1 Hex Bolt		4
10	6451-2	Speed Control Actuator, RH (Includes Items # 9 & 12)	1	F146	1/4-20 Jam Nut		2
11	4452-6	Steering Pivot (1/4-20 x 1-5/8)	2	F167	5/16-18 Hex Nut		1
12	5830-3	Grease Fitting (45 Degree)	2	F183	.312 x .700 x .074 Washer		8
13	5146	10mm Ball Stud	4	F188	1/4-20 Self-Locking Nut		4
14	4199-2	Steering Lever Dampener Assembly	2	F192	3/8-24 Self-Locking Nut		1
15	5463-6	Washer 5/16 x 3/4 x .250	2	F198	.250 x .625 x .040 Washer, SS		2
16	5463-5	Steering Arm Pivot Bushing (SS)	2	F211	1/4-20 x 7/8 Hex Bolt		1
17	7201-2	Fiberglide Bearing (1/2")	2	F226	5/16-18 x 7/8 Hex Bolt		2
18	5463-4	Steering Lever Actuator	2	F312	3/8 x 3/8 Shoulder Bolt		1
19	5665-1	Compression Spring (2-1/2)	2	F345	1/4-20 x .770 Knurled Bolt		4
20	4213-2	Control Rod (6-3/4)	2	F385	1/4 x 1-1/4 Roll Pin		1
21	2212-3	Seal Retainer	2	F386	5/16-18 x 1-1/2 x 3/8 Shoulder Bolt		1
22	2212	Transmission Control Arm Stop	2	F391	1/4-20 x 1/2 Set Screw, SS		2
23	6212-2	Transmission Control Arm, RH	1	F407	Belleville Washer 3/8 x 1.187, SS		1
24	6212-3	Transmission Control Arm, LH	1	F551	5/16-18 Flange Top Lock Nut		1
25	6451-1	Speed Control Actuator, LH (Includes Items # 9 & 12)	1	* Service Part Only			
26	4451-1	Steering Pivot Shaft W/Stop	1				
27	9704-3	Pivot Rod Bushing / Plastic	2				
28	4142-2	FSC Friction Washer (1-1/2 x 1-1/32 x 1/16)	1				
29	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	1				
30	4142-1	FSC Cam	1				
31	5222	Extension Spring (1/2 x 3-1/4)	2				
32	5450	D-Clip	2				
33	6452-1	Steering Lever Tube W/Tab	2				
34	5453-10	Steering Lever Handle / Adjustable (Includes Items # 1 & F345)	2				



GHS GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Delivery Chute Assembly				Fasteners			
1	5515-4	Elbow Delivery Spout	1	F002	10-24 Keps Nut		4
2	5592-24	Backing Plate, Grass-Pak® Switch	1	F004	1/4-20 Keps Nut		14
3	5592-23	Grass-Pak® Housing Spacer	1	F013	3/8-16 Whiz Locknut		2
4	5578-1	Rear Clip Notched, Chute Mount	1	F023	10-24 ESNA Nut		2
5	5577	Side Clip, Chute Mount	2	F031	1/4-20 x 5/8 Hex Bolt		2
6	6530-6	Body Chute	1	F032	1/4-20 x 3/4 Hex Bolt		4
7	7511-5	Outside Chute Cover Lip	1	F038	3/8-16 x 1 Hex Bolt		2
8	7511-4	Inside Chute Cover Lip	1	F050	1/4 SAE Washer		4
9	7511-2	7.0 Delivery Chute W/Clips (Includes Items # 4, 5, F079 & F411)	1	F067	3/16 x 3/16 x 1 Key		1
Blower Assembly				F076	3/8-16 x 5/8 SQH Set Screw		1
10	6543-5	Blower Scroll	1	F079	A/A66D Aluminum Pop Rivet		8
11	6349-2	Flanged Bearing (3/4")	1	F128	10-24 x 3/8 PTHMS		4
12	6349-1	Sleeve .3150 x .375 x 3/8	2	F169	5/16-18 x 1 Carriage Bolt		2
13	6349-3	Flange Bearing (3/4") Machine Flat	1	F411	3/16 Bulbex Rivet		6
14	5526-9	Receiver Cone	1	F531	1/4-20 x 5 Hex Bolt		10
15	5275-14	U-Joint Tube Assembly (9.5" OAL), Spline (Includes Item # F076)	1	F532	1/4-20 x 5-1/2 Hex Bolt		2
16	6545-6	Blower Spacer	1	F551	5/16-18 Flange Top Lock Nut		2
17	6545-5	Blower Wheel	1	F577	10-24 x 5/8 Carriage Bolt		2
18	6543-8	Blower Faceplate	1	NOTE: Refer to ELECTRICAL CONNECTORS , Page 26, for identification of all Electrical Wiring Service Parts.			
19	5794-6	Fixed Chute	1				

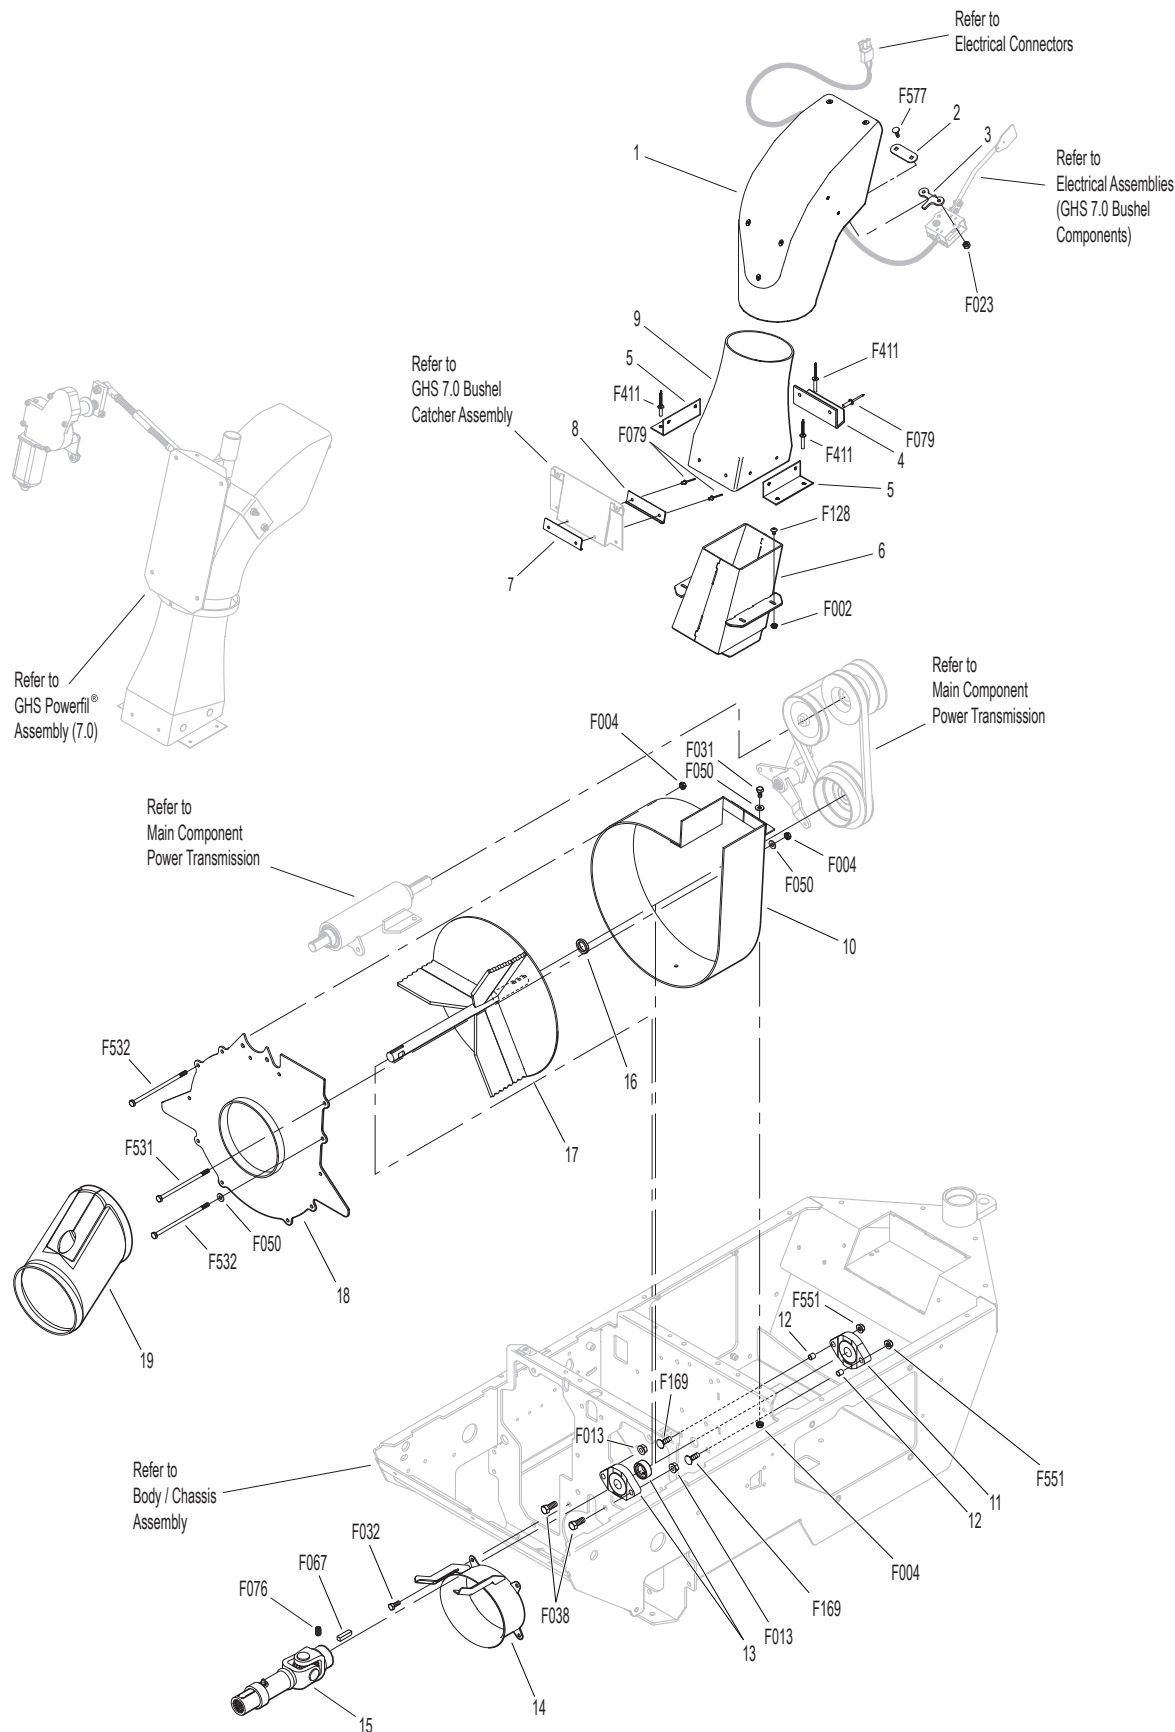


GHS POWERFIL® ASSEMBLY (7.0)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
7.0 GHS Powerfil® Assembly				Fasteners			
1	5552	Ball Joint (1/4-28)	2		F003	1/4-28 Hex Nut	2
2	5553-3	Bushing, Powerfil® Actuator	4		F023	10-24 ESNA Nut	10
3	5553-1	Compression Spring (1/2 x 2)	2		F054	AN960616 Washer	1
4	5558-2	Powerfil® Actuator Rod	1		F085	3/16 Rivet Backup Washer	1
	5549	Actuator Rod Assembly (Includes Items # 1-5 & F003)	*		F101	10-24 x 1-1/4 SHC Screw	1
5	5558-1	Powerfil® Push Rod	1		F109	1/8 x 5/8 Roll Pin	1
6	5551-3	Bearing Cap, Powerfil®	1		F261	AN960616L Washer	1
7	5551-1	Pivot Bearing (#S3PP)	2		F287	1/4-28 Keps Nut	2
8	5518-2	Pivot, Delivery Spout	1		F612	10-24 x 5/8 Truss Head Torx	7
9	5517-2	Pivot Mount	1		F613	10-24 x 1/2 Truss Head Torx	2
10	5519-5	Actuator Motor (12V) (Includes Items # 11 & 12)	1	*	Service Part Only		
11	5519-2	Motor Mount Washer	*				
12	5519-3	Motor Mount Nut (5/8-24)	*				
13	5554	Actuator Arm	1				

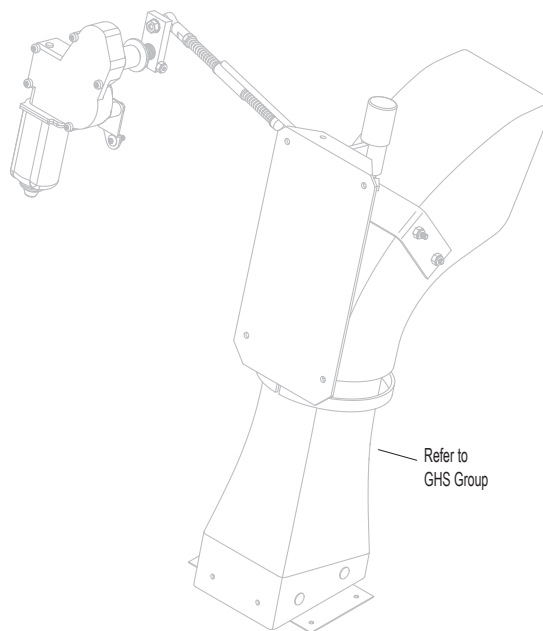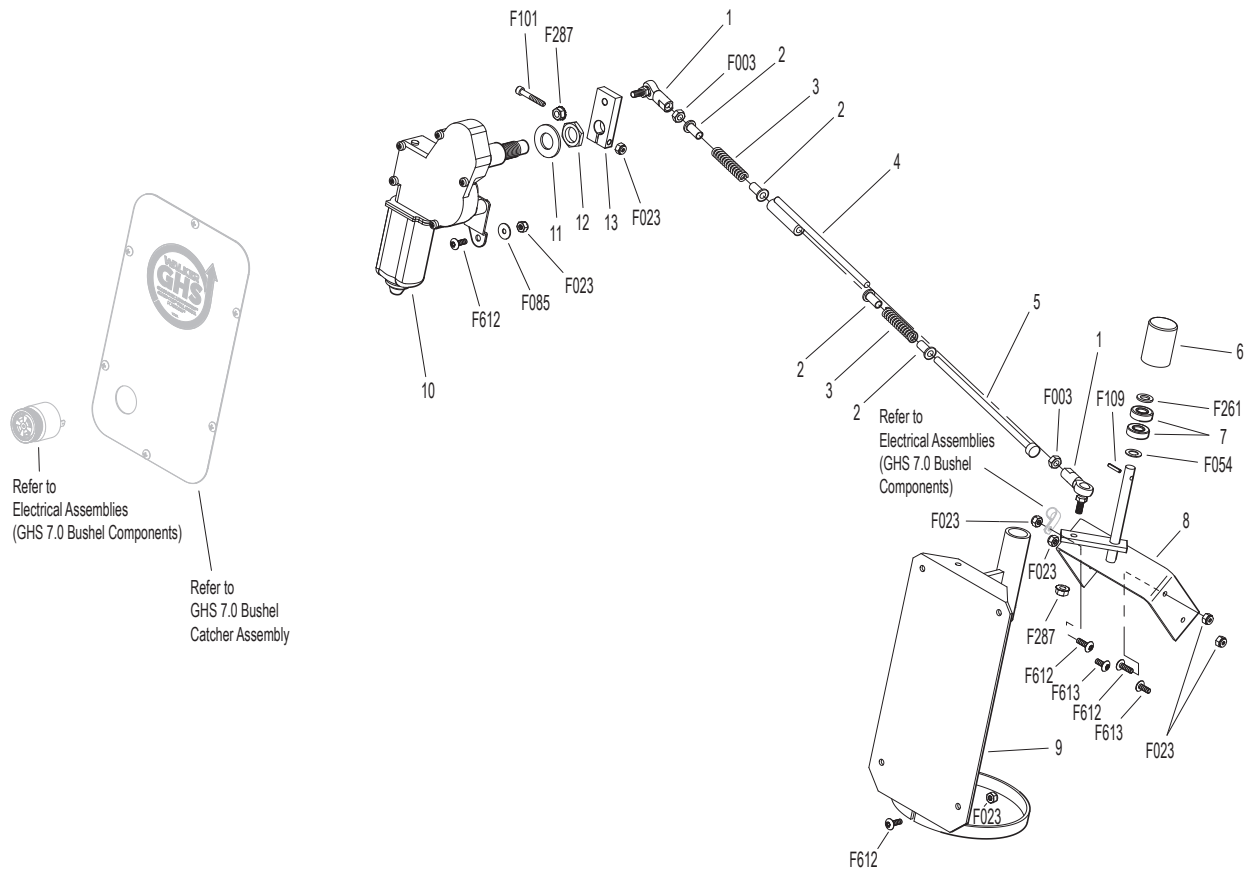

GHS 7.0 BUSHEL CATCHER ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Upper Baffle Screen Assembly (Removable)				40	7607-8	Powerfil® Cover Plate	1
1	7512-12	Removable Screen (3/16 Hole) (Includes Items # 2, F190 & F617)	1**	41	7608-4	Hinge Plate, RH	1
2	7506	Knob / Threaded Insert (10-24)	2	42	8155-8	7.0 Gas Spring Cover, RH	1
3	7509-7	Channel Top, LH	1	43	7607-14	Catcher Door Arm, RH	1
4	8606-2	Channel Bottom	2	44	7584-3	Reinforcing Strap	1
5	6856-1	Edge Molding (21-3/4")	1	45	5801-3	Decal Plate, Round (Set of 2)	1
6	6507	Screen Seal (23-1/4")	1	46	7608-5	Door Arm Stop	2
7	7505	Mustache Spring	2	5598-2 Optional Dump Bag (Not Shown)			
8	7509-6	C-Channel With Spring (Includes Items # 7 & F340)	1	May be ordered as an option. Contact your Walker dealer.			
9	7509-8	Channel Top, RH	1	Fasteners			
7.0 Exhaust Deflector Door Assembly				F020	5/16-18 ESNA Nut		2
10	7607-3	Upper Door Seal	1	F023	10-24 ESNA Nut		28
11	7510-4	7.0 Catcher Box Door (Includes Frame) (Includes Items # 10, 12, 13, 15, F085, F330 & F411)	1	F029	1/4-20 x 1/2 Hex Bolt		2
12	5583	Handle	1	F031	1/4-20 x 5/8 Hex Bolt		2
13	7607-6	Lower Door Stiffener (7.0)	1	F049	5/16 SAE Washer		4
14	8607-8	Door Guide	1	F050	1/4 SAE Washer		4
15	7607-5	Upper Door Stiffener	1	F079	A/A66D Aluminum Pop Rivet		4
GHS 7.0 Bushel Catcher Assembly				F085	3/16 Rivet Backup Washer		4
16	7503-8	Center Strap (7.0)	1	F094	8-32 x 1/2 PTHMS		6
17	7503-6	Upper Frame Doubler (7.0)	2	F190	#10 Internal Star Lock Washer		2
18	7503-5	Lower Frame Doubler (7.0)	2	F196	1/4-20 x 1 PPHMS, SS		4
19	7503-4	Outside Box Strap (7.0)	2	F230	1/4-20 x 1-1/4 PPHMS, SS		4
20	8608-11	Catcher Door Finger	1	F242	1/4-20 x 7/8 PPHMS, SS		8
21	8608-4	Center Frame Doubler	1	F275	5/16-18 x 2 Hex Bolt		2
22	7503-11	Catcher Mount	1	F330	3/16D x 21/32L Rivet, SS		4
23	7610-4	Catcher Dump Flap Spacer (7.0)	1	F340	Rivet, Aluminum		4
24	7610-8	Catcher Dump Flap With Plate	1	F351	Aluminum Pop Rivet		6
25	8610-3	Backing Plate / Dump Flap	1	F360	1/4-20 x 3/8 Hex Bolt		2
26	7620-3	Pivot Bushing (1/2 x 9/16)	4	F390	1/4-20 x 7/8 Carriage Bolt		4
27	7607-7	Bushing	2	F411	3/16 Bulbex Rivet		32
28	7608-3	Hinge Plate, LH	1	F442	1/4-20 x 5/8 PTHMS		2
29	7607-15	Catcher Door Arm, LH	1	F477	1/4-20 x 5/8 Carriage Bolt		4
30	8155-7	7.0 Gas Spring Cover, LH	1	F524	3/16 x 3/8 Aluminum Rivet, Black		6
31	5155-5	Gas Spring	2	F540	1/4-20 x 1-3/4 PPHMS, SS		1
32	5155-13	3/4 Ball Stud	2	F551	5/16-18 Flange Top Lock Nut		2
33	5523-6	Gas Spring Plate	2	F569	1/4-20 Flange Top Lock Nut		29
34	5155-12	5/16 Ball Stud	2	F612	10-24 x 5/8 Truss Head Torx		4
35	5155-15	Box Support, Gas Spring	2	F613	10-24 x 1/2 Truss Head Torx		10
36	7532-1	Handle, Catcher Lift	2	F615	1.0 x .255 x .125 Washer		4
37	7511-6	Chute Cover	1	F617	10-24 x 3/8 Truss Head Torx		4
38	7557-1	7.0. Wire Harness Channel	1	F618	10-24 x 3/4 Truss Head Torx		12
39	7510-3	7.0 Bushel Catcher Box	1	* Service Part Only			
	7502-6	7.0 Catcher W/Powerfil® (Includes Door)	*	** This screen can be replaced by P/N 7512-13 Removable Screen (3/4" holes) for improved air flow performance in wet conditions.			

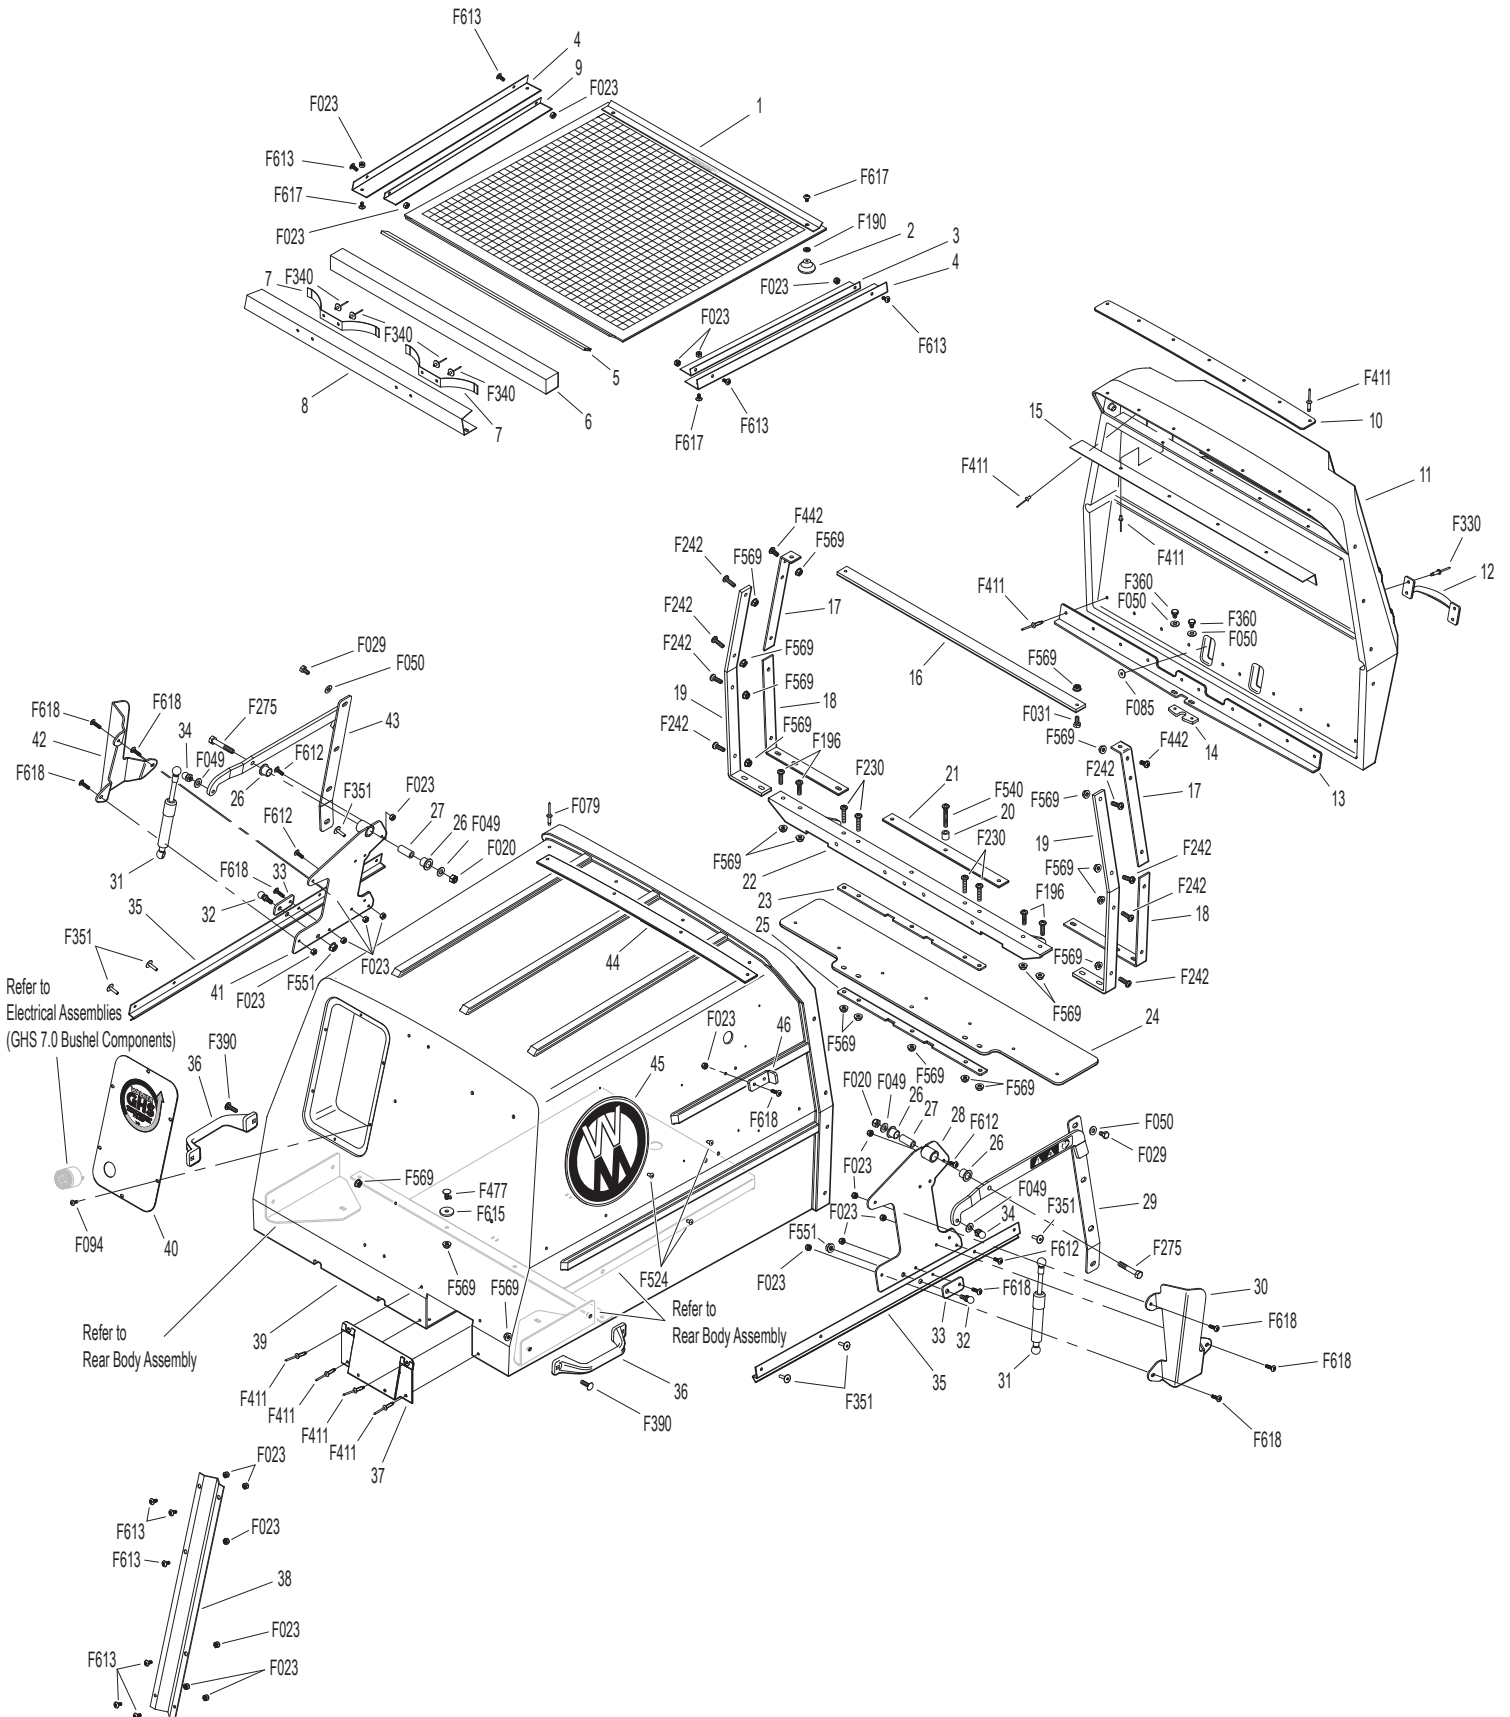

Beginning S/N 154257
Use only genuine **Walker®** replacement parts.



ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Electrical Assembly				Battery Assembly			
1	5942-11	Delta Hex Nut	1	27	2940-2	Battery Cable (22")	1
2	5942-9	Safety Switch (NO), Delta Threaded	1	28	5932	Battery Terminal Insul., Black (-)	1
3	7834-3	Wire Saddle (3 Wires)	4	29	5933	Battery Terminal Insul., Red (+)	1
4	5832	Cable Clamp (1/2)	1	30	NS	Battery (12V/300.CA/Wet)	1
5	5975-1	Cable Tie (18# x 3-3/4")	3	31	6390-5	Battery Guard	1
6	NS	Rectifier	1	32	5839	Hook Bolt	2
7	7833	Cable Clamp (7/8 x 1/4)	2	33	4940-6	Battery Cable (33")	1
8	5942-8	Safety Switch (NO), Delta Side Mount	2	Fasteners			
9	NS	Fuse Holder (Kohler)	1				
10	6941-3	10 Amp Fuse	1	F002	10-24 Keps Nut		7
11	6929-4	Circuit Breaker / Fuse Mount	1	F004	1/4-20 Keps Nut		7
12	8941	Circuit Breaker (30 Amp) Auto Reset / Sealed	1	F019	1/4-20 ESNA Wing Nut		2
13	8404-8	Plastic Cover, Red	2	F025	10-24 x 3/8 PPHMS		4
14	4940-11	Jumper Wire	1	F026	10-24 x 1/2 PPHMS		3
15	5942-10	Safety Switch (NC), Delta Side Mount	1	F029	1/4-20 x 1/2 Hex Bolt		3
16	6942	Relay Switch 20/40 Amp (NC)	3	F031	1/4-20 x 5/8 Hex Bolt		2
17	4024-13	Safety Switch Plate	1	F032	1/4-20 x 3/4 Hex Bolt		2
18	5943-9	Wire Harness Assembly	1	F050	1/4 SAE Washer		2
19	8990-1	Hourmeter (Global)	1	F052	5/16 Ext. Star Lock Washer		2
20	8960-15	Ignition Switch (With Keys) (Includes Items # 21, 22 & F349)	1	F112	5/8 x 1-1/4 x .03 Washer		3
21	7854	Plastic Tip / Red	1	F146	1/4-20 Jam Nut		1
22	8960-3	Key Set W/Umbrella	1	F182	1/4 x 5/8 x 1/8 Washer		2
23	8996-9	Red Indicator Light Assembly	1	F211	1/4-20 x 7/8 Hex Bolt		1
24	8536	Warning Horn	1	F232	10-32 Keps Nut		2
25	7941-3	Boot, Circuit Breaker	1	F349	Washer .835 ID 1.122 OD, SS		1
26	7941-8	Circuit Breaker (5 Amp)	1	F497	M8 x 20 Hex Bolt		2
				F505	6-32 x 7/8 Hex Trim MS, SS		6
				F506	6-32 Nylock Nut		6

NOTE: Refer to **ELECTRICAL CONNECTORS**, Page 26, for identification of all Electrical Wiring Service Parts.

NOTE: Decals for this assembly are not shown here. Refer to **TRACTOR DECALS**, Page 2, for Decal listing and placement information.


ELECTRICAL ASSEMBLY

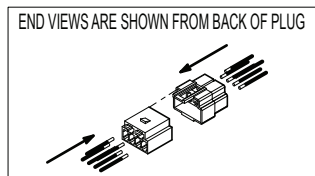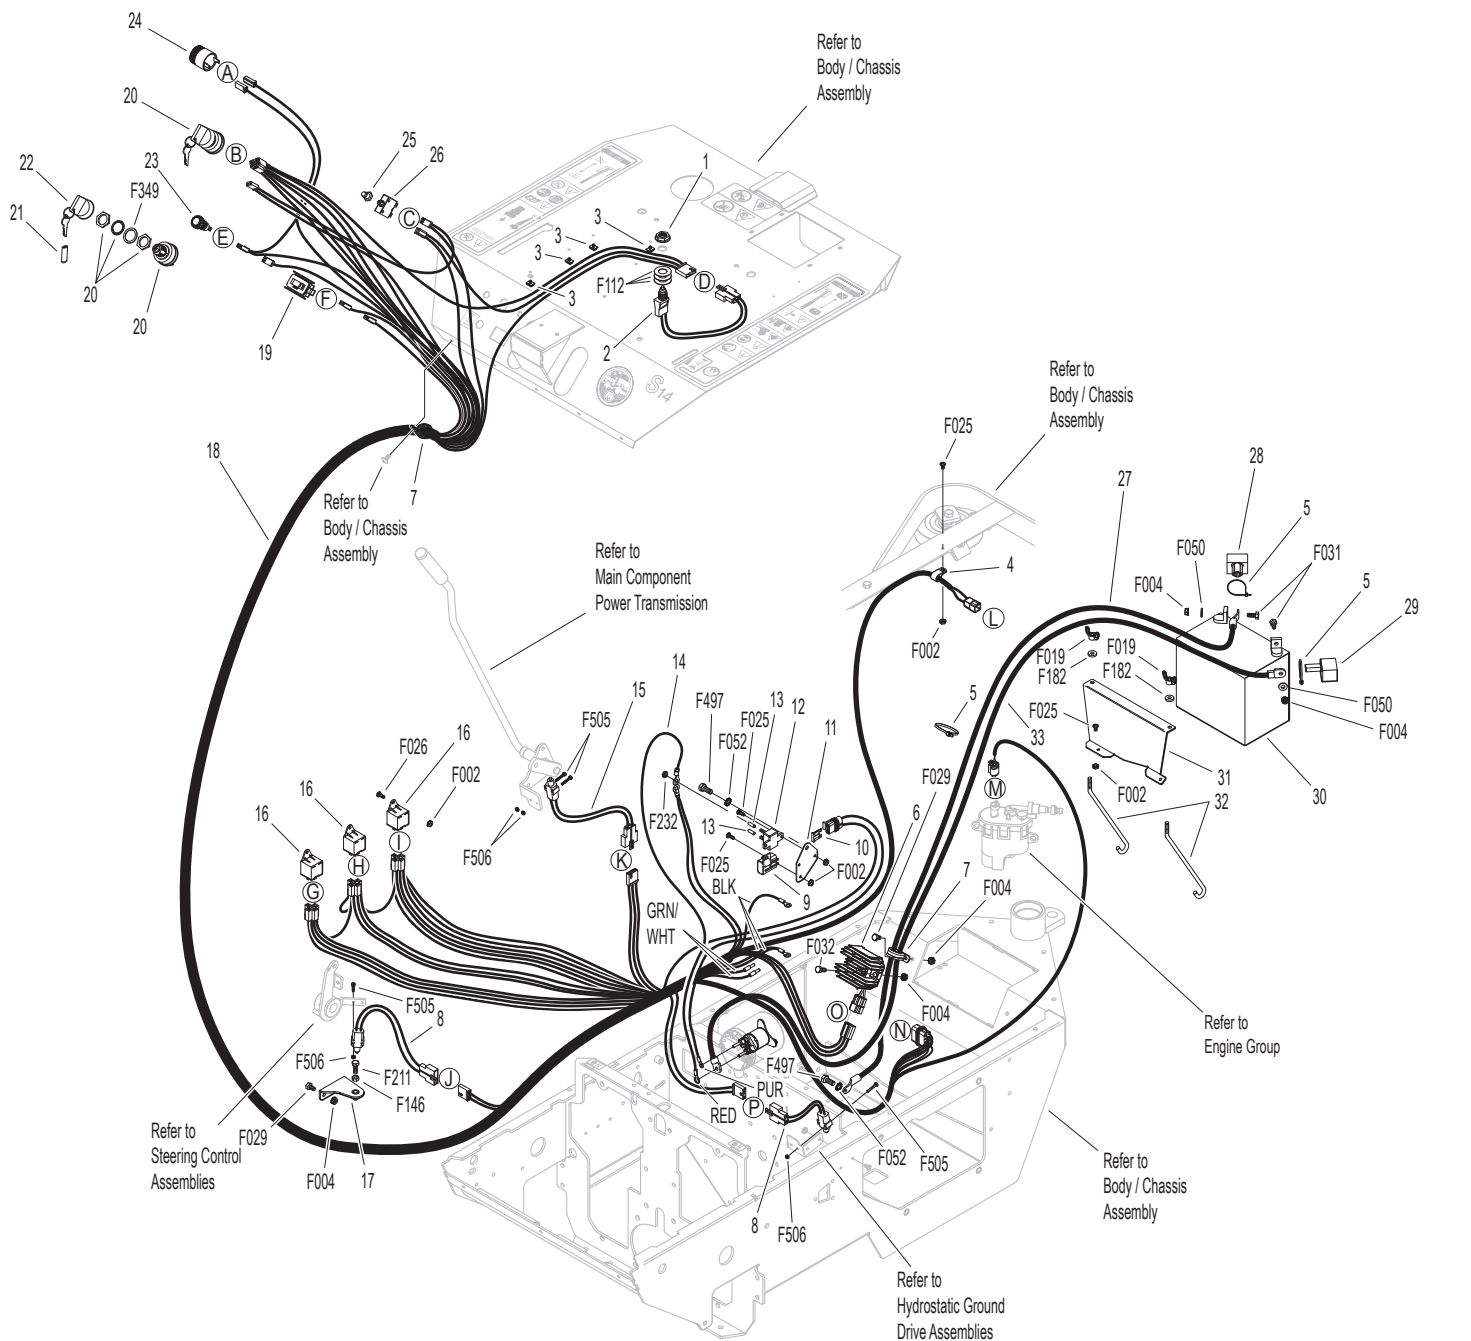

DETAIL A

GRN PUR/WHT

DETAIL B

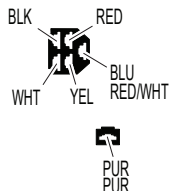

DETAIL C

PUR/RED PUR
PUR/WHT PUR/WHT

DETAIL D

PUR/WHT BRN BLU

DETAIL E

PUR/WHT PUR/WHT
TAN

DETAIL F

BRN/WHT BLK

DETAIL G

PUR/RED
YEL BLK
YEL/BLU

DETAIL H

BLK BLK
BRN BLK
WHT WHT

DETAIL I

PUR/WHT PUR/WHT
PUR/RED BLK
ORG BRN/WHT
ORG/WHT

DETAIL J

RED/WHT ORG

DETAIL K

PUR/WHT PUR/WHT
PUR/RED

DETAIL L

BLK ORG/WHT PINK

DETAIL M

RED

DETAIL N

WHT TAN
GRN RED/WHT
PINK YEL/BLU PUR

DETAIL O

GRN/WHT GRN/WHT
PUR

DETAIL P

ORG ORG

ELECTRICAL ASSEMBLIES (GHS 7.0 BUSHEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Horn & Harness Channel Assemblies

1	5536-2	Horn, Full Signal	*
2	5976-2	Grommet (3/16 x 3/4)	2
3	5975-1	Cable Tie (18# x 3-3/4")	1

Harness & Grass-Pak® Switch Assemblies

4	8950-4	Powerfil Wire Harness (7.0/10.0)	1
5	7834	Nylon Clamp (1/4)	1
6	5833	Cable Clamp (1/4)	2
7	5594-6	Aluminum Shaft & Vane Assembly	1
8	5592-20	Grass-Pak® Switch Assembly	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------


Fasteners

F002	10-24 Keps Nut	1
F023	10-24 ESNA Nut	3
F025	10-24 x 3/8 PPHMS	1
F411	3/16 Bulbex Rivet	1
F508	4-40 Keps Nut, SS	2
F509	4-40 x 1/2 Hex Head, SS	2
F612	10-24 x 5/8 Truss Head Torx	1
F613	10-24 x 1/2 Truss Head Torx	2

* Service Part Only

NOTE: Refer to **ELECTRICAL CONNECTORS**, Page 26, for identification of all Electrical Wiring Service Parts.


ELECTRICAL ASSEMBLIES (GHS 7.0 BUSHEL COMPONENTS)

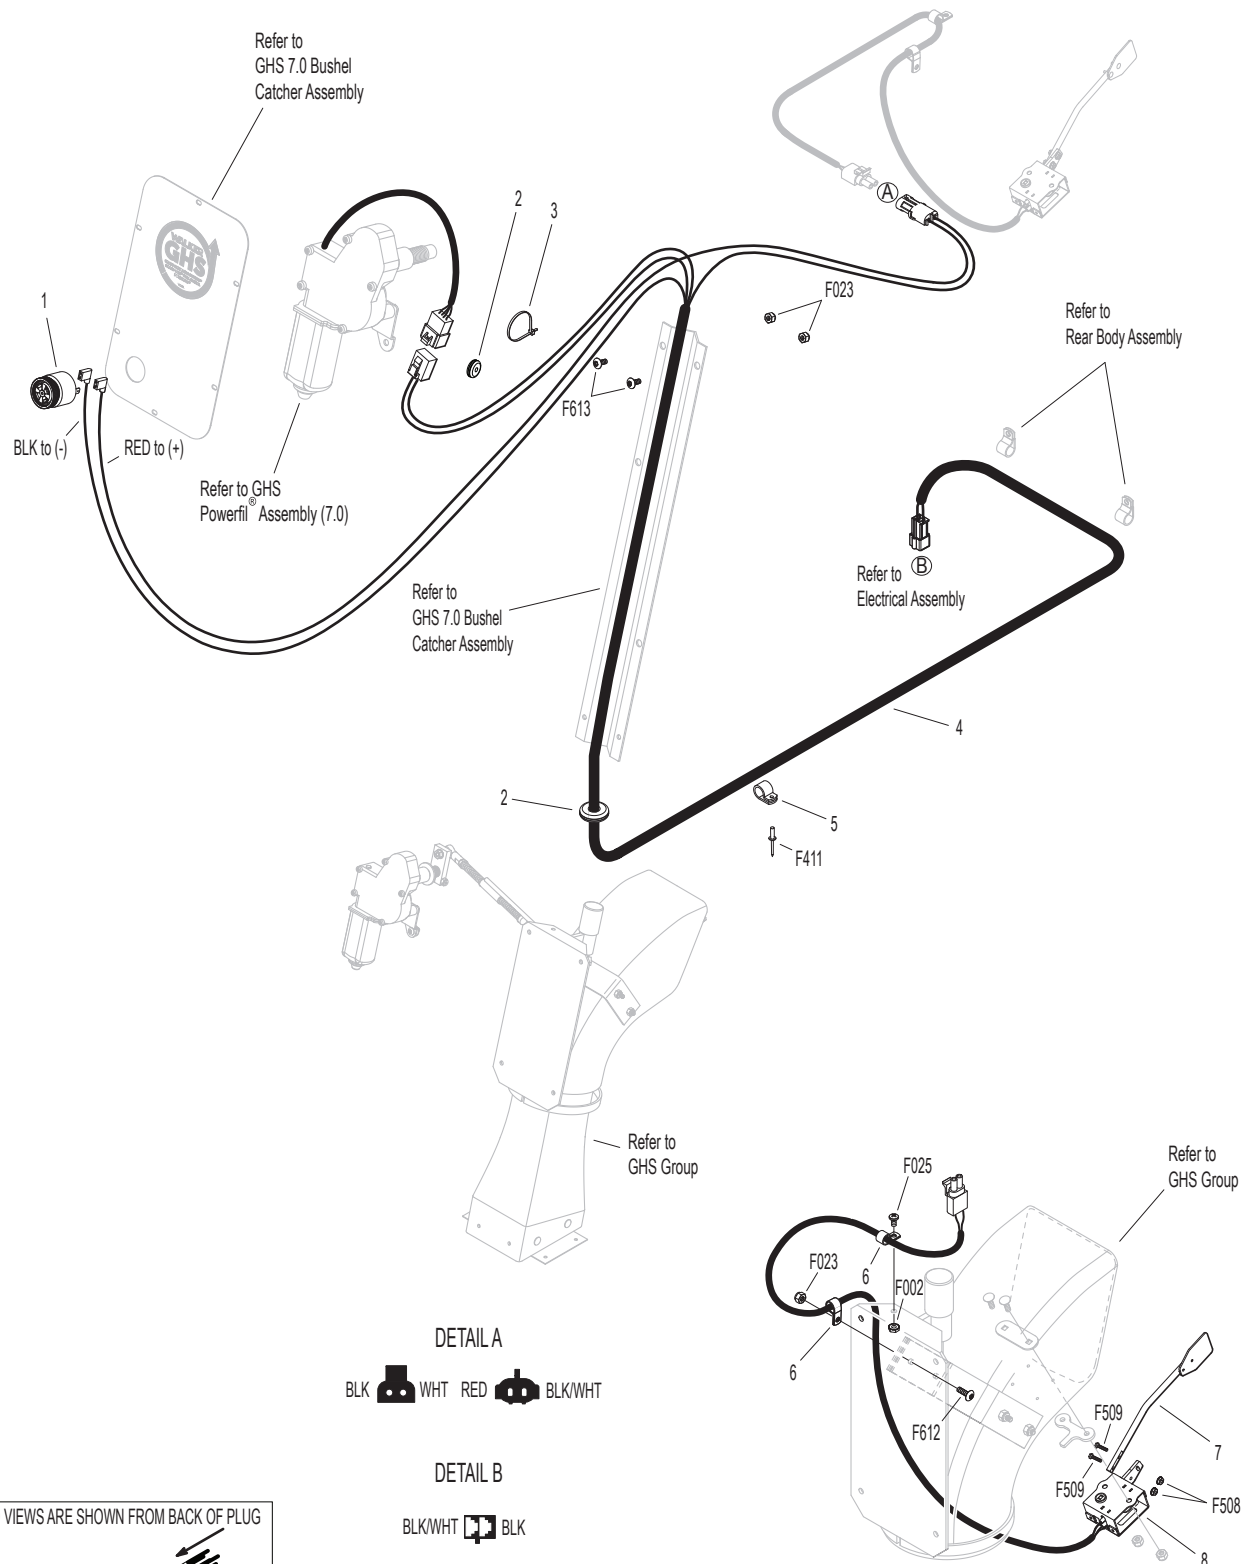

ELECTRICAL CONNECTORS

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Electrical Wiring Service Parts				29	7942-1	2-Way Locking Connector, Female	*
1	5996-1	16-14 GA Butt Connector	*	30	7942-2	2-Way Connector, Male	*
2	5996-11	12-10 GA Butt Connector	*	31	7942-3	2-Way Connector, Female	*
3	7942-14	16-14 GA Shrink Connector	*	32	7942-10	2-Way Locking Connector, Male	*
4	7942-13	12-10 GA Shrink Connector	*	33	5940-8	3-Way Connector, Male	*
5	5995-1	Wire Terminal Adapter	*	34	7942-9	3-Way Connector, Male	*
6	5996-4	16-14 GA Bullet Conn., Male	*	35	8944	3-Way Locking Connector, Male	*
7	5996-5	16-14 GA Bullet Conn., Female	*	36	8944-1	3-Way Locking Connector, Female	*
8	5940-4	16-14 GA Spg. Loaded Term., Female	*	37	7942-11	4-Way Connector, Male	*
9	5940-7	Wire Clip, Female	*	38	7942-12	4-Way Connector, Female	*
10	5996	1/4 x 16-14 GA QDF Terminal	*	39	7942-5	5-Way Connector, Male	*
11	5996-2	3/16 x 22-18 GA QKS Term., Female	*	40	5940-2	5-Way Connector, Male	*
12	7996	16-14 GA QKS Term., Female	*	41	8942-1	5-Way Connector, Female	*
13	5940-5	16-14 GA Spg. Loaded Term., Male	*	42	7942-6	6-Way Connector, Male	*
14	5996-0	1/4 x 22-18 GA QKS Term., Male	*	43	7942-7	6-Way Connector, Male	*
15	5996-18	16-14 GA Ring Term. (#8) Nylon Insulated	*	44	7942-8	8-Way Connector, Male	*
16	7996-1	1/4 x 16-14 GA QKS Term., Male	*	45	8942-2	8-Way Connector, Female	*
17	5996-8	6 GA Ring Lug (5/16) Insulated	*	46	8942-3	5-Way Connector, Male	*
18	5996-9	22-18 GA Ring Term. (#10)	*	47	5940-9	3-Way Connector (M)	*
19	5996-10	16-14 GA Ring Term. (5/16) Insulated	*	48	7942-15	6-Way Connector (Female)	*
20	5996-12	12-10 GA Ring Term. (5/16)	*	49	7940-3	Packard Plug (Male)	*
21	5996-13	16-14 GA Ring Term. (#10) Insulated	*	50	7940-4	Packard Plug (Female)	*
22	5996-15	12-10 GA Ring Term. (1/2)	*	* Service Part Only			
23	5996-16	6 GA Ring Terminal (1/4)	*	NOTE: Not all Electrical Connectors are used with all assemblies.			
24	5996-17	16-14 GA Ring Term. (1/4)	*	NOTE: Refer to ELECTRICAL ASSEMBLY , Page 22, for locations of Wiring Harness, Electrical Components and of all Electrical Wiring Service Parts.			
25	5996-20	12-10 GA Ring Term. (1/4) Insulated	*				
26	5996-21	12-10 GA Ring Term. (#10) Insulated	*				
27	7942-4	Single Connector, Male	*				
28	8942	2-Way Connector, Male	*				

ELECTRICAL CONNECTORS

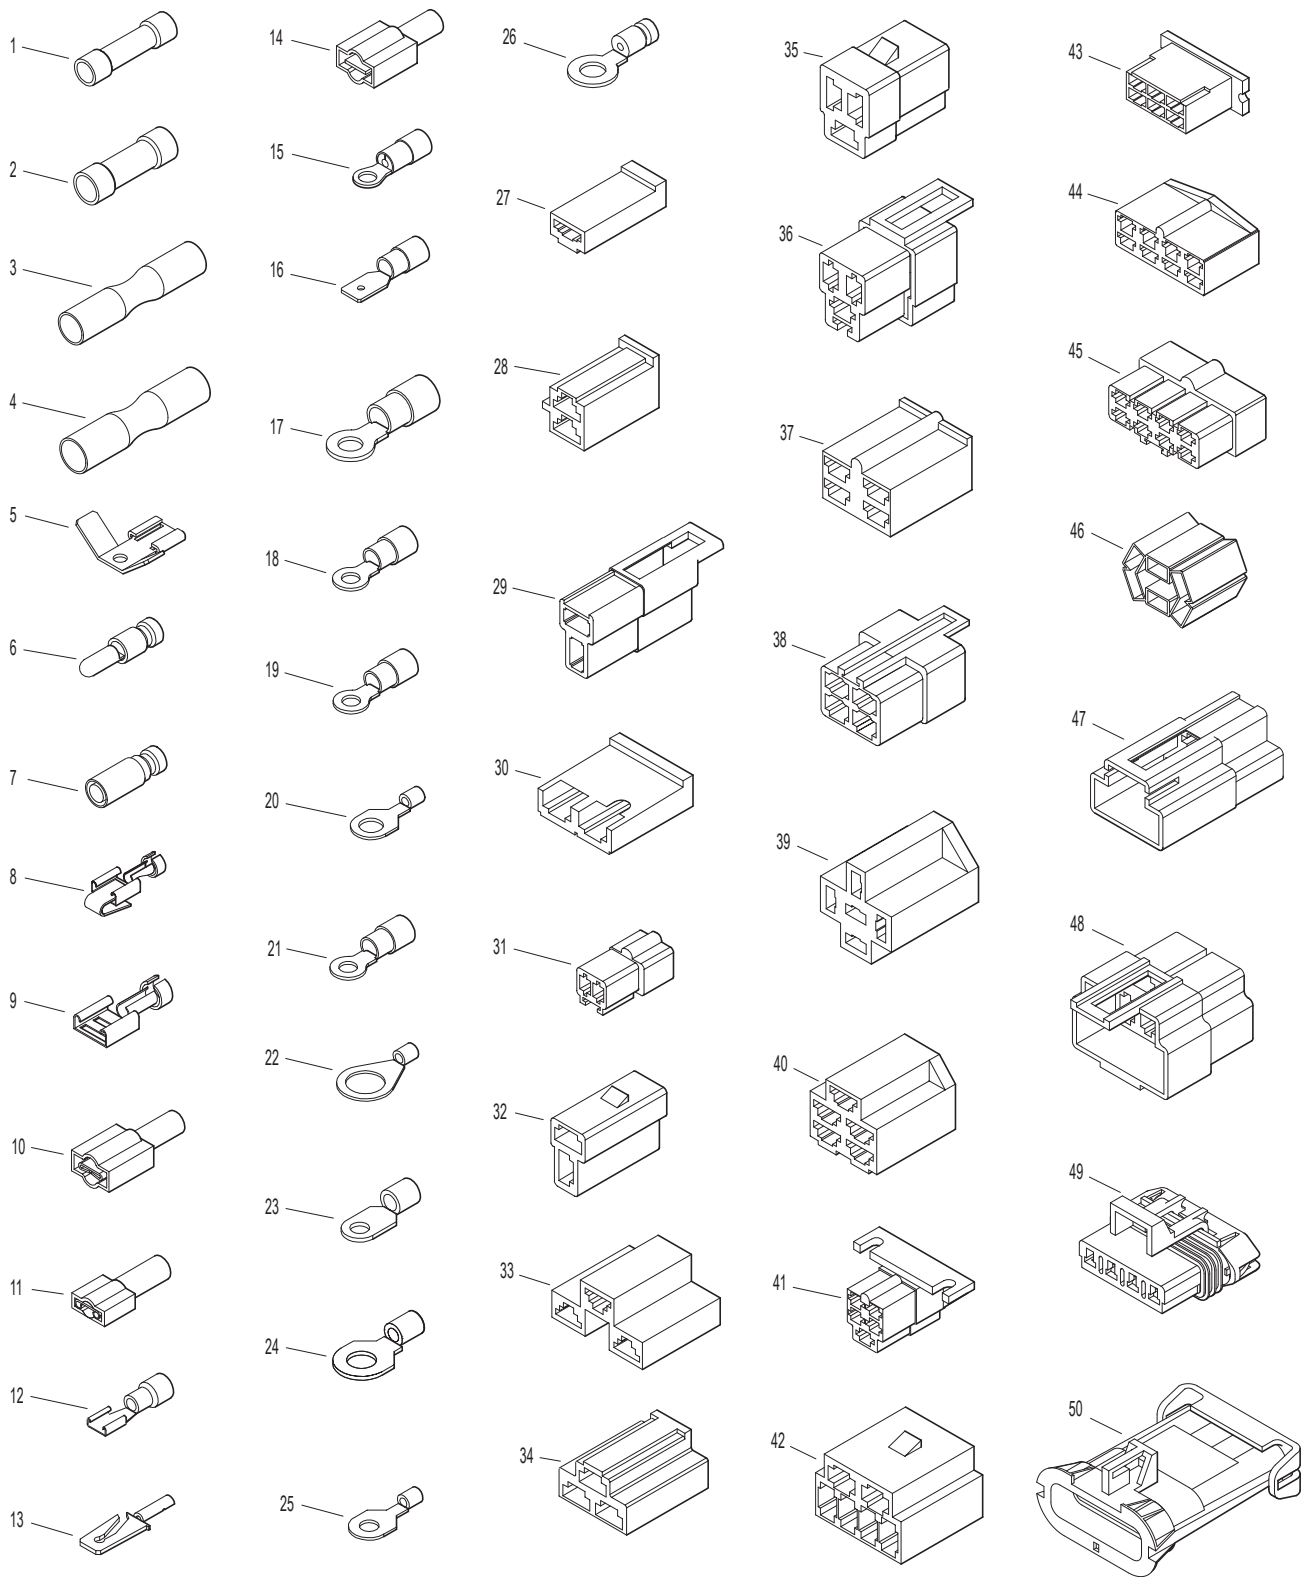

LUBRICATION POINTS

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
----------	----------	------------------	------------

Lubrication Points

1	Steering Lever Pivot	Grease	2
2	FSC Lever Pivot	Grease	1
3	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1
4	Universal Joint Tube Assembly	Grease*	1
5	Deck Support Arm Pivot	Grease	2
6	Hydro Idler Pivot	Grease	1
7	PTO Clutch Lever Pivot	Grease	1
8	Body Latch Pivot	Oil	1
9	Transaxle Oil Reservoir	Oil/20W-50	1
10	Clutch Actuator Push Rod (Grease Slide Area)	Grease	1
11	PTO Belt Tightener Pivot	Grease	1

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
----------	----------	------------------	------------


12	Brake Band Pivot Pins (Clevis)	Oil	2
13	Catcher Hinge Point	Oil	2
14	Throttle Control Cable Ends	Oil	2
15	Engine Dipstick / Oil Filler	Oil**	1
16	Engine Idler Pivot	Grease	1
17	Parking Brake Lever	Grease	1
18	Throttle Control Pivot	Oil	1

* Grease every 25 hours.


** Refer to S14i **Operator's Manual** for procedure for checking and changing oil in Engine Crankcase.

NOTE: See Model S14i **Operator's Manual** (P/N 5000-37) for proper lubrication intervals.

LUBRICATION POINTS

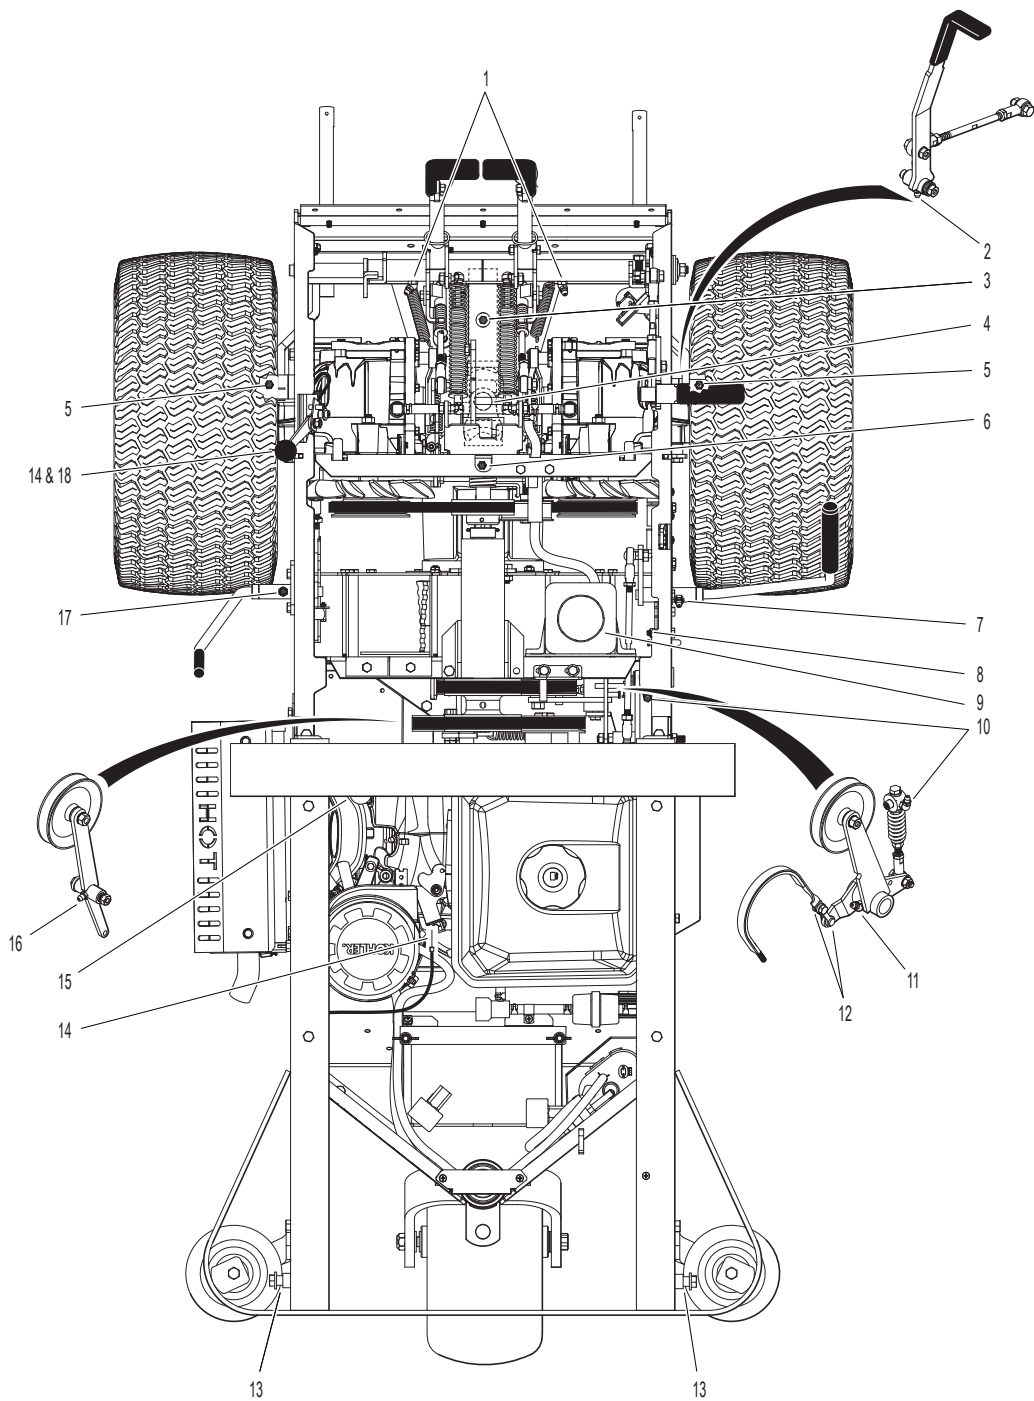

WIRING SCHEMATIC

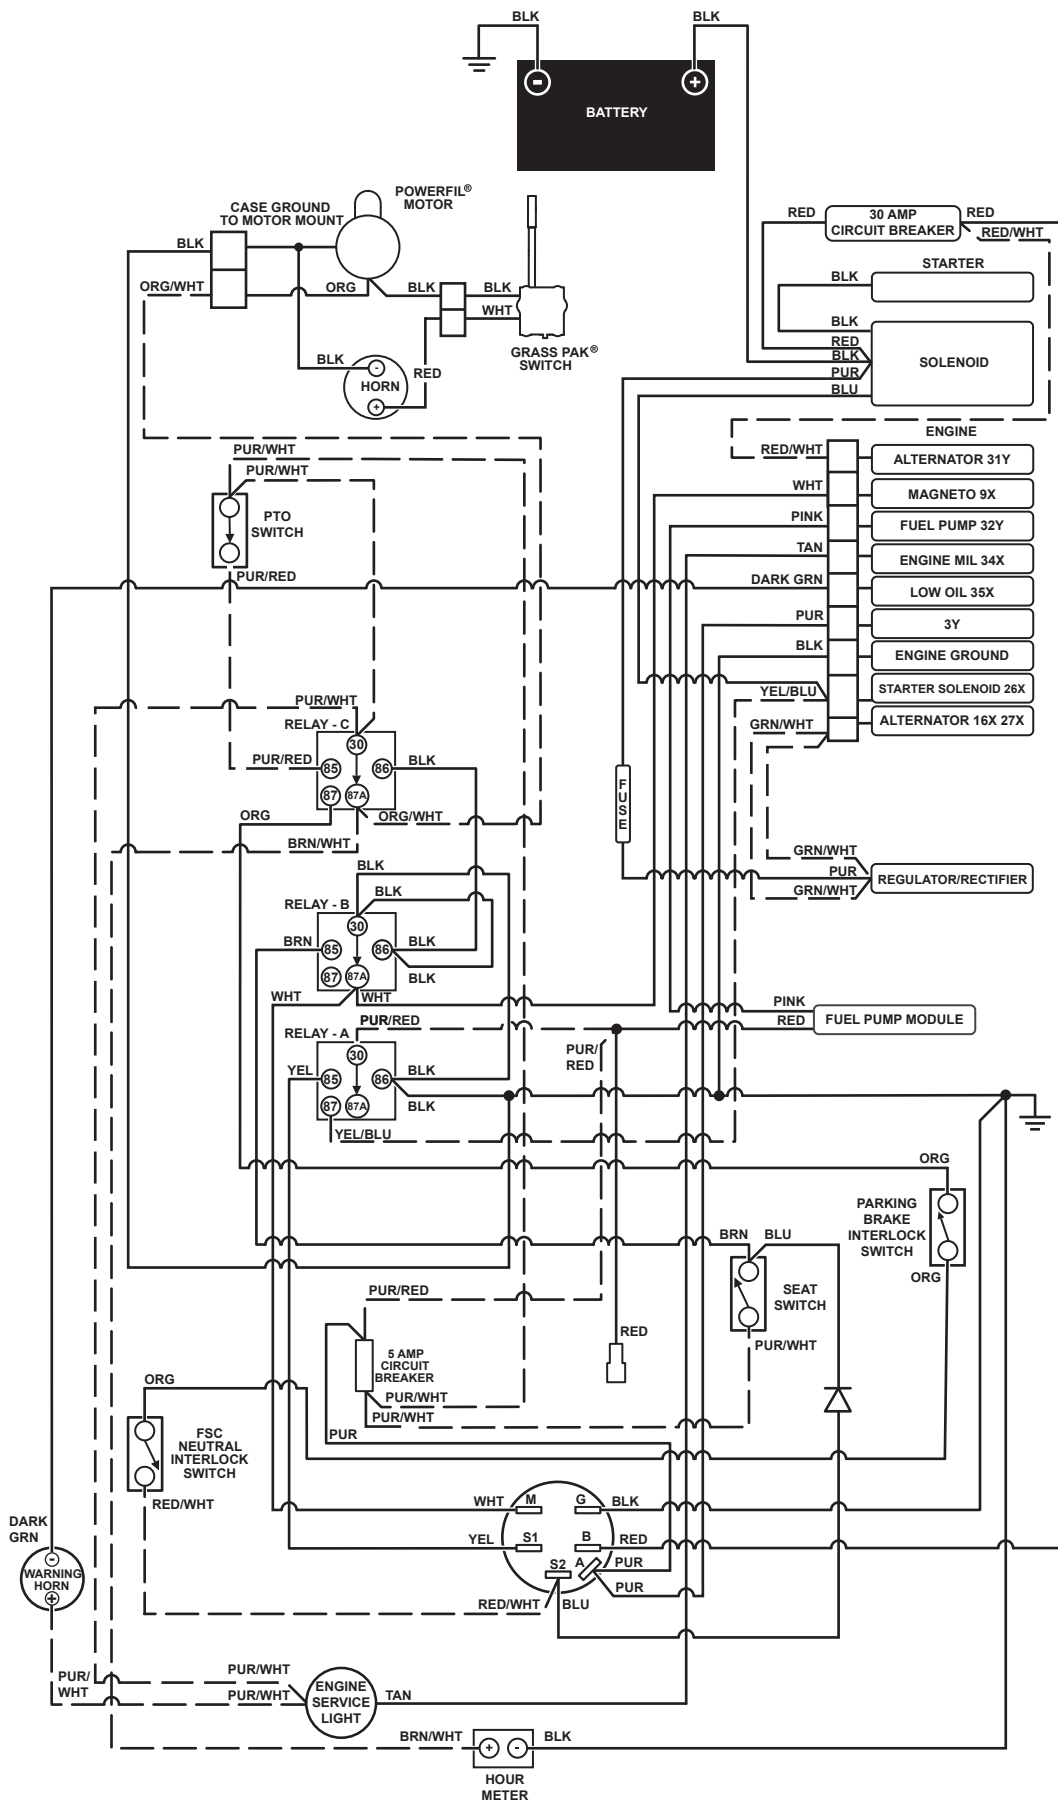

WALKER MODEL S14i Beginning S/N 154257

IGNITION SWITCH CIRCUITS	
OFF	G + M
START	B + A / S1 + S2
RUN	B + A

S1 = START CIRCUIT
 S2 = START/ACCESSORY CIRCUIT
 M = MAGNETO GROUND CIRCUIT
 B = BATTERY CIRCUIT
 A = ACCESSORY CIRCUIT
 G = GROUND CIRCUIT

RELAY - A	
START RELAY	
OFF	30 + 87A
START	30 + 87
RUN	30 + 87
PTO ON	30 + 87A

RELAY - B	
IGNITION RELAY	
OFF	30 + 87A
START	30 + 87
RUN	30 + 87
PTO ON	30 + 87A

RELAY - C	
PTO INTERLOCK RELAY	
OFF	30 + 87A
START	30 + 87
RUN	30 + 87
PTO ON	30 + 87

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

LIMITED WARRANTY FOR WALKER MODEL S14i RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within two (2) years* after the date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Kohler Engine
Battery

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

* A two (2) year or 2000 hour (whichever comes first) warranty is offered for Hydro-Gear ZT3100 hydrostatic transmissions; covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 2000 hours.

2. WHAT THIS WARRANTY DOES NOT COVER:


- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Operator's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

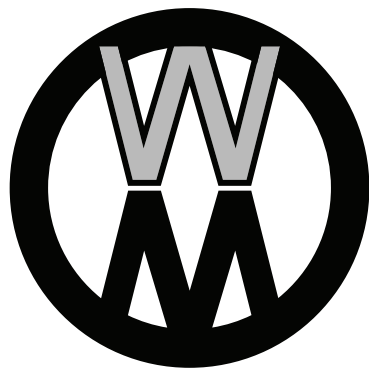

WALKER

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 010220 PRINTED IN USA www.walker.com ©2020 WALKER MFG. CO