




WALKER

Illustrated Parts Manual

C19

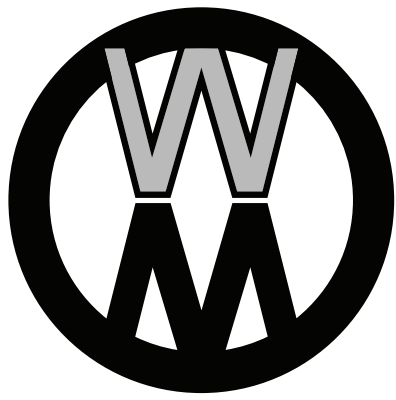

Beginning S/N: 140307
Effective Date: 05.05.16
P/N 6000-20

KEY TO ABBREVIATIONS USED IN THIS MANUAL

<i>Abbreviation</i>	<i>What it Represents</i>
° (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
AT	All-Terrain
CCW	Counter-clockwise
Conn	Connector
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
Spg	Spring
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
Term	Terminal
V	Volts
VLR	Very Low Restriction

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

Beginning S/N 140307

Effective Date 05-05-16

Use only genuine **Walker®** replacement parts.

ILLUSTRATED PARTS LIST

<i>Section of Tractor Covered</i>	<i>Page</i>
Decals	
Tractor Decals	2
Body / Chassis Assemblies	
Body / Chassis Assembly	4
Rear Body Assembly	6
Tractor Components	
Main Component Power Transmission	8
Engine Group	10
Hydrostatic Ground Drive Assemblies	12
Steering Control Assemblies	14
Throttle & Choke Control Assemblies	16
Parking Brake Assembly	18
GHS Group	20
GHS Powerfil® Assembly (7.0)	22
GHS 7.0 Bushel Catcher Assembly	24


<i>Section of Tractor Covered</i>	<i>Page</i>
Electrical Components	
Electrical Assembly	26
Electrical Assemblies (GHS 7.0 Bushel Components)	28
Electrical Connectors	30
Maintenance	
Lubrication Points	32
Wiring Schematic	34
Maintenance And Service Record Sheet	35
Warranty	
Limited Warranty	37

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQUIRED
Walker Product and Operation Decals				
1	8600-33	RH Fender	Body, RH Near Seat	1
2	5800-11	Walker (8" Round)	7.0 Bushel Catcher (one on each side)	2
3	8600-35	LH Fender	Body, LH Near Seat	1
4	8821-8	Decal, C19	Body	1
5	5856-1	Made in USA	Body	1
Danger Decals Warning Decals Caution Decals				
6	8600-10	Danger, Pinch Point	7.0 Bushel Catcher Mounting Frame Assembly (one on each side)	2
7	8600-4	Danger, Rotating Blower Blades	Body, Near Body Chute	1
8	8600-12	Danger, Engine Exhaust	Front Body, LH Side	1
9	5810-3	Decal, Hydro Warning	LH Gear Axle Drive Assembly	1
Maintenance Decals				
10	5082-5	Fuel Recommendations	Front Body, RH Side	1
11	5855	Important, Engine Cooling	Engine	1
12	5869	Removable Screen	7.0 Bushel Catcher Removable Screen	1
13	8600-16	Front Body Closure	Rear Cross Member, Body	1
14	5810-1	Axle Oil Level	Gear Axle Drive Assemblies (one on each)	2
15	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1
16	6807-1	Oil Pressure	Body	1
17	NS	Sealed Reservoir	Hydrostatic Drives (one on each)	2
18	8600-30	Parking Brake	Body, RH Side Below Seat	1
19	7827	Oil Level	Jackshaft Support	1
20	8600-23	Body Latch Decal	Body, RH Side Below Seat	1

NOTE: All parts requiring decals are shipped with decals applied.

TRACTOR DECALS

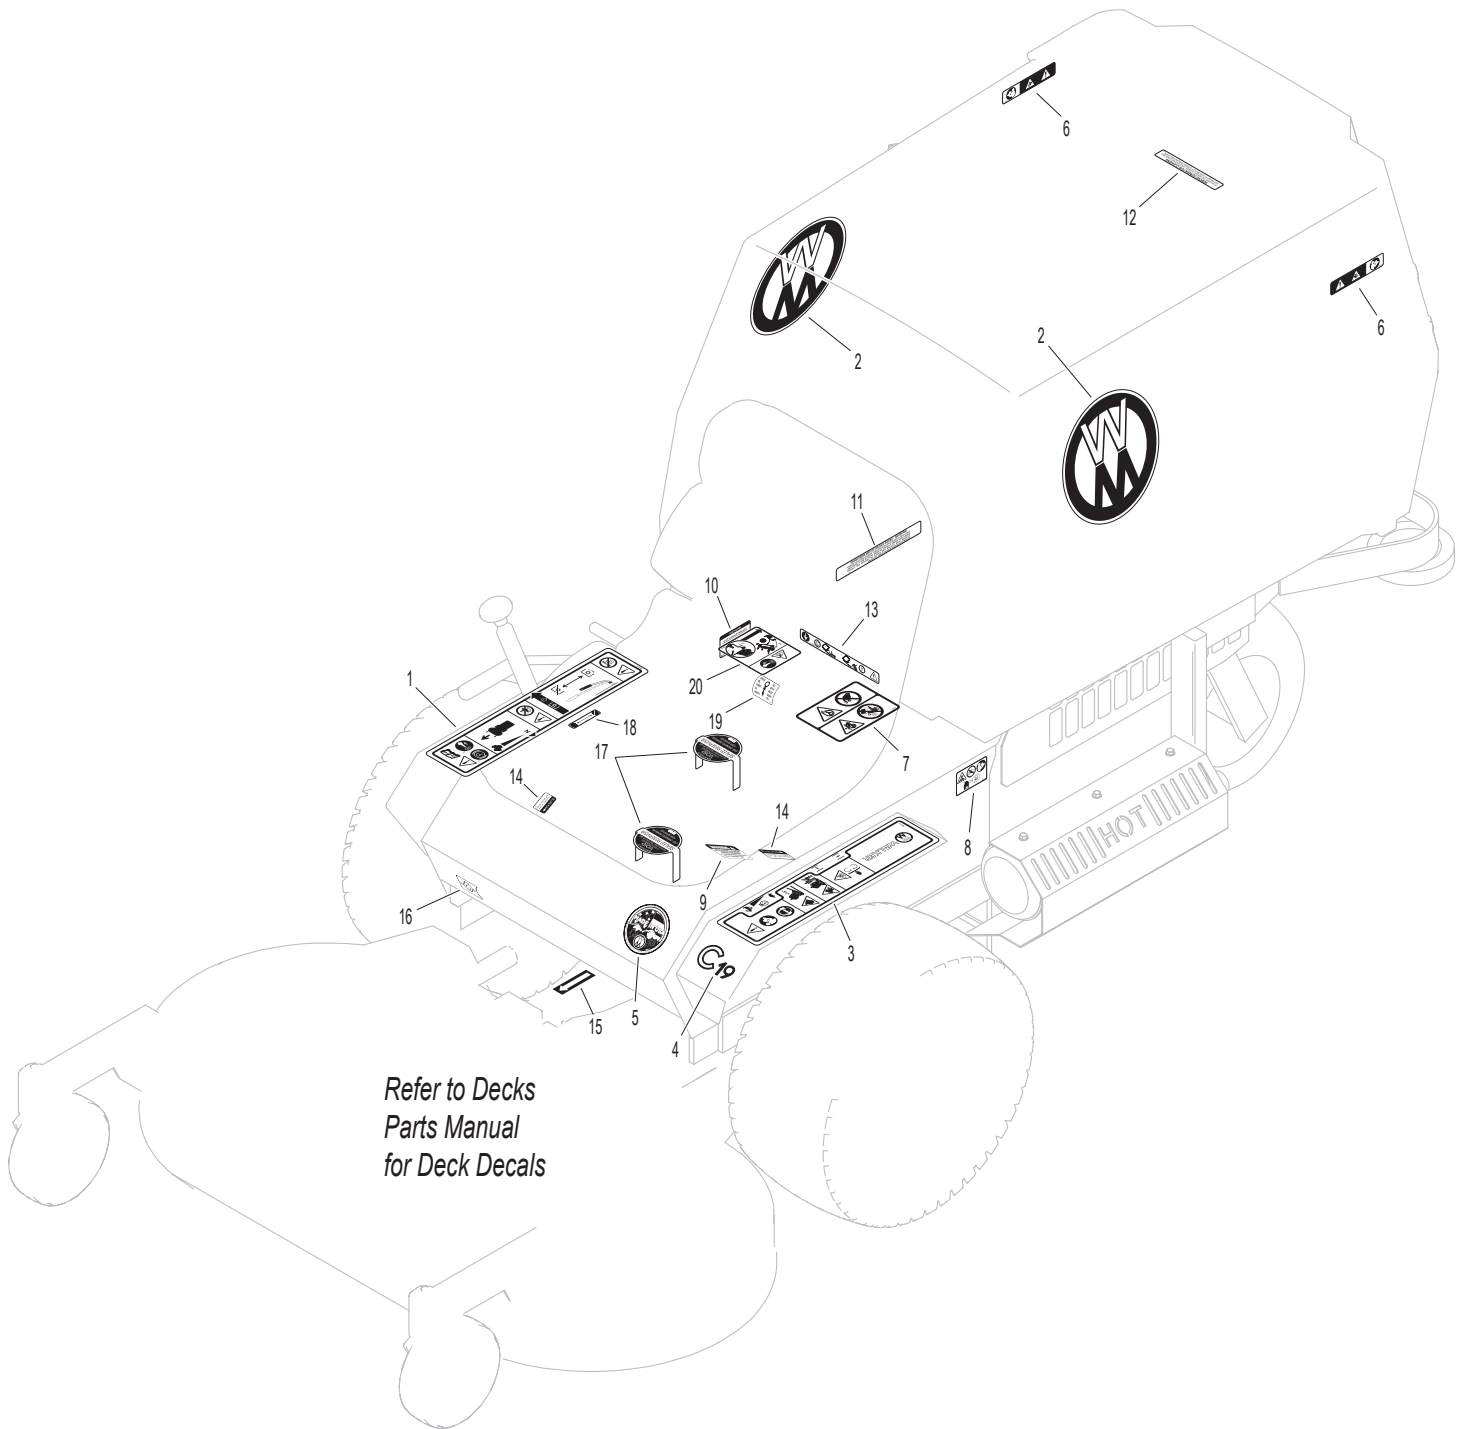

BODY / CHASSIS ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Seat Assembly				37	5038-1	Axle Spacer Tube (6-5/8)	1
1	5103	Seat	1	38	6307-2	Chassis Frame	1
2	7223-4	Compression Spring	2	39	5075-1	LP Wheel & Tire (18 x 8.50-10)	2
3	7846	Washer (3/8 ID x 1-1/4 OD x 1/8)	2		5075-2	LP Tire (18 x 8.50-10)	*
4	5841-1	Retainer Washer	2		5075-5	LP Wheel (10 x 7)	*
5	7845-1	Rubber Bumper (1.375 x .750)	2		5033-6	Wheel & Tire (18 x 7.00-8)	**
6	7440-5	Shock Mount (1-1/4 x 3/4)	2		5030-6	Standard Tire (18 x 7.00-8)	*
Rear Bumper Assembly					5031-2	Standard Wheel (8 x 5.5)	*
7	7516-5	Catcher Pivot Bushing	2		5030-4	Tire Tube (18 x 8.50-8)	*
8	5517-8	7.0 Rear Bumper	1	Fasteners			
9	7517-2	Catcher Pivot Plate	2		F002	10-24 Keps Nut	4
10	5162	Roller Wheel (5" Rubber)	2		F004	1/4-20 Keps Nut	2
Body Assembly					F005	1/4-20 ESNA Nut	1
11	2505	Leaf Spring	1		F009	5/16-18 Whiz Locknut	9
12	5845	Rubber Bumper (1.50 OD x 1.25)	4		F012	3/8-16 Keps Nut	8
13	NS	Body ID Plate	1		F013	3/8-16 Whiz Locknut	2
14	7383-3	Body Latch Hook (2-1/2 Side Bars)	1		F014	3/8-16 ESNA Nut	4
15	7854	Plastic Tip, Red	1		F016	1/2-13 Self-Locking Nut	1
16	5989-12	Dome Plug (3/16)	1		F020	5/16-18 ESNA Nut	1
17	5989-10	Dome Plug (9/16)	1		F025	10-24 x 3/8 PPHMS	4
18	8118	Heat Deflector	1		F029	1/4-20 x 1/2 Hex Bolt	2
19	5989-3	Dome Plug (5/16)	4		F031	1/4-20 x 5/8 Hex Bolt	1
20	5989-4	Dome Plug (3/8)	3		F038	3/8-16 x 1 Hex Bolt	6
21	6100-19	Front Body	1		F040	3/8-16 x 1-1/2 Hex Bolt	2
22	5146	10mm Ball Stud	2		F042	3/8-16 x 2-1/4 Hex Bolt	2
23	2145	Gas Spring Assembly (Includes Item # 22)	1		F048	1/2 SAE Washer	2
24	5180	Edge Molding, Lever Opening	2		F050	1/4 SAE Washer	1
Tilt-Up Latch Assembly***					F051	3/8 SAE Washer	2
25	5847	Plastic Tip	1		F059	3/8 Wave Spring Washer	2
26	5744-20	Spring Arm, Tilt-Up Latch	1		F093	5/16-18 x 1 Hex Bolt	1
27	5744-10	Spring Pivot Bushing	1		F151	3/8-16 x 7/8 Hex Bolt	2
28	5744-15	Compression Spring (3/8 x 5/8)	1		F157	1/2-20 x 1-1/4 Wheel Lug Bolt	8
29	5744-13	Mount Angle, LH	1		F183	.312 x .700 x .074 Washer	2
30	5744-12	Hook, Tilt-Up Latch	1		F206	#2 x 3/16 Drive Pin	2
31	5744-14	Mount Angle, RH	1		F227	3/8 x 1-1/4 x 1/8 Plastic Washer	2
Chassis Assembly					F241	.375 x .875 x .10 Washer	4
32	5267-1	Retainer Collar (1") (Includes Item # F413)	1		F257	3/8 x 1-11/16 Shoulder Bolt	2
33	5270-1	Pivot Bearing	2		F292	1/2-13 x 8-1/2 Hex Bolt, GR 2	1
34	5420-2	Tail Wheel Fork	1		F341	Coil Roll Pin (7/64 x 9/16)	1
35	5037-1	Bearing, Tail Wheel	2		F342	5/16 Conical Washer	2
36	5035	Tail Wheel & Tire Assembly (13 x 6.50-6)	1		F413	5/16-24 x 5/16 Set Screw	2
	5035-1	Tail Wheel Tire (13 x 6.50-6)	*	* Service Part Only			
	5036	Tail Wheel & Hub (6 x 4.5)	*	** May be ordered as a factory-installed option or for dealer installation. Narrow Drive Tires are used when installing a 36" Deck. Contact your Walker dealer.			
				*** Complete Tilt-Up Latch Kit available by ordering kit P/N 5747.			

Beginning S/N 140307

Effective Date 05-05-16

Use only genuine **Walker®** replacement parts.

5

REAR BODY ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Rear Body Assembly


1	5976-2	Grommet (3/16 x 3/4)	1
2	5105-1	Rear Body Cover	1
3	8515-14	Catcher Handle Plate, RH	1
4	8389-4	Splash Guard	1
5	7146	13mm Ball Stud	2
6	7147	Spring Clip	2
7	7145	Gas Spring Assembly (Includes Items # 5 & 6)	1
8	7190-1	Insulation Foam Pad, LH	1
9	7190-2	Insulation Foam Pad, RH	1
10	5105	Rear Body Panel	1
11	8515-13	Catcher Handle Plate, LH	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Fasteners

F002	10-24 Keps Nut	8
F004	1/4-20 Keps Nut	5
F009	5/16-18 Whiz Locknut	2
F025	10-24 x 3/8 PPHMS	4
F026	10-24 x 1/2 PPHMS	4
F031	1/4-20 x 5/8 Hex Bolt	2
F032	1/4-20 x 3/4 Hex Bolt	1
F390	1/4-20 x 7/8 Carriage Bolt	2

NOTE: Rear Bumper Assembly for GHS Models is not shown here.
Refer to **BODY / CHASSIS ASSEMBLY**, Page 4.

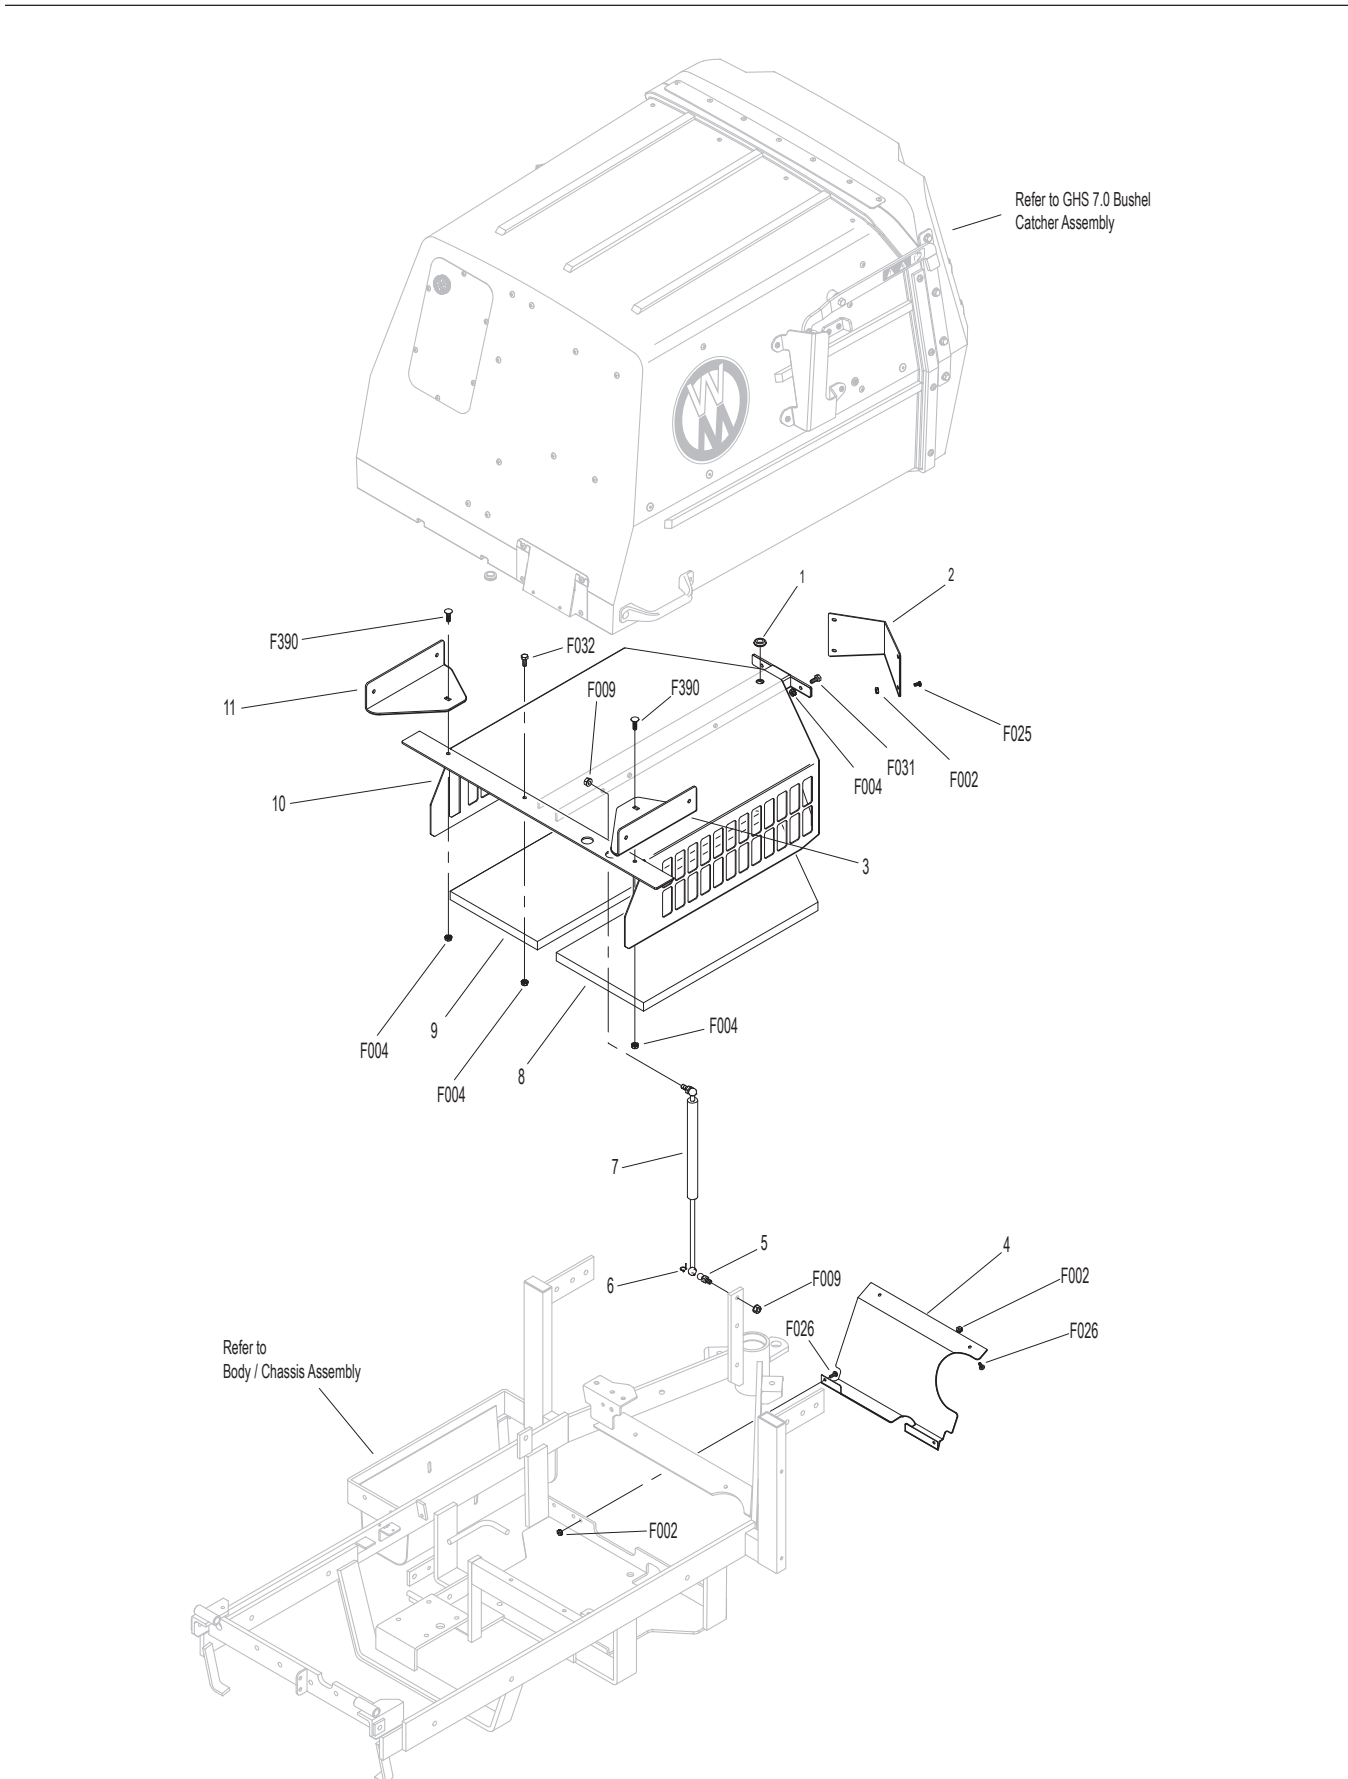

Beginning S/N 140307
Effective Date 05-05-16
Use only genuine **Walker®** replacement parts.

MAIN COMPONENT POWER TRANSMISSION

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Clutch Lever Assembly				44	5221-1	Extension Spring (3/4 x 5)	2
1	8358-3	Clutch Lever (Includes Items # 2 & 3)	1	45	7833	Cable Clamp (7/8 x 1/4)	2
2	5830	Grease Fitting	7	46	8539	Starter Relay Mount	1
3	4850	Handle Grip, Black	1	47	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F171)	1
4	7303-10	Clutch Actuator Bolt (3/8)	1	48	5268	Bearing with Collar (3/4)	2
5	7380-5	Knuckle Joint (3/8 ID)	1	49	8349	Transmission Belt Tightener Arm	1
6	7226-10	Compression Spring (3/4 x 2-1/2)	1	50	8393-7	Hydro Jackshaft Mount	1
7	8130-5	Pushrod, Clutch Actuator (Threaded Tube) (Includes Item # 2)	1		8394-1	Hydro Jackshaft Mount Assembly (Includes Items # 2, 9, 43, 48, 50 & 51)	*
8	8130-10	Clutch Actuator Rod Assembly (Includes Items # 2, 4-7, F054, F336 & F353)	1	51	8273	Jackshaft (3/4 x 7-1/2)	1
9	7201-3	Fiberglide Bearing	6	52	7240-4	Jackshaft Drive Pulley (3.3/3V) (Includes Items # F067 & F171)	1
10	7201-5	Inner Race (2-1/4)	1	Fasteners			
11	8368	PTO Belt Tightener	1		F002	10-24 Keps Nut	1
12	5841	Retainer Washer (3/8 x 1-1/4)	4		F003	1/4-28 Hex Nut	2
13	8243-1	Clutch Idler Pulley	1		F004	1/4-20 Keps Nut	3
	8243	Clutch Idler Pulley Assembly (Includes Items # 13-15 & F070)	*		F005	1/4-20 ESNA Nut	1
14	5265	Bearing (3/4)	1		F009	5/16-18 Whiz Locknut	3
15	8243-3	Hub, Idler Pulley	1		F012	3/8-16 Keps Nut	8
16	8375	PTO Belt Tightener Stop	1		F025	10-24 x 3/8 PPHMS	1
17	7377	Plastic Washer (1 x .438 x .025)	2		F029	1/4-20 x 1/2 Hex Bolt	1
18	7378	Pivot Bearing (7/16 x 9/16)	1		F034	5/16-18 x 3/4 Hex Bolt	2
19	5281-1	Clevis Spring Pin	1		F040	3/8-16 x 1-1/2 Hex Bolt	1
20	5280	Clevis (1/4)	2		F041	3/8-16 x 1-3/4 Hex Bolt	2
21	8305	Brake Actuator Rod	1		F042	3/8-16 x 2-1/4 Hex Bolt	3
22	8370	Bearing, Brake Actuator	1		F043	3/8-16 x 3 Hex Bolt	1
23	5281-5	Clevis Pin (1/4 x 0.80)	1		F047	3/8-16 x 4-1/2 Hex Bolt	1
24	8250	Brake Spring (1/2 x 2-1/2)	1		F054	AN960616 Washer	3
25	8369	Brake Actuator (Includes Items # 2 & 22)	1		F061	1/4 Internal Star Lock Washer	1
PTO Drive Shaft Assembly					F067	3/16 x 3/16 x 1 Key	2
26	7050-1	Dipstick, Gearbox	1		F069	3/32 x 1/2 Cotter Pin	1
27	8371-1	Mount Bracket, Brake Band	1		F070	1-3/4 Internal Snap Ring	1
28	8377	Brake Band Guide	1		F090	1/4-20 x 2-1/2 Hex Bolt	1
29	8050-11	PTO Gearbox / Flange Pulley	1		F116	1/4-20 x 1-1/4 Hex Bolt	1
30	5245	Idler Pulley (3")	2		F121	5/16-18 x 3/8 x 1 SHL Bolt	1
31	7248	Ground Drive Belt, Micro-V	1		F131	5/16-18 x 1/2 Hex Bolt	2
32	7275-9	Quick Coupler Installation Tool	**		F132	1/4-20 x 2-3/4 Hex Bolt	1
33	7275-16	Universal Joint Tube Assembly (Spline)	1		F168	5/16 Split Lock Washer	14
34	8304	Brake Band (14-1/2)	1		F171	5/16-18 x 3/8 Set Screw	4
35	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1		F178	1/4 x 1 Fender Washer	1
36	6250-1	Drive Belt (3VX370)	1		F182	1/4 x 5/8 x 1/8 Washer	2
37	7236-1	PTO Drive Pulley (4-1/2/3V) (Includes Items # F168 & F226)	1		F186	5/64 x 1/2 Cotter Pin	1
38	8237-2	Engine Pulley, Bolt On (4/3.8/3V) (Includes Items # F168 & F226)	1		F226	5/16-18 x 7/8 Hex Bolt	14
39	8230	Engine PTO Belt	1		F241	.375 x .875 x .10 Washer	1
Jackshaft Assembly					F261	AN960616L Washer	1
40	7245-1	Idler Pulley (3/8 Groove)	1		F336	3/8-16 Jam Nut	1
41	6325-2	Spacer Bushing (5/16)	2		F353	3/8-16 ESNA LP Nut	1
42	8349-2	Idler Arm	1	* Service Part Only			
43	7201-4	Inner Race (1-1/2)	2	** The Quick Coupler Installation Tool is used to assist the installation of the Quick Coupler Tube and PTO Shaft connection by holding the disconnect ring in the retracted position when joined to the tractor spline shaft on the PTO gearbox.			

Beginning S/N 140307

Effective Date 05-05-16

Use only genuine **Walker®** replacement parts.


[illegible]

9

ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Precleaner Assembly				37	8023	Fuel Tank Support	1
1	NS	Air Cleaner Band	1	38	5086-7	Hose (1/4 x 6)	1
2	7840-5	Hose Clamp (1-1/2 to 2)	2	39	5020-2	Fuel Filter, In Tank	1
3	6087-6	Air Intake Hose	1	40	6055-2	Fuel Tank, 4.0 Gallon, Gas	1
4	4090	Air Cleaner Assembly (90 Deg.) (Includes Items # 1, 9-12, F009 & F091)	*			(Includes Item # 25, 26, 28, 32, 38 & 39)	
5	5090-5	Safety Filter Insert, VLR	1	Fasteners			
6	5090-4	Air Cleaner Cartridge, VLR	1	F004	1/4-20 Keps Nut		2
7	5091-15	Air Flow Indicator Mount	1	F009	5/16-18 Whiz Locknut		7
8	5091-6	Air Flow Indicator W/Bracket	1	F012	3/8-16 Keps Nut		2
9	M258	Vacuum Hose (17")	1**	F029	1/4-20 x 1/2 Hex Bolt		2
10	7334-3	Air Cleaner Bracket	1	F031	1/4-20 x 5/8 Hex Bolt		4
11	5091-0	1/8 Pipe Thread Male W/Barb	1	F034	5/16-18 x 3/4 Hex Bolt		2
12	5091-16	Street Elbow 90' (1/8 x 1/8)	1	F038	3/8-16 x 1 Hex Bolt		1
Engine & Exhaust Assemblies				F050	1/4 SAE Washer		4
13	8016-4	Regulator Mount	1	F051	3/8 SAE Washer		2
14	NS	19 HP Kohler Engine	1	F061	1/4 Internal Star Lock Washer		2
15	NS	Oil Filter (Kohler 2805001)	1	F063	3/8 Internal Star Lock Washer		4
16	NS	Gasket (Kohler 2404102)	2	F079	A/A66D Aluminum Pop Rivet		1
17	NS	Nut (Kohler M-0841080)	4	F091	5/16-18 x 5/8 Hex Bolt		4
18	6013-15	Muffler	1	F106	3/8-16 x 5/8 Hex Bolt		2
19	6013-18	Muffler Heat Shield	1	F151	3/8-16 x 7/8 Hex Bolt		2
20	6013-19	Muffler Brace	1	F175	1/2 Split Lock Washer		4
21	8021	Engine Brace	1	F184	1/4-20 x 1/2 Hex Bolt, SS		3
22	8010-2	Engine Bumper Mount	1	F185	1/4 Internal Star Lockwasher, SS		3
23	5845	Rubber Bumper (1.50 x 1.25)	1	F273	M6 x 1.0 Nut		4
Fuel Tank Assembly				F285	1/2-13 x 1-1/2 Hex Bolt		4
24	5082-4	2-1/4 Ratchet Fuel Cap	1	F482	8-32 Nylock Nut		2
25	8055-2	Fuel Tank Gauge	1	F483	8-32 x 3/4 PPHMS		2
26	8043-8	Roll Over Valve	1	F547	M6 x 1.0 x 45 Stud		2
27	M113	Fuel Line (3/16 x 26-1/2")	1**	* Service Part Only			
28	5083-8	Tank Tube (13")	1	Required hose specifications:			
29	5879-3	Hose Clamp (1/2)	4	M113 - 3/16" ID fuel/oil/vapor hose (Gates 4219-0093 or equivalent)			
30	5975-3	Cable Tie (50# x 7")	1	M247 - 5/16" ID low permeation (<15g/m^2/day) fuel hose (Parker 38905 or equivalent)			
31	M247	Fuel Line, Tank (5/16 x 9")	1**	M258 - 7/64" ID automotive vacuum hose			
32	5977-7	Roll Over Grommet (.900 x 1-1/2)	1	NOTE: Refer to Kohler Engine Decal (NS) for Engine Identification Numbers.			
33	5083-1	Bushing, Rubber	*				
34	7833	Cable Clamp (7/8 x 1/4)	1				
35	5020	Fuel Filter	1				
36	NS	Fuel Line, Engine (Kohler)	*				

ENGINE GROUP

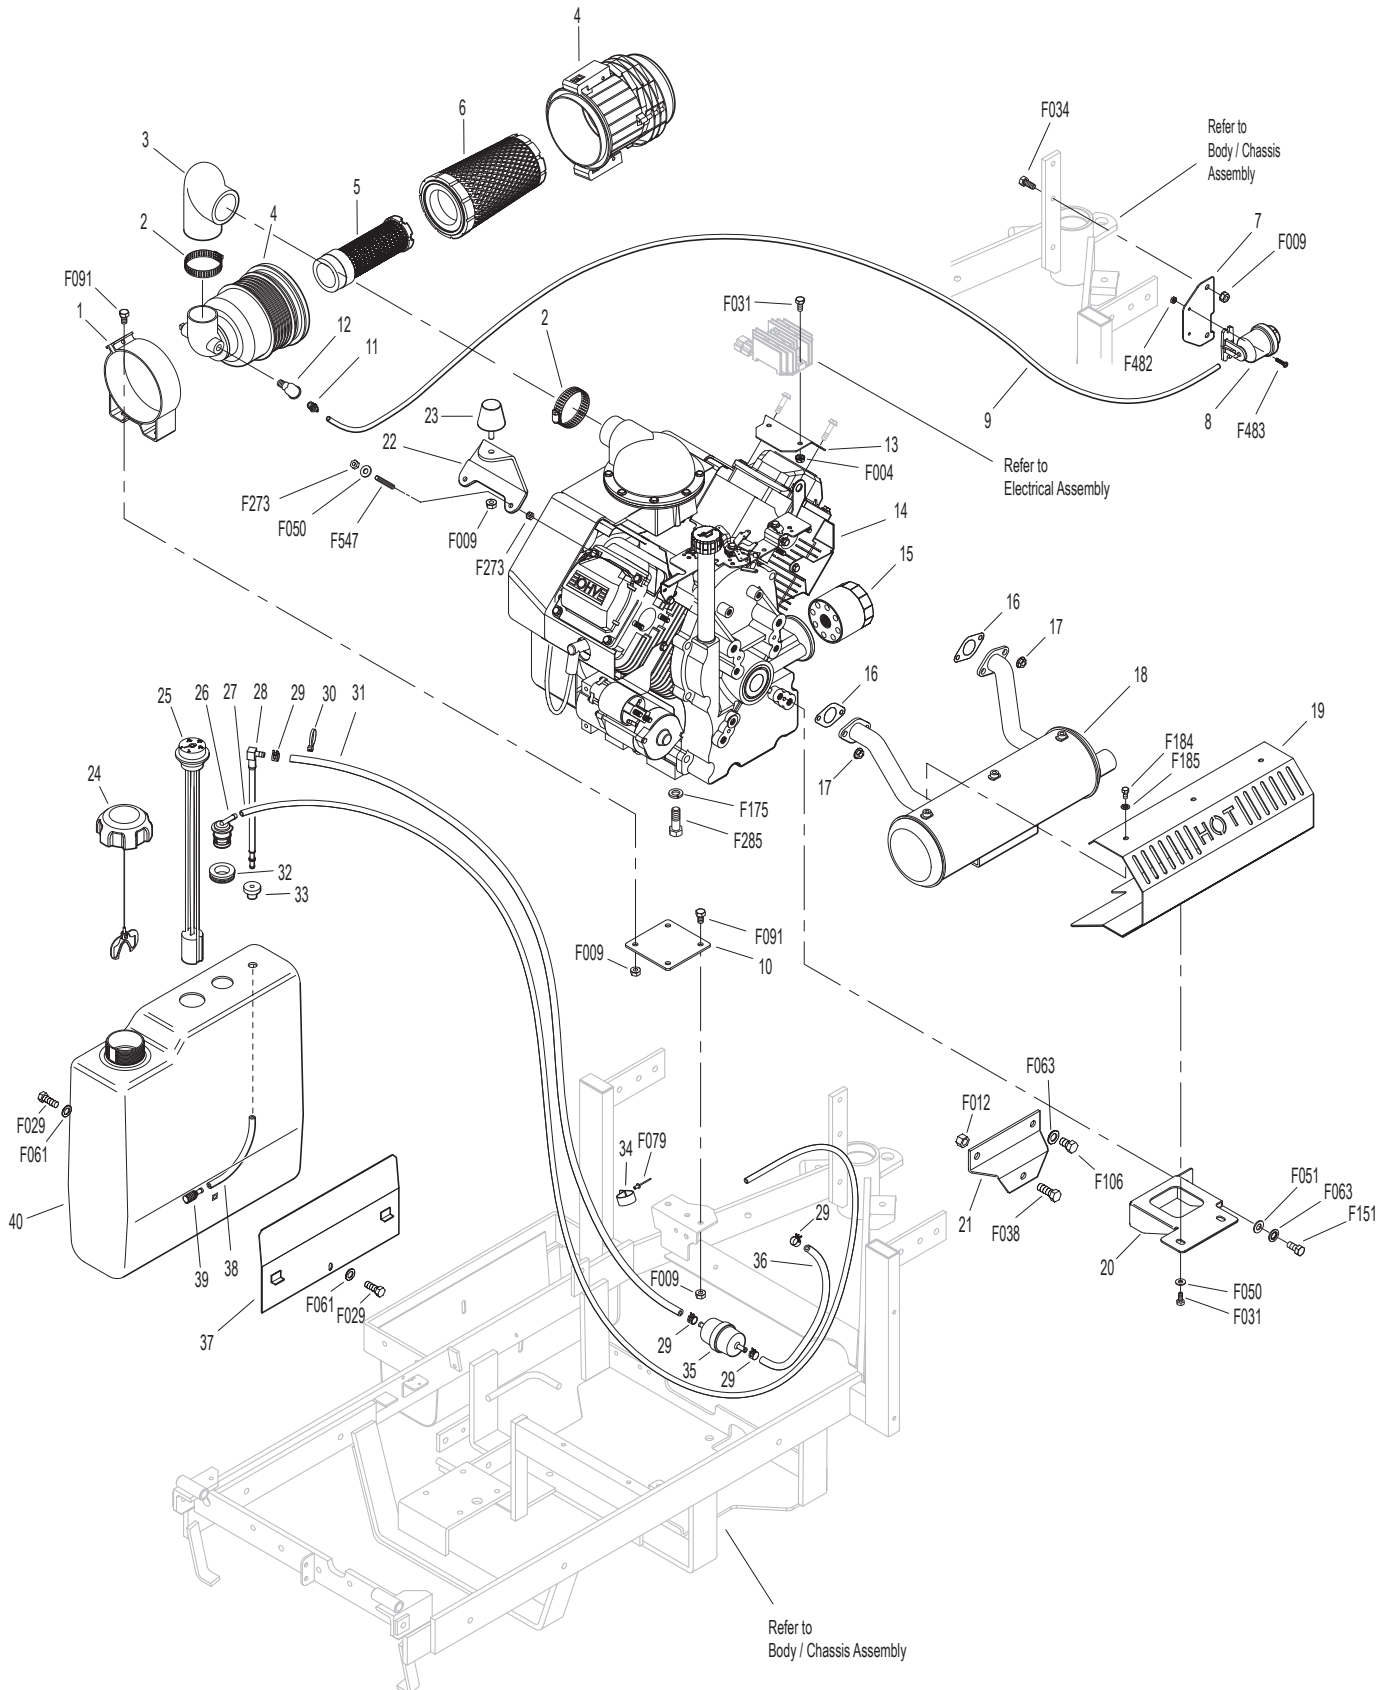


Beginning S/N 140307
 Effective Date 05-05-16
 Use only genuine **Walker®** replacement parts.

HYDROSTATIC GROUND DRIVE ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transmission Lockout Assembly				Transmission Repair Parts			
1	5028-3	Transmission Lockout Assembly (Includes Items # 2-5, F023, F027 & F081)	*	27	5025-13	Hydro Input Shaft (Includes Items # 28-30)	*
2	5847	Plastic Tip	2	28	5025-8	Bearing, Input Shaft	*
3	5057	Lockout Cam (Includes Item # F081)	2	29	5025-7	Snap Ring	*
4	5028-5	Lockout Lever	2	30	5025-2	Seal, Input Shaft	*
5	5027-5	Lockout Mount	1**	31	5022	Reservoir to Casting Gasket	*
Ground Drive Assemblies				32	5024	Reservoir Cap and Gasket	*
6	6209-5	Bridge Assembly	1	33	5023	Transmission Reservoir Kit	*
7	6209-10	Idler Pulley Mount	1	34	5023-1	Rubber Bladder	*
8	6243-2	Hydro Fan, CCW	1	35	5025-6	O-Ring & Plug Assembly	*
9	5026	Hydrostatic Drive, CW	1	36	5025-3	Seal, Control Shaft	*
10	6206-1	Air Vent Valve	*	Fasteners			
11	6200-9	Gear Axle Drive Assembly (Includes Items # 10 & 12)	2	F009	5/16-18 Whiz Locknut	2	
12	6207-12	Pipe Plug (1/4 NPTF)	4	F012	3/8-16 Keps Nut	1	
13	5126	Cable Retainer (Uses existing bolt on Gear Axle Drive Assembly)	1	F023	10-24 ESNA Nut	2	
14	6233-1	Pinion Gear	2	F027	10-24 x 5/8 PPHMS	2	
15	6234	Spacer, Pinion Gear	2	F034	5/16-18 x 3/4 Hex Bolt	2	
16	6201	O-Ring Seal	2	F036	1/4-20 x 1/2 SBH Screw	2	
17	7244	Hydro Pulley (3-7/8/MV) (Includes Items # F064 & F359)	2	F038	3/8-16 x 1 Hex Bolt	4	
18	6243-1	Hydro Fan, CW	1	F040	3/8-16 x 1-1/2 Hex Bolt	4	
19	5025	Hydrostatic Drive, CCW	1	F043	3/8-16 x 3 Hex Bolt	6	
Deck Support Arm Assemblies				F051	3/8 SAE Washer	2	
20	6430-10	Outboard Mount, LH	1	F053	7/16 Internal Star Lock Washer	4	
21	6431-1	Deck Support Arm, LH (Includes Item # 25)	1	F063	3/8 Internal Star Lock Washer	16	
22	5775-2	Hitch Pin (# 6)	2	F064	1/8 x 1/2 Woodruff Key (#3)	4	
23	6431-2	Deck Support Arm, RH (Includes Item # 25)	1	F081	A/A45D Aluminum Pop Rivet	2	
24	6430-9	Outboard Mount, RH	1	F160	External Snap Ring (.669 Shaft)	2	
25	5830	Grease Fitting	2	F178	1/4 x 1 Fender Washer	2	
26	6840-1	Support Arm Bushing (2-1/16)	2	F194	7/16 x 1-1/4 x 1/8 Washer	2	
				F200	7/16-20 x 3 Grade 8 Bolt	2	
				F244	7/16-20 x 3/4 Hex Bolt	2	
				F262	3/8-16 x 4 Hex Bolt All Thread	2	
				F359	5/16-18 x 5/16 Set Screw (Unbrako Knurl Point)	4	
				* Service Part Only			
				** Part not used on Jackshaft side of tractor.			

HYDROSTATIC GROUND DRIVE ASSEMBLIES

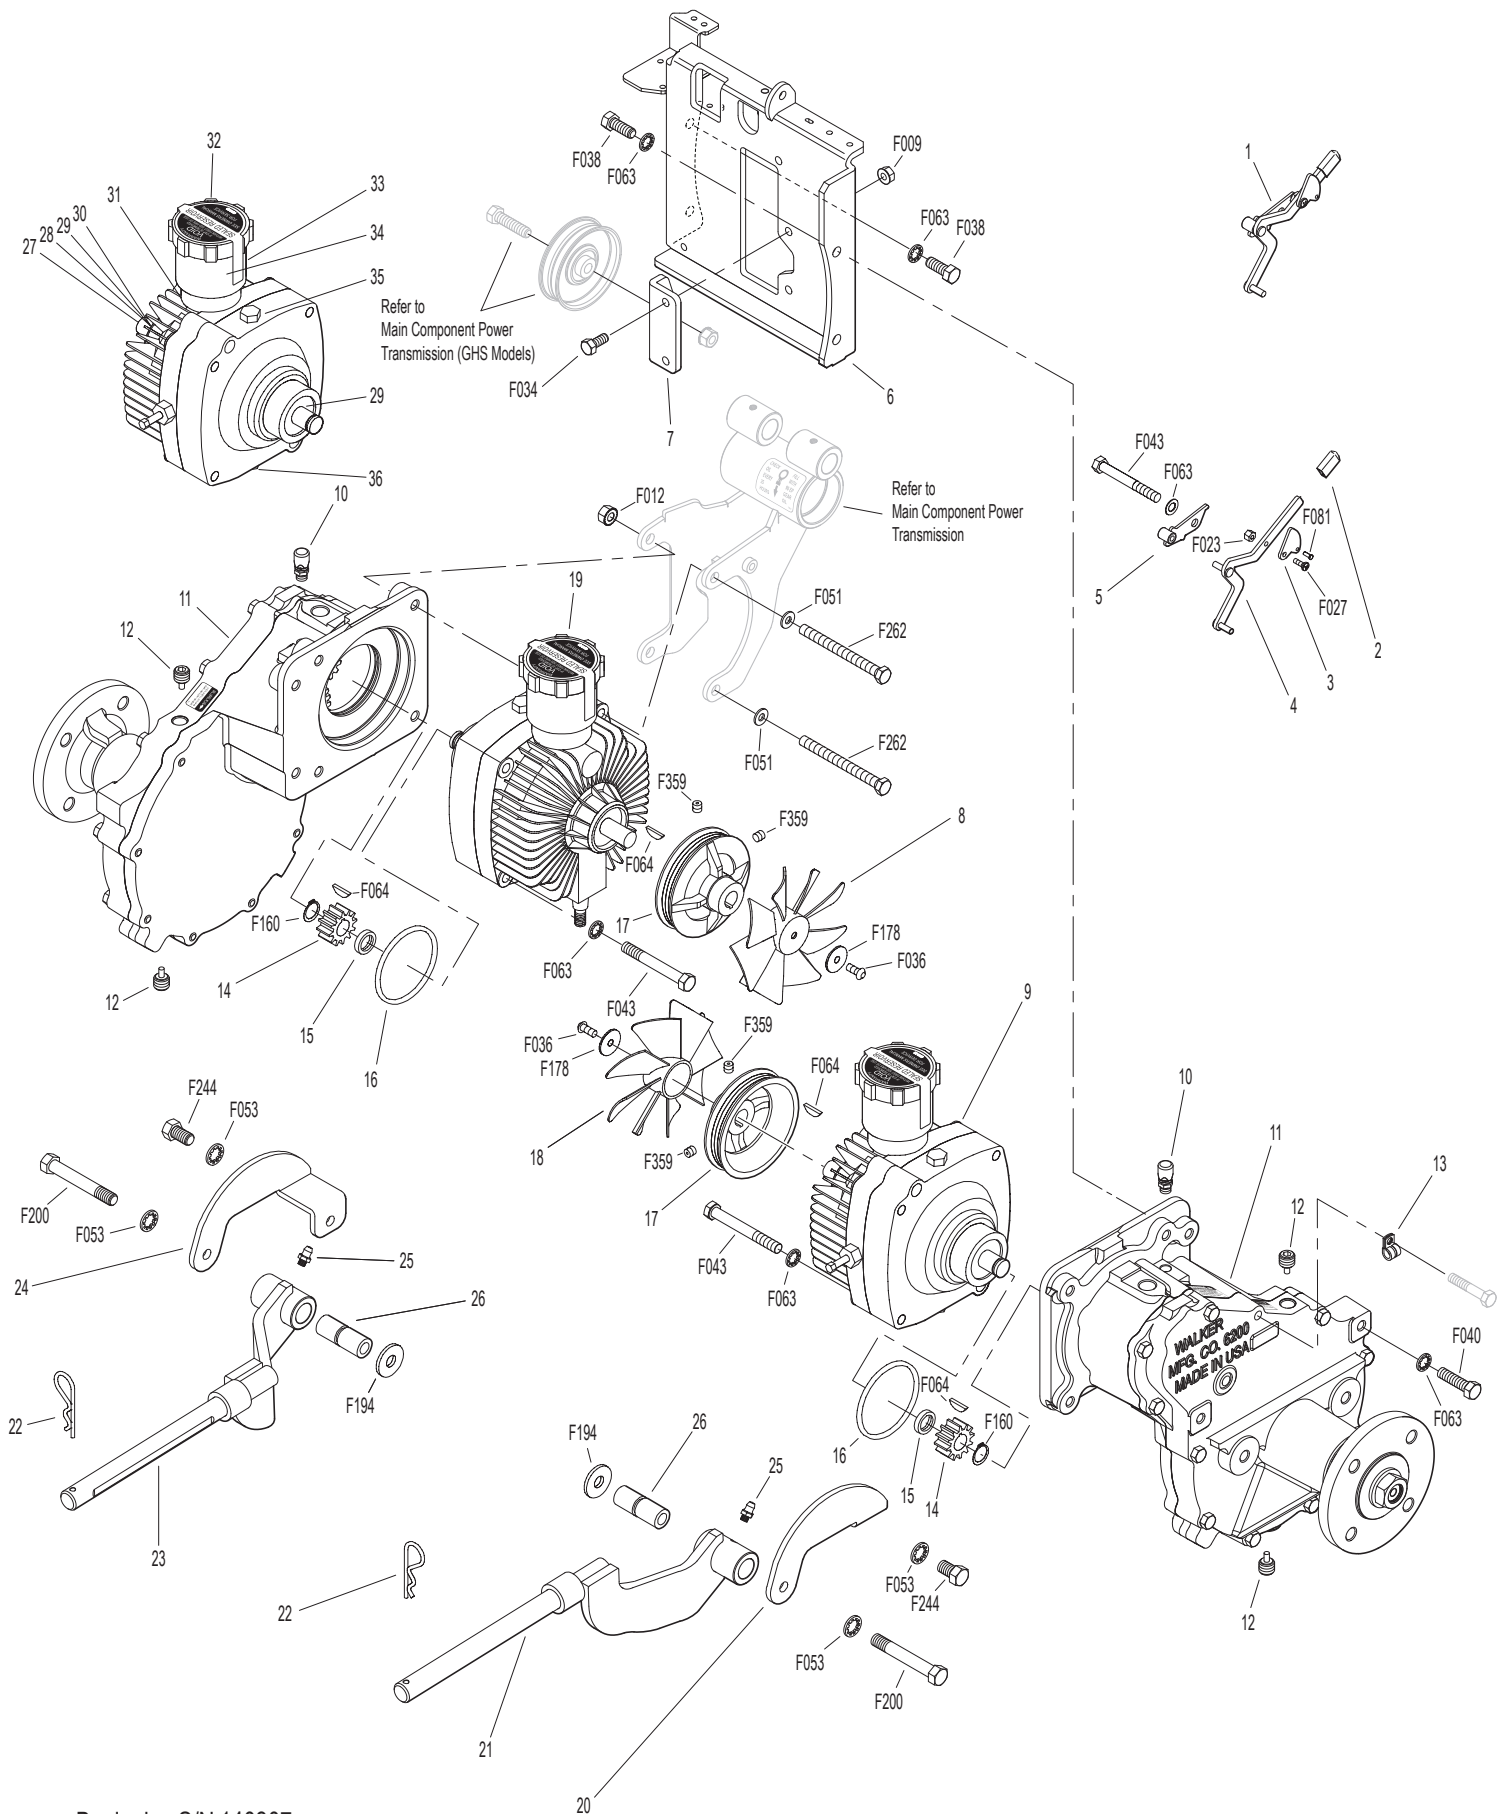

Beginning S/N 140307
Effective Date 05-05-16
Use only genuine **Walker®** replacement parts.

STEERING CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transmission Spring Assemblies				Steering Lever Assemblies			
1	6201-2	Shock Mount Gear Drive, RH	1	31	5850-2	Handle Grip, Foam (5-1/2)	2
2	5146	10mm Ball Stud	4	32	5223	Extension Spring (1/4 x 5-1/2)	2
3	5199-3	Steering Lever Dampener Assembly	2	33	5450	D-Clip	2
4	6201-1	Shock Mount Gear Drive, LH	1	34	5451-10	Steering Lever Assembly, LH / Adjustable (Includes Items # 9, 10, 20, F029 & F489)	1
5	5214-2	Ball Joint (5/16-24) Nylon Lined	2		5451-7	Steering Lever Arm, LH / Adjustable	*
6	6212-1	Transmission Control Arm, LH	1	35	5391-3	Steering Lever Support	1
7	5213-3	Control Rod (6")	1	36	5217	Pivot Pin, Steering Lever	1
8	5665-1	Compression Spring (2-1/2)	2	37	5453-10	Steering Lever Handle, Adjustable (Includes Items # 31 & F345)	2
9	5463-2	Steering Lever Actuator	2	38	5450-10	Steering Lever Assembly, RH / Adjustable (Includes Items # 9, 10, 20, F029 & F489)	1
10	7201-2	Fiberglide Bearing 1/2"	2		5450-7	Steering Lever Arm, RH / Adjustable	*
11	5213-4	Control Rod (14-3/4")	1				
12	5212	Transmission Control Arm, RH	1				
Forward Speed Control Assemblies				Fasteners			
13	5862	FSC Knob	1		F004	1/4-20 Keps Nut	4
14	7170-1	FSC Lever Assembly (Includes Item # 20)	1		F007	5/16-18 Jam Nut	1
15	5975-3	Cable Tie (50# x 7")	1		F008	5/16-24 Keps Nut	2
16	5214-4	Ball Joint (5/16-24) W/O Stud	2		F009	5/16-18 Whiz Locknut	7
17	5219	Extension Spring (3/4 x 6-3/4)	1		F010	5/16-24 ESNA Nut	2
18	5172	Bearing, Delrin (.255 x .379 x .250)	2		F012	3/8-16 Keps Nut	2
19	5141-1	FSC Actuator Block	1		F024	5/16-24 Jam Nut	4
20	5830	Grease Fitting	6		F029	1/4-20 x 1/2 Hex Bolt	4
21	5140-9	FSC Brace	1		F032	1/4-20 x 3/4 Hex Bolt	2
22	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	2		F034	5/16-18 x 3/4 Hex Bolt	2
23	5142-8	FSC Key	1		F038	3/8-16 x 1 Hex Bolt	2
	5140-12	FSC Control Assembly (Includes Items # 20, 22-24, 27, F182, F192 & F193)	*		F050	1/4 SAE Washer	1
24	5140-30	FSC Friction Body (Includes Item # 20)	1		F051	3/8 SAE Washer	2
25	5141-2	FSC Actuator Rod	1		F064	1/8 x 1/2 Woodruff Key (#3)	2
26	5281-5	Clevis Pin (1/4 x 0.80)	1		F068	1/8 x 1 Cotter Pin	1
27	5142-9	FSC Actuator Cam	1		F069	3/32 x 1/2 Cotter Pin	1
28	5141-3	Spacer	1		F093	5/16-18 x 1 Hex Bolt	1
29	5141-4	FSC Rod	1		F146	1/4-20 Jam Nut	1
30	5470-2	Speed Control Stop	1		F182	1/4 x 5/8 x 1/8 Washer	1
					F183	.312 x .700 x .074 Washer	3
					F186	5/64 x 1/2 Cotter Pin	1
					F188	1/4-20 Self-Locking Nut	4
					F192	3/8-24 Self-Locking Nut	1
					F193	3/8 Belleville Spring Washer	3
					F198	.250 x .625 x .040 Washer, SS	2
					F226	5/16-18 x 7/8 Hex Bolt	1
					F316	5/16-18 x 1-3/4 Hex Bolt	1
					F345	1/4-20 x .770 Knurled Bolt	4
					F350	1/4-20 LP Nylock	1
					F353	3/8-16 ESNA LP Nut	2
					F401	.504 x .751 x .030 Washer	1
					F489	Washer 1/4 x 7/8 x .090	2


* Service Part Only

Beginning S/N 140307

Effective Date 05-05-16

Use only genuine **Walker®** replacement parts.

STEERING CONTROL ASSEMBLIES

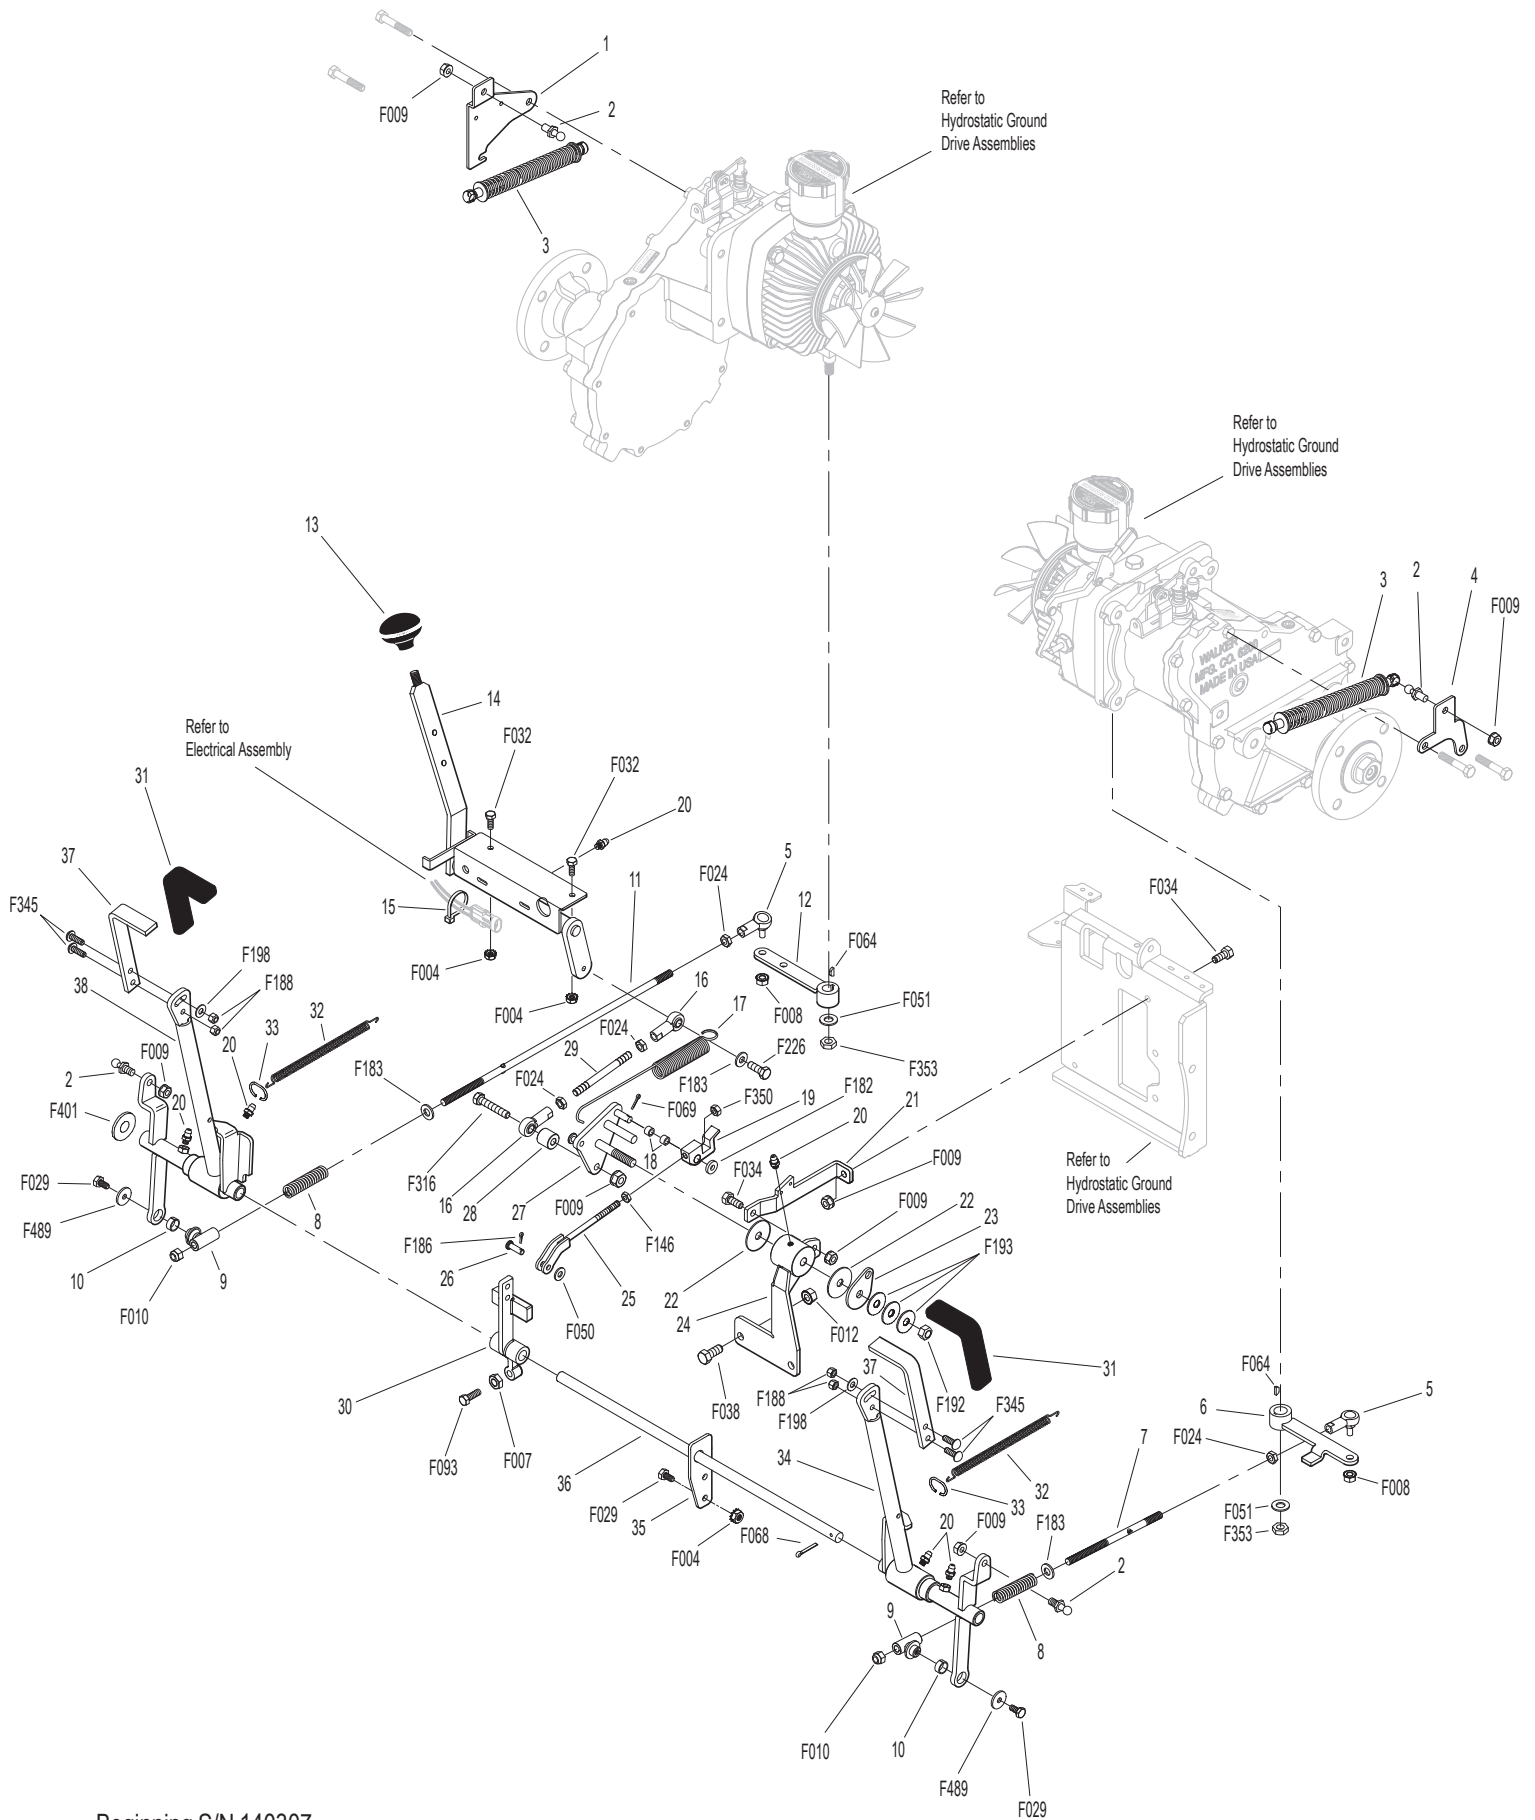


Beginning S/N 140307
 Effective Date 05-05-16
 Use only genuine **Walker®** replacement parts.

THROTTLE & CHOKE CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Throttle & Choke Control Assemblies				Fasteners			
1	8121-1	Throttle Cable	1		F002	10-24 Keps Nut	4
2	8122-1	Choke Cable	1		F005	1/4-20 ESNA Nut	2
3	5172	Bearing, Delrin (.255 x .379 x .250)	2		F025	10-24 x 3/8 PPHMS	4
4	5108-7	Control Lock Tab	2		F050	1/4 SAE Washer	2
5	5108-10	Friction Washer (.125)	2		F164	10-24 x 1/4 x 3/8 SHL Bolt	2
6	5108-1	Control Lever, Throttle & Choke	2		F201	1/4 Belleville Spring Washer	4
7	5108-5	Throttle Control Knob, Red	1				
8	5108-11	Friction Washer (.062)	2	*	Service Part Only		
9	5108-8	Control Bracket	2				
10	7108	Control Assembly (Includes Items # 4-6, 8, 9 & F201)	2				
	8121	Throttle Control and Cable Assembly (Includes Item # 7)	*				
	8122	Choke Control and Cable Assembly (Includes Item # 11)	*				
11	5108-6	Choke Control Knob, Black	1				
12	8123	Insulation Sleeve (3/8 x 6)	1				
13	5975-3	Cable Tie (50# x 7")	1				
14	5975-1	Cable Tie (18# x 3-3/4")	1				


THROTTLE & CHOKE CONTROL ASSEMBLIES

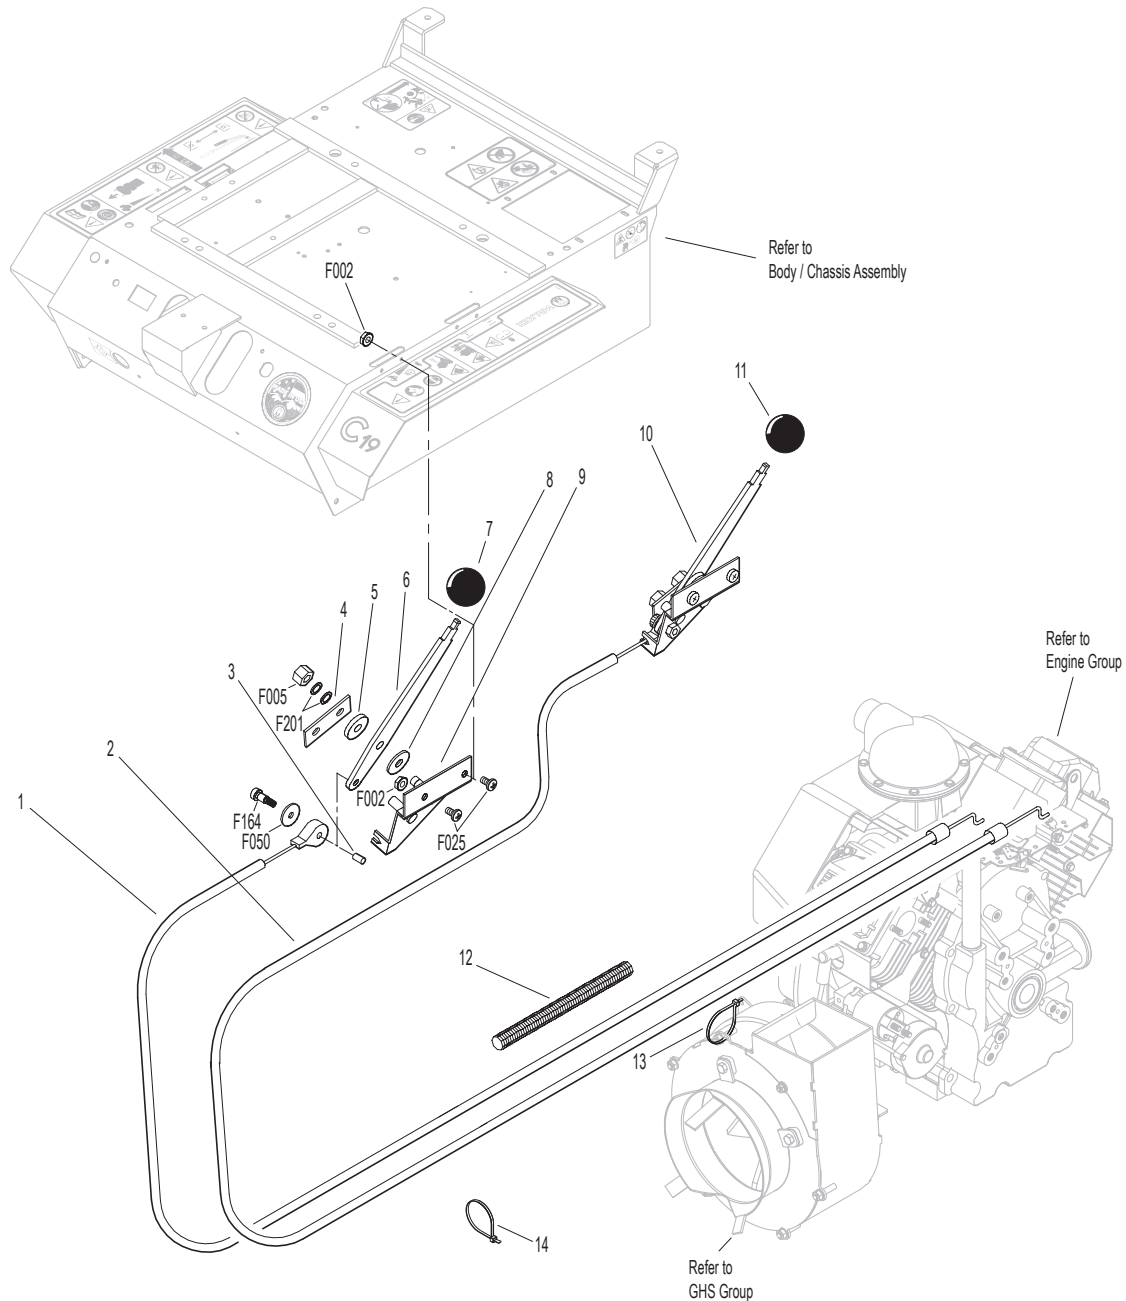

PARKING BRAKE ASSEMBLY


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Parking Brake Assembly				Fasteners			
1	7406-1	Handle Grip, Red	1	F002	10-24 Keps Nut		2
2	7406-8	Parking Brake Lever (4-1/4)	1	F003	1/4-28 Hex Nut		1
3	7406-2	Lever Mount	1	F004	1/4-20 Keps Nut		4
4	5830	Grease Fitting	1	F025	10-24 x 3/8 PPHMS		2
5	7407	Clevis Pin (3/16 x 1/2)	2	F029	1/4-20 x 1/2 Hex Bolt		3
6	7404-6	Brake Actuator Arm	2	F032	1/4-20 x 3/4 Hex Bolt		1
7	7405	Pin, Transmission Lock	2	F054	AN960616 Washer		2
8	7402	Clevis	2	F072	1/4 "E" Retainer Ring		2
9	7408	Compression Spring (1/2 x 3/4)	2	F086	#10 SAE Washer		4
10	7415	Rubber Dust Shield (5/8 x 3/8 x 1/32)	2	F109	1/8 x 5/8 Roll Pin		2
11	5567-3	O-Ring Seal (1/4 x 3/8)	4	F111	1/8 x 3/4 Cotter Pin		1
12	7403	Plunger Bushing, Gear Axle	2	F112	5/8 x 1-1/4 x .03 Washer		2
13	7404-7	Brake Actuator Mount	2	F127	1/16 x 1/2 Cotter Pin		4
14	7412	Clevis Pin (3/16 x 5/8)	2	F261	AN960616L Washer		5
15	5833	Cable Clamp (1/4)	2	F287	1/4-28 Keps Nut		1
16	7410	Brake Control Cable, LH (25.5")	1				
17	7409	Brake Control Cable, RH (20.5")	1				
18	7401-3	Cable Mount Bracket	1				
19	7401-1	Cable Pull Rod	1				
20	5552	Ball Joint (1/4-28)	1				

PARKING BRAKE ASSEMBLY

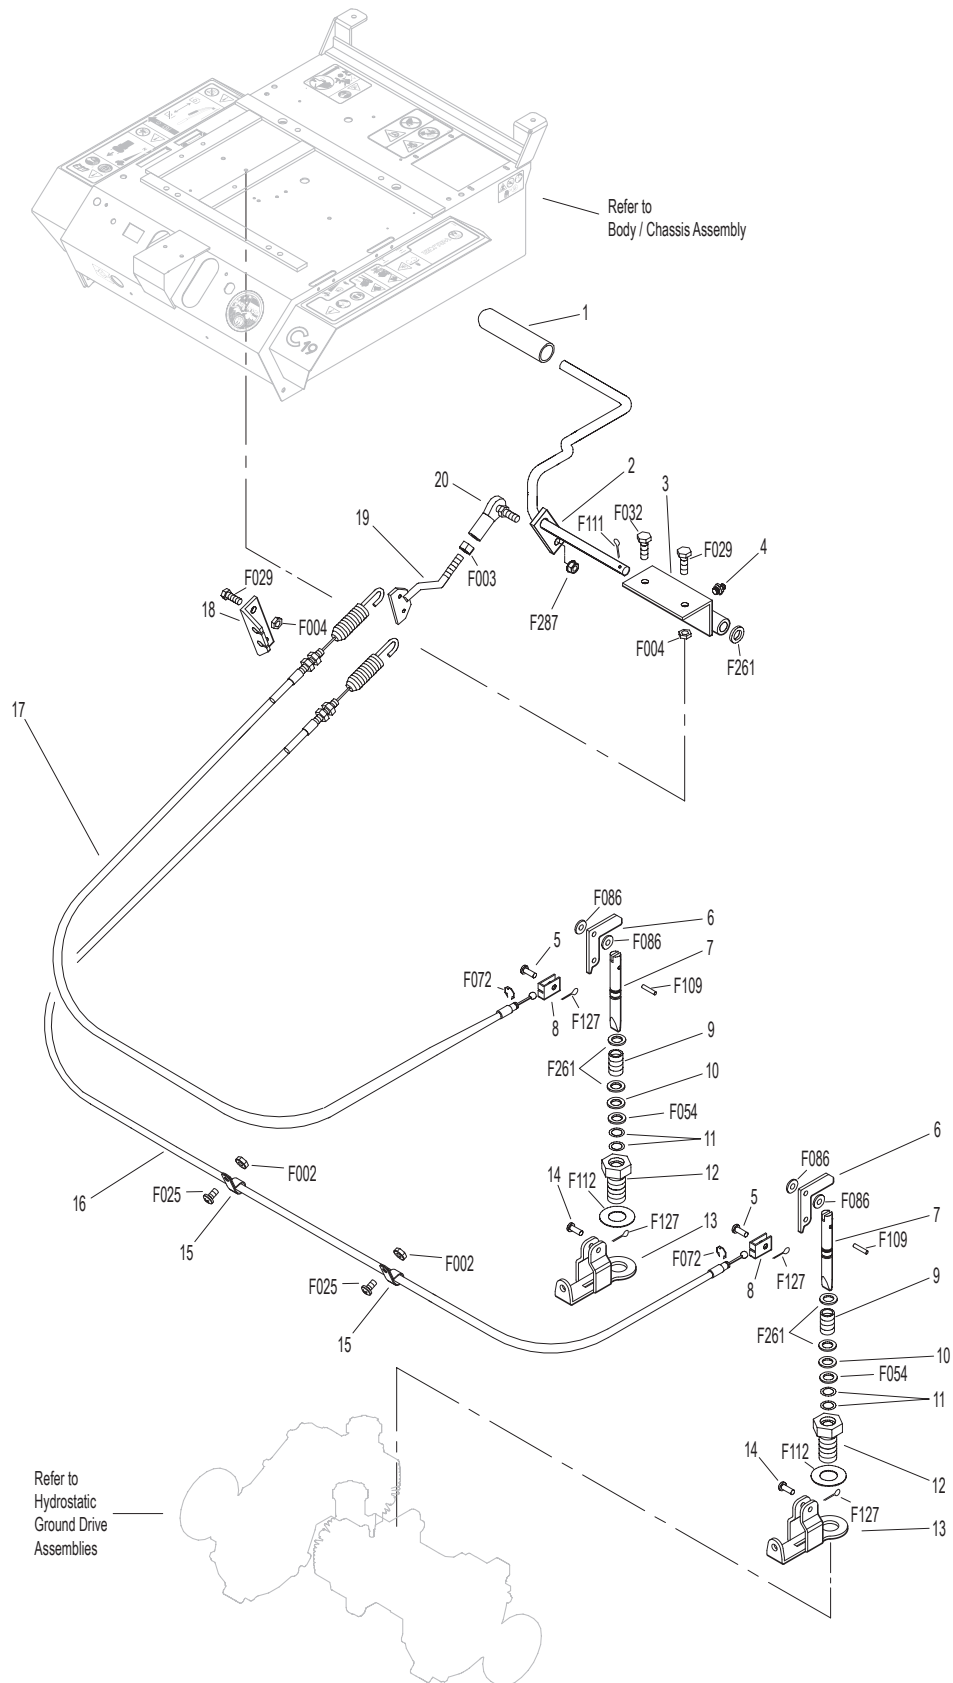

GHS GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Delivery Chute Assembly				Fasteners			
1	5515-4	Elbow Delivery Spout	1	F002	10-24 Keps Nut		6
2	5592-13	Backing Plate, Grass-Pak® Switch	1	F004	1/4-20 Keps Nut		3
3	5578	Rear Clip, Chute Mount	1	F009	5/16-18 Whiz Locknut		7
4	5577	Side Clip, Chute Mount	2	F012	3/8-16 Keps Nut		3
5	7511-5	Outside Chute Cover Lip	1	F026	10-24 x 1/2 PPHMS		2
6	7511-4	Inside Chute Cover Lip	1	F029	1/4-20 x 1/2 Hex Bolt		3
7	5511-3	Delivery Chute, with Clips, 7.0 Grey (Includes Items # 3, 4, F079 & F411)	1	F034	5/16-18 x 3/4 Hex Bolt		1
8	7530-4	Body Chute (10.5 Blower)	1	F039	3/8-16 x 1-1/4 Hex Bolt		1
Blower Belt Tightener Assembly				F040	3/8-16 x 1-1/2 Hex Bolt		1
9	7238-6	Blower Drive Pulley (Includes Items # F075, F114 & F231)	1	F042	3/8-16 x 2-1/4 Hex Bolt		1
10	7234-2	Blower Belt (Micro-V)	1	F050	1/4 SAE Washer		1
11	7239-1	Blower Pulley (Mirco-V) (Includes Items # F067, F075 & F114)	1	F054	AN960616 Washer		1
12	7364-2	Torsion Spring	1	F067	3/16 x 3/16 x 1 Key		1
13	7201-3	Fiberglide Bearing	2	F075	5/16-18 x 1/2 SQH Set Screw		2
14	5830-3	Grease Fitting (45 Degree)	1	F079	A/A66D Aluminum Pop Rivet		8
15	7364-1	Blower Belt Tightener Arm	1	F085	3/16 Rivet Backup Washer		2
16	7201-4	Inner Race (1-1/2)	1	F090	1/4-20 x 2-1/2 Hex Bolt		1
17	5841-1	Retainer Washer	1	F114	5/16-18 x 5/8 SQH Set Screw		2
18	5245	Idler Pulley (3")	1	F128	10-24 x 3/8 PTHMS		4
Blower Assembly				F131	5/16-18 x 1/2 Hex Bolt		3
19	7544	Blower Assembly (10.5") (Includes Items # 20-25, F004, F009, F029, F050, F131, F168 & F426)	*	F132	1/4-20 x 2-3/4 Hex Bolt		1
20	5268	Bearing W/Collar (3/4)	2	F168	5/16 Split Lock Washer		3
21	7543-3	Blower Housing (10.5")	1	F217	7/16-14 Hex Nut		1
22	7545-2	Blower Output Shaft (10.5")	1	F218	7/16 Split Lock Washer		1
23	7545	Blower Wheel (10.5")	1	F231	1/4 x 3/4 Woodruff Key (# 806)		1
24	7543-1	Blower Faceplate (10.5")	1	F281	7/16-14 x 1-3/4 Hex Bolt		1
25	7526	Intake Tube (10.5" Blower)	1	F411	3/16 Bulbex Rivet		6
26	5595-2	Intake Cover, GHS	**	F426	1/4-20 x 1/2 Carriage Bolt		1
27	7528-4	Skid Bar (10.5" Blower)	1	* Service Part Only			
				** Plugs Blower when GHS is not in use. Furnished only with Mulching Decks, SD Decks used on a GHS Tractor, Rotary Broom Attachment and Snowblower Attachment. Use of this part may be replaced by installing Blower Lockout Kit (P/N 7541).			

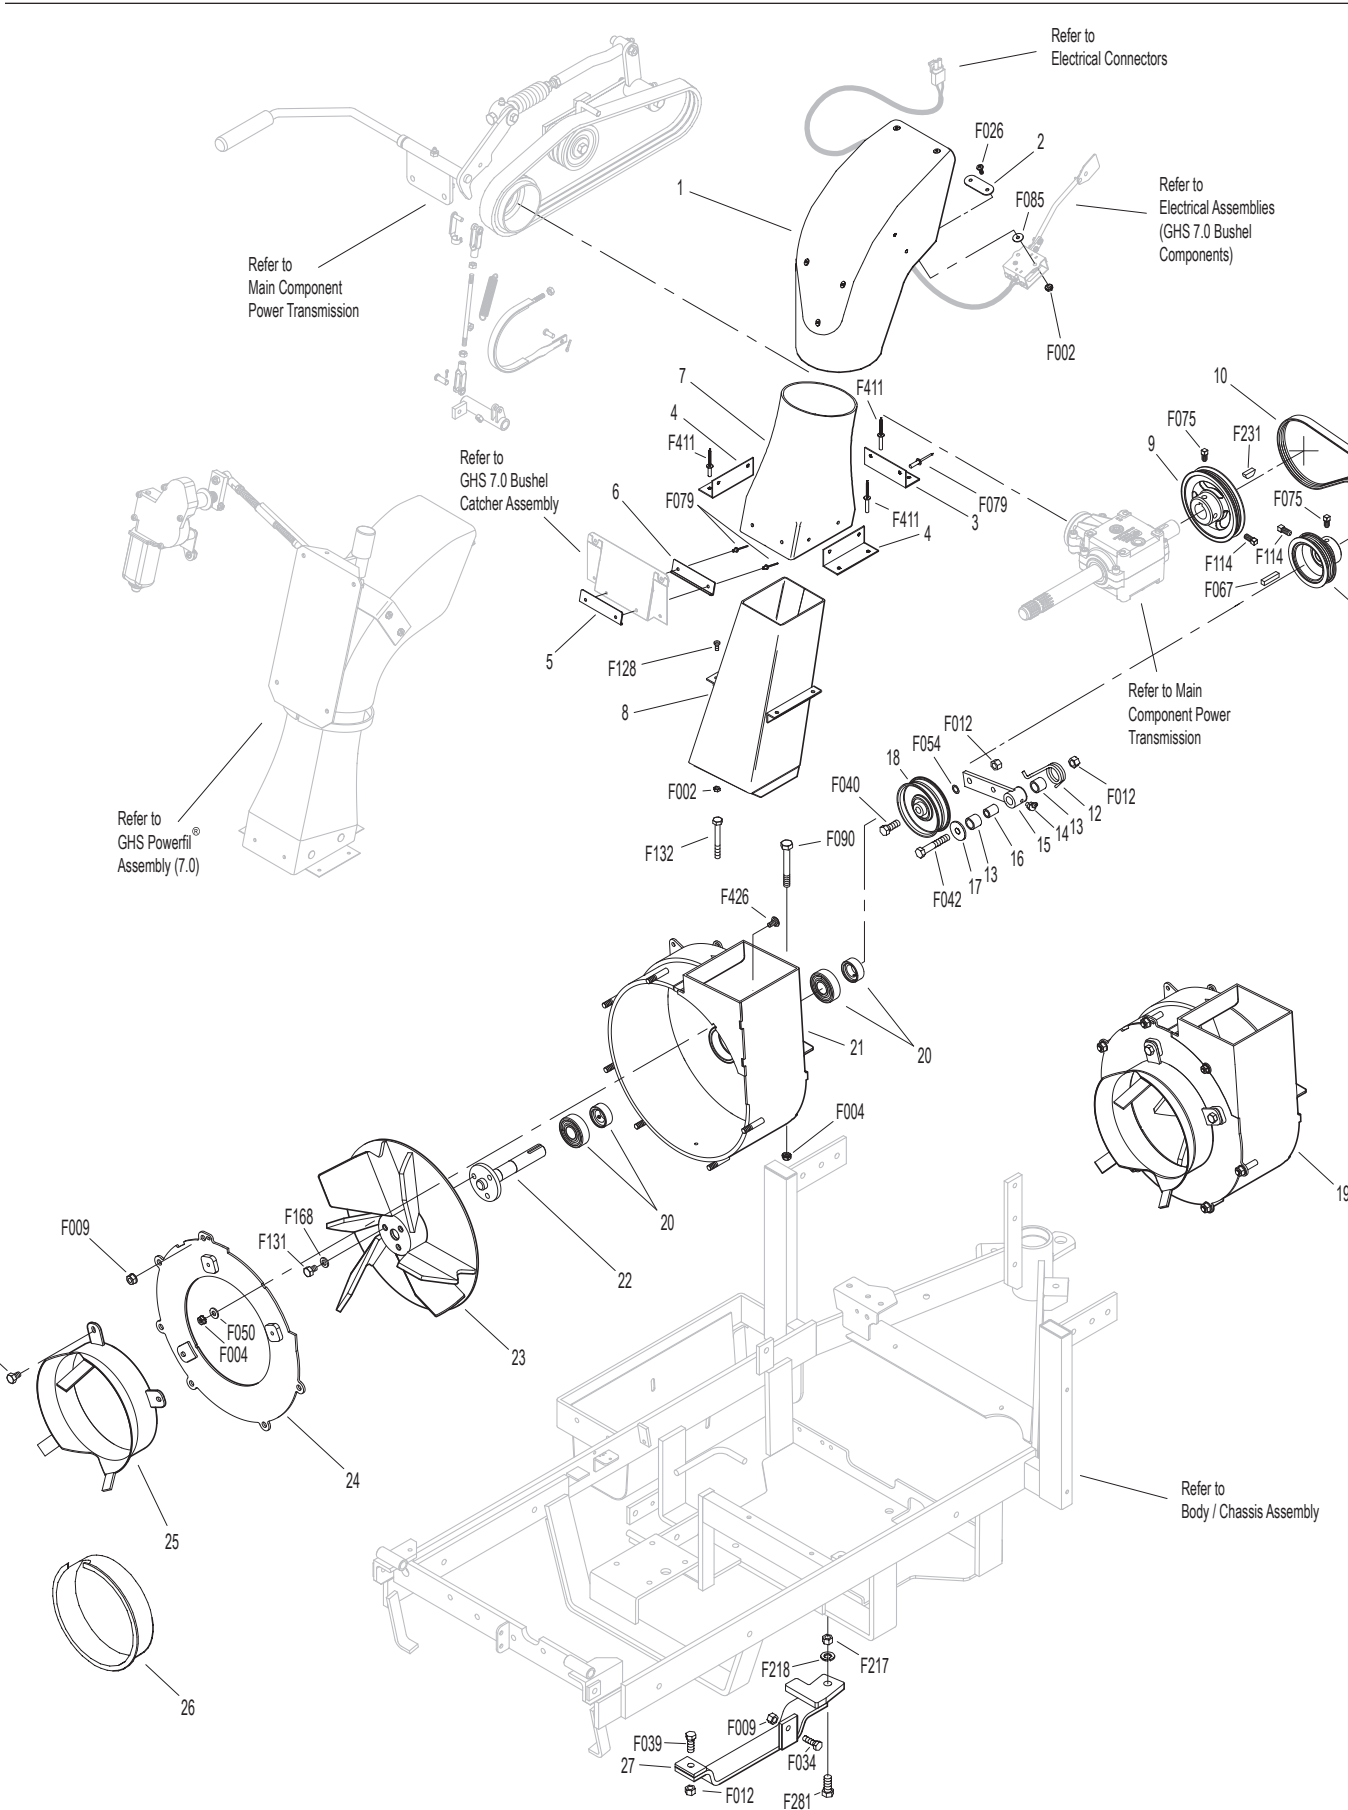


Beginning S/N 140307
Effective Date 05-05-16
Use only genuine **Walker**[®] replacement parts.

GHS POWERFIL® ASSEMBLY (7.0)



ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
7.0 GHS Powerfil® Assembly				Fasteners			
1	5552	Ball Joint (1/4-28)	2		F002	10-24 Keps Nut	10
2	5553-3	Bushing, Powerfil® Actuator	4		F003	1/4-28 Hex Nut	3
3	5553-1	Compression Spring (1/2 x 2)	2		F026	10-24 x 1/2 PPHMS	1
4	5558-2	Powerfil® Actuator Rod	1		F037	10-24 x 5/8 PTH Screw	2
	5549	Actuator Rod Assembly (Includes Items # 1-5 & F003)	*		F054	AN960616 Washer	1
5	5558-1	Powerfil® Push Rod	1		F085	3/16 Rivet Backup Washer	1
6	5551-3	Bearing Cap, Powerfil®	1		F101	10-24 x 1-1/4 SHC Screw	1
7	5551-1	Pivot Bearing (#S3PP)	2		F109	1/8 x 5/8 Roll Pin	1
8	5518-2	Pivot, Delivery Spout	1		F129	10-24 x 1/2 PTHMS	6
9	5517-2	Pivot Mount	1		F261	AN960616L Washer	1
10	5519-5	Actuator Motor (12V) (Includes Items # 11 & 12)	1		F287	1/4-28 Keps Nut	1
11	5519-2	Motor Mount Washer	*	* Service Part Only			
12	5519-3	Motor Mount Nut (5/8-24)	*				
13	5554	Actuator Arm	1				

GHS POWERFIL® ASSEMBLY (7.0)

Refer to
Electrical Assemblies
(GHS 7.0 Bushel Components)

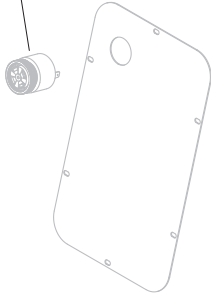


Refer to
GHS 7.0 Bushel
Catcher Assembly

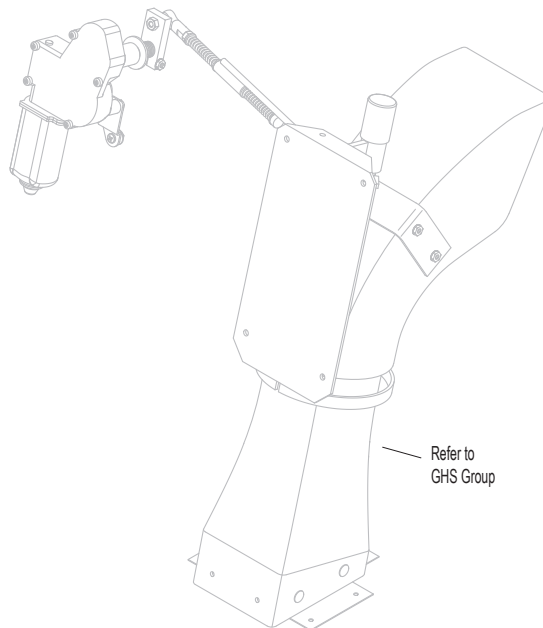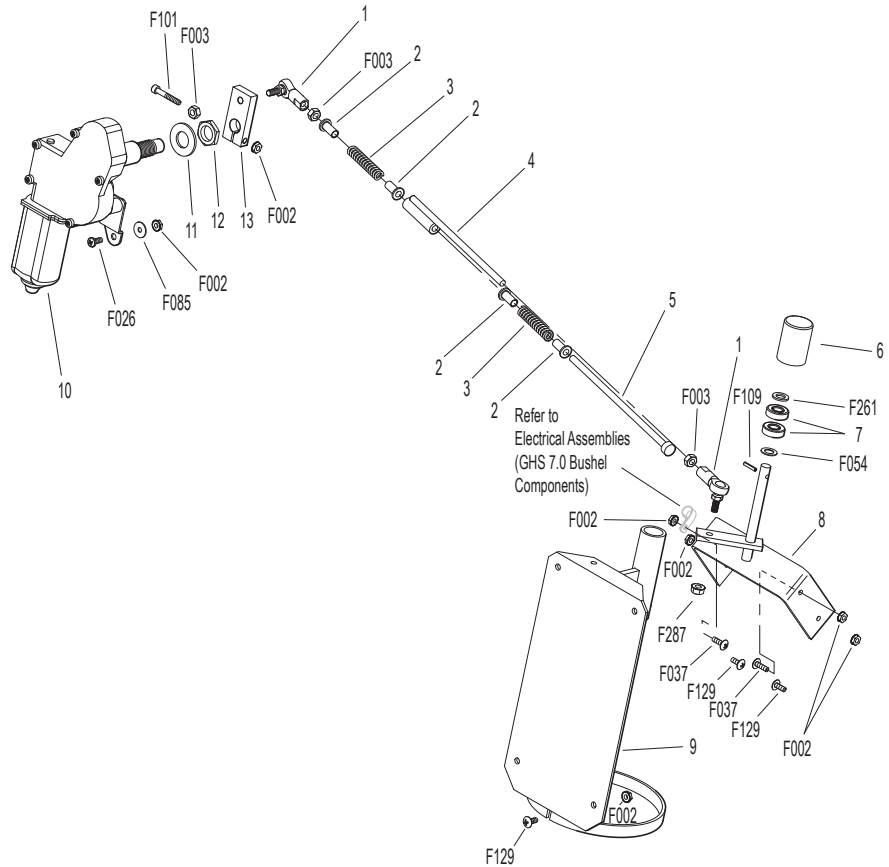

GHS 7.0 BUSHEL CATCHER ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Upper Baffle Screen Assembly (Removable)				39	7510-2	7.0 Bushel Catcher Box	1
1	7512-6	Removable Screen (3/16 Hole) (Includes Items # 2, F025 & F190)	1**		7502-5	7.0 Catcher W/Powerfil® (Includes Door)	*
2	7506	Knob / Threaded Insert (10-24)	2	40	7607-8	Powerfil® Cover Plate	1
3	7509-2	Channel Top	2	41	7608-4	Hinge Plate, RH	1
4	8606-2	Channel Bottom	2	42	8155-8	7.0 Gas Spring Cover, RH	1
5	6856-1	Edge Molding (21-3/4")	1	43	7607-14	Catcher Door Arm, RH	1
6	6507	Screen Seal (23-1/4")	1	44	7584-3	Reinforcing Strap	1
7	7505	Mustache Spring	2	45	5801-3	Decal Plate, Round (Set of 2)	1
8	7509-6	C-Channel With Spring (Includes Items # 7 & F340)	1	46	7608-5	Door Arm Stop	2
7.0 Exhaust Deflector Door Assembly				5598-2 Optional Dump Bag (Not Shown)			
9	7607-3	Upper Door Seal	1	May be ordered as an option. Contact your Walker dealer.			
10	7510-4	7.0 Catcher Box Door (Includes Frame) (Includes Items # 9, 11, 12, 14, F079, F085, F330 & F411)	1	Fasteners			
11	5583	Handle	1	F002	10-24 Keps Nut		27
12	7607-6	Lower Door Stiffener (7.0)	1	F004	1/4-20 Keps Nut		11
13	8607-8	Door Guide	1	F009	5/16-18 Whiz Locknut		2
14	7607-5	Upper Door Stiffener	1	F020	5/16-18 ESNA Nut		2
GHS 7.0 Bushel Catcher Assembly				F025	10-24 x 3/8 PPHMS		6
15	7503-7	Center Strap (7.0)	1	F027	10-24 x 5/8 PPHMS		12
16	7503-6	Upper Frame Doubler (7.0)	2	F029	1/4-20 x 1/2 Hex Bolt		4
17	7503-5	Lower Frame Doubler (7.0)	2	F049	5/16 SAE Washer		4
18	7503-4	Outside Box Strap (7.0)	2	F050	1/4 SAE Washer		6
19	8608-11	Catcher Door Finger	1	F079	A/A66D Aluminum Pop Rivet		14
20	8608-4	Center Frame Doubler	1	F085	3/16 Rivet Backup Washer		21
21	7503-11	Catcher Mount	1	F094	8-32 x 1/2 PTHMS		6
22	7610-4	Catcher Dump Flap Spacer (7.0)	1	F129	10-24 x 1/2 PTHMS		14
23	7610-8	Catcher Dump Flap With Plate	1	F190	#10 Internal Star Lock Washer		2
24	8610-3	Backing Plate / Dump Flap	1	F196	1/4-20 x 1 PPHMS, SS		4
25	7620-3	Pivot Bushing (1/2 x 9/16)	4	F230	1/4-20 x 1-1/4 PPHMS, SS		4
26	7607-7	Bushing	2	F242	1/4-20 x 7/8 PPHMS, SS		10
27	7608-3	Hinge Plate, LH	1	F275	5/16-18 x 2 Hex Bolt		2
28	7607-15	Catcher Door Arm, LH	1	F330	3/16D x 21/32L Rivet, SS		4
29	8155-7	7.0 Gas Spring Cover, LH	1	F340	Rivet, Aluminum		4
30	5147	Spring Clip	4	F351	Aluminum Pop Rivet		6
31	5155-5	Gas Spring	2	F360	1/4-20 x 3/8 Hex Bolt		2
32	5155-13	3/4 Ball Stud	2	F390	1/4-20 x 7/8 Carriage Bolt		4
33	5523-6	Gas Spring Plate	2	F411	3/16 Bulbex Rivet		21
34	5155-12	5/16 Ball Stud	2	F504	1/4-20 Whiz Locknut		12
35	5155-15	Box Support, Gas Spring	2	F524	3/16 x 3/8 Aluminum Rivet, Black		6
36	7532-1	Handle, Catcher Lift	2	F540	1/4-20 x 1-3/4 PPHMS, SS		1
37	7511-6	Chute Cover	1	* Service Part Only			
38	7557-1	7.0. Wire Harness Channel	1	** This screen can be replaced by P/N 7512-7 Removable Screen (3/4" holes) for improved air flow performance in wet conditions.			

GHS 7.0 BUSHEL CATCHER ASSEMBLY

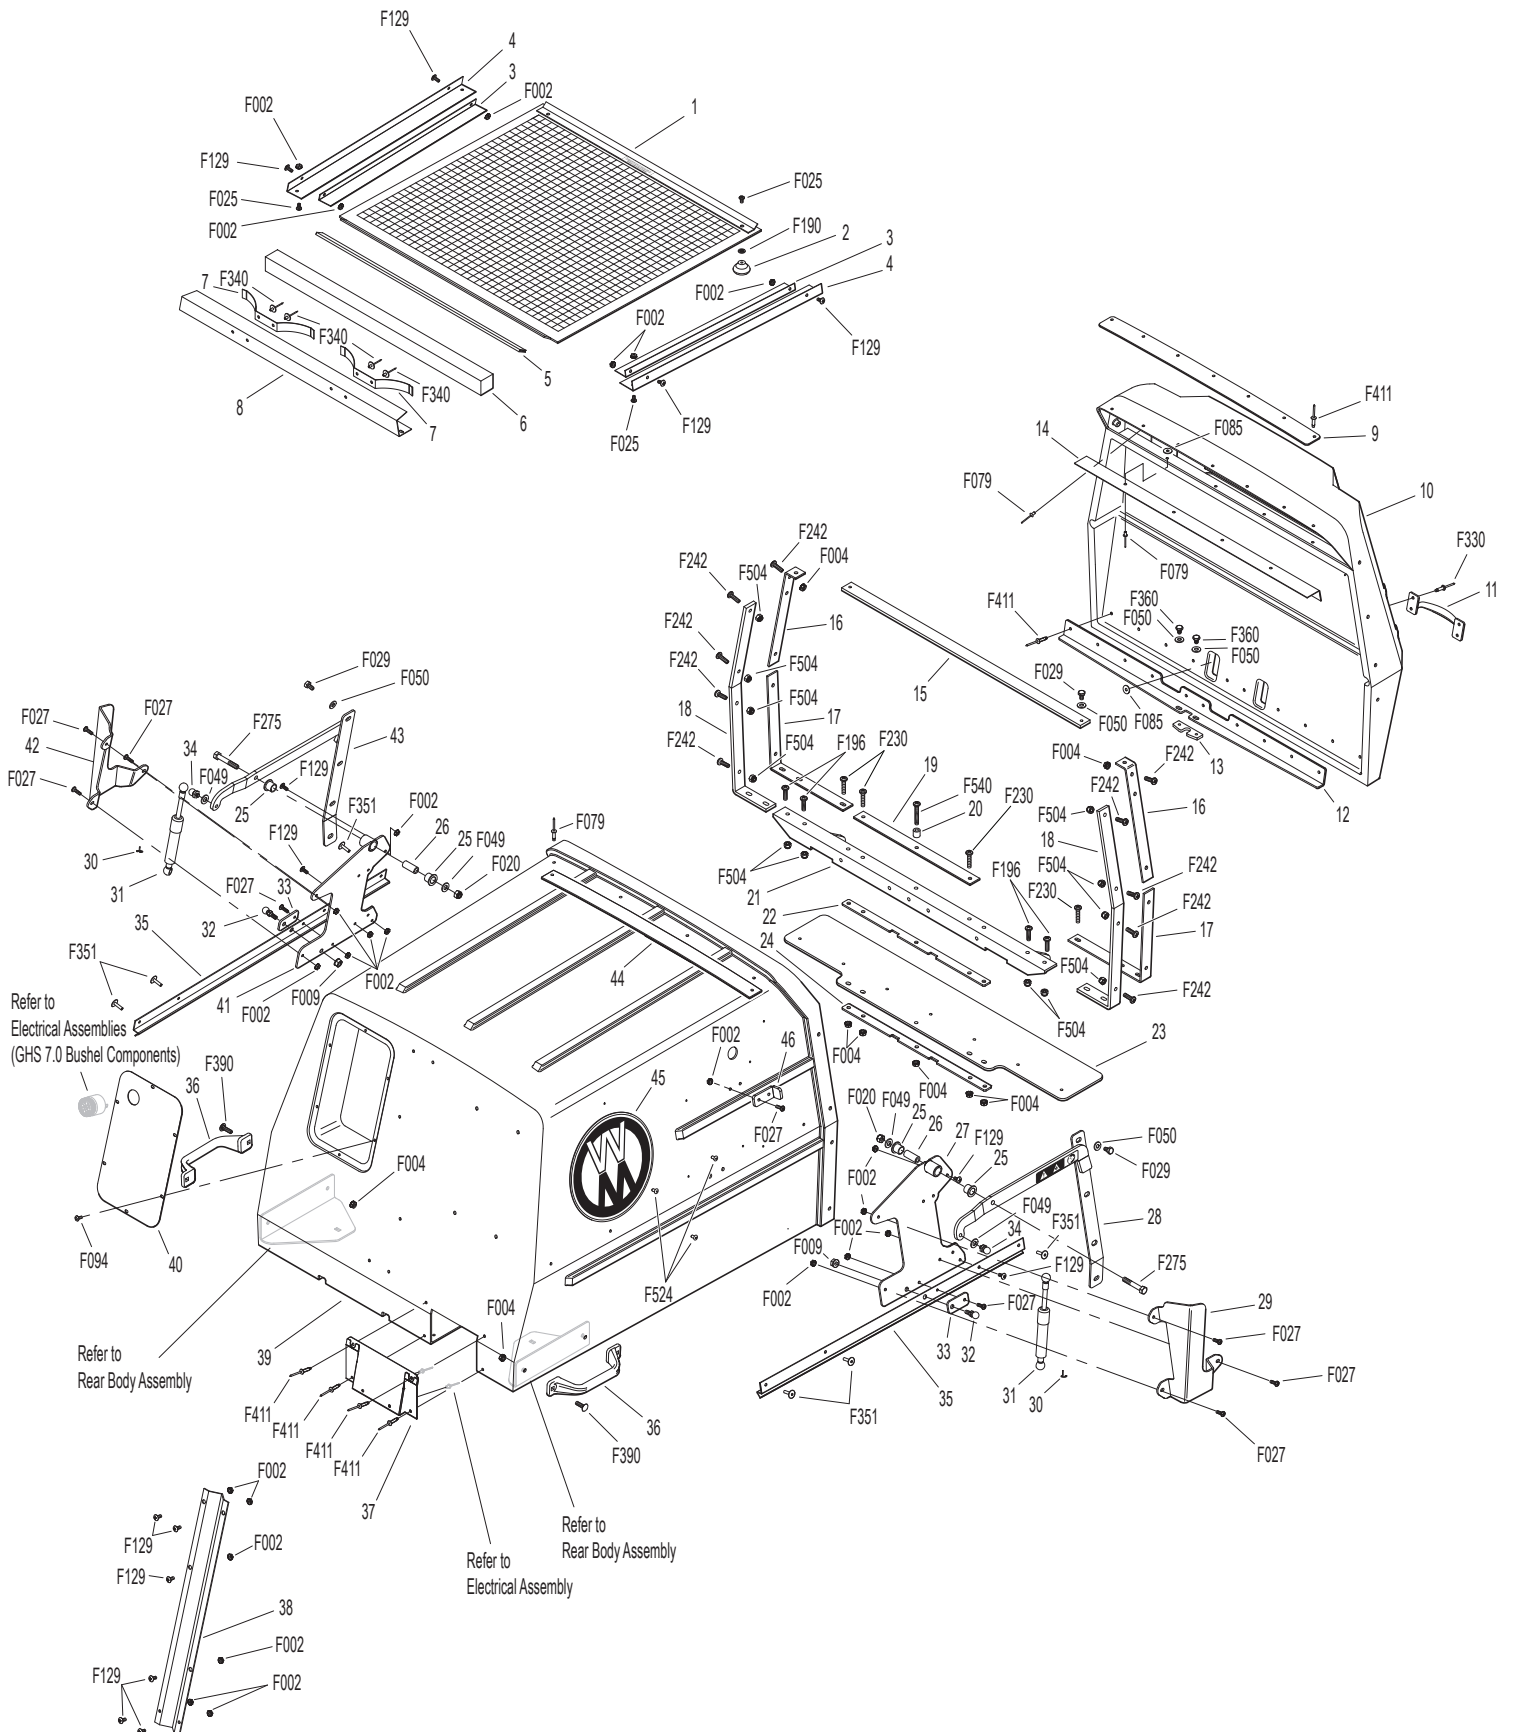


Beginning S/N 140307
 Effective Date 05-05-16
 Use only genuine **Walker®** replacement parts.

ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Harness Assembly				Fasteners			
1	7941-3	Boot, Circuit Breaker	1	F002	10-24 Keps Nut		10
2	7941-5	Circuit Breaker (7 Amp)	1	F004	1/4-20 Keps Nut		3
3	8990-1	Hourmeter (Global)	1	F009	5/16-18 Whiz Locknut		1
4	5832	Cable Clamp (1/2)	8	F019	1/4-20 ESNA Wing Nut		2
5	5942-11	Delta Hex Nut	1	F025	10-24 x 3/8 PPHMS		2
6	7834-2	Wire Saddle (2 Wires)	1	F026	10-24 x 1/2 PPHMS		7
7	5942-9	Safety Switch (NO), Delta Threaded	1	F031	1/4-20 x 5/8 Hex Bolt		2
8	8960-15	Ignition Switch (with Keys) (Includes Items # 9, 10 & F349)	1	F032	1/4-20 x 3/4 Hex Bolt		1
9	8960-3	Key Set W/Umbrella	1	F050	1/4 SAE Washer		4
10	7854	Plastic Tip, Red	1	F079	A/A66D Aluminum Pop Rivet		1
11	8536-2	Warning Horn Assembly	1	F093	5/16-18 x 1 Hex Bolt		1
12	8941	Circuit Breaker (30 Amp) Auto Reset / Sealed	1	F112	5/8 x 1-1/4 x .03 Washer		1
13	5975-3	Cable Tie (50# x 7")	3	F129	10-24 x 1/2 PTHMS		1
14	6942	Relay Switch 20/40 Amp (NC)	3	F232	10-32 Keps Nut		2
15	5942-8	Safety Switch (NO), Delta Side Mount	2	F349	Washer .835 ID 1.122 OD, SS		1
16	7948-6	Time Delay Module (.5 Second Delay)	1	F505	6-32 x 7/8 Hex Trim MS, SS		4
17	7948-3	Time Delay Harness	1	F506	6-32 Nylock Nut		2
18	6940-6	Wire Harness	1	NOTE: Refer to ELECTRICAL CONNECTORS , Page 30 for identification of all Electrical Wiring Service Parts.			
19	8012-6	Regulator Adapter Harness	1				
20	NS	Rectifier	*				
Battery Assembly							
21	8943	Battery Lead Wire (+)	1				
22	5975-1	Cable Tie (18# x 3-3/4")	3				
23	5933	Battery Terminal Insul., Red (+)	1				
24	5932	Battery Terminal Insul., Black (-)	1				
25	6923	Battery Cable (-)	1				
26	5844-3	Battery Protector Plate	1				
27	5839	Hook Bolt	2				
28	6390-2	Battery Pan	1				
29	NS	Battery (12V/300CCA/Dry)	1				

ELECTRICAL ASSEMBLY

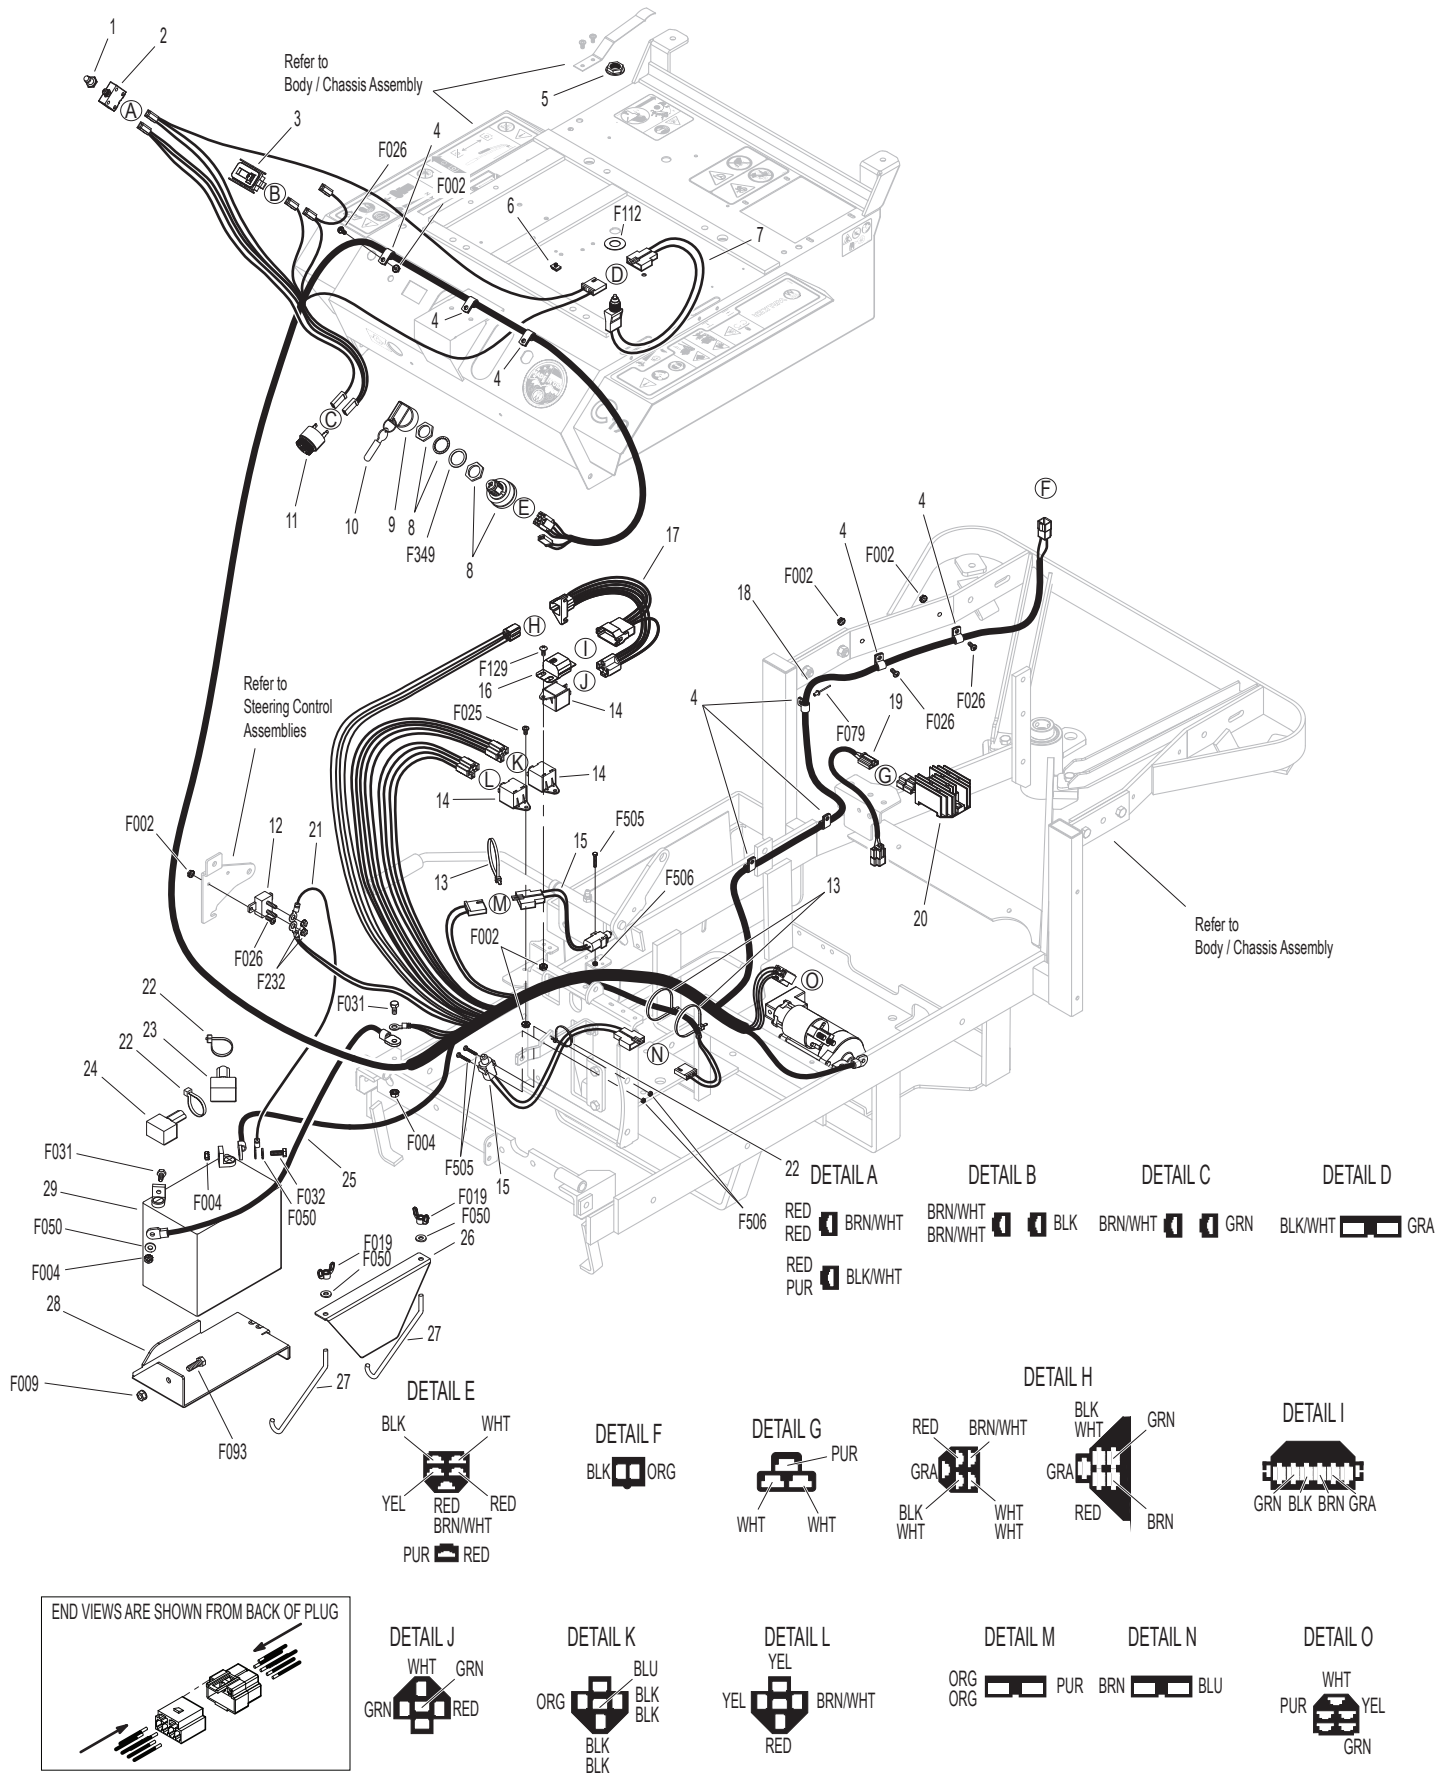

Beginning S/N 140307
Effective Date 05-05-16
Use only genuine **Walker®** replacement parts.

ELECTRICAL ASSEMBLIES (GHS 7.0 BUSHEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Horn & Harness Channel Assemblies

1	5536-2	Horn, Full Signal	*
2	5976-2	Grommet (3/16 x 3/4)	2
3	5975-1	Cable Tie (18# x 3-3/4")	1

Harness & Grass-Pak® Switch Assemblies

4	8950-4	Powerfil Wire Harness (7.0/10.0)	1
5	5833	Cable Clamp (1/4)	2
6	5594-6	Aluminum Shaft & Vane Assembly	1
7	5592-21	Grass-Pak® Switch Assembly	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------


Fasteners

F002	10-24 Keps Nut	4
F025	10-24 x 3/8 PPHMS	1
F037	10-24 x 5/8 PTH Screw	1
F129	10-24 x 1/2 PTHMS	2
F508	4-40 Keps Nut, SS	2
F509	4-40 x 1/2 Hex Head, SS	2

* Service Part Only

NOTE: Refer to **ELECTRICAL CONNECTORS**, Page 30 for identification of all Electrical Wiring Service Parts.

ELECTRICAL ASSEMBLIES (GHS 7.0 BUSHEL COMPONENTS)

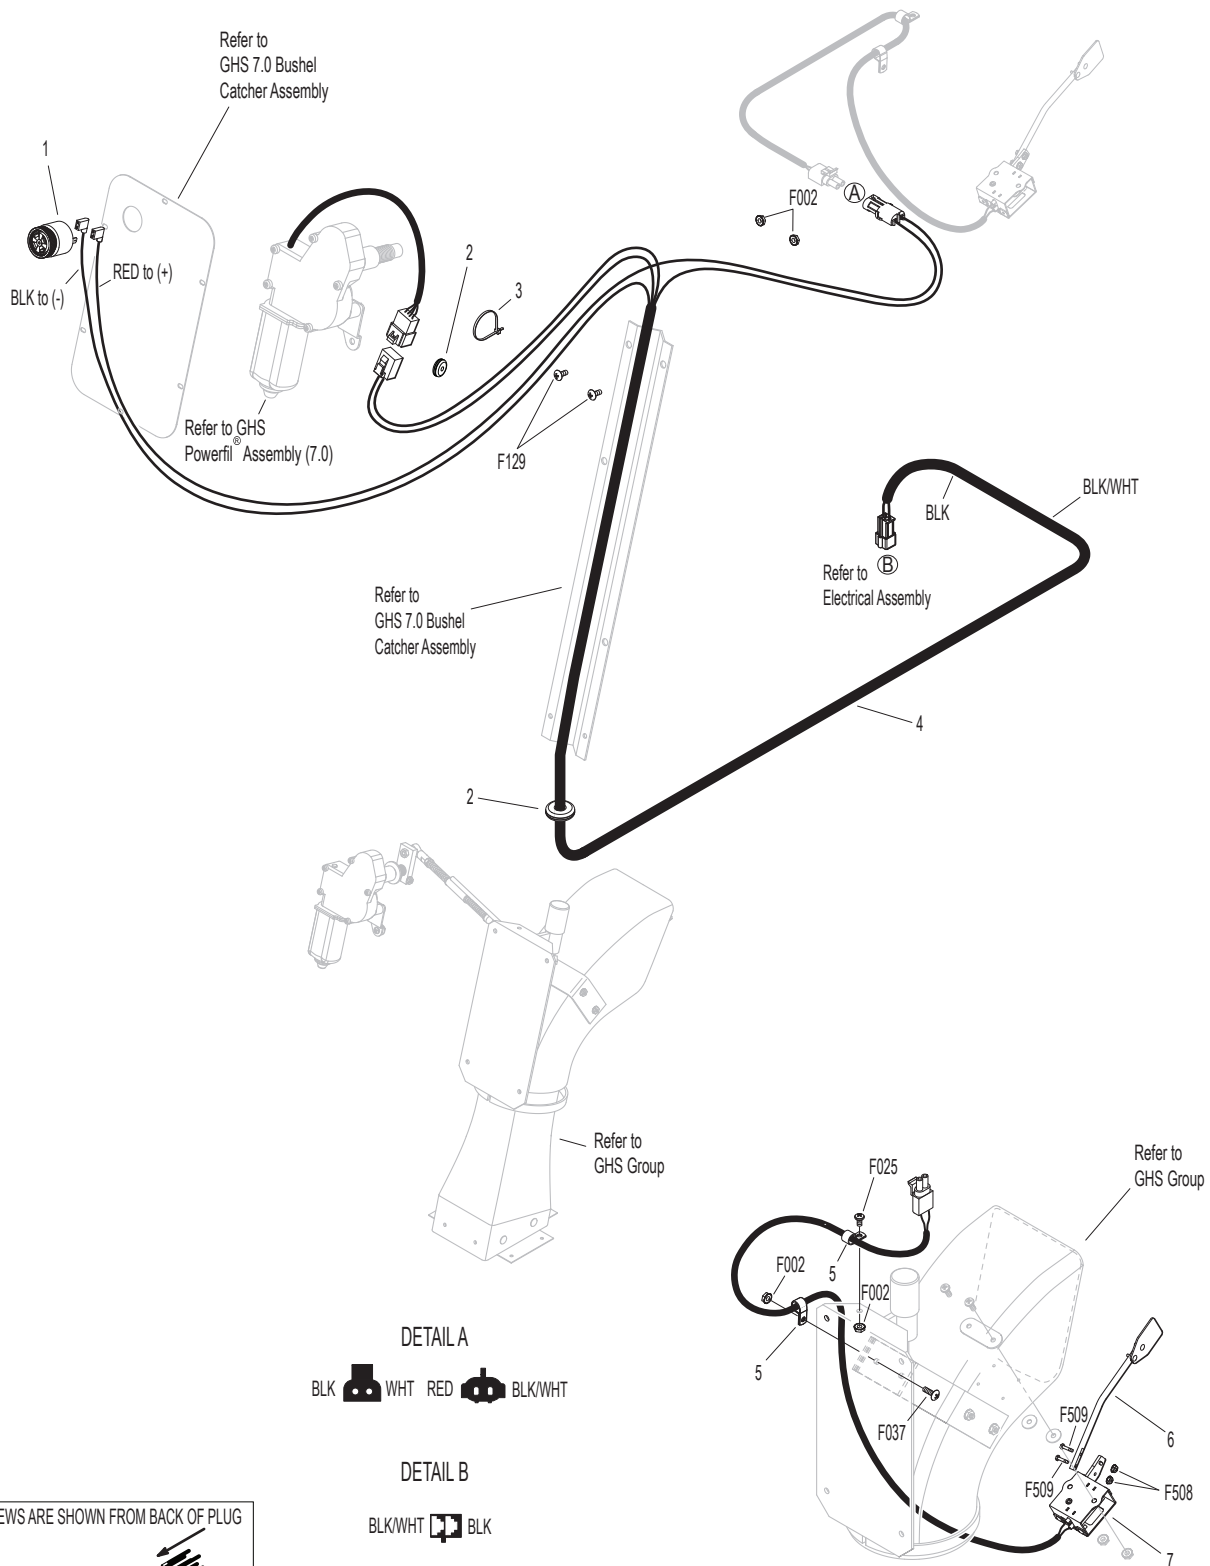


Beginning S/N 140307
 Effective Date 05-05-16
 Use only genuine **Walker®** replacement parts.

ELECTRICAL CONNECTORS

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Electrical Wiring Service Parts				29	7942-1	2-Way Locking Connector, Female	*
1	5996-1	16-14 GA Butt Connector	*	30	7942-2	2-Way Connector, Male	*
2	5996-11	12-10 GA Butt Connector	*	31	7942-3	2-Way Connector, Female	*
3	7942-14	16-14 GA Shrink Connector	*	32	7942-10	2-Way Locking Connector, Male	*
4	7942-13	12-10 GA Shrink Connector	*	33	5940-8	3-Way Connector, Male	*
5	5995-1	Wire Terminal Adapter	*	34	7942-9	3-Way Connector, Male	*
6	5996-4	16-14 GA Bullet Conn., Male	*	35	8944	3-Way Locking Connector, Male	*
7	5996-5	16-14 GA Bullet Conn., Female	*	36	8944-1	3-Way Locking Connector, Female	*
8	5940-4	16-14 GA Spg. Loaded Term., Female	*	37	7942-11	4-Way Connector, Male	*
9	5940-7	Wire Clip, Female	*	38	7942-12	4-Way Connector, Female	*
10	5996	1/4 x 16-14 GA QKS Term., Female	*	39	7942-5	5-Way Connector, Male	*
11	5996-2	3/16 x 22-18 GA QKS Term., Female	*	40	5940-2	5-Way Connector, Male	*
12	7996	16-14 GA QKS Term., Female	*	41	8942-1	5-Way Connector, Female	*
13	5940-5	16-14 GA Spg. Loaded Term., Male	*	42	7942-6	6-Way Connector, Male	*
14	5996-0	1/4 x 22-18 GA QKS Term., Male	*	43	7942-7	6-Way Connector, Male	*
15	5996-18	16-14 GA Ring Term. (#8) Nylon Insulated	*	44	7942-8	8-Way Connector, Male	*
16	7996-1	1/4 x 16-14 GA QKS Term., Male	*	45	8942-2	8-Way Connector, Female	*
17	5996-8	6 GARing Lug (5/16)	*	46	8942-3	5-Way Connector, Male	*
18	5996-9	22-18 GA Ring Term., #10	*	47	5940-9	3-Way Connector (M)	*
19	5996-10	16-14 GA Ring Term. (5/16)	*	48	7942-15	6-Way Connector (Female)	*
20	5996-12	12-10 GA Ring Term. (5/16)	*	49	7940-3	Packard Plug (Male)	*
21	5996-13	16-14 GA Ring Term., # 10	*	50	7940-4	Packard Plug (Female)	*
22	5996-15	12-10 GA Ring Term. (1/2)	*	* Service Part Only			
23	5996-16	6 GARing Terminal (1/4)	*	NOTE: Not all Electrical Connectors are used with all assemblies.			
24	5996-17	16-14 GA Ring Term. (1/4)	*	NOTE: Refer to ELECTRICAL ASSEMBLIES , Pages 26-29 for locations of Wiring Harness, Electrical Components and of all Electrical Wiring Service Parts.			
25	5996-20	12-10 GA Ring Term. (1/4)	*				
26	5996-21	12-10 GA Ring Term., #10	*				
27	7942-4	Single Connector, Male	*				
28	8942	2-Way Connector, Male	*				


ELECTRICAL CONNECTORS

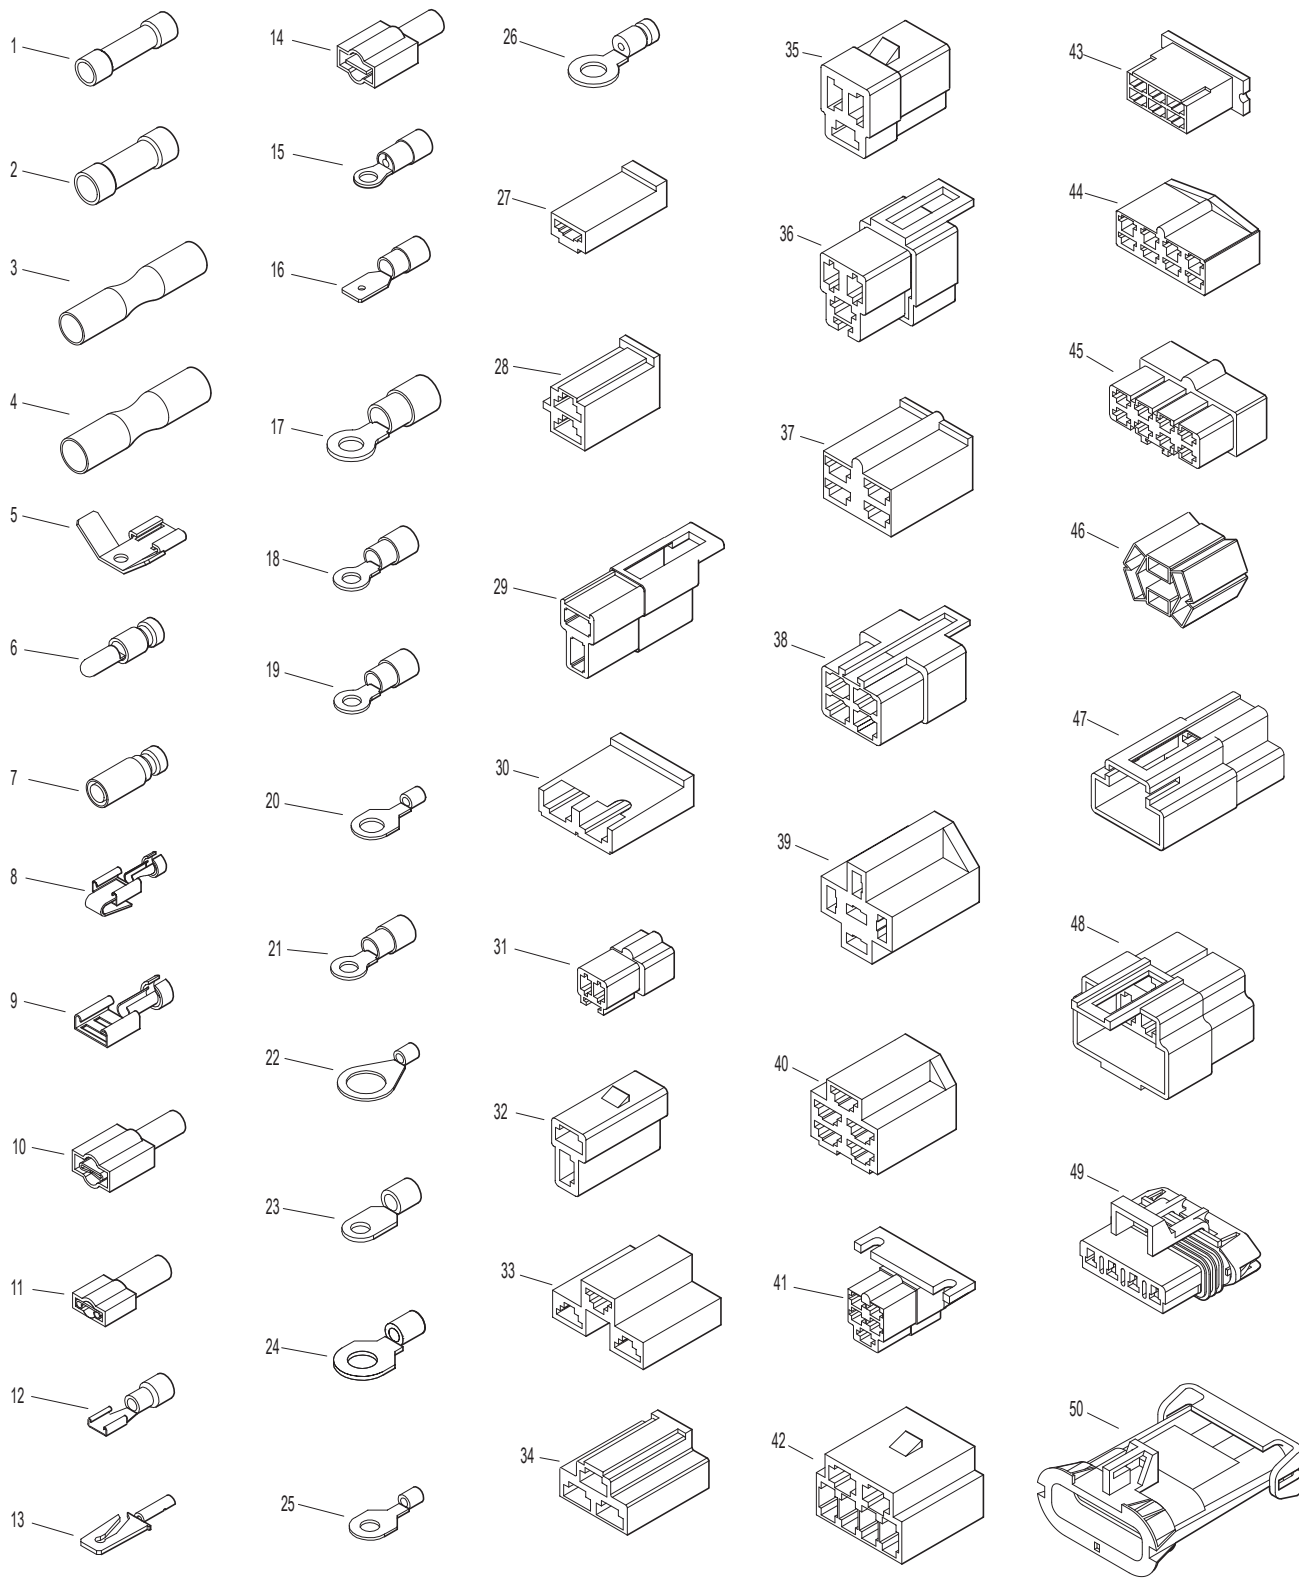

LUBRICATION POINTS

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES	ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points				17	Brake Actuator Pivot	Grease	1
1	Steering Lever Pivot	Grease	4	18	Choke Control Cable Ends	Oil	2
2	Body Hinge Point	Oil	2	19	Catcher Hinge Point	Oil	2
3	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1	20	Throttle Control Cable Ends	Oil	2
4	FSC Actuator Rod Pivot Pins	Oil	2	21	Engine Dipstick / Oil Filler	Oil**	1
5	(FSC) Friction Body Pivot	Grease	1	22	Belt Tightener Pivot, Blower Drive	Grease	1
6	FSC Lever Pivot	Grease	1	23	Belt Tightener Pivot, Ground Drive	Grease	1
7	Deck Support Arm Pivot	Grease	2	24	PTO Gearbox Dipstick	Oil**	1
8	Gear Axle	Oil**	2	25	Hydrostatic Drive	Oil**	2
9	Universal Joint Tube Assembly	Grease*	1	26	Choke Control Pivot	Oil	1
10	Parking Brake Lever	Grease	1	27	Throttle Control Pivot	Oil	1
11	Universal Joint Quick Connect Spline (Grease Slide Area)	Grease	1	* Grease every 25 hours.			
12	Belt Tightener Pivot, Jackshaft Drive	Grease	1	** See Operator's Manual for procedure for checking and changing oil in Engine Crankcase, Hydrostatic Transmissions, and Gear Axles.			
13	PTO Clutch Lever Pivot	Grease	1	NOTE: See Model C19 Operator's Manual (P/N 6000-16) for proper lubrication intervals.			
14	Clutch Actuator Push Rod	Grease	2				
15	Belt Tightener Pivot, PTO Clutch	Grease	1				
16	Brake Actuator Rod and Brake Band Pivot Pins (Clevis)	Oil	3				

LUBRICATION POINTS

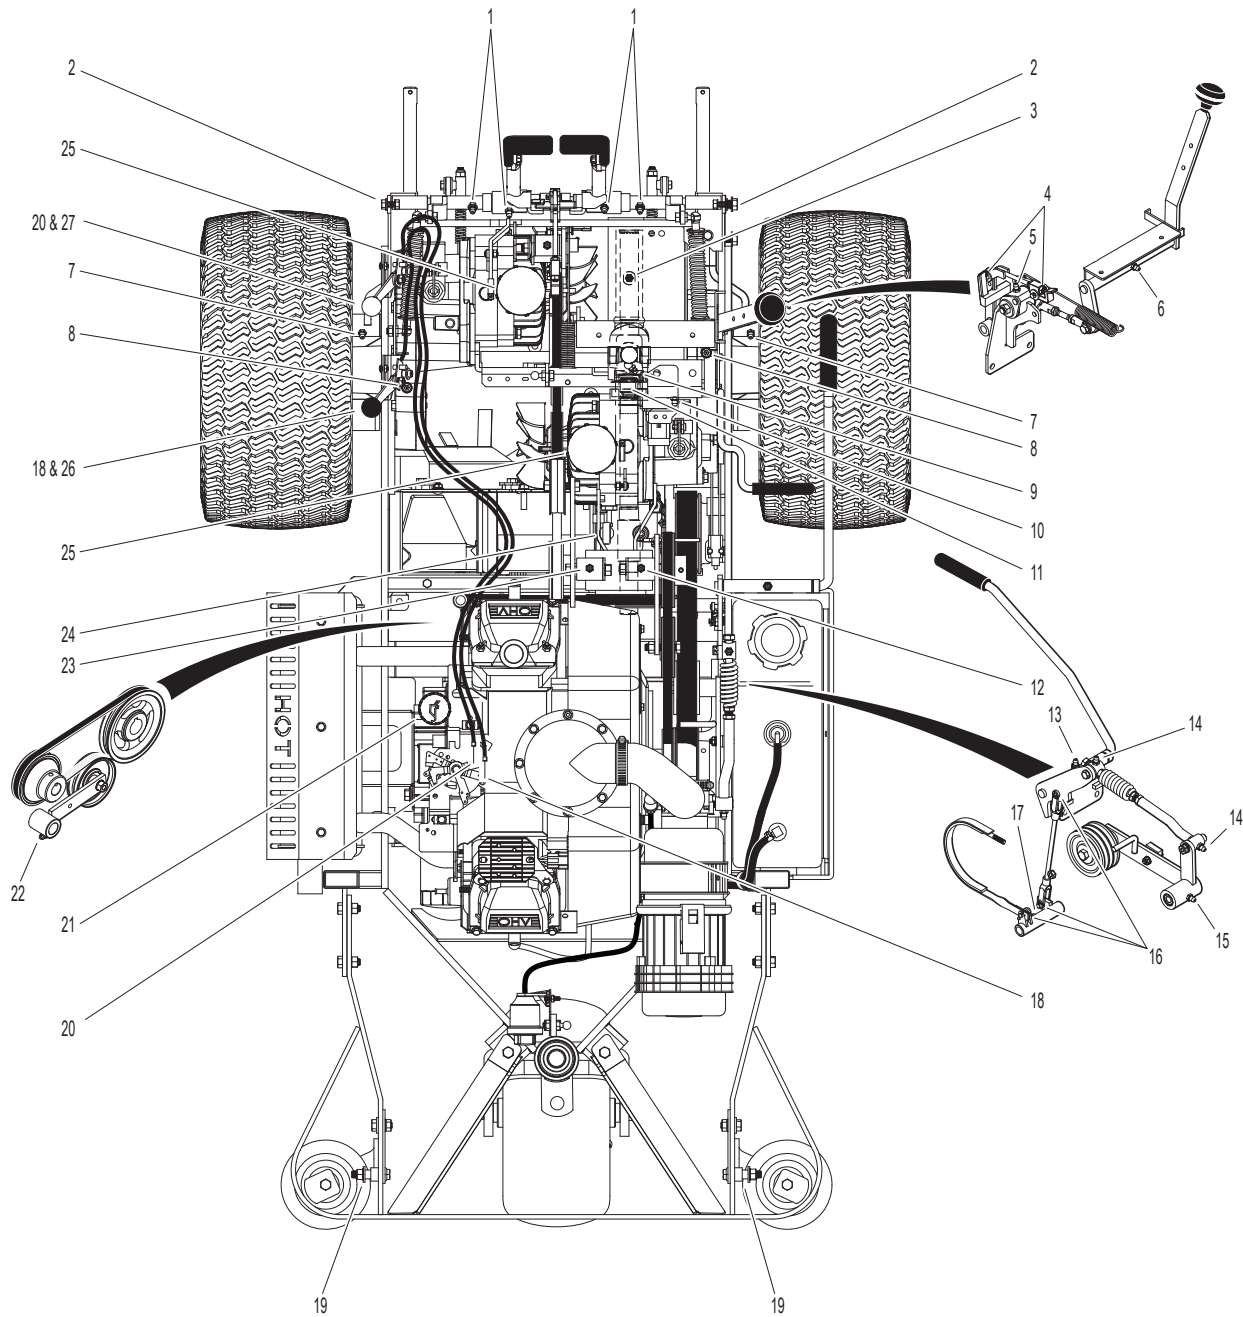

WIRING SCHEMATIC

WALKER MODEL C19 Beginning S/N 2014-125718


IGNITION SWITCH CIRCUITS	
OFF	G + M
START	B + A / S1 + S2
RUN	B + A

S1 = START CIRCUIT
S2 = START/ACCESSORY CIRCUIT
M = MAGNETO GROUND CIRCUIT
B = BATTERY CIRCUIT
A = ACCESSORY CIRCUIT
G = GROUND CIRCUIT

RELAY - A IGNITION RELAY	
OFF	30 + 87A
START	30 + 87A
PTO ON	OPEN

RELAY - B START RELAY	
OFF	OPEN
START	30 + 87
PTO ON	OPEN

RELAY - C DELAY RELAY	
OFF	30 + 87A
START	OPEN
RUN	OPEN

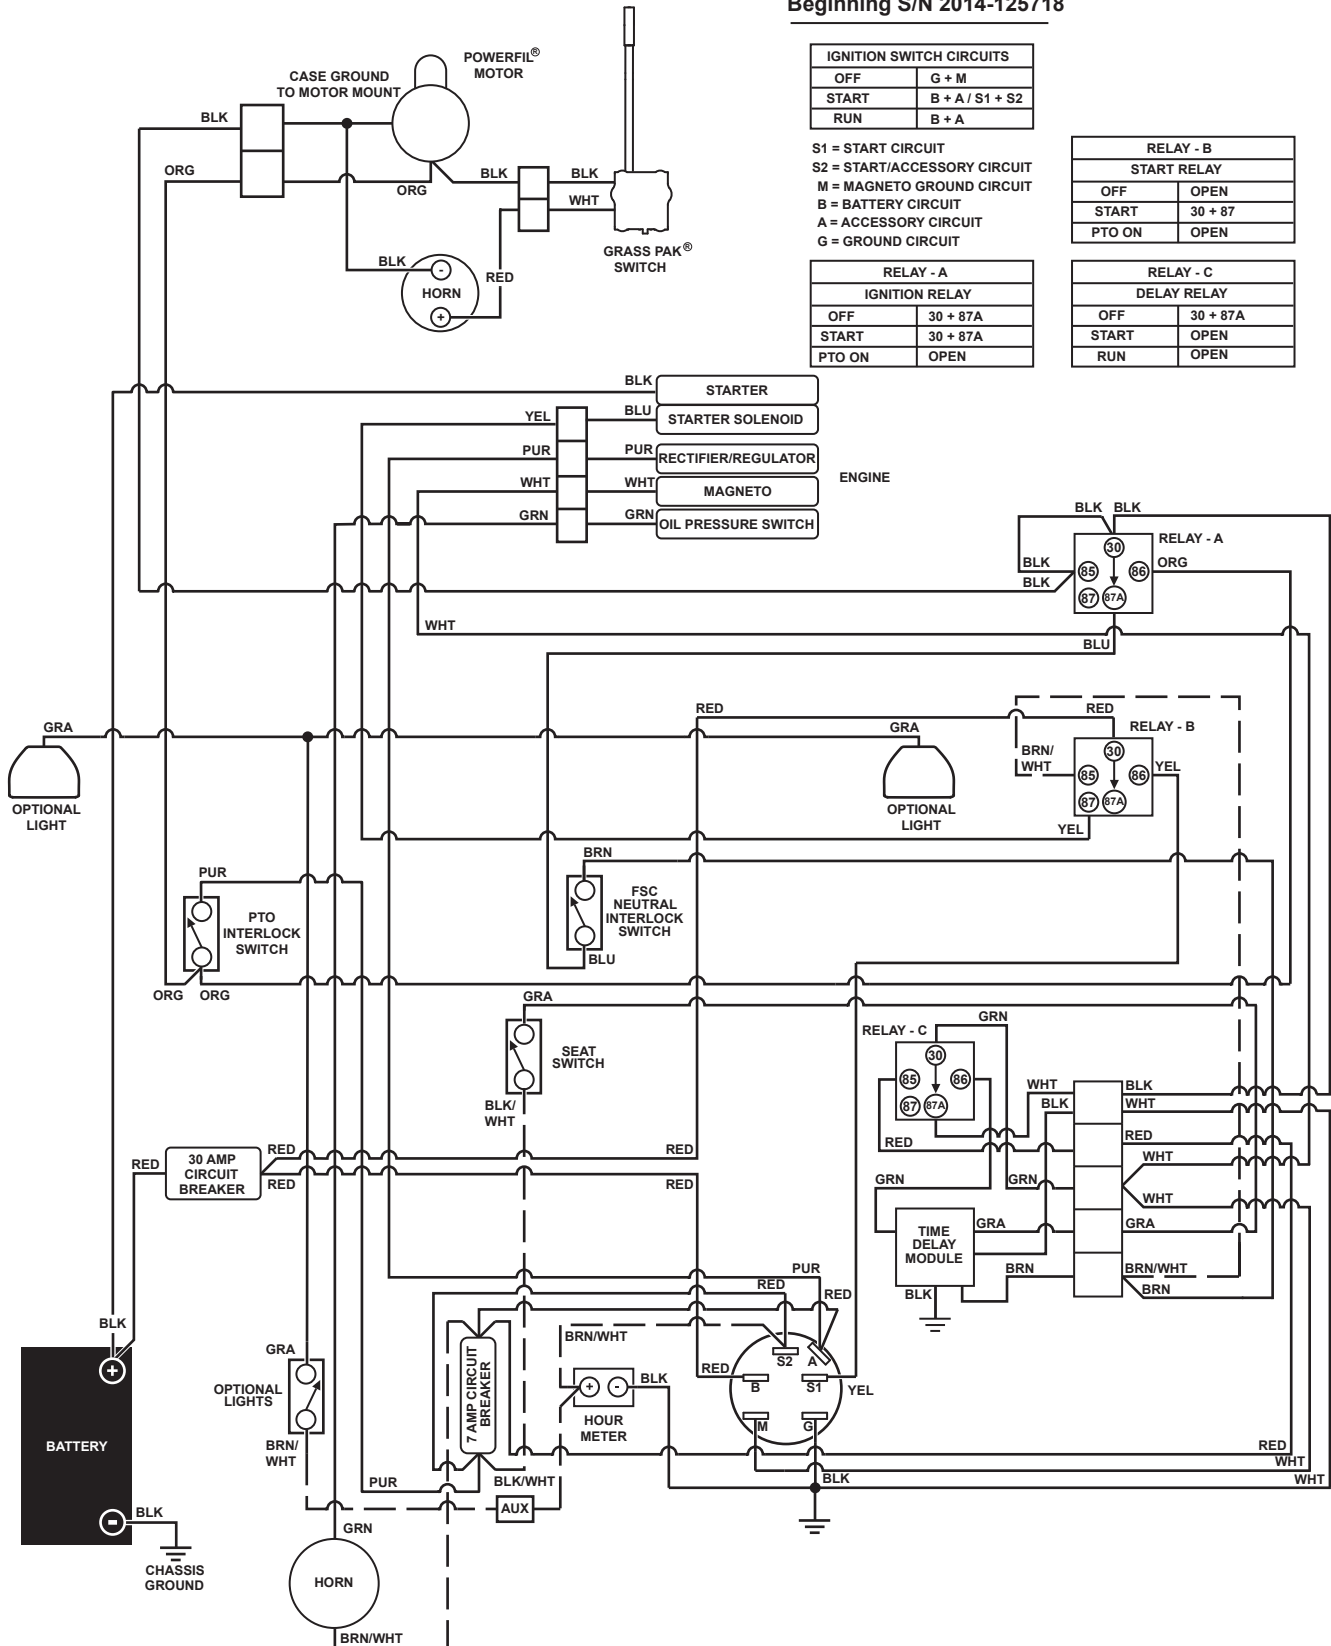

Beginning S/N 140307

Effective Date 05-05-16

Use only genuine **Walker**® replacement parts.

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

LIMITED WARRANTY FOR WALKER COMMERCIAL RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within one (1) year* after date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Kohler Engine
Battery

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

* Extended warranties are offered for the following powertrain components:

- A three (3) year unlimited hour warranty is offered for the Walker P/N 6200-9 Gear Axle Assembly.
- A three (3) year or 3000 hour (whichever comes first) warranty is offered for Eaton Model 7 Hydrostatic transmissions; covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 3000 hours.

2. WHAT THIS WARRANTY DOES NOT COVER:


- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Operator's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

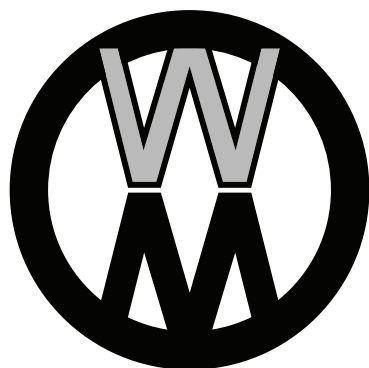

WALKER

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 040417 PRINTED IN USA www.walkermowers.com ©2017 WALKER MFG. CO