



WALKER

Illustrated Parts Manual

C19i



Beginning S/N: 190349
P/N 6000-51

KEY TO ABBREVIATIONS USED IN THIS MANUAL

<i>Abbreviation</i>	<i>What it Represents</i>
° (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
-1 (as deck style designation)	Standard (Aluminum) Gear Drive Deck
-2 (as deck style designation)	Heavy Duty (Cast Iron) Gear Drive Deck
-3 (as deck style designation)	Belt Drive Deck
AT	All-Terrain
CCW	Counter-clockwise
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal.	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz.	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt.	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
TOPS™	Transmission Oil Performance System
V	Volts
VLR	Very Low Restriction

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

ILLUSTRATED PARTS LIST


<i>Section of Tractor Covered</i>	<i>Page</i>	<i>Section of Tractor Covered</i>	<i>Page</i>
Decals		Electrical Components	
Tractor Decals	2	Electrical Assembly	28
Body / Chassis Assemblies		Electrical Assemblies (GHS 7.0 Bushel Components).....	30
Body / Chassis Assembly	4	Maintenance	
Rear Body Assembly	6	Lubrication Points	32
Tractor Components		Wiring Schematic.....	34
Main Component Power Transmission	8	Maintenance And Service Record Sheet.....	35
Engine Group.....	10	Warranty	
Engine Group (Fuel Components)	12	Limited Warranty.....	37
Hydrostatic Ground Drive Assemblies.....	14		
Steering Control Assemblies	16		
Throttle Control Assembly.....	18		
Parking Brake Assembly	20		
GHS Group	22		
GHS Powerfil® Assembly (7.0)	24		
GHS 7.0 Bushel Catcher Assembly.....	26		

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQUIRED
Walker Product and Operation Decals				
1	8600-33	RH Fender	Body, RH Near Seat	1
2	5813-2	Decal, 4" Grass-Pak Powerfil®	Powerfil® Cover Plate	1
3	5800-22	Walker (8" Round)	7.0 Bushel Catcher (one on each side)	2
4	8600-37	LH Fender	Body, LH Near Seat	1
5	8821-18	Decal, C19i	Body	1
6	5856-1	Made in USA	Body	1
Danger Decals Warning Decals Caution Decals				
7	8600-10	Danger, Pinch Point	7.0 Bushel Catcher Mounting Frame Assembly (one on each side)	2
8	8600-4	Danger, Rotating Blower Blades	Body, Near Body Chute	1
9	8600-12	Danger, Engine Exhaust	Front Body, LH Side	1
10	5810-3	Decal, Hydro Warning	LH Gear Axle Drive Assembly	1
Maintenance Decals				
11	5869	Removable Screen	7.0 Bushel Catcher Removable Screen	1
12	5855	Important, Engine Cooling	Engine	1
13	6895-103	Rehiko 300 Hour Oil	Oil Cooler / Regulator Mount	1
14	8600-16	Front Body Closure	Rear Cross Member, Body	1
15	5024-24	Decal, TOPS™	Oil Reservoir Tank	1
16	5810-1	Axle Oil Level	Gear Axle Drive Assemblies (one on each)	2
17	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1
18	6807-1	Oil Pressure	Body	1
19	5802-5	Engine Service Light	Body	1
20	8600-30	Parking Brake	Body, RH Side Below Seat	1
21	7827	Oil Level	Jackshaft Support	1

NOTE: All parts requiring decals are shipped with decals applied.


TRACTOR DECALS

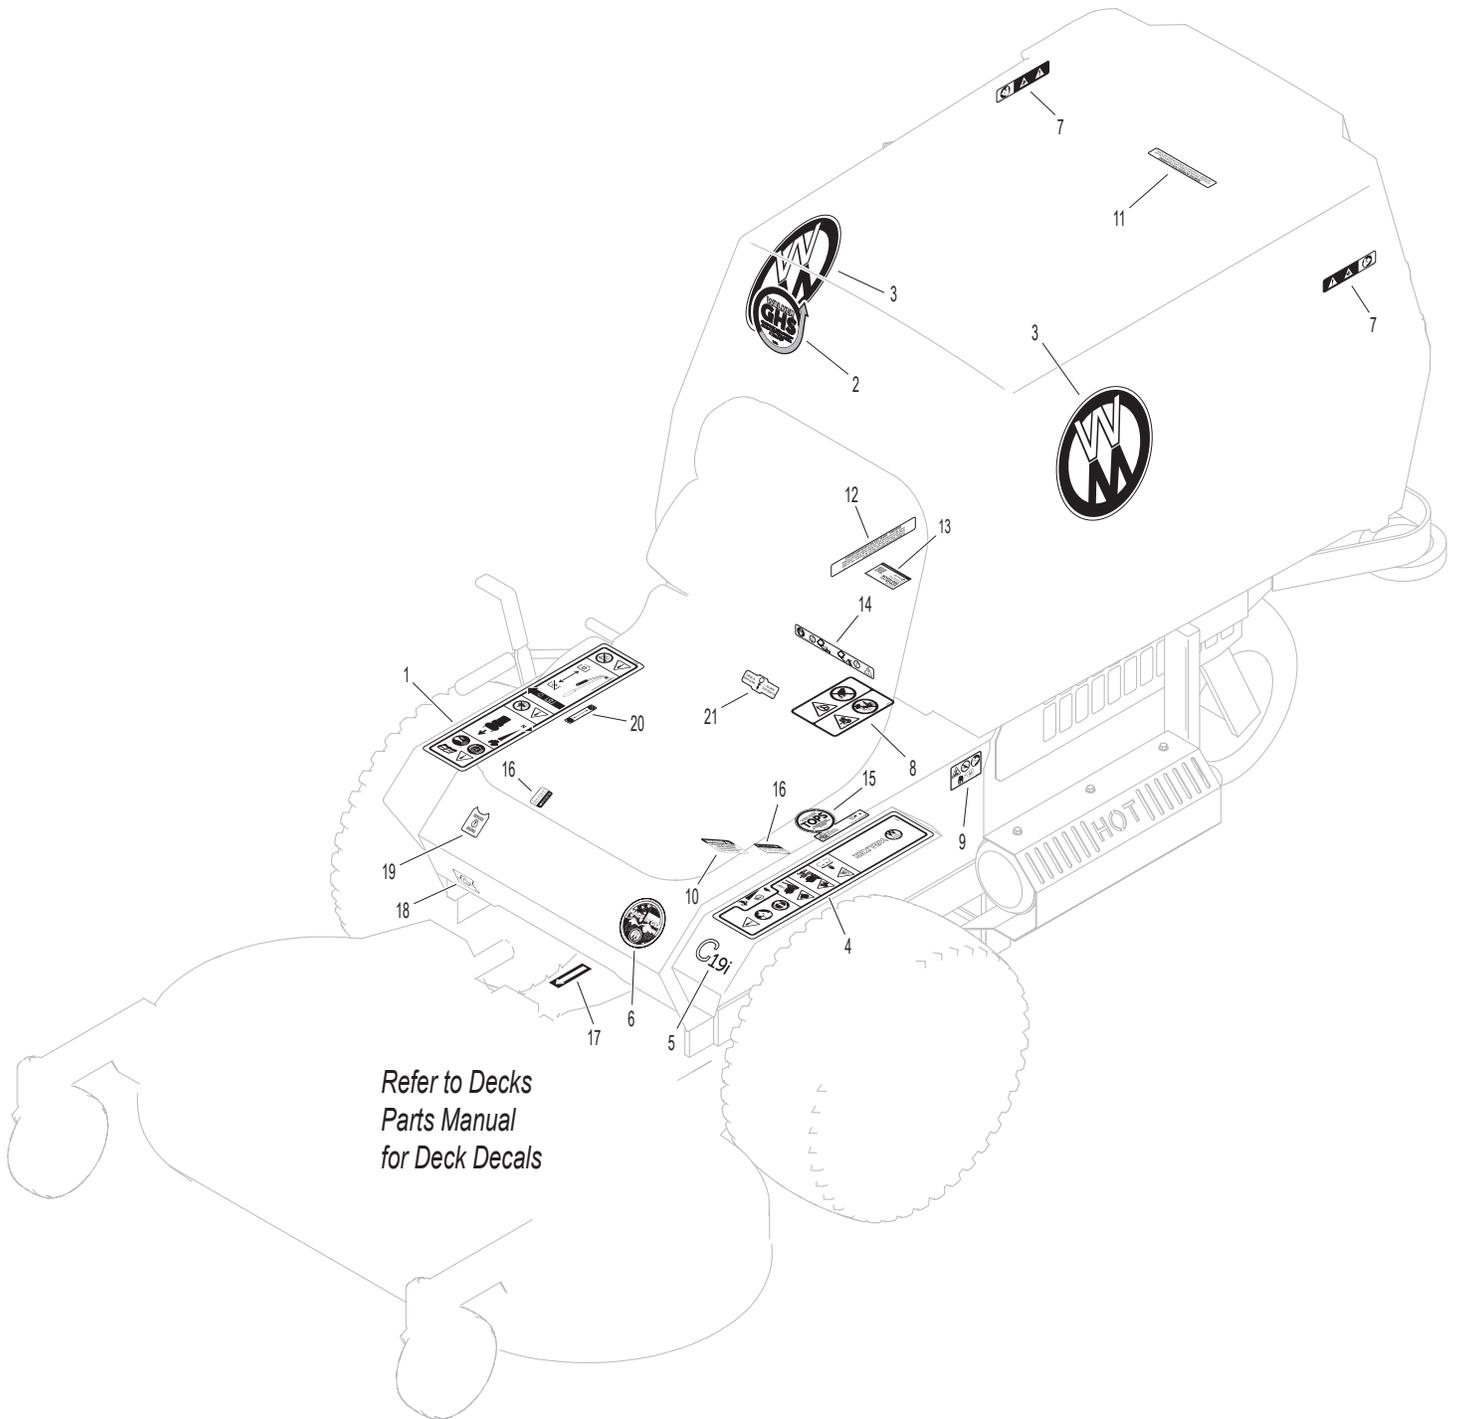

BODY / CHASSIS ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Seat Assembly				36	5038-1	Axle Spacer Tube (6-5/8)	1
1	5103-3	Seat W/Switch	1	37	6307-7	Chassis Frame	1
2	7440-5	Shock Mount (1-1/4 x 3/4)	4	38	5075-3	LP Wheel & Tire (18 x 8.50-10)	2
Rear Bumper Assembly					5075-2	LP Tire (18 x 8.50-10)	*
3	7516-5	Catcher Pivot Bushing	2	5075-5	LP Wheel (10 x 7)		*
4	5517-8	7.0 Rear Bumper	1	5033-6	Wheel & Tire (18 x 7.00-8)		**
5	7517-3	Catcher Pivot Plate	2	5030-6	Standard Tire (18 x 7.00-8)		*
6	5162	Roller Wheel (5" Rubber)	2	5031-2	Stanard Wheel (8 x 5-5)		*
				5030-4	Tire Tube (18 x 8.50-8)		*
Body Assembly				Fasteners			
7	7383-6	Body Latch Bracket, RH	1	F002	10-24 Keps Nut		2
8	7383-5	Body Latch Lever	1	F004	1/4-20 Keps Nut		8
9	7383-7	Body Latch Bracket, LH	1	F009	5/16-18 Whiz Locknut		10
10	7222	Extension Spring (1/4 x 3)	1	F012	3/8-16 Keps Nut		6
11	5845	Rubber Bumper (1.50 OD x 1.25)	4	F014	3/8-16 ESNA Nut		4
12	6101-9	Front Body Engine Guard	1	F016	1/2-13 Self-Locking Nut		1
13	NS	Body ID Plate	1	F020	5/16-18 ESNA Nut		1
14	5989-12	Dome Plug (3/16)	1	F025	10-24 x 3/8 PPHMS		2
15	5989-10	Dome Plug (9/16)	1	F029	1/4-20 x 1/2 Hex Bolt		6
16	8118	Heat Deflector	1	F031	1/4-20 x 5/8 Hex Bolt		2
17	5989-3	Dome Plug (5/16)	4	F038	3/8-16 x 1 Hex Bolt		8
18	5989-4	Dome Plug (3/8)	3	F040	3/8-16 x 1-1/2 Hex Bolt		2
19	6100-53	Front Body	1	F041	3/8-16 x 1-3/4 Hex Bolt		2
20	5146	10mm Ball Stud	2	F042	3/8-16 x 2-1/4 Hex Bolt		2
21	2145	Gas Spring Assembly (Includes Item # 20)	1	F050	1/4 SAE Washer		2
22	5180	Edge Molding, Lever Opening	2	F051	3/8 SAE Washer		2
Tilt-Up Latch Assembly***				F059	3/8 Wave Spring Washer		2
23	5847	Plastic Tip	1	F093	5/16-18 x 1 Hex Bolt		1
24	5744-20	Spring Arm, Tilt-Up Latch	1	F157	1/2-20 x 1-1/4 Wheel Lug Bolt		8
25	5744-10	Spring Pivot Bushing	1	F206	#2 x 3/16 Drive Pin		2
26	5744-15	Compression Spring (3/8 x 5/8)	1	F241	.375 x .875 x .10 Washer		4
27	5744-13	Mount Angle, LH	1	F292	1/2-13 x 8-1/2 Hex Bolt, GR 5		1
28	5744-12	Hook, Tilt-Up Latch	1	F341	Coil Roll Pin (7/64 x 9/16)		1
29	5744-14	Mount Angle, RH	1	F342	5/16 Conical Washer		2
Chassis Assembly				F413	5/16-24 x 5/16 Set Screw		2
30	5267-1	Retainer Collar (1") (Includes Item # F413)	1	F570	3/8-16 Flange Top Lock Nut		4
31	5270-1	Ball Bearing	2	F637	Washer .835 x .505 x .125		2
32	5420-2	Tail Wheel Fork	1	F710	1/4-28 x 1/4 Set Screw (Knurled Cup), SS		1
33	8769-12	Bearing Cup (1/2 ID)	2	* Service Part Only			
34	5037-1	Bearing, Tail Wheel	2	** May be ordered as a factory-installed option or for dealer installation. Narrow Drive Tires are used when installing a 36" Deck. Contact your Walker dealer.			
35	5035	Tail Wheel & Tire Assembly (13 x 6.50-6)	1	*** Complete Tilt-Up Latch Assembly Kit available by ordering kit # 5744-5.			
	5035-1	Tail Wheel Tire (13 x 6.50-6)	*				
	5036	Tail Wheel & Hub (6 x 4.5)	*				

BODY / CHASSIS ASSEMBLY

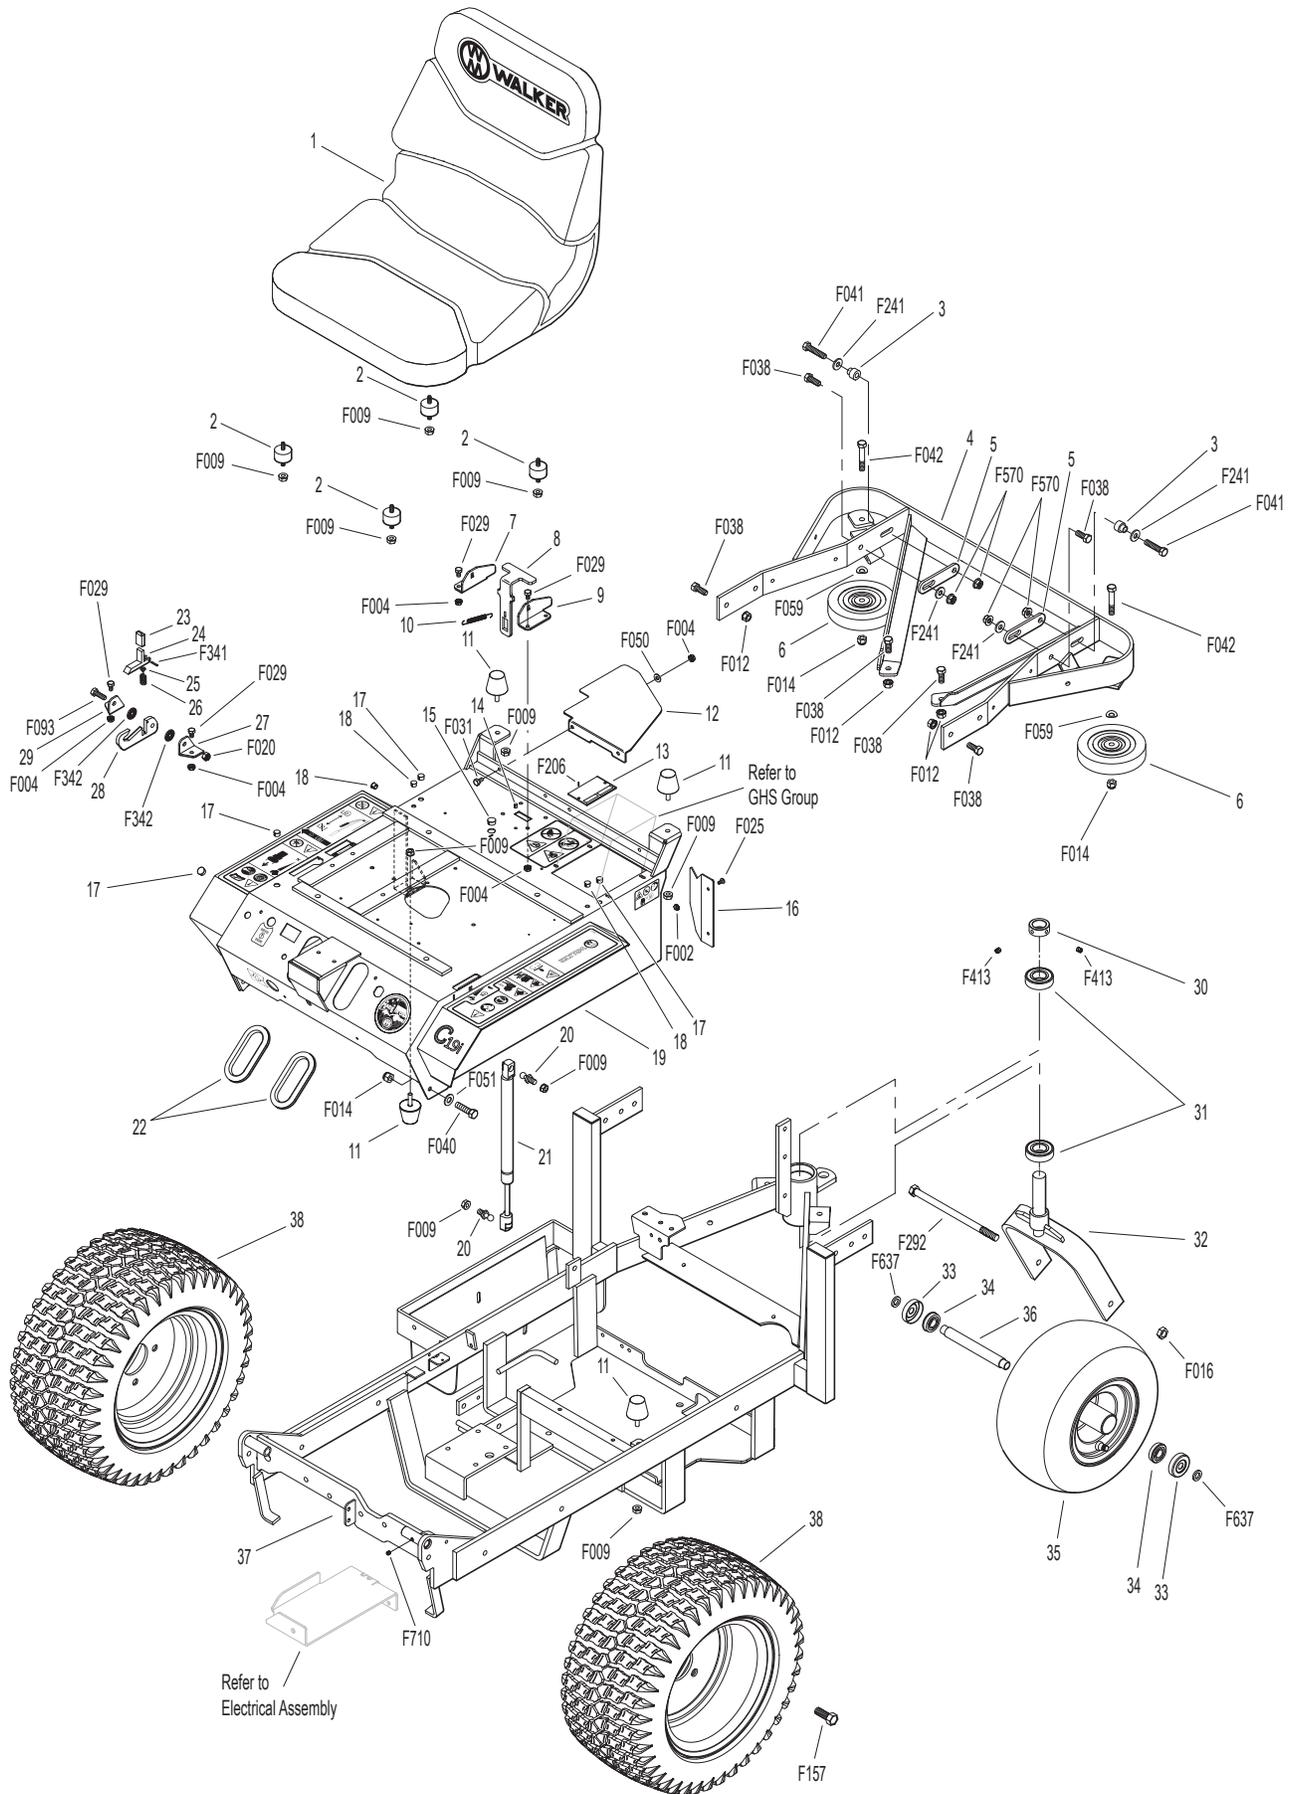

Model C19i Beginning S/N 190349
 Use only genuine **Walker**® replacement parts.

REAR BODY ASSEMBLY


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Rear Body Assembly				Fasteners			
1	5976-2	Grommet (3/16 x 3/4)	1	F002		10-24 Keps Nut	4
2	5105-1	Rear Body Cover	1	F009		5/16-18 Whiz Locknut	2
3	8515-17	Catcher Handle Plate, LH	1	F023		10-24 ESNA Nut	4
4	8389-5	Splash Guard	1	F026		10-24 x 1/2 PPHMS	4
5	7146	13mm Ball Stud	2	F031		1/4-20 x 5/8 Hex Bolt	2
6	7147	Spring Clip	2	F032		1/4-20 x 3/4 Hex Bolt	1
7	7145	Gas Spring Assembly (Includes Items # 5 & 6)	1	F390		1/4-20 x 7/8 Carriage Bolt	2
8	7190-1	Insulation Foam Pad, LH	1	F569		1/4-20 Flange Top Lock Nut	5
9	7190-2	Insulation Foam Pad, RH	1	F615		1.0 x .255 x .125 Washer	1
10	5105-6	Rear Body, Catcher Support Frame	1	F617		10-24 x 3/8 Truss Head Torx	4
11	8515-18	Catcher Handle Plate, RH	1				

NOTE: Rear Bumper Assembly is not shown here. Refer to **BODY / CHASSIS ASSEMBLY**, Page 4.

MAIN COMPONENT POWER TRANSMISSION

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Clutch Lever Assembly				42	7833	Cable Clamp (7/8 x 1/4)	1
1	8358-3	Clutch Lever (Includes Items # 2 & 3)	1	43	8539	Starter Relay Mount	1
2	5830	Grease Fitting	8	44	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F718)	1
3	4850	Handle Grip, Black	1	45	5268	Bearing W/Collar (3/4)	2
4	7303-10	Clutch Actuator Bolt (3/8)	1	46	8349	Transmission Belt Tightener Arm	1
5	7380-5	Knuckle Joint (3/8 ID)	1	47	5245	Idler Pulley (3")	1
6	7226-10	Compression Spring (3/4 x 2-1/2)	1	48	8394-6	Hydro Jackshaft Mount Assembly (Includes Items # 2, 9, 12, 40, 45, 49, F012, F042, F067 & F718)	*
7	8130-5	Pushrod, Clutch Actuator (Threaded Tube) (Includes Item # 2)	1	49	8273-1	Jackshaft (3/4 x 8-1/8)	1
8	8130-10	Clutch Actuator Rod Assembly (Includes Items # 2, 4-7, F054, F336 & F353)	1	50	7240-7	Jackshaft Drive Pulley (3.0/3V) (Includes Items # F067 & F718)	1
9	7201-3	Fiberglide Bearing	6	Fasteners			
10	7201-5	Inner Race (2-1/4)	1	F002	10-24 Keps Nut	1	
11	8368	PTO Belt Tightener	1	F003	1/4-28 Hex Nut	2	
12	5841	Retainer Washer (3/8 x 1-1/4)	4	F004	1/4-20 Keps Nut	2	
13	8243-1	Clutch Idler Pulley	1	F005	1/4-20 ESNA Nut	1	
	8243	Clutch Idler Pulley Assembly (Includes Items # 13-15 & F070)	*	F009	5/16-18 Whiz Locknut	3	
14	5265	Bearing (3/4)	1	F012	3/8-16 Keps Nut	6	
15	8243-3	Hub, Idler Pulley	1	F025	10-24 x 3/8 PPHMS	1	
16	8375	PTO Belt Tightener Stop	1	F029	1/4-20 x 1/2 Hex Bolt	1	
17	7377	Plastic Washer (1 x .438 x .025)	2	F034	5/16-18 x 3/4 Hex Bolt	2	
18	7378	Pivot Bearing (7/16 x 9/16)	1	F041	3/8-16 x 1-3/4 Hex Bolt	2	
19	5281-5	Clevis Pin (1/4 x 0.80)	2	F042	3/8-16 x 2-1/4 Hex Bolt	3	
20	5280	Clevis (1/4)	2	F043	3/8-16 x 3 Hex Bolt	1	
21	8305	Brake Actuator Rod	1	F047	3/8-16 x 4-1/2 Hex Bolt	1	
22	8370	Bearing, Brake Actuator	1	F054	AN960616 Washer	3	
23	8250	Brake Spring (1/2 x 2-1/2)	1	F061	1/4 Internal Star Lock Washer	1	
24	8369	Brake Actuator (Includes Items # 2 & 22)	1	F067	3/16 x 3/16 x 1 Key	2	
PTO Drive Shaft Assembly				F069	3/32 x 1/2 Cotter Pin	3	
25	7050-1	Dipstick, Gearbox	1	F070	1-3/4 Internal Snap Ring	1	
26	8371-1	Mount Bracket, Brake Band	1	F116	1/4-20 x 1-1/4 Hex Bolt	1	
27	8377	Brake Band Guide	1	F121	5/16-18 x 3/8 x 1 SHL Bolt	1	
28	8050-11	PTO Gearbox / Flange Pulley	1	F131	5/16-18 x 1/2 Hex Bolt	2	
29	7248	Ground Drive Belt, Micro-V	1	F132	1/4-20 x 2-3/4 Hex Bolt	1	
30	7275-16	Universal Joint Tube Assembly (Spline)	1	F168	5/16 Split Lock Washer	10	
31	8304	Brake Band (14-1/2)	1	F178	1/4 x 1 Fender Washer	1	
32	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1	F182	1/4 x 5/8 x 1/8 Washer	2	
33	6250-1	Drive Belt (3VX365)	1	F226	5/16-18 x 7/8 Hex Bolt	14	
34	7236-1	PTO Drive Pulley (4-1/2/3V) (Includes Items # F168 & F226)	1	F241	.375 x .875 x .10 Washer	1	
35	8237-3	Engine Pulley (4/3.8/3V) (Includes Item # F226)	1	F261	AN960616L Washer	1	
36	8230	Engine PTO Belt	1	F336	3/8-16 Jam Nut	1	
Jackshaft Assembly				F353	3/8-16 ESNA LP Nut	1	
37	7245-1	Idler Pulley (3/8 Groove)	1	F718	5/16-18 x 5/16 Set Screw (Knurl Point)	4	
38	6325-2	Spacer Bushing (5/16)	2	* Service Part Only			
39	8349-4	Idler Arm	1				
40	7201-4	Inner Race (1-1/2)	2				
41	5221-1	Extension Spring (3/4 x 5)	2				

MAIN COMPONENT POWER TRANSMISSION

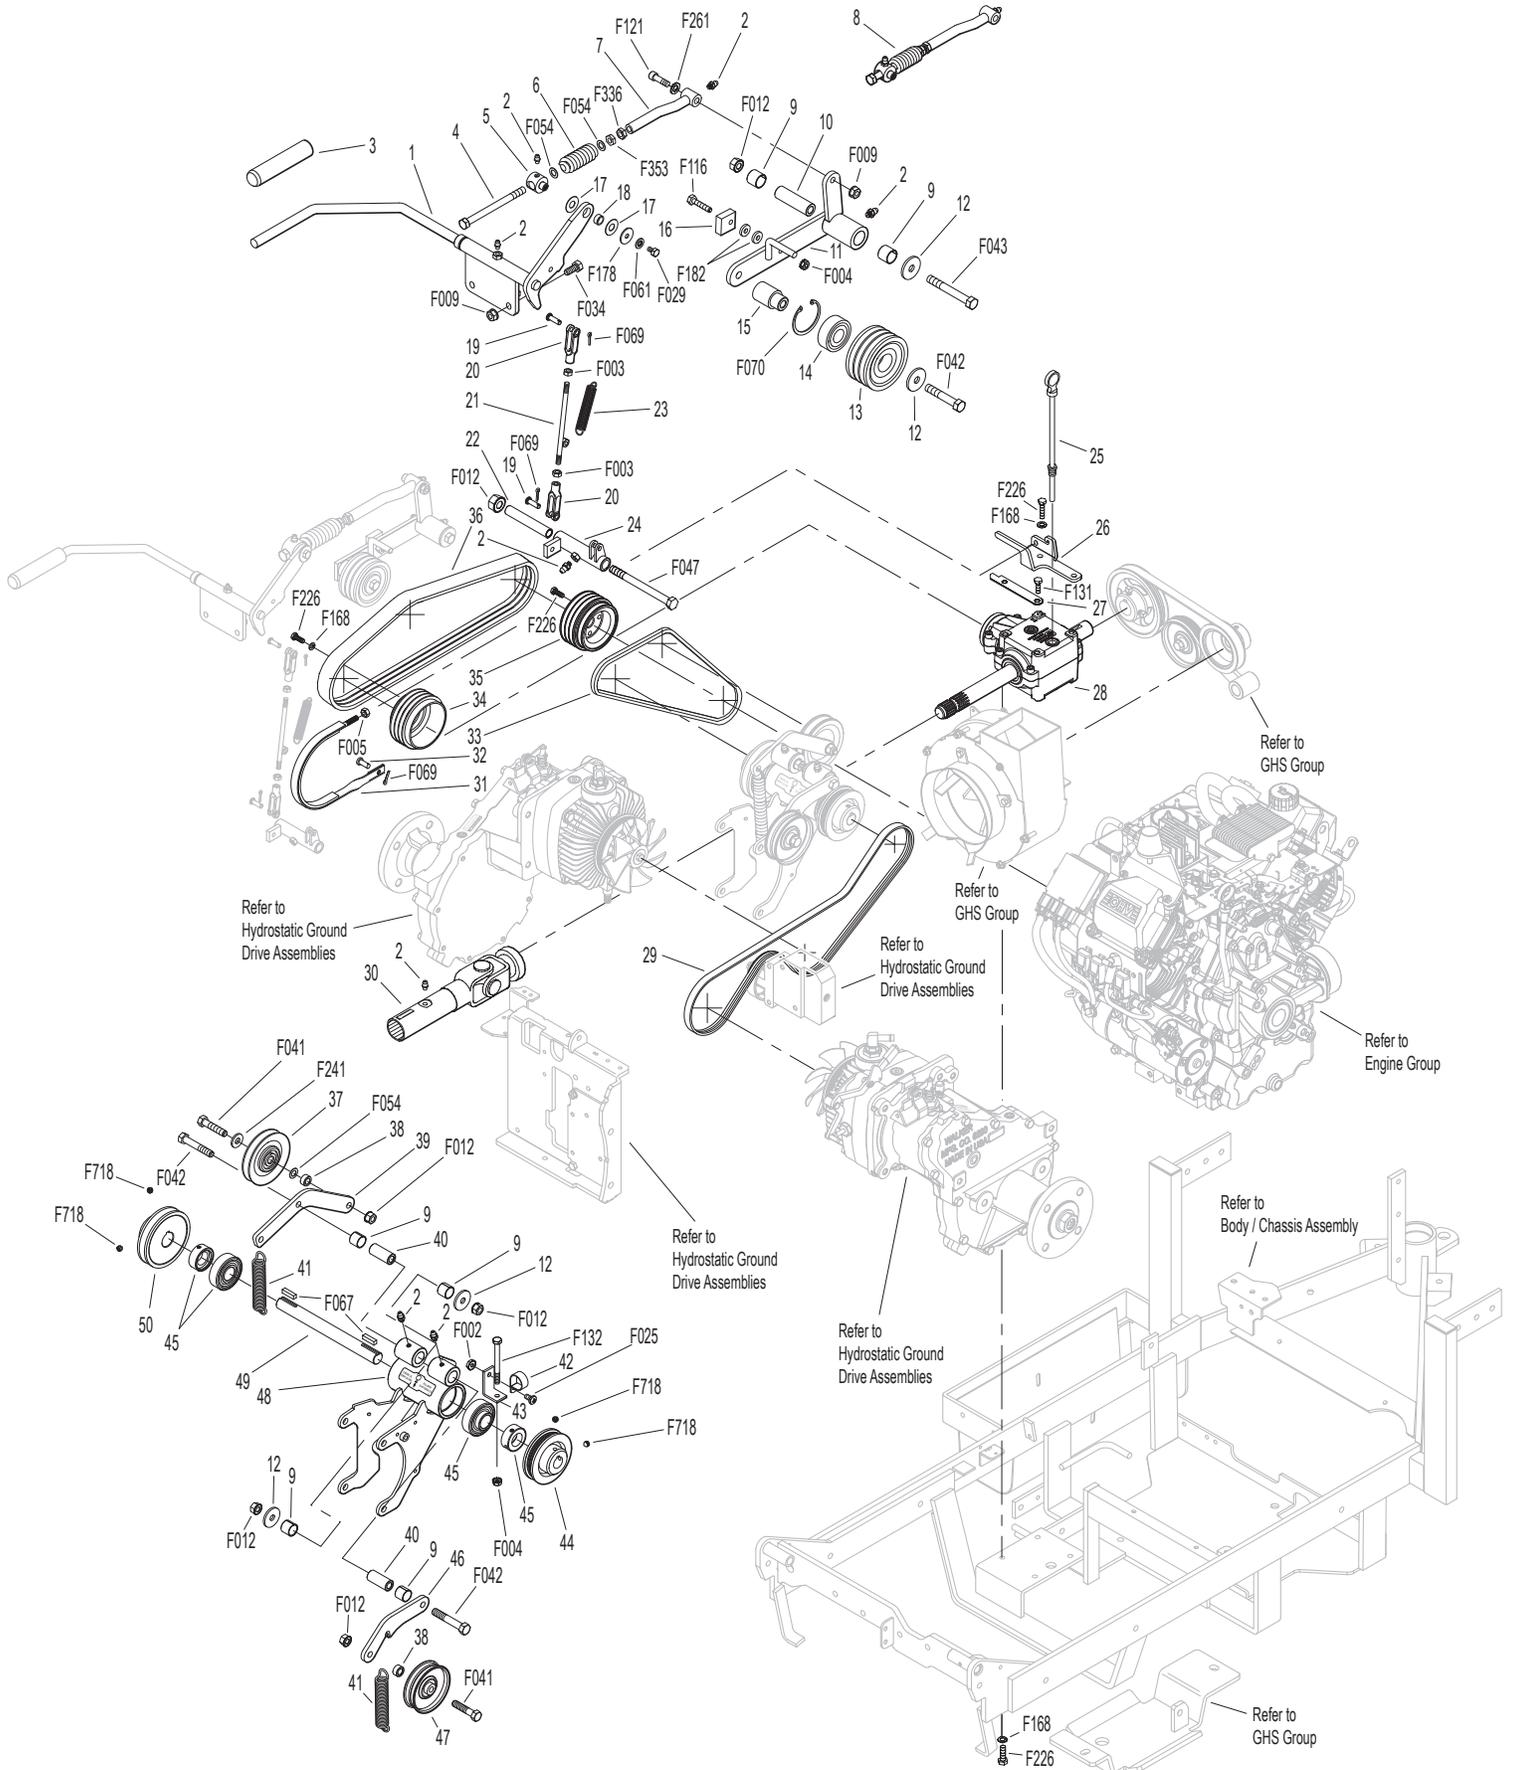


Model C19i Beginning S/N 190349
 Use only genuine **Walker®** replacement parts.

ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Precleaner Assembly				Fasteners			
1	4090	Air Cleaner Assembly (90 Deg. 2") (Includes Item # 4)	*	F004		1/4-20 Keps Nut	3
2	7840-5	Hose Clamp (1.56 to 2.50)	1	F009		5/16-18 Whiz Locknut	7
3	6087-5	Air Intake Hose	1	F029		1/4-20 x 1/2 Hex Bolt	2
4	NS	Air Cleaner Band	1	F031		1/4-20 x 5/8 Hex Bolt	4
5	5090-5	Safety Filter Insert, VLR	1	F034		5/16-18 x 3/4 Hex Bolt	2
6	5090-6	Air Cleaner Cartridge, VLR	1	F038		3/8-16 x 1 Hex Bolt	1
7	5091-19	Air Flow Indicator W/Bracket (Vacuum 15" H2O)	1	F049		5/16 SAE Washer	2
8	7334-3	Air Cleaner Bracket	1	F050		1/4 SAE Washer	4
9	6029	Hose Clamp (1-13/16 to 2-3/4)	1	F051		3/8 SAE Washer	2
10	M258	Vacuum Hose (17")	1**	F061		1/4 Internal Star Lock Washer	2
11	5091-0	1/8 Pipe Thread Male W/Barb	1	F063		3/8 Internal Star Lock Washer	2
12	5091-16	Street Elbow 90' (1/8 x 1/8)	1	F091		5/16-18 x 5/8 Hex Bolt	4
Engine Assembly				F151		3/8-16 x 7/8 Hex Bolt	2
13	5845	Rubber Bumper (1.50 x 1.25)	1	F175		1/2 Split Lock Washer	4
14	8010-2	Engine Bumper Mount	1	F184		1/4-20 x 1/2 Hex Bolt, SS	3
15	NS	Oil Filter	1 ^Δ	F185		1/4 Int. Star Lock Washer, SS	3
16	NS	19 HP Engine, EFI (Rehiko)	1	F198		.250 x .625 x .040 Washer, SS	3
Remote Oil Cooler Assembly				F273		M6 x 1.0 Nut	4
17	NS	Clamp	4***	F285		1/2-13 x 1-1/2 Hex Bolt	4
18	NS	Oil Cooler Hose	2***	F482		8-32 Nylock Nut	2
19	NS	Oil Cooler	1***	F483		8-32 x 3/4 PPHMS	2
20	8016-8	Oil Cooler / Regulator Mount	1	F547		M6 x 1.0 x 45 Stud	2
Exhaust Assembly				F570		3/8-16 Flange Top Lock Nut	1
21	NS	Gasket (Rehiko)	2***	F646		3/8-16 x 3/4 Serrated Hex Bolt	2
22	NS	Nut (Rehiko)	4***	* Service Part Only			
23	6013-14	Muffler	1	** Required hose specifications: M258 - 7/64" ID automotive vacuum hose			
24	6013-18	Muffler Heat Shield	1	*** Use the engine model and spec number from Rehiko to order this item.			
25	6013-19	Muffler Brace	1	Δ Refer to the Operator's Manual for recommended part number.			
26	8021-2	Engine Brace, Chassis	1	NOTE: Refer to Rehiko Engine Decal (NS) for Engine Identification Numbers.			
27	8021-1	Engine Brace	1				
28	NS	Sensor, Oxygen (Rehiko)	1				

ENGINE GROUP

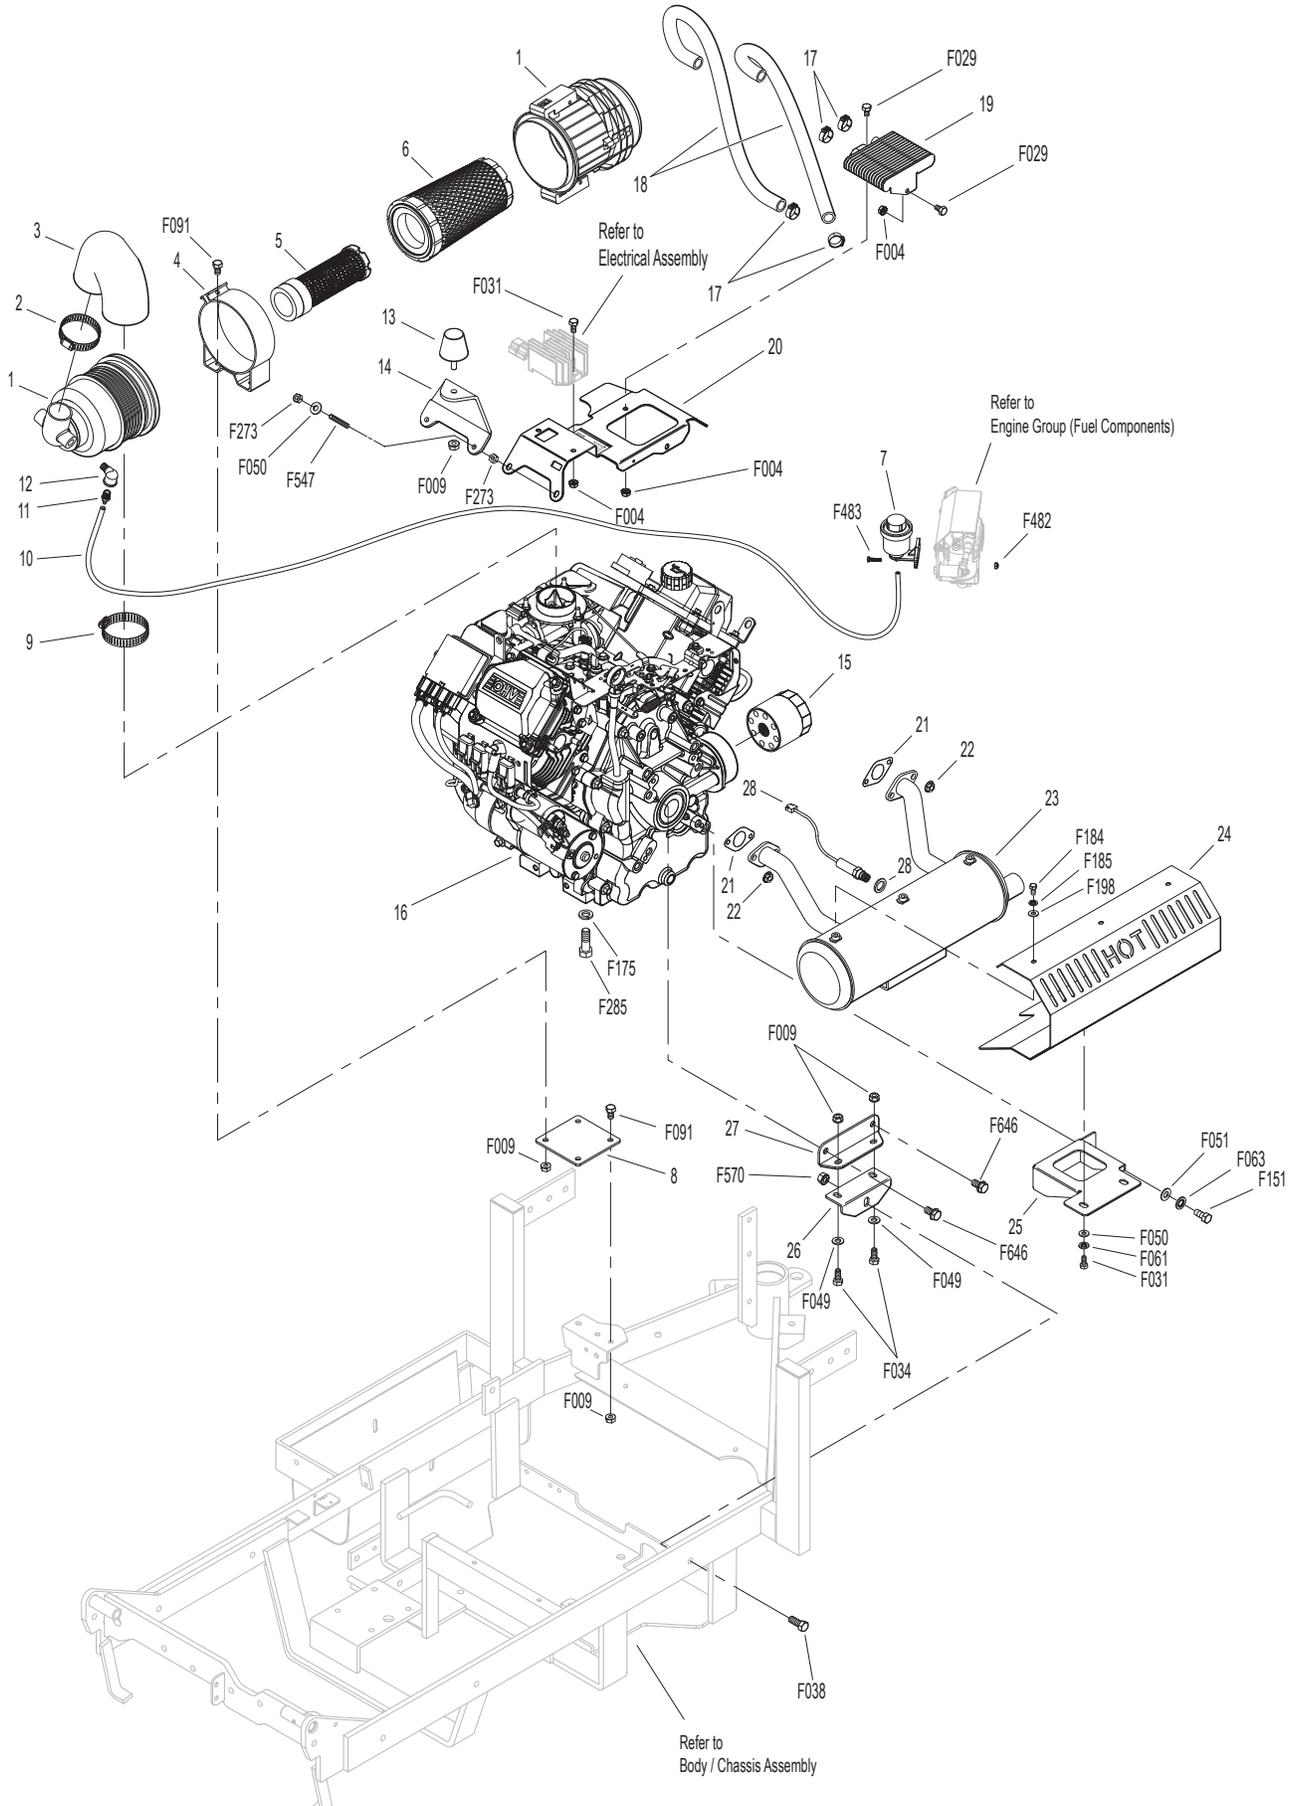


Model C19i Beginning S/N 190349
 Use only genuine **Walker®** replacement parts.

ENGINE GROUP (FUEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fuel Tank Assembly				Fasteners			
1	8018-4	Fuel Module Cover	1	F002		10-24 Keps Nut	4
2	8018-7	Fuel Module Bracket	1	F004		1/4-20 Keps Nut	3
3	8018-2	Fuel Bracket Spacer	3	F009		5/16-18 Whiz Locknut	2
4	M113	Fuel Line (3/16 x 12")	1**	F025		10-24 x 3/8 PPHMS	2
5	5879-4	Hose Clamp (7/16)	1	F029		1/4-20 x 1/2 Hex Bolt	2
6	8046-16	Quick Connector 5/16 x 5/16 - 45°	1	F034		5/16-18 x 3/4 Hex Bolt	2
7	5879-2	Hose Clamp (7/16 Silver)	2	F050		1/4 SAE Washer	3
8	5879-9	Stepless Ear Clamp, Black (15.7)	2	F061		1/4 Internal Star Lock Washer	2
9	M246	Fuel Line (1/4 x 6")	1**	F079		A/A66D Aluminum Pop Rivet	1
10	5975-3	Cable Tie (50# x 7")	2	F128		10-24 x 3/8 PTHMS	1
11	M247	Fuel Line (5/16 x 6")	1**	F129		10-24 x 1/2 PTHMS	1
12	5879-3	Hose Clamp (1/2)	4	F398		1/4-20 x 2 Hex Bolt	3
13	8046-14	Quick Connector, Male (5/16)	1				
14	NS	Clamp (Rehiko)	1	*		Service Part Only	
15	8123	Insulating Sleeve (3/8 x 6)	1	**		Required hose specifications:	
16	M246	Fuel Line (1/4 x 23")	1**			M113 - 3/16" ID fuel/oil/vapor hose (Gates 4219-0093 or equivalent)	
17	5020-3	Fuel Filter	1			M246 - 1/4" ID low permeation (<15g/m ² /day) fuel hose (Parker 38904 or equivalent)	
18	7833	Cable Clamp (7/8 x 1/4)	1			M247 - 5/16" ID low permeation (<15g/m ² /day) fuel hose (Parker 38905 or equivalent)	
19	6055-2	Fuel Tank, 4.0 Gallon, Gas (Includes Items # 20, 21, 24, 26, 28 & 29)	1			NOTE: Refer to Rehiko Engine Decal (NS) for Engine Identification Numbers.	
20	5086-7	Hose (1/4 x 6)	1				
21	5020-2	Fuel Filter, In Tank	1				
22	8023	Fuel Tank Support	1				
23	5082-4	2-1/4 Ratchet Fuel Cap	*				
24	8043-8	Roll Over Valve	1				
25	M113	Fuel Line (3/16 x 26")	1**				
26	5977-7	Roll Over Grommet (.900 x 1-1/2)	1				
27	5083-1	Bushing, Rubber	*				
28	8055-2	Fuel Tank Gauge	1				
29	5083-8	Tank Tube (13")	1				
30	M246	Fuel Line (1/4 x 20")	1**				
31	8016-6	ECU Mount	1				

ENGINE GROUP (FUEL COMPONENTS)

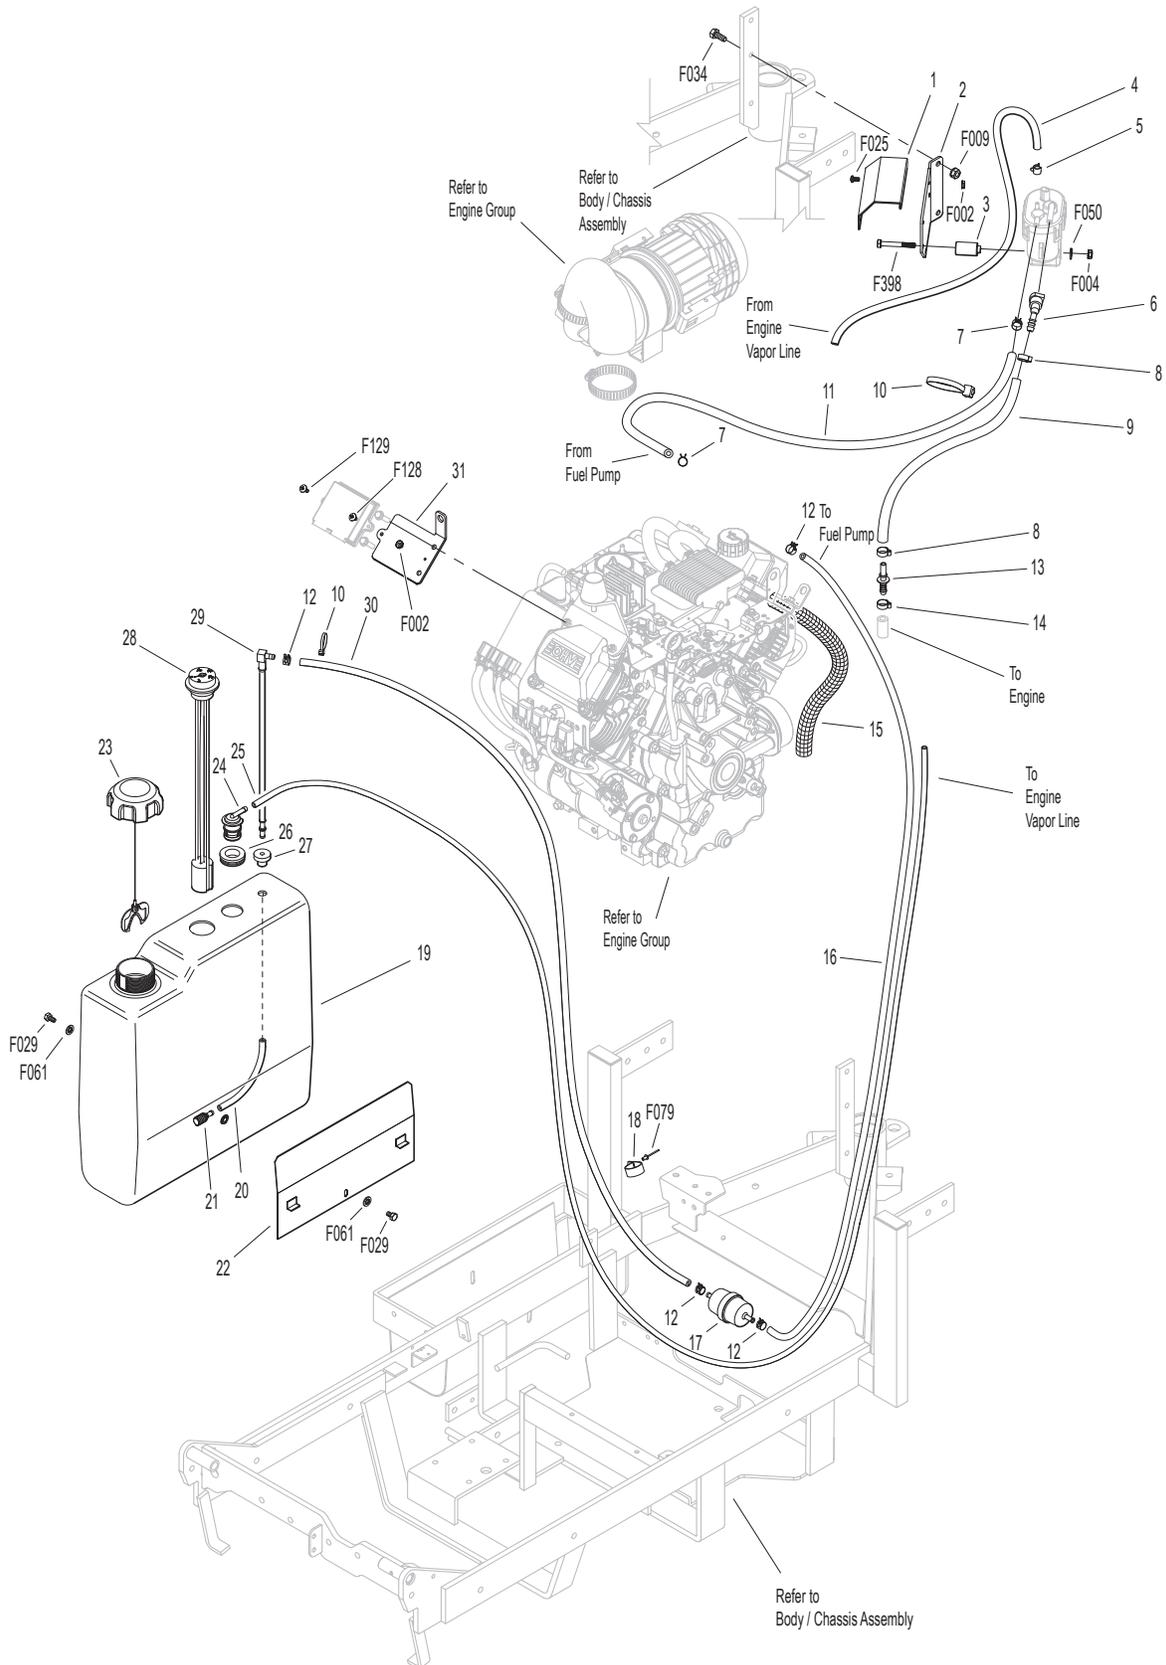

HYDROSTATIC GROUND DRIVE ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
TOPS™ Components				40	5847	Plastic Tip	2
1	5024-22	3/8 Hose Barb x #6/ORB 90 Degree	2	41	5057	Lockout Cam (Includes Item # F081)	2
2	5879-11	Hose Clamp (16mm)	6	42	5028-5	Lockout Lever	2
3	M358	High Temp Hose (3/8" x 8-1/4")	1	43	5027-5	Lockout Mount	1**
4	5024-30	Pulley	1	Deck Support Arm Assemblies			
5	5025-56	Input Housing Assembly (Includes Items # 6, F101, F182, F398, F569, F659, & F669)	1	44	6430-10	Outboard Mount, LH	1
6	5024-17	O-Ring 1/16"	1	45	6431-1	Deck Support Arm, LH (Includes Item # 49)	1
7	5025-51	Hydro Pump Assembly (Includes Items # 4, 5, 9, 21, F101, F182, F659 & F669)	1	46	5775-2	Hitch Pin (#6)	2
8	5024-15	1/4-18 Pipe Thread, 3/8 Barb Fitting	2	47	6431-2	Deck Support Arm, RH (Includes Item # 49)	1
9	5024-13	Transmission Oil Filter	1	48	6430-9	Outboard Mount, RH	1
10	M358	High Temp Hose (3/8" x 8-3/4")	1	49	5830	Grease Fitting	2
11	5975-3	Cable Tie (50# x 7")	1	50	6840-1	Support Arm Bushing (2-1/16)	2
12	6206-1	Air Vent Valve	3	Transmission Repair Parts			
13	5024-27	1-1/16"-12 Socket Plug Reservoir Cap	1	51	5025-16	Control Shaft Repair Kit	*
14	5024-25	Oil Reservoir Sight Gauge	1	52	5025-13	Hydro Input Shaft / Repair Kit (Includes Items # 53-55)	*
15	5024-9	90 Degree Fitting W/Filter	1	53	5025-8	Bearing, Input Shaft	*
16	5025-46	Oil Tank Reservoir Assembly (Includes Items # 9, 12-15 & 17-18)	1	54	5025-7	Snap Ring	*
17	7427-12	Brass Pipe Plug (1/4 NPTF)	1	55	NS	Seal, Input Shaft	*
18	5024-23	90 Degree Male Fitting, 3/8 Barb 1/4 Thread	1	56	5025-53	O-Ring & Plug	*
19	M358	High Temp Hose (3/8" x 6-1/2")	1	Fasteners			
20	5024-11	Left Hand Hose (7-3/8")	1	F004	1/4-20 Keps Nut		2
21	5024-10	Elbow, 90 Degree (1/2-20 x 9/16-18)	4	F012	3/8-16 Keps Nut		2
22	5022	Reservoir/Casting Gasket	2	F023	10-24 ESNA Nut		2
23	5024-7	Transmission Reservoir Adapter Fitting	2	F027	10-24 x 5/8 PPHMS		2
24	5024-12	Right Hand Hose (9-3/8")	1	F029	1/4-20 x 1/2 Hex Bolt		3
Ground Drive Assemblies				F032	1/4-20 x 3/4 Hex Bolt		3
25	6209-11	Bridge Spacer Plate	1	F040	3/8-16 x 1-1/2 Hex Bolt		4
26	6209-8	Bridge Assembly (Includes Items # 25, F004, F032 & F120)	1***	F043	3/8-16 x 3 Hex Bolt		6
27	6243-6	Fan Guard	1	F053	7/16 Internal Star Lock Washer		4
28	6243-1	Hydro Fan, CW	1	F063	3/8 Internal Star Lock Washer		17
29	7244	Hydro Pulley (3-7/8/MV) (Includes Items # F064 & F718)	2	F064	1/8 x 1/2 Woodruff Key (#3)		4
30	5026-34	Hydrostatic Drive, CW	1	F081	A/A45D Aluminum Pop Rivet		2
31	6200-9	Gear Axle Drive Assembly (Includes Items # 12 & 32)	2	F101	10-24 x 1-1/4 SHC Screw		4
32	6207-12	Pipe Plug (1/4 NPTF)	4	F120	AN960416 Washer		2
33	5126	Cable Retainer (Uses existing bolt on Gear Axle Drive Assembly)	1	F160	External Snap Ring (.669 Shaft)		2
34	6233-1	Pinion Gear	2	F178	1/4 x 1 Fender Washer		2
35	6234	Spacer, Pinion Gear	2	F182	1/4 x 5/8 x 1/8 Washer		1
36	6201	O-Ring Seal	2	F194	7/16 x 1-1/4 x 1/8 Washer		2
37	5025-34	Hydrostatic Drive, CCW	1	F200	7/16-20 x 3 Grade 8 Bolt		2
38	6243-2	Hydro Fan, CCW	1	F211	1/4-20 x 7/8 Hex Bolt		2
Transmission Lockout Assembly				F244	7/16-20 x 3/4 Hex Bolt		2
39	5028-3	Transmission Lockout Assembly (Includes Items # 40-43, F023, F027 & F081)	*	F262	3/8-16 x 4 Hex Bolt All Thread		2
				F398	1/4-20 x 2 Hex Bolt		4
				F569	1/4-20 Flange Top Lock Nut		7
				F579	3/8-16 x 1 Hex Bolt Grade 8		4
				F659	1/8 x 1/8 x 3/4 Key		1
				F669	1/4-20 x 5/8 Hex Bolt W/Loctite		1
				F718	5/16-18 x 5/16 Set Screw (Knurl Point)		4
				* Service Part Only			
				** Part not used on Jackshaft side of tractor.			
				*** Includes Spacer Options—See Advisory Bulletin #23300.			

STEERING CONTROL ASSEMBLIES


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transmission Spring Assemblies				Steering Lever Assemblies			
1	6201-4	Shock Mount Gear Drive, RH	1	32	5217-1	Pivot Pin, Steering Lever	1
2	5146	10mm Ball Stud	4	33	5391-3	Steering Lever Support	1
3	5199-4	Steering Lever Dampener Assembly	2	34	5225-4	Extension Spring (5/8 x 2)	2
4	6201-5	Shock Mount Gear Drive, LH	1	35	5451-12	Steering Lever Assembly, LH / Adjustable (Includes Items # 2, 9-11, 16, 34, F009, F034 & F582)	1
5	5214-2	Ball Joint (5/16-24) Nylon Lined	2	36	5453-14	Steering Lever Handle, Adjustable (Includes Items # 14, F050, F188 & F390)	2
6	6212-7	Transmission Control Arm, LH	1	37	5450-12	Steering Lever Assembly, RH / Adjustable (Includes Items # 2, 9-11, 16, 34, F009, F034 & F582)	1
7	5213-3	Control Rod (6")	1				
8	5665-1	Compression Spring (2-1/2)	2				
9	7201-2	Fiberglide Bearing 1/2"	2				
10	5463-5	Steering Arm Pivot Bearing (SS)	2				
11	5463-7	Steering Lever Actuator	2				
12	5213-4	Control Rod (14-3/4")	1				
13	5212-7	Transmission Control Arm, RH	1				
Forward Speed Control Assemblies				Fasteners			
14	5850-2	Handle Grip, Foam (5-1/2)	3	F004	1/4-20 Keps Nut		5
15	7170-2	FSC Lever Assembly (Includes Item # 16)	1	F007	5/16-18 Jam Nut		2
16	5830	Grease Fitting	6	F009	5/16-18 Whiz Locknut		7
17	5975-3	Cable Tie (50# x 7")	1	F010	5/16-24 ESNA Nut		4
18	5214-4	Ball Joint (5/16-24) W/O Stud	2	F012	3/8-16 Keps Nut		2
19	5219	Extension Spring (3/4 x 6-3/4)	1	F024	5/16-24 Jam Nut		4
20	5172	Bearing, Delrin (.250 x .375 x .250)	2	F029	1/4-20 x 1/2 Hex Bolt		2
21	5141-1	FSC Actuator Block	1	F031	1/4-20 x 5/8 Hex Bolt		1
22	5140-9	FSC Brace	1	F032	1/4-20 x 3/4 Hex Bolt		2
23	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	2	F034	5/16-18 x 3/4 Hex Bolt		4
24	5142-8	FSC Key	1	F038	3/8-16 x 1 Hex Bolt		2
	5140-25	FSC Control Assembly (Includes Items # 16, 23-25, 28, F182, F192 & F193)	*	F050	1/4 SAE Washer		5
25	5140-35	FSC Friction Body (Includes Item # 16)	1	F051	3/8 SAE Washer		2
26	5141-2	FSC Actuator Rod	1	F064	1/8 x 1/2 Woodruff Key (#3)		2
27	5281-5	Clevis Pin (1/4 x 0.80)	1	F069	3/32 x 1/2 Cotter Pin		1
28	5142-9	FSC Actuator Cam	1	F146	1/4-20 Jam Nut		1
29	5141-3	Spacer (.750 x .313 x .688)	1	F182	1/4 x 5/8 x 1/8 Washer		1
30	5141-4	FSC Rod	1	F183	.312 x .700 x .074 Washer		3
31	5470-2	Speed Control Stop	1	F186	5/64 x 1/2 Cotter Pin		1
				F188	1/4-20 Self-Locking Nut		4
				F192	3/8-24 Self-Locking Nut		1
				F193	3/8 Belleville Spring Washer		3
				F226	5/16-18 x 7/8 Hex Bolt		1
				F316	5/16-18 x 1-3/4 Hex Bolt		1
				F350	1/4-20 LP Nylock		1
				F353	3/8-16 ESNA LP Nut		2
				F390	1/4-20 x 7/8 Carriage Bolt		4
				F401	.504 x .751 x .030 Washer		1
				F562	5/16-18 x 1 Set Screw		2
				F582	Washer 5/16 x 7/8 x .125		2

* Service Part Only

THROTTLE CONTROL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Throttle Control Assembly				Fasteners			
1	5108-5	Throttle Control Knob, Red	1	F002		10-24 Keps Nut	1
2	5108-31	Control Lever	1	F085		3/16 Rivet Backup Washer	1
3	5108-10	Friction Washer (.125)	2	F202		10-24 x 5/8 SHC Screw GR 5	1
4	5108-29	Control Bracket	1	F350		1/4-20 LP Nylock	1
5	5172-6	Bushing, SS (.375 x .188 x .290)	1	F638		1/4-20 x 1 Carriage Bolt	1
6	8121-1	Throttle Cable	1	F642		1/4 x .042 Belleville Washer	1
7	8123	Insulating Sleeve (3/8 x 6)	1				
8	5975-1	Cable Tie (18# x 3-3/4")	2				

THROTTLE CONTROL ASSEMBLY

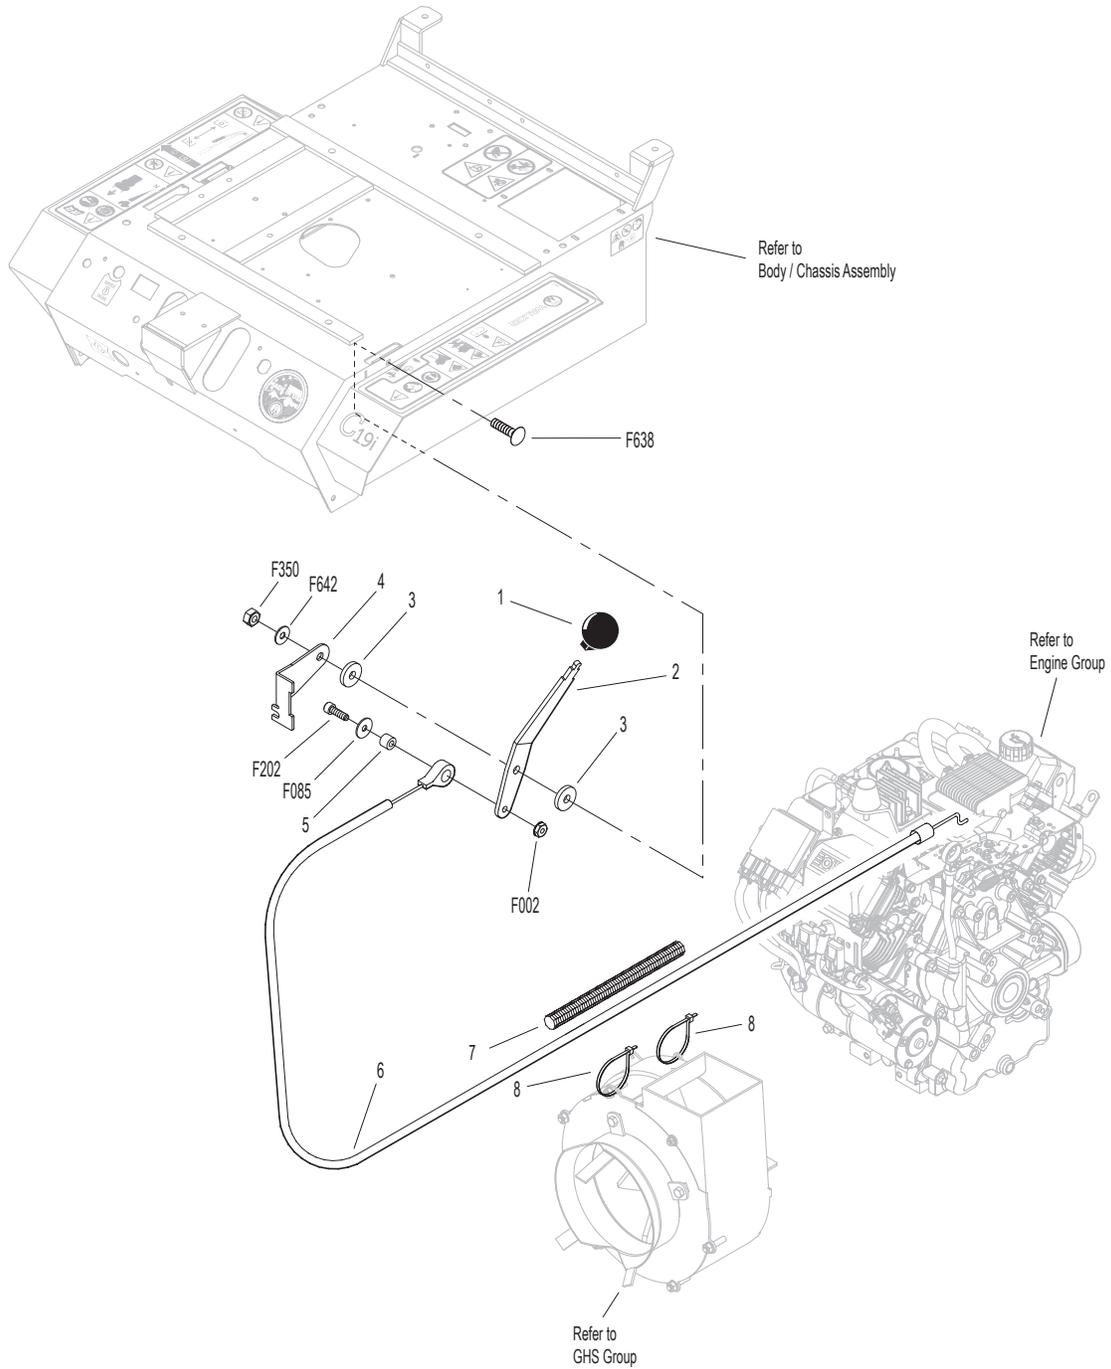


PARKING BRAKE ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Parking Brake Assembly				Fasteners			
1	7406-1	Handle Grip, Red	1	F002		10-24 Keps Nut	2
2	7406-9	Parking Brake Lever	1	F003		1/4-28 Hex Nut	1
3	7406-10	Lever Mount	1	F004		1/4-20 Keps Nut	4
4	5830	Grease Fitting	1	F025		10-24 x 3/8 PPHMS	2
5	7407	Clevis Pin (3/16 x 1/2)	2	F029		1/4-20 x 1/2 Hex Bolt	3
6	7404-6	Brake Actuator Arm	2	F032		1/4-20 x 3/4 Hex Bolt	1
7	7405	Pin, Transmission Lock	2	F054		AN960616 Washer	2
8	7402	Clevis	2	F072		1/4 "E" Retainer Ring	2
9	7408	Compression Spring (1/2 x 3/4)	2	F086		#10 SAE Washer	4
10	7415	Rubber Dust Shield (5/8 x 3/8 x 1/32)	2	F109		1/8 x 5/8 Roll Pin	2
11	5567-3	O-Ring (1/4 x 3/8)	4	F111		1/8 x 3/4 Cotter Pin	1
12	7403	Plunger Bushing, Gear Axle	2	F112		5/8 x 1-1/4 x .03 Washer	2
13	7404-7	Brake Actuator Mount	2	F127		1/16 x 1/2 Cotter Pin	4
14	7412	Clevis Pin (3/16 x 5/8)	2	F261		AN960616L Washer	5
15	5833	Cable Clamp (1/4)	2	F287		1/4-28 Keps Nut	1
16	7410	Brake Control Cable, LH (25.5")	1				
17	7409	Brake Control Cable, RH (20.5")	1				
18	7401-3	Cable Mount Bracket	1				
19	7401-1	Cable Pull Rod	1				
20	5552	Ball Joint (1/4-28)	1				

GHS GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Delivery Chute Assembly				Fasteners			
1	5515-4	Elbow Delivery Spout	1	F002		10-24 Keps Nut	4
2	5592-24	Backing Plate, Grass-Pak® Switch	1	F004		1/4-20 Keps Nut	3
3	5592-23	Grass-Pak® Housing Spacer	1	F009		5/16-18 Whiz Locknut	7
4	5578	Rear Clip, Chute Mount	1	F012		3/8-16 Keps Nut	1
5	5577	Side Clip, Chute Mount	2	F023		10-24 ESNA Nut	2
6	7511-5	Outside Chute Cover Lip	1	F029		1/4-20 x 1/2 Hex Bolt	3
7	7511-4	Inside Chute Cover Lip	1	F034		5/16-18 x 3/4 Hex Bolt	1
8	5511-3	Delivery Chute W/Clips, 7.0 (Includes Items # 4, 5 & F411)	1	F039		3/8-16 x 1-1/4 Hex Bolt	1
9	7530-4	Body Chute (10.5 Blower)	1	F040		3/8-16 x 1-1/2 Hex Bolt	1
Blower Belt Tightener Assembly				F050		1/4 SAE Washer	1
10	7238-6	Blower Drive Pulley (Includes Items # F075, F114 & F231)	1	F051		3/8 SAE Washer	1
11	7234-2	Blower Belt (Micro-V)	1	F054		AN960616 Washer	1
12	7239-1	Blower Pulley (Micro-V) (Includes Items # F067, F075 & F114)	1	F067		3/16 x 3/16 x 1 Key	1
13	7364-2	Torsion Spring	1	F075		5/16-18 x 1/2 SQH Set Screw	2
14	7201-3	Fiberglide Bearing	2	F079		A/A66D Aluminum Pop Rivet	2
15	5830-3	Grease Fitting (45 Degree)	1	F090		1/4-20 x 2-1/2 Hex Bolt	1
16	7364-1	Blower Belt Tightener Arm	1	F114		5/16-18 x 5/8 SQH Set Screw	2
17	7201-4	Inner Race (1-1/2)	1	F128		10-24 x 3/8 PTHMS	4
18	5841	Retainer Washer (3/8 x 1-1/4)	1	F131		5/16-18 x 1/2 Hex Bolt	3
19	5245	Idler Pulley (3")	1	F132		1/4-20 x 2-3/4 Hex Bolt	1
Blower Assembly				F168		5/16 Split Lock Washer	3
20	7544	Blower Assembly (10.5") (Includes Items # 21-25, F004, F009, F029, F050, F131, F168 & F426)	*	F217		7/16-14 Hex Nut	1
21	5268	Bearing W/Collar (3/4)	2	F218		7/16 Split Lock Washer	1
22	7544-3	Blower Housing (10.5")	1	F231		1/4 x 3/4 Woodruff Key (# 806)	1
23	7545-2	Blower Output Shaft (10.5")	1	F281		7/16-14 x 1-3/4 Hex Bolt	1
24	7545	Blower Wheel (10.5")	1	F411		3/16 Bulbex Rivet	12
25	7543-1	Blower Faceplate (10.5")	1	F426		1/4-20 x 1/2 Carriage Bolt	1
26	7526	Intake Tube (10.5" Blower)	1	F570		3/8-16 Flange Top Lock Nut	2
27	5595-2	Intake Cover, GHS	**	F577		10-24 x 5/8 Carriage Bolt	2
28	7528-5	Skid Bar	1	F743		3/8-16 x 2-3/8 Hex Bolt	1
				* Service Part Only			
				** Plugs Blower when GHS is not in use. Furnished only with Mulching Decks, SD Decks used on a GHS Tractor, Rotary Broom Attachment and Snowblower Attachment. Use of this part may be replaced by installing Blower Lockout Kit (P/N 7541-1).			

GHS GROUP

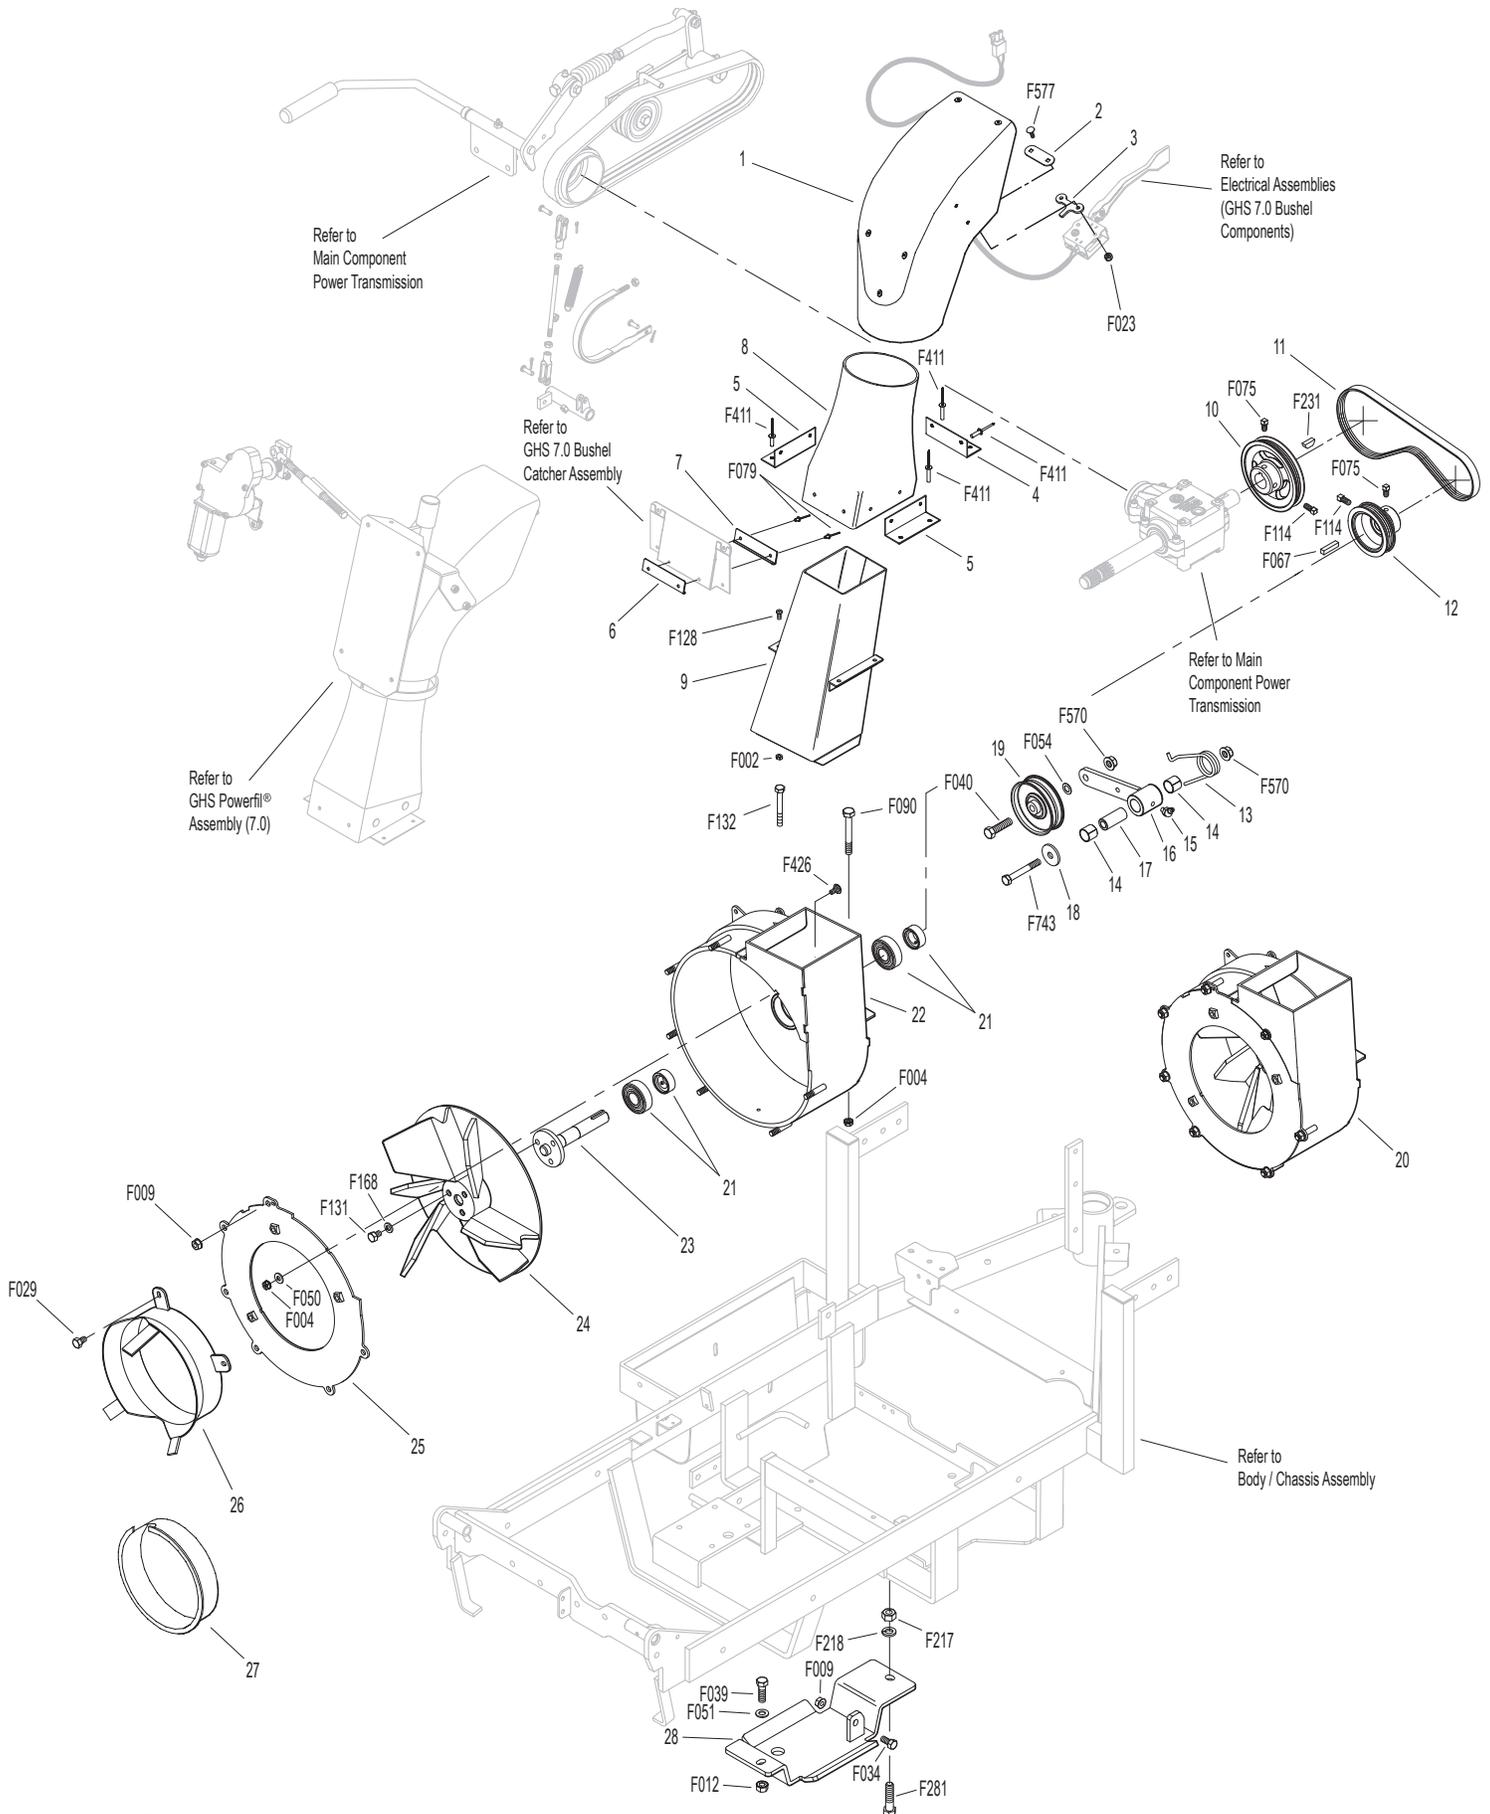


Model C19i Beginning S/N 190349
 Use only genuine **Walker®** replacement parts.

GHS POWERFIL® ASSEMBLY (7.0)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
7.0 GHS Powerfil® Assembly				Fasteners			
1	5552	Ball Joint (1/4-28)	2	F003		1/4-28 Hex Nut	2
2	5554	Actuator Arm	1	F023		10-24 ESNA Nut	10
3	5553-3	Bushing, Powerfil® Actuator	4	F054		AN960616 Washer	2
4	5553-1	Compression Spring (1/2 x 2)	2	F085		3/16 Rivet Backup Washer	1
5	5558-2	Powerfil® Actuator Rod	1	F101		10-24 x 1-1/4 SHC Screw	1
	5549	Actuator Rod Assembly (Includes Items # 1, 3-5, F003, F287 & F704)	*	F109		1/8 x 5/8 Roll Pin	1
6	5551-3	Bearing Cap, Powerfil®	1	F287		1/4-28 Keps Nut	2
7	5551-1	Pivot Bearing (#S3PP)	2	F612		10-24 x 5/8 Truss Head Torx	7
8	5518-6	Pivot, Delivery Spout	1	F613		10-24 x 1/2 Truss Head Torx	2
9	5517-2	Pivot Mount	1	F704		1/4-28 x 6-1/2 Hex Bolt Grade 5, Clear Zinc	1
10	5519-5	Actuator Motor (12V) (Includes Items # 11 & 12)	1	* Service Part Only			
11	5519-2	Motor Mount Washer	*				
12	5519-3	Motor Mount Nut (5/8-24)	*				


GHS POWERFIL® ASSEMBLY (7.0)

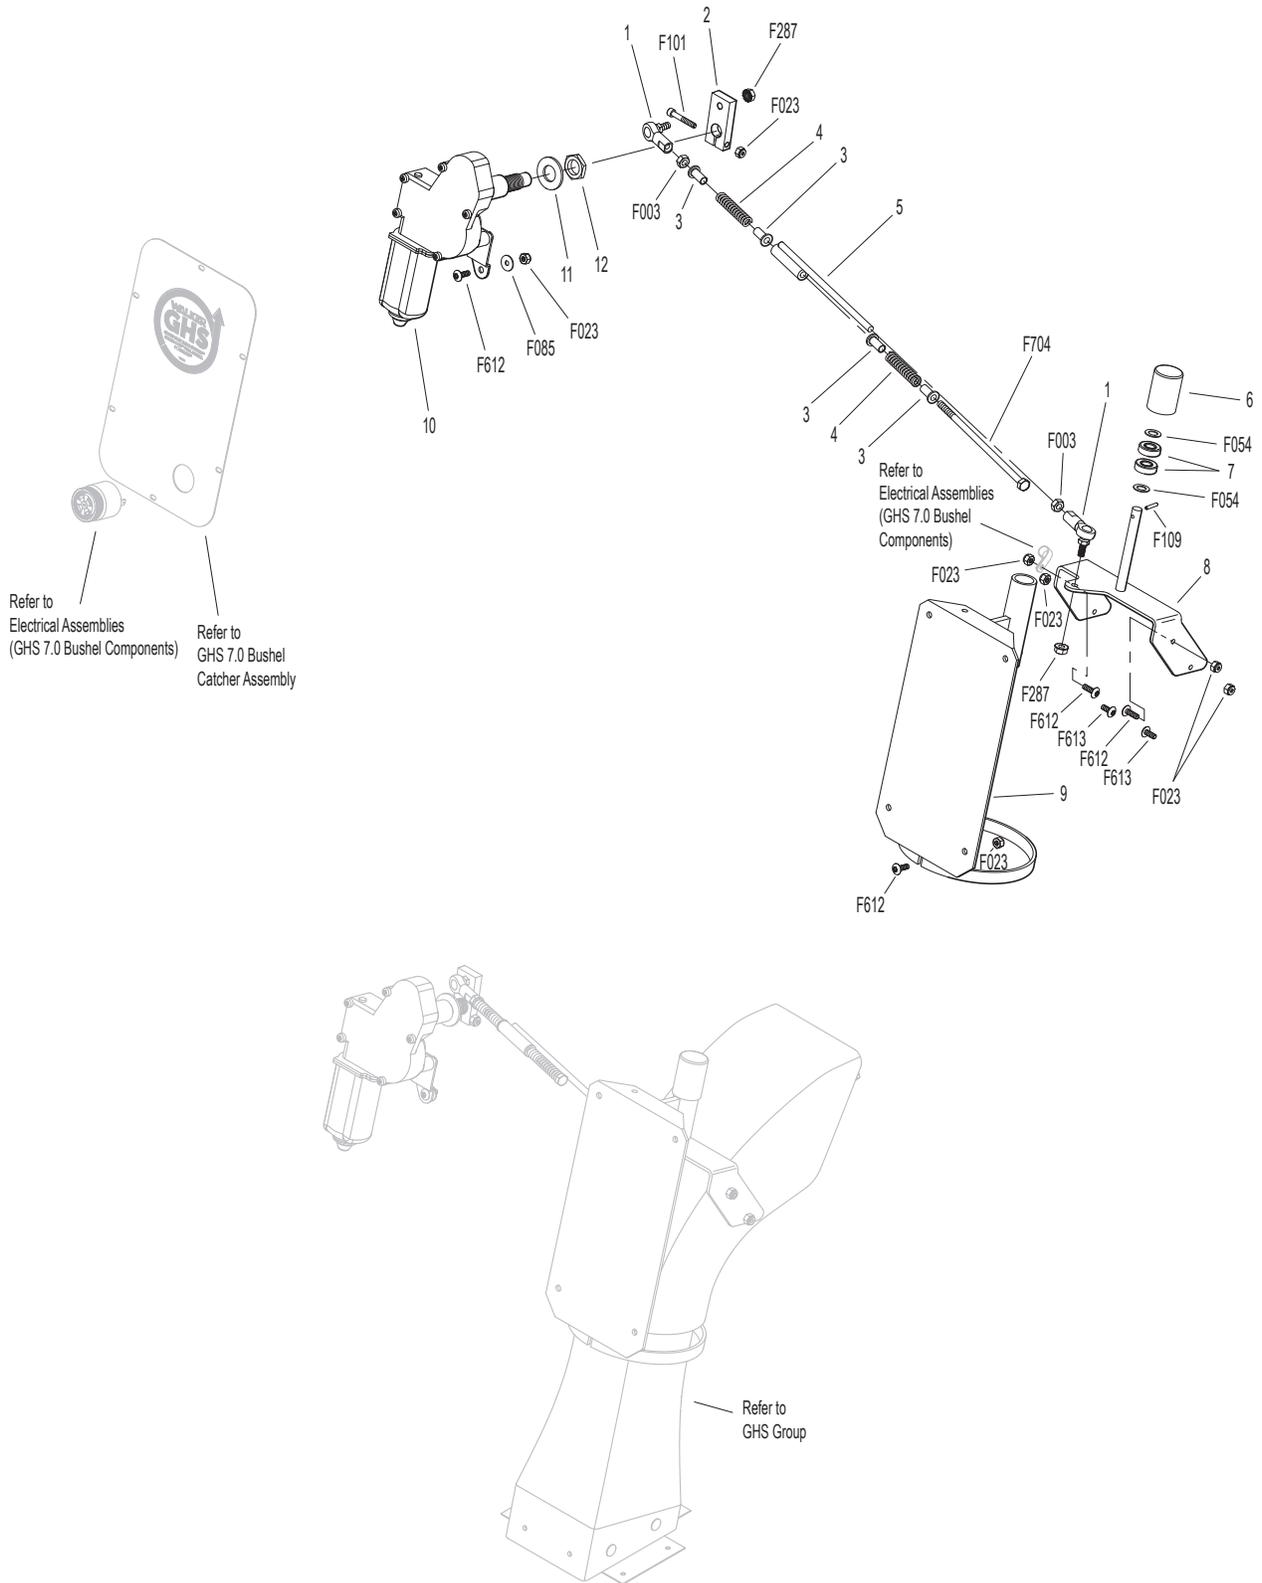

GHS 7.0 BUSHEL CATCHER ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Upper Baffle Screen Assembly (Removable)				39	7510-2	7.0 Bushel Catcher Box	1
					7502-5	7.0 Catcher W/Powerfil® (Includes Door)	*
1	7512-12	Removable Screen (3/16 Hole) (Includes Items # 2, F190 & F617)	1**	40	7607-8	Powerfil® Cover Plate	1
2	7506	Knob / Threaded Insert (10-24)	2	41	7608-4	Hinge Plate, RH	1
3	7509-7	Channel Top, LH	1	42	8155-8	7.0 Gas Spring Cover, RH	1
4	8606-2	Channel Bottom	2	43	7607-14	Catcher Door Arm, RH	1
5	6856-1	Edge Molding (21-3/4")	1	44	7584-3	Reinforcing Strap	1
6	6507	Screen Seal (23-1/4")	1	45	5801-4	Decal Plate, Round	2
7	7505	Mustache Spring	2	46	7608-5	Door Arm Stop	2
8	7509-6	C-Channel With Spring (Includes Items # 7 & F340)	1	5598-2 Optional Dump Bag (Not Shown) May be ordered as an option. Contact your Walker dealer.			
9	7509-8	Channel Top, RH	1	Fasteners			
7.0 Exhaust Deflector Door Assembly					F020	5/16-18 ESNA Nut	2
10	7607-3	Upper Door Seal	1	F023	10-24 ESNA Nut	28	
11	7510-4	7.0 Catcher Box Door (Includes Frame) (Includes Items # 10, 12, 13, 15, F085, F411, F649 & F654)	1	F029	1/4-20 x 1/2 Hex Bolt	2	
12	5583	Handle	1	F031	1/4-20 x 5/8 Hex Bolt	2	
13	7607-6	Lower Door Stiffener (7.0)	1	F049	5/16 SAE Washer	4	
14	8607-8	Door Guide	1	F050	1/4 SAE Washer	4	
15	7607-5	Upper Door Stiffener	1	F079	A/A66D Aluminum Pop Rivet	4	
GHS 7.0 Bushel Catcher Assembly					F085	3/16 Rivet Backup Washer	10
16	7503-8	Center Strap (7.0)	1	F094	8-32 x 1/2 PTHMS	6	
17	7503-6	Upper Frame Doubler (7.0)	2	F190	#10 Internal Star Lock Washer	2	
18	7503-5	Lower Frame Doubler (7.0)	2	F196	1/4-20 x 1 PPHMS, SS	4	
19	7503-4	Outside Box Strap (7.0)	2	F230	1/4-20 x 1-1/4 PPHMS, SS	4	
20	8608-4	Center Frame Doubler	1	F242	1/4-20 x 7/8 PPHMS, SS	8	
21	8608-11	Catcher Door Finger	1	F275	5/16-18 x 2 Hex Bolt	2	
22	7503-11	Catcher Mount	1	F340	Rivet, Aluminum	4	
23	7610-4	Catcher Dump Flap Spacer (7.0)	1	F351	Aluminum Pop Rivet	6	
24	7610-9	Catcher Dump Flap (7.0)	1	F360	1/4-20 x 3/8 Hex Bolt	2	
25	8610-3	Backing Plate / Dump Flap	1	F390	1/4-20 x 7/8 Carriage Bolt	4	
26	7620-3	Pivot Bushing (1/2 x 9/16)	4	F411	3/16 Bulbex Rivet	32	
27	7607-7	Bushing	2	F442	1/4-20 x 5/8 PTHMS	2	
28	7608-3	Hinge Plate, LH	1	F524	3/16 x 3/8 Aluminum Rivet, Black	8	
29	7607-15	Catcher Door Arm, LH	1	F540	1/4-20 x 1-3/4 PPHMS, SS	1	
30	8155-7	7.0 Gas Spring Cover, LH	1	F551	5/16-18 Flange Top Lock Nut	2	
31	5155-5	Gas Spring	2	F569	1/4-20 Flange Top Lock Nut	25	
32	5155-13	10mm Ball Stud, 5/16-18 3/4 Thread	2	F612	10-24 x 5/8 Truss Head Torx	4	
33	5523-6	Gas Spring Plate	2	F613	10-24 x 1/2 Truss Head Torx	10	
34	5155-12	5/16 Ball Stud	2	F617	10-24 x 3/8 Truss Head Torx	4	
35	5155-15	Box Support, Gas Spring	2	F618	10-24 x 3/4 Truss Head Torx	12	
36	7532-1	Handle, Catcher Lift	2	F649	3/16 x .510/.625 Grip Range Rivet, SS	4	
37	7511-6	Chute Cover	1	* Service Part Only			
38	7557-1	7.0 Wire Harness Channel	1	** This screen can be replaced by P/N 7512-13 Removable Screen (3/4" holes) for improved air flow performance in wet conditions.			

GHS 7.0 BUSHEL CATCHER ASSEMBLY

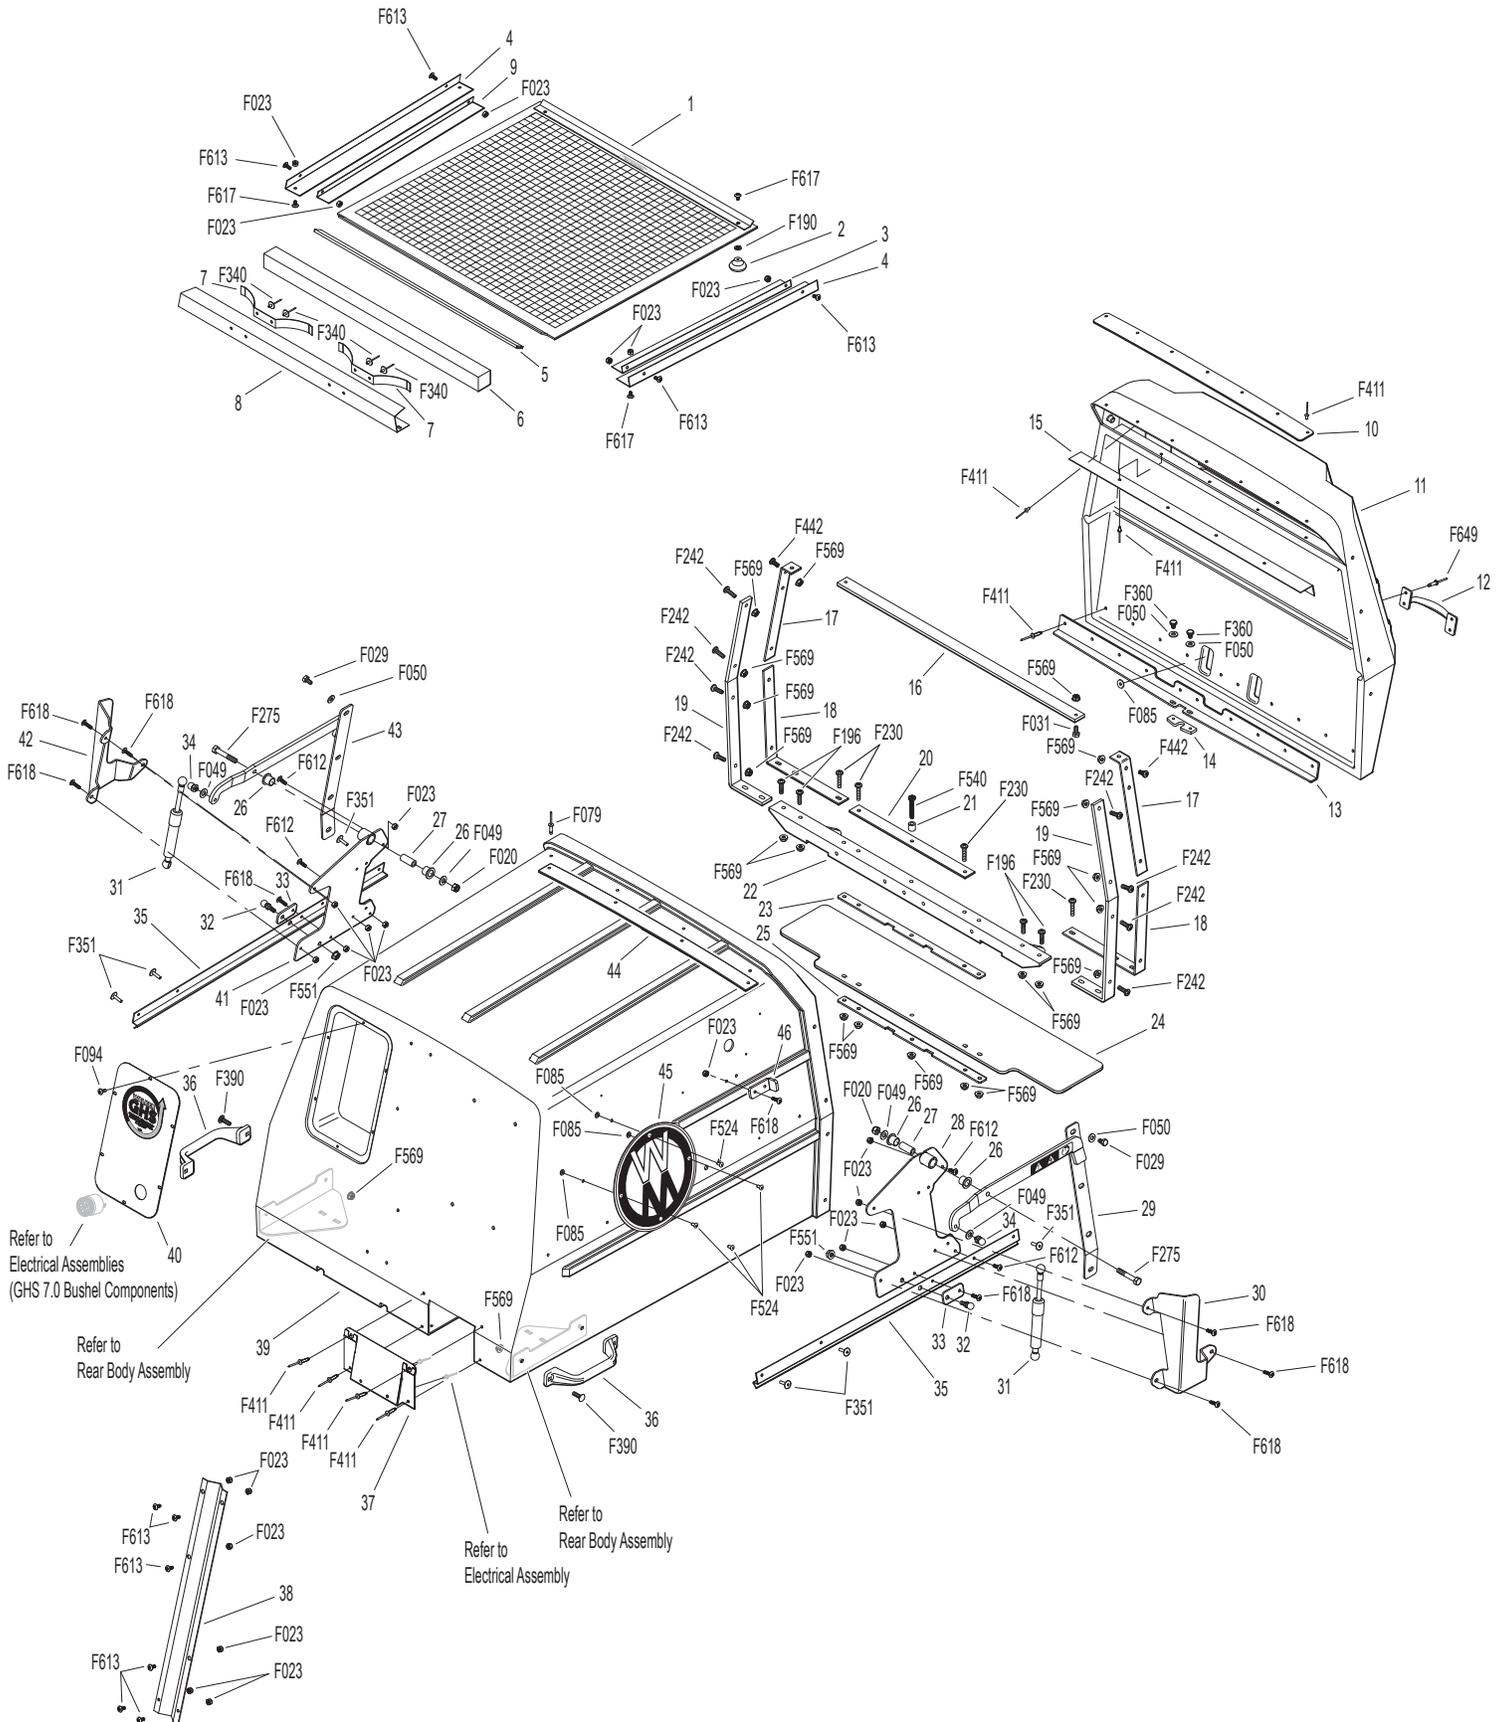

Model C19i Beginning S/N 190349
 Use only genuine **Walker**® replacement parts.


ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Harness Assembly				Fasteners			
1	7941-3	Boot, Circuit Breaker	1	F002		10-24 Keps Nut	10
2	7941-5	Circuit Breaker (7 Amp)	1	F004		1/4-20 Keps Nut	4
3	8990-1	Hourmeter (Global)	1	F009		5/16-18 Whiz Locknut	1
4	8996-9	Red Indicator Light Assembly	1	F019		1/4-20 ESNA Wing Nut	2
5	5835-3	Cable Clamp (1/2) .218 Hole	3	F025		10-24 x 3/8 PPHMS	2
6	7834-2	Wire Saddle (2 Wires)	1	F026		10-24 x 1/2 PPHMS	7
7	6105-3	Harness Clip	1	F031		1/4-20 x 5/8 Hex Bolt	2
8	6104-12	Adapter Harness	1	F032		1/4-20 x 3/4 Hex Bolt	2
9	8960-15	Ignition Switch (With Keys) (Includes Items # 10, 11 & F349)	1	F050		1/4 SAE Washer	2
10	8960-3	Key Set W/Umbrella	1	F061		1/4 Internal Star Lock Washer	1
11	7854	Plastic Tip, Red	1	F079		A/A66D Aluminum Pop Rivet	1
12	8536-2	Warning Horn Assembly	1	F093		5/16-18 x 1 Hex Bolt	1
13	5942-8	Safety Switch (NO), Delta Side Mount	3	F129		10-24 x 1/2 PTHMS	1
14	5975-3	Cable Tie (50# x 7")	4	F182		1/4 x 5/8 x 1/8 Washer	2
15	6941-9	Relay Switch 30/40 Amp	3	F232		10-32 Keps Nut	2
16	7948-6	Time Delay Module (.5 Second Delay)	1	F349		Washer .835 ID 1.122 OD, SS	1
17	7948-3	Time Delay Harness	1	F505		6-32 x 7/8 Hex Trim MS, SS	6
18	8941	Circuit Breaker (30 Amp) Auto Reset / Sealed	1	F506		6-32 Nylock Nut	6
19	7941-10	Circuit Breaker Cap	1	* Service Part Only			
20	5832	Cable Clamp (1/2)	5				
21	6940-26	Wire Harness	1				
22	8018-3	Wire Extension	1				
23	NS	Rectifier	*				
24	8012-7	Ground Wire	1				
25	8012-5	Regulator Adapter Harness	1				
Battery Assembly							
26	8943	Battery Lead Wire (+)	1				
27	5975-1	Cable Tie (18# x 3-3/4")	3				
28	5844-3	Battery Hold-Down Bar	1				
29	5839	Hook Bolt	2				
30	6390-6	Battery Pan	1				
31	7910-3	Battery (12V/350A CCA)	1				
32	5932	Battery Terminal Insul., Black (-)	1				
33	5933	Battery Terminal Insul., Red (+)	1				
34	6923	Battery Cable (-)	1				

ELECTRICAL ASSEMBLIES (GHS 7.0 BUSHEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Horn & Harness Channel Assemblies				Fasteners			
1	5536-2	Horn, Full Signal	*	F002		10-24 Keps Nut	1
2	5976-2	Grommet (3/16 x 3/4)	2	F023		10-24 ESNA Nut	3
3	5975-1	Cable Tie (18# x 3-3/4")	1	F025		10-24 x 3/8 PPHMS	1
Harness & Grass-Pak® Switch Assemblies				F508		4-40 Keps Nut, SS	2
4	8950-4	Powerfil Wire Harness (7.0/10.0)	1	F612		10-24 x 5/8 Truss Head Torx	1
5	5833	Cable Clamp (1/4)	2	F613		10-24 x 1/2 Truss Head Torx	2
6	5594-7	Grass-Pak® Vane	1	F712		4-40 x 3/8 Hex Head, SS	2
7	5592-40	Grass-Pak® Switch Assembly	1	F713		Washer #4, SS	2
				*		Service Part Only	

ELECTRICAL ASSEMBLIES (GHS 7.0 BUSHEL COMPONENTS)

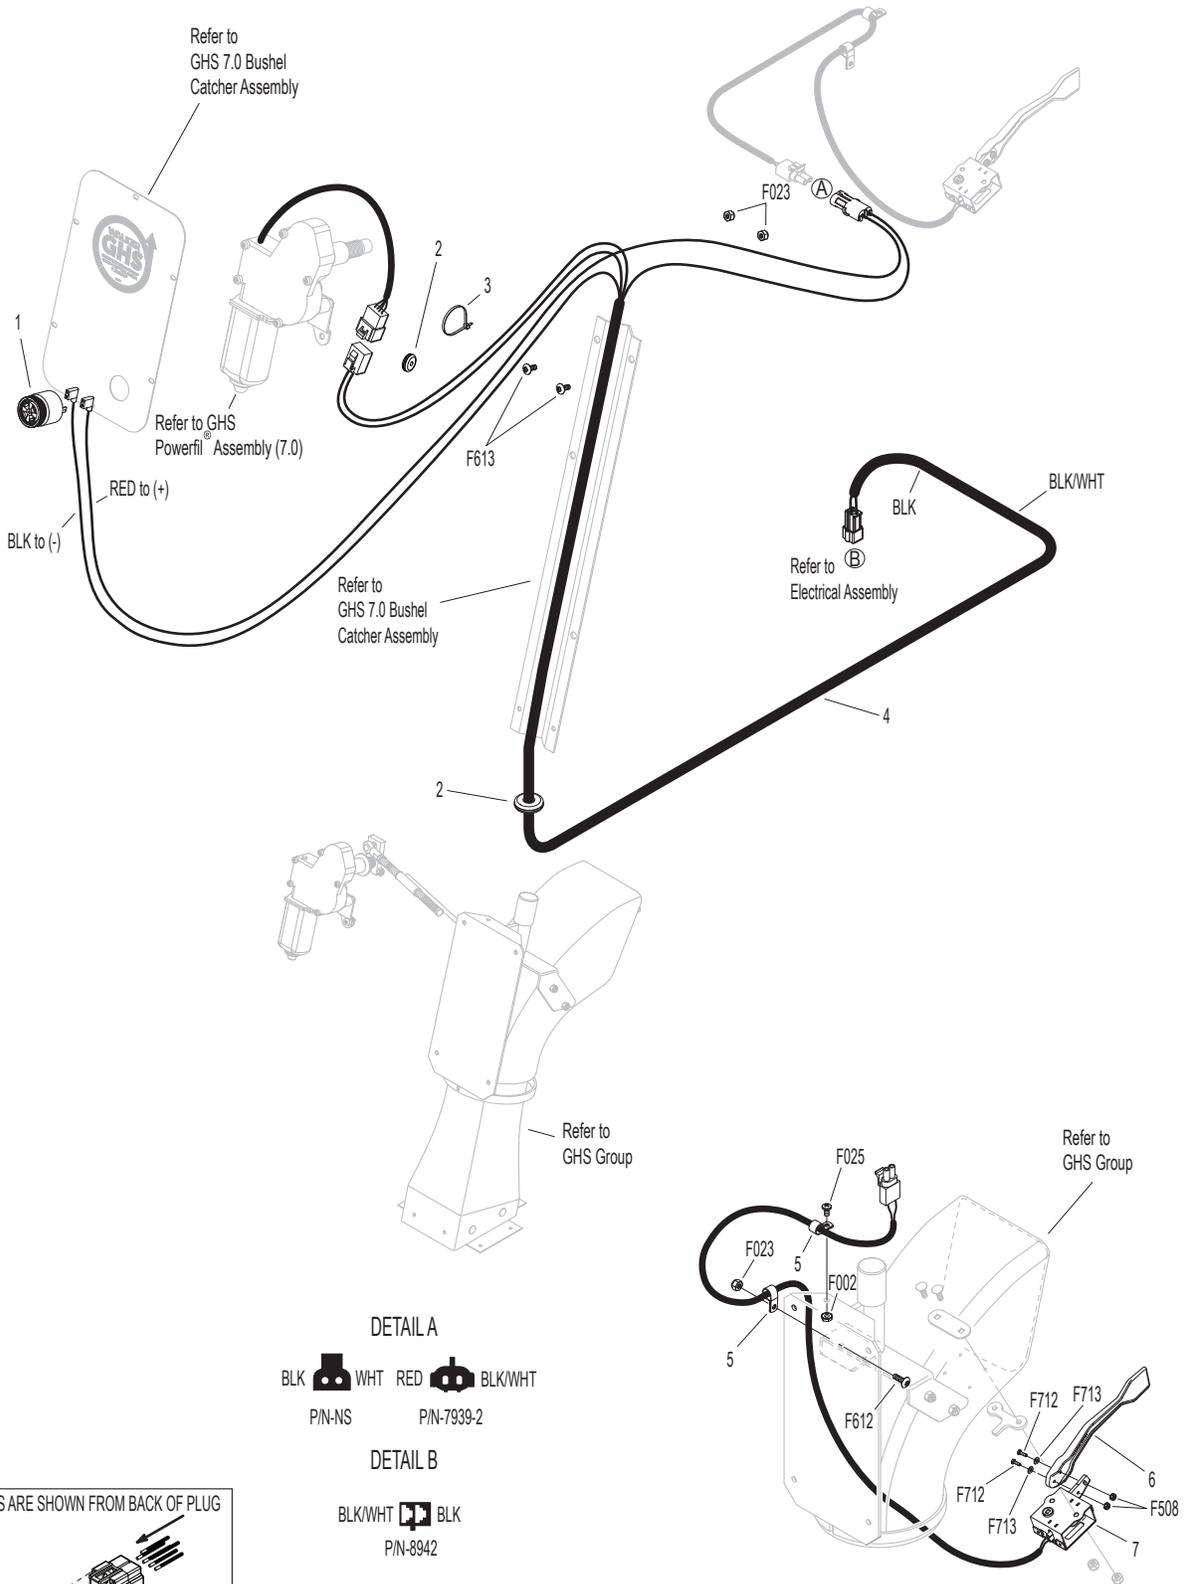


Model C19i Beginning S/N 190349
 Use only genuine **Walker**® replacement parts.

LUBRICATION POINTS

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES	ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points				17	Brake Actuator Rod and Brake Band Pivot Pins (Clevis)	Oil	3
1	Steering Lever Pivot	Grease	4	18	Brake Actuator Pivot	Grease	1
2	Body Hinge Point	Oil	2	19	Catcher Hinge Point	Oil	2
3	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1	20	Engine Dipstick / Oil Fill	Oil**	1
4	FSC Actuator Rod Pivot Pins	Oil	2	21	Throttle Control Cable Ends	Oil	2
5	(FSC) Friction Body Pivot	Grease	1	22	Belt Tightener Pivot, Blower Drive	Grease	1
6	FSC Lever Pivot	Grease	1	23	Belt Tightener Pivot, Ground Drive	Grease	1
7	Deck Support Arm Pivot	Grease	2	24	PTO Gearbox Dipstick	Oil**	1
8	Gear Axle	Oil**	2	25	Throttle Control Pivot	Oil	1
9	Universal Joint Tube Assembly	Grease*	1	* Grease every 25 hours.			
10	Parking Brake Lever Pivot	Grease	1	** See Operator's Manual for procedure for checking and changing oil in Engine Crankcase, Hydrostatic Transmissions, and Gear Axles.			
11	Universal Joint Quick Connect Spline (Grease Slide Area)	Grease	1	NOTE: See Model C19i Operator's Manual (P/N 6000-46) for proper lubrication intervals.			
12	Hydrostatic Drive / Oil Reservoir	Oil**	3				
13	Belt Tightener Pivot, Jackshaft Drive	Grease	1				
14	PTO Clutch Lever Pivot	Grease	1				
15	Clutch Actuator Push Rod	Grease	2				
16	Belt Tightener Pivot, PTO Clutch	Grease	1				

LUBRICATION POINTS

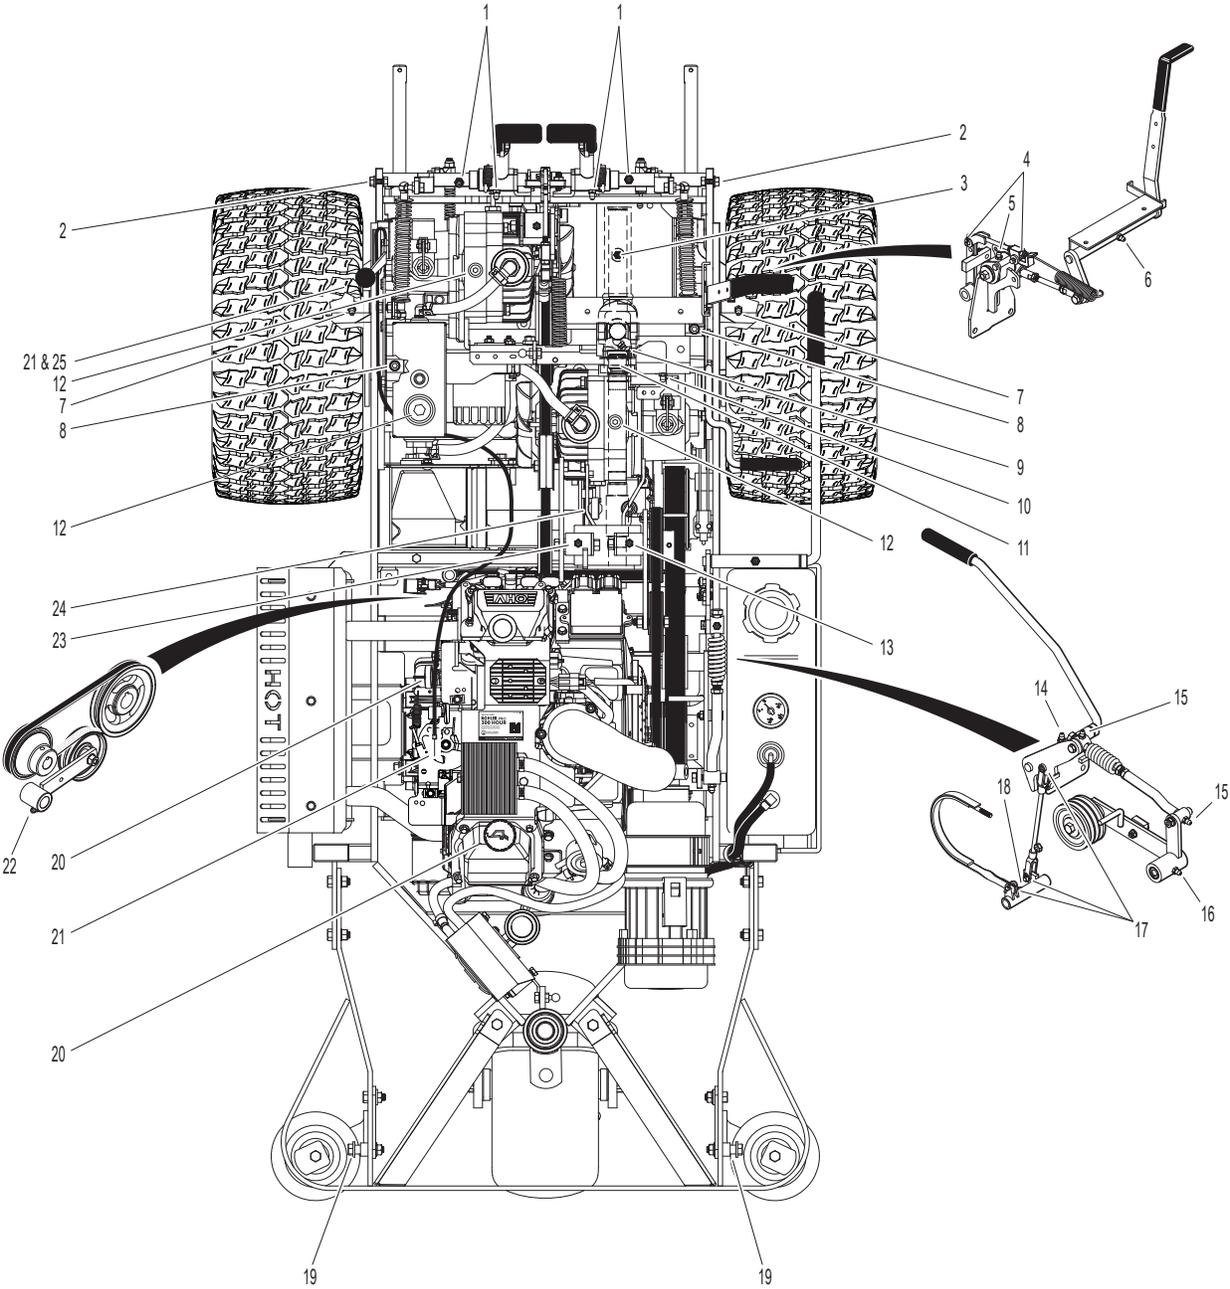

WIRING SCHEMATIC

WALKER MODEL C19i Beginning S/N 2019-154995


IGNITION SWITCH CIRCUITS	
OFF	G + M
START	B + A / S1 + S2
RUN	B + A

S1 = START CIRCUIT
S2 = START/ACCESSORY CIRCUIT
M = MAGNETO GROUND CIRCUIT
B = BATTERY CIRCUIT
A = ACCESSORY CIRCUIT
G = GROUND CIRCUIT

RELAY - A IGNITION RELAY	
OFF	30 + 87A
START	30 + 87A
PTO ON	30 + 87

RELAY - B START RELAY	
OFF	30 + 87A
START	30 + 87
PTO ON	30 + 87A

RELAY - C DELAY RELAY	
OFF	30 + 87A
START	30 + 87A
RUN	30 + 87A

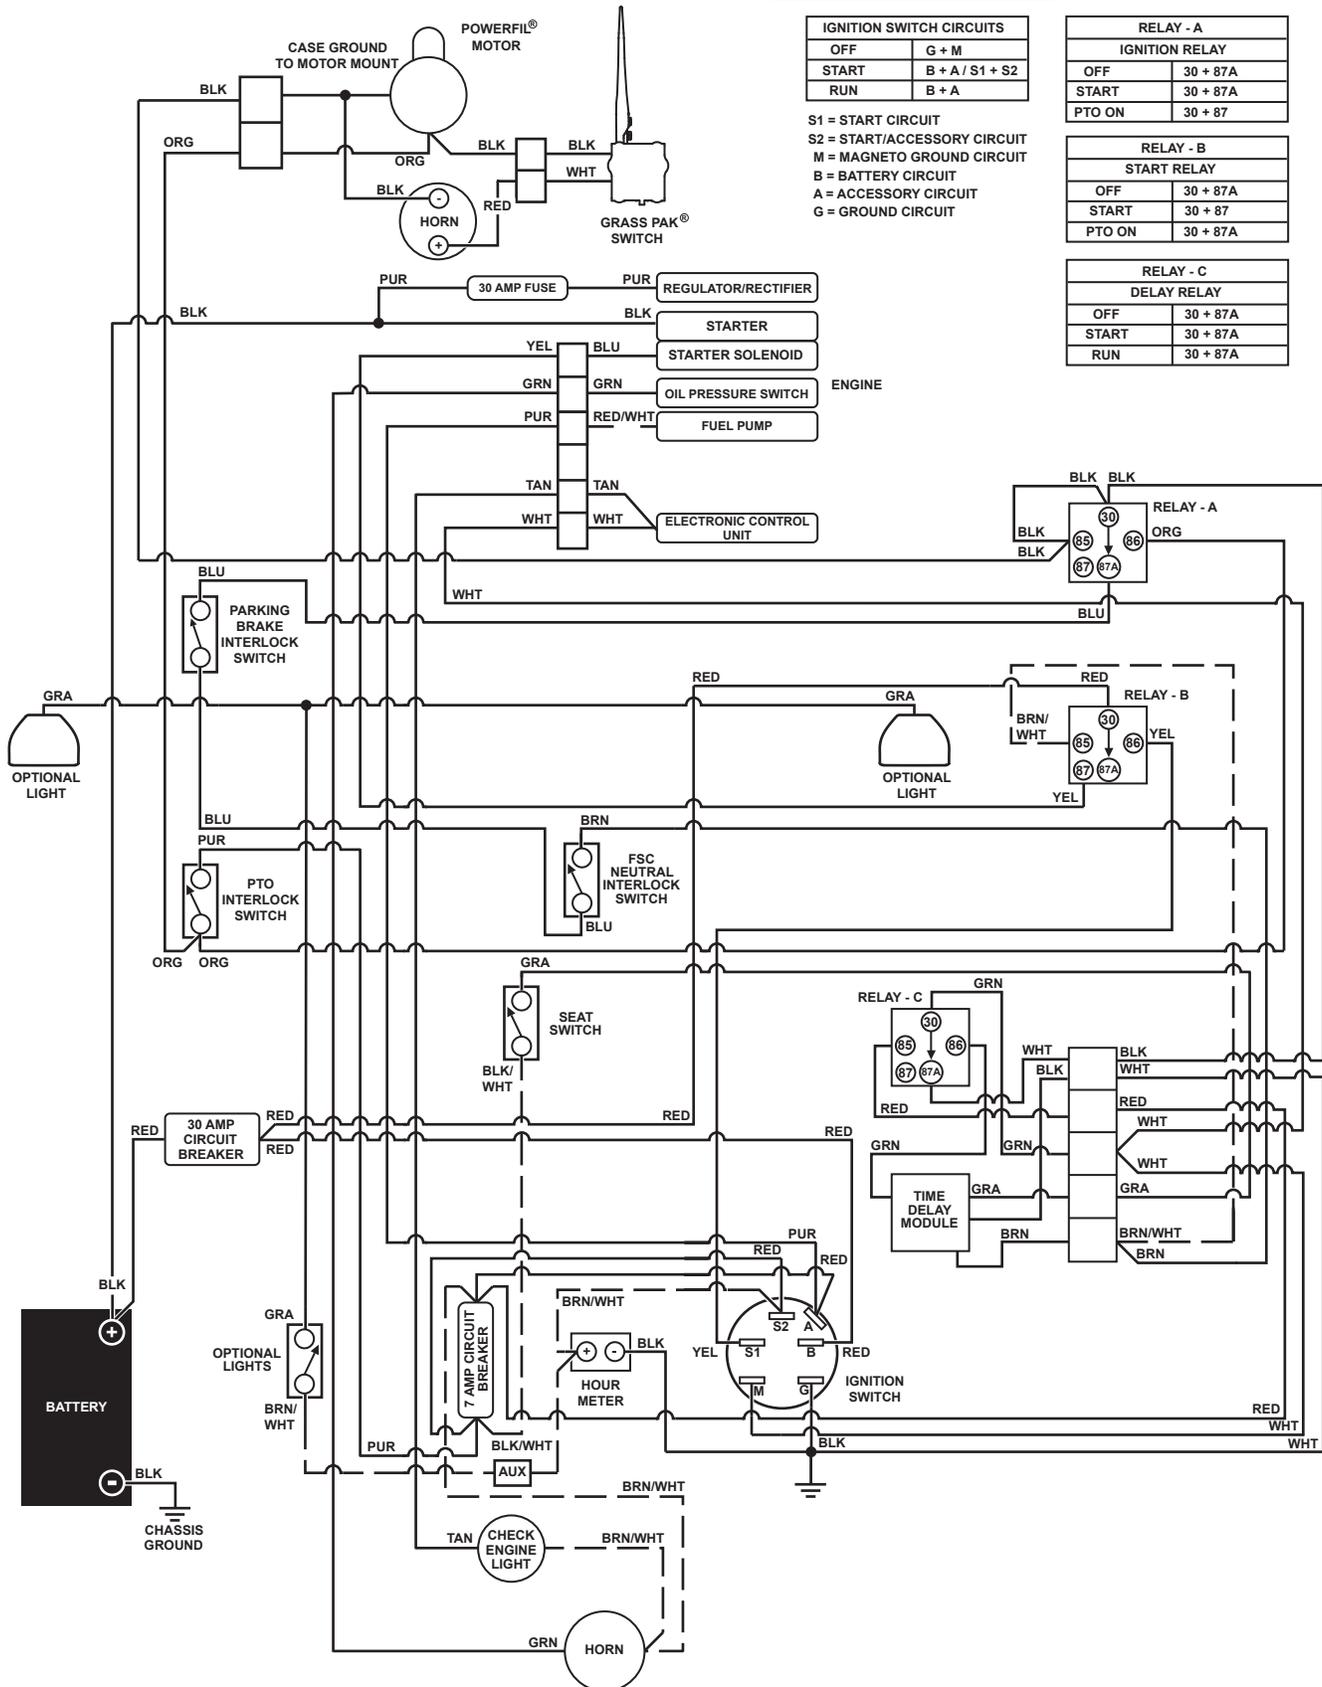

LIMITED WARRANTY FOR WALKER COMMERCIAL RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within two (2) years* after date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Rehiko Engine

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

The Fulbat battery comes with a one (1) year warranty from the date of sale to the original retail purchaser. Warranty claims for the battery are administered through Walker Manufacturing.

★ Extended warranties are offered for the following powertrain components:

- A three (3) year unlimited hour warranty is offered for the Walker P/N 6200-9 Gear Axle Assembly.
- A three (3) year or 3000 hour (whichever comes first) warranty is offered for Model 7 Hydrostatic transmissions; covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 3000 hours. If the transmissions are serviced at the recommended intervals by an authorized Walker Dealer using only Walker Model 7 Hydro Oil (P/N 6450-21) or Mobil SHC™ 630 oil (P/N 6450-20) and Walker filters (P/N 5024-13), the warranty will be extended to three (3) years, full replacement coverage, and unlimited hours.

2. WHAT THIS WARRANTY DOES NOT COVER:

- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Owner's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



WALKER

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 071025 PRINTED IN USA www.walker.com ©2025 WALKER MFG. CO