




WALKER

Illustrated Parts Manual

C19

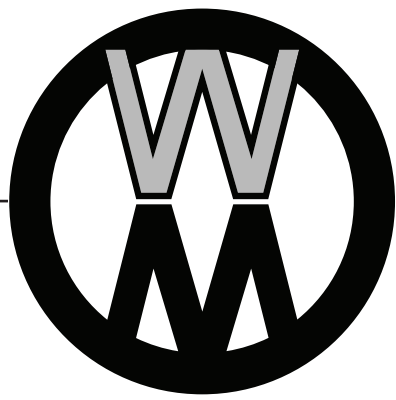

Beginning S/N: 194904
P/N 6000-57

KEY TO ABBREVIATIONS USED IN THIS MANUAL

<i>Abbreviation</i>	<i>What it Represents</i>
° (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
-1 (as deck style designation)	Standard (Aluminum) Gear Drive Deck
-2 (as deck style designation)	Heavy Duty (Cast Iron) Gear Drive Deck
-3 (as deck style designation)	Belt Drive Deck
AT	All-Terrain
CCW	Counter-clockwise
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
TOPS™	Transmission Oil Performance System
V	Volts
VLR	Very Low Restriction

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

Model C19 Beginning S/N 194904
Use only genuine **Walker®** replacement parts.

ILLUSTRATED PARTS LIST

<i>Section of Tractor Covered</i>	<i>Page</i>
Decals	
Tractor Decals	2
Body / Chassis Assemblies	
Body / Chassis Assembly (7.0 / 10.0)	4
Rear Body Assembly (7.0)	6
Rear Body Assembly (10.0)	8
Tractor Components	
Main Component Power Transmission	10
Engine Group.....	12
Hydrostatic Ground Drive Assemblies.....	14
Steering Control Assemblies.....	16
Throttle & Choke Control Assemblies.....	18
Parking Brake Assembly	20
GHS Group (7.0).....	22
GHS Group (10.0).....	24
GHS Powerfil® Assembly (7.0)	26
GHS Powerfil® Assembly (10.0)	28
GHS 7.0 Bushel Catcher Assembly.....	30
GHS 10.0 Bushel Catcher Assembly.....	32


<i>Section of Tractor Covered</i>	<i>Page</i>
Electrical Components	
Electrical Assembly	34
Electrical Assemblies (GHS 7.0 Bushel Components).....	36
Electrical Assemblies (GHS 10.0 Bushel Components).....	38
Maintenance	
Lubrication Points	40
Wiring Schematic.....	42
Maintenance And Service Record Sheet.....	43
Warranty	
Limited Warranty.....	45

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQUIRED
Walker Product and Operation Decals				
1	8600-33	RH Fender	Body, RH Near Seat	1
2	5813-2	Decal, 4" Grass-Pak Powerfil®	Powerfil® Cover Plate	1
3	5800-22	Walker (8" Round)	7.0 / 10.0 Bushel Catcher (one on each side)	2
4	8600-35	LH Fender	Body, LH Near Seat	1
5	8821-8	Decal, C19	Body	1
6	5856-1	Made in USA	Body	1
Danger Decals Warning Decals Caution Decals				
7	8600-10	Danger, Pinch Point	7.0 / 10.0 Bushel Catcher Mounting Frame Assembly (one on each side)	2
8	8600-4	Danger, Rotating Blower Blades	Body, Near Body Chute	1
9	8600-12	Danger, Engine Exhaust	Front Body, LH Side	1
10	5810-3	Decal, Hydro Warning	LH Gear Axle Drive Assembly	1
Maintenance Decals				
11	5869	Removable Screen	7.0 / 10.0 Bushel Catcher Removable Screen	1
12	5855	Important, Engine Cooling	Engine	1
13	8600-16	Front Body Closure	Rear Cross Member, Body	1
14	6895-103	Rehiko/Kohler 300 Hour Oil	Engine	1
15	5024-24	Decal, TOPS™	Oil Reservoir Tank	1
16	5810-1	Axle Oil Level	Gear Axle Drive Assemblies (one on each)	2
17	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1
18	6807-1	Oil Pressure	Body	1
19	8600-30	Parking Brake	Body, RH Side Below Seat	1
20	7827	Oil Level	Jackshaft Support	1

NOTE: All parts requiring decals are shipped with decals applied.


TRACTOR DECALS

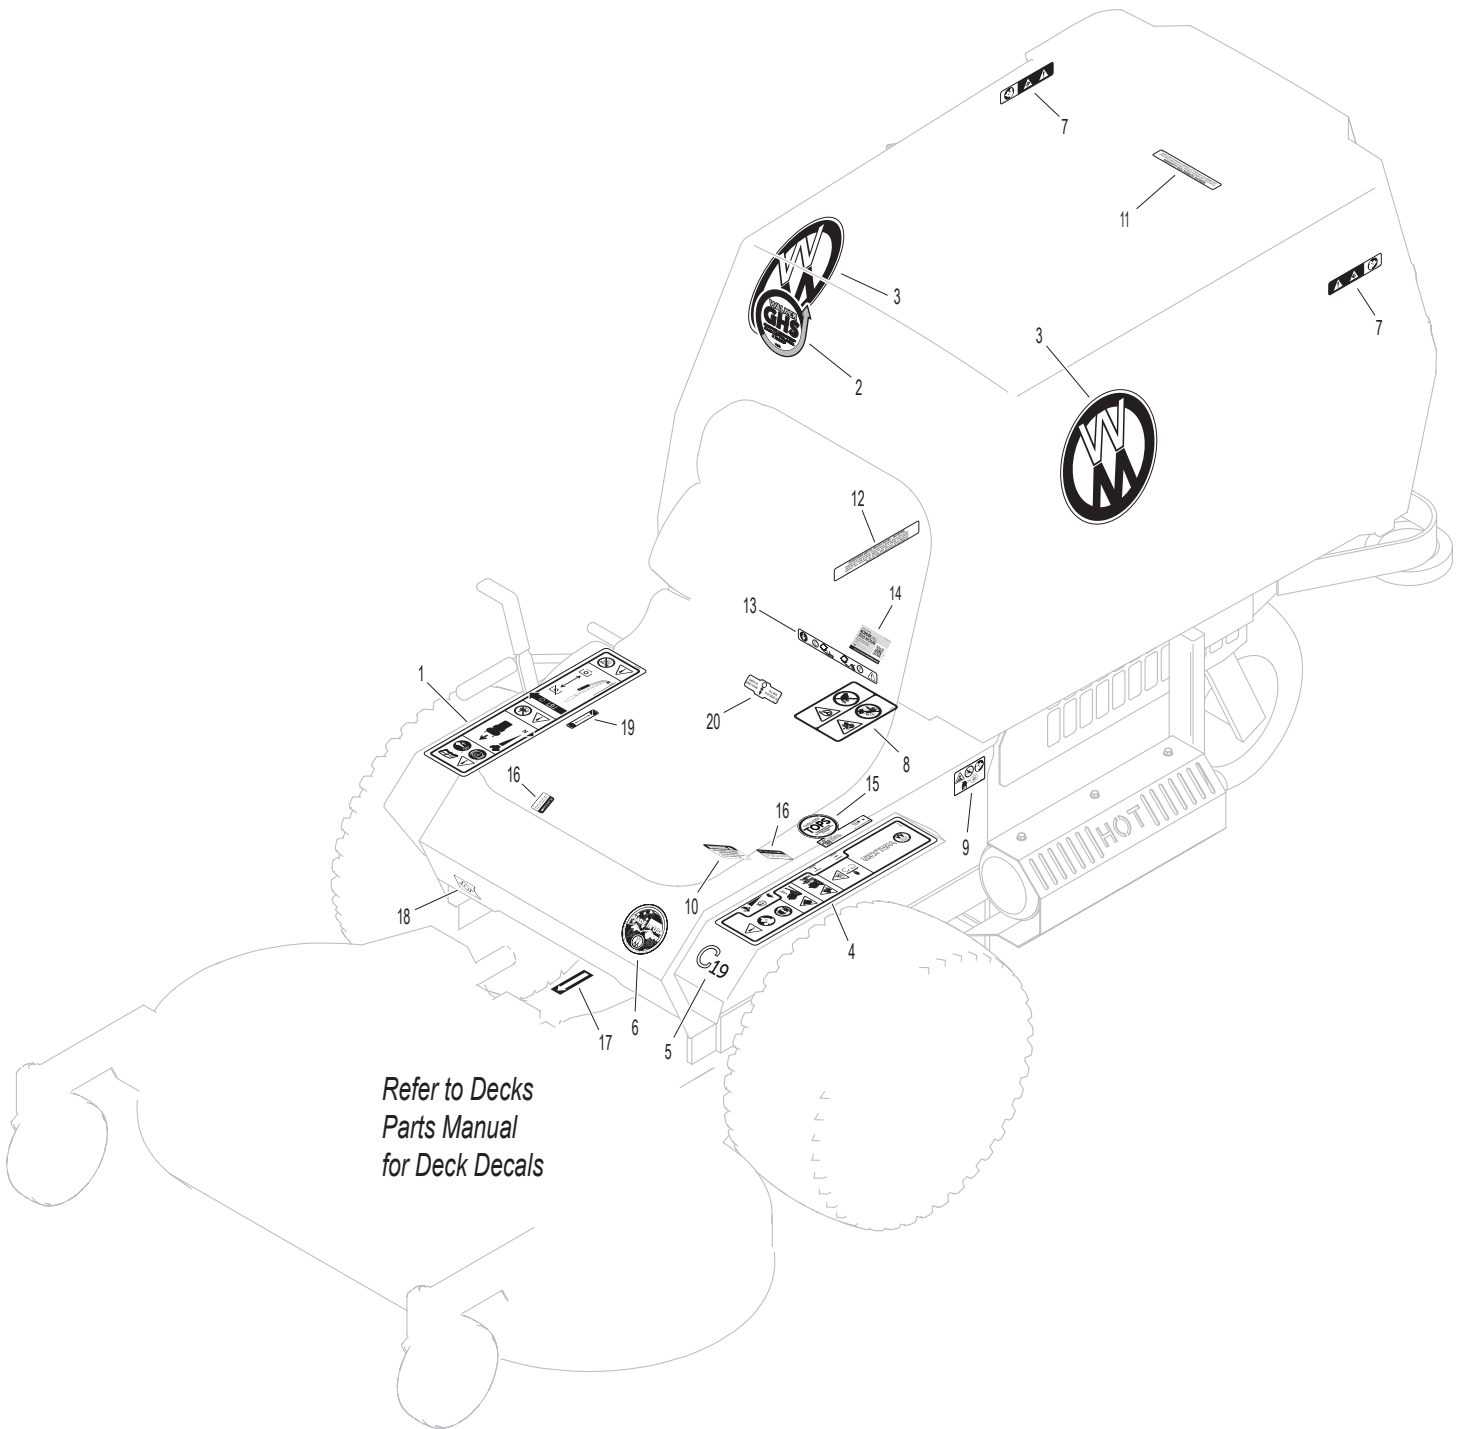

BODY / CHASSIS ASSEMBLY (7.0 / 10.0)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Seat Assembly				36	5038-1	Axle Spacer Tube (6-5/8)	1
1	5103-3	Seat W/Switch	1	37	6307-7	Chassis Frame	1
2	7440-5	Shock Mount (1-1/4 x 3/4)	4	38	5075-8	LP Wheel & Tire (18 x 8.50-10) Black	2
Rear Bumper Assembly					5075-2	LP Tire (18 x 8.50-10)	*
3	7516-5	Catcher Pivot Bushing	2		5075-9	LP Wheel (10 x 7) Black	*
4	5517-8	7.0 Rear Bumper	1		5033-1	Wheel & Tire (18 x 7.00-8) Black	**
	7516	10.0 Rear Bumper	*		5030-6	Standard Tire (18 x 7.00-8)	*
5	7517-3	Catcher Pivot Plate	2		5031-3	Standard Wheel (8 x 5-5) Black	*
6	5162	Roller Wheel (5" Rubber)	2		5030-4	Tire Tube (18 x 8.50-8)	*
Body Assembly				Fasteners			
7	7383-6	Body Latch Bracket, RH	1	F002	10-24 Keps Nut		2
8	7383-5	Body Latch Lever	1	F004	1/4-20 Keps Nut		8
9	7383-7	Body Latch Bracket, LH	1	F009	5/16-18 Whiz Locknut		10
10	7222	Extension Spring (1/4 x 3)	1	F014	3/8-16 ESNA Nut		4
11	5845	Rubber Bumper (1.50 x 1.25)	4	F016	1/2-13 Self-Locking Nut		1
12	6101-8	Front Body Engine Guard	1	F020	5/16-18 ESNA Nut		1
13	NS	Body ID Plate	1	F025	10-24 x 3/8 PPHMS		2
14	5989-12	Dome Plug (3/16)	1	F029	1/4-20 x 1/2 Hex Bolt		6
15	5989-10	Dome Plug (9/16)	1	F031	1/4-20 x 5/8 Hex Bolt		2
16	8118	Heat Deflector	1	F038	3/8-16 x 1 Hex Bolt		6
17	5989-3	Dome Plug (5/16)	4	F040	3/8-16 x 1-1/2 Hex Bolt		2
18	5989-4	Dome Plug (3/8)	3	F041	3/8-16 x 1-3/4 Hex Bolt		2
19	6100-52	Front Body	1	F042	3/8-16 x 2-1/4 Hex Bolt		2
20	5146	10mm Ball Stud	2	F050	1/4 SAE Washer		2
21	2145	Gas Spring Assembly (Includes Item # 20)	1	F051	3/8 SAE Washer		2
22	5180	Edge Molding, Lever Opening	2	F059	3/8 Wave Spring Washer		2
Tilt-Up Latch Assembly***				F093	5/16-18 x 1 Hex Bolt		1
23	5847	Plastic Tip	1	F157	1/2-20 x 1-1/4 Wheel Lug Bolt		8
24	5744-20	Spring Arm, Tilt-Up Latch	1	F206	#2 x 3/16 Drive Pin		2
25	5744-10	Spring Pivot Bushing	1	F241	.375 x .875 x .10 Washer		4
26	5744-15	Compression Spring (3/8 x 5/8)	1	F256	7/16 SAE Washer		2
27	5744-13	Mount Angle, LH	1	F292	1/2-13 x 8-1/2 Hex Bolt, GR 5		1
28	5744-12	Hook, Tilt-Up Latch	1	F341	Coil Roll Pin (7/64 x 9/16)		1
29	5744-14	Mount Angle, RH	1	F342	5/16 Conical Washer		2
Chassis Assembly				F413	5/16-24 x 5/16 Set Screw		2
30	5267-1	Retainer Collar (1") (Includes Item # F413)	1	F570	3/8-16 Flange Top Lock Nut		8
31	5270-1	Ball Bearing	2	F591	7/16-14 Flange Top Lock Nut		2
32	5420-2	Tail Wheel Fork	1	F592	7/16-14 x 1-1/8 Hex Bolt GR 5		2
33	8769-12	Bearing Cup (1/2 ID)	2	F637	Washer .835 x .505 x .125		2
34	5037-1	Bearing, Tail Wheel	2	F710	1/4-28 x 1/4 Set Screw (Knurled Cup), SS		1
35	5035-5	Tail Wheel & Tire Assembly (13 x 6.50-6) Black	1	* Service Part Only			
	5035-1	Tail Wheel Tire (13 x 6.50-6)	*	** May be ordered as a factory-installed option or for dealer installation. Narrow Drive Tires are used when installing a 36" Deck. Contact your Walker dealer.			
	5036-1	Tail Wheel & Hub (6 x 4.5) Black	*	*** Complete Tilt-Up Latch Assembly Kit available by ordering kit # 5744-5.			


BODY / CHASSIS ASSEMBLY (7.0 / 10.0)

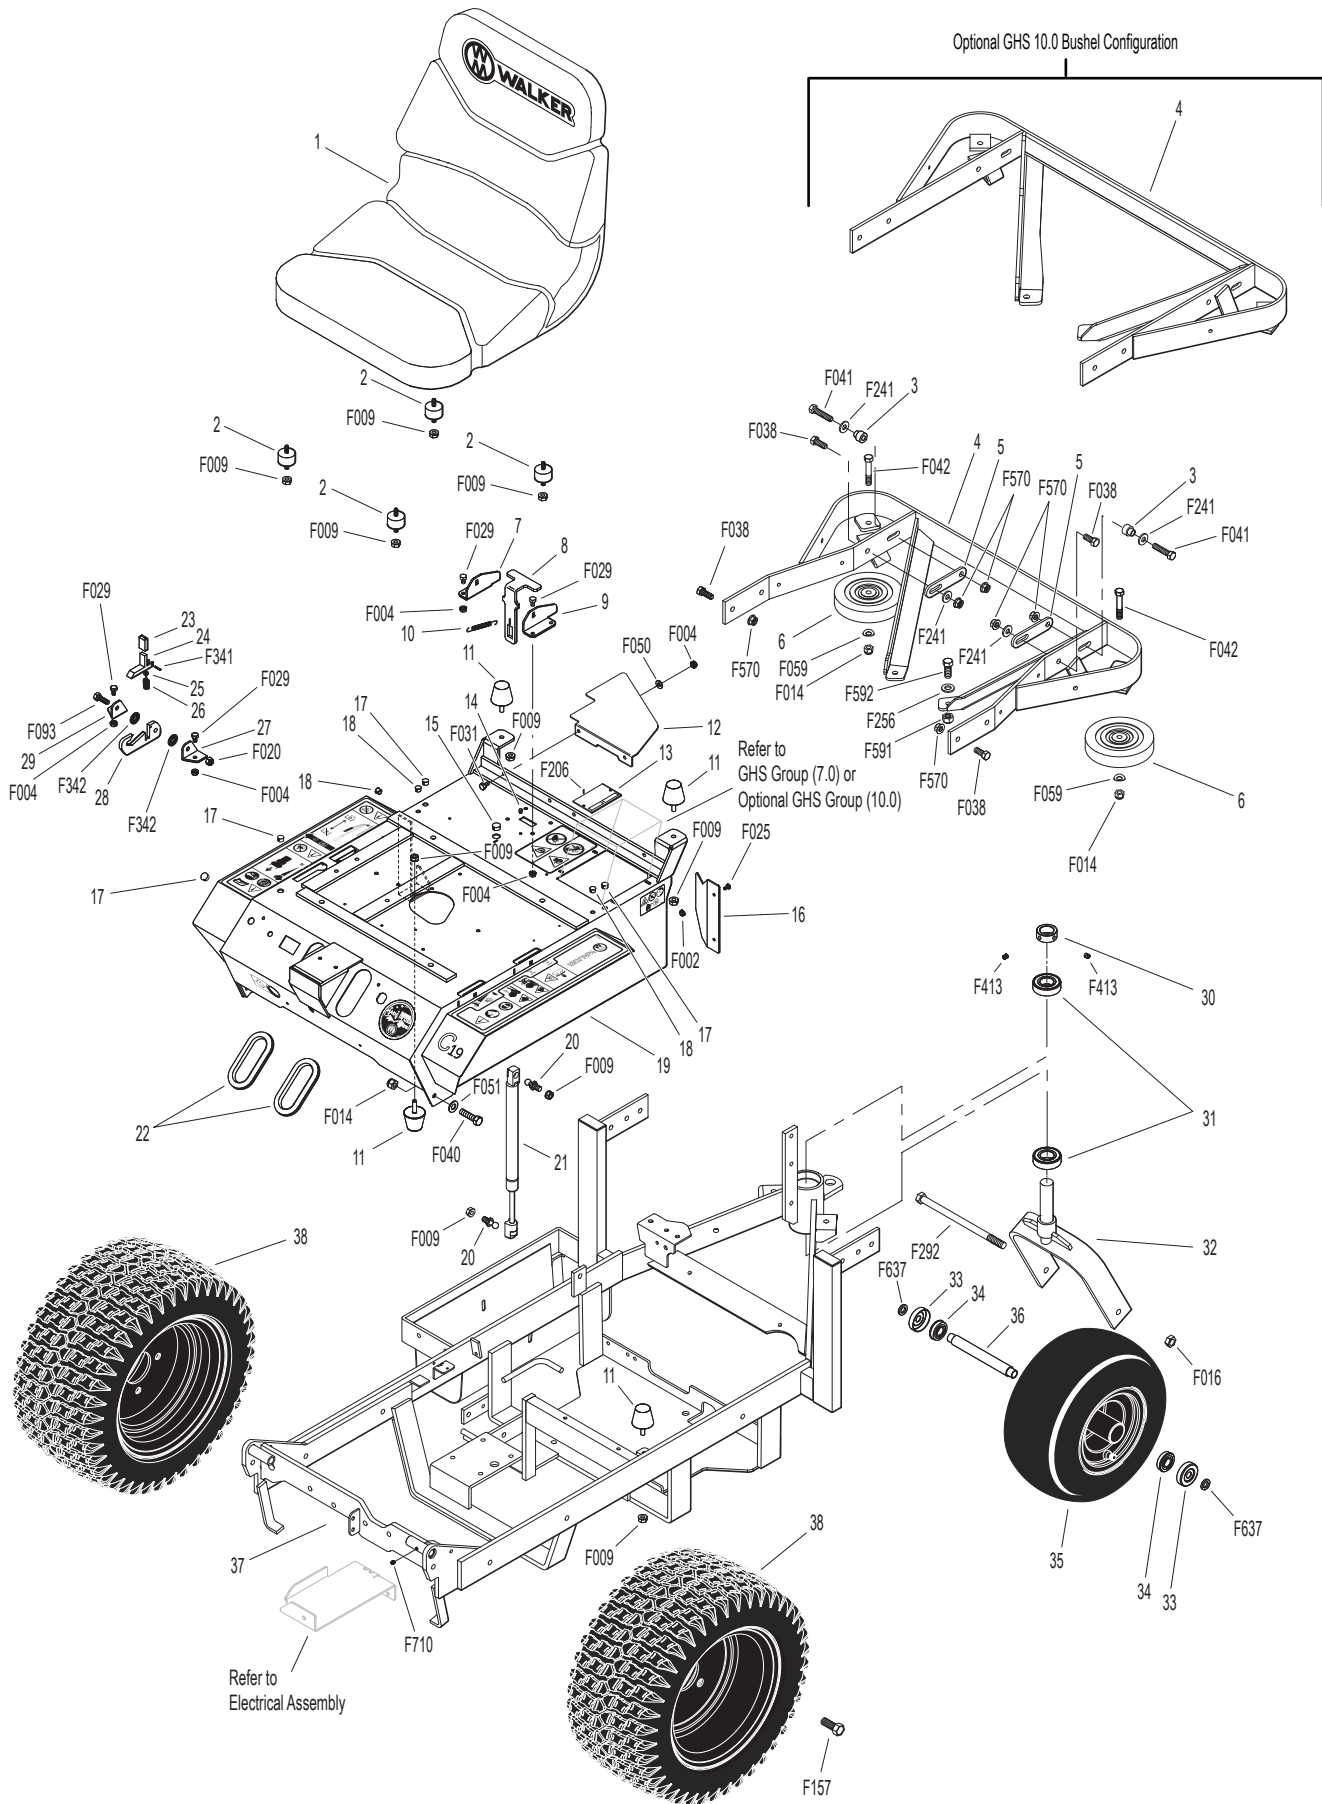

REAR BODY ASSEMBLY (7.0)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Rear Body Assembly				Fasteners			
1	5976-2	Grommet (3/16 x 3/4)	1	F002	10-24 Keps Nut		4
2	5105-1	Rear Body Cover	1	F009	5/16-18 Whiz Locknut		2
3	8515-17	Catcher Handle Plate, LH	1	F023	10-24 ESNA Nut		4
4	8389-5	Splash Guard	1	F026	10-24 x 1/2 PPHMS		4
5	7146	13mm Ball Stud	2	F031	1/4-20 x 5/8 Hex Bolt		2
6	7147	Spring Clip	2	F032	1/4-20 x 3/4 Hex Bolt		1
7	7145	Gas Spring Assembly (Includes Items # 5 & 6)	1	F390	1/4-20 x 7/8 Carriage Bolt		2
8	7190-1	Insulation Foam Pad, LH	1	F569	1/4-20 Flange Top Lock Nut		5
9	7190-2	Insulation Foam Pad, RH	1	F615	1.0 x .255 x .125 Washer		1
10	5105-6	Rear Body, Catcher Support Frame	1	F617	10-24 x 3/8 Truss Head Torx		4
11	8515-18	Catcher Handle Plate, RH	1	NOTE: Rear Bumper Assembly is not shown here. Refer to BODY / CHASSIS ASSEMBLY (7.0 / 10.0) , Page 4.			


REAR BODY ASSEMBLY (7.0)

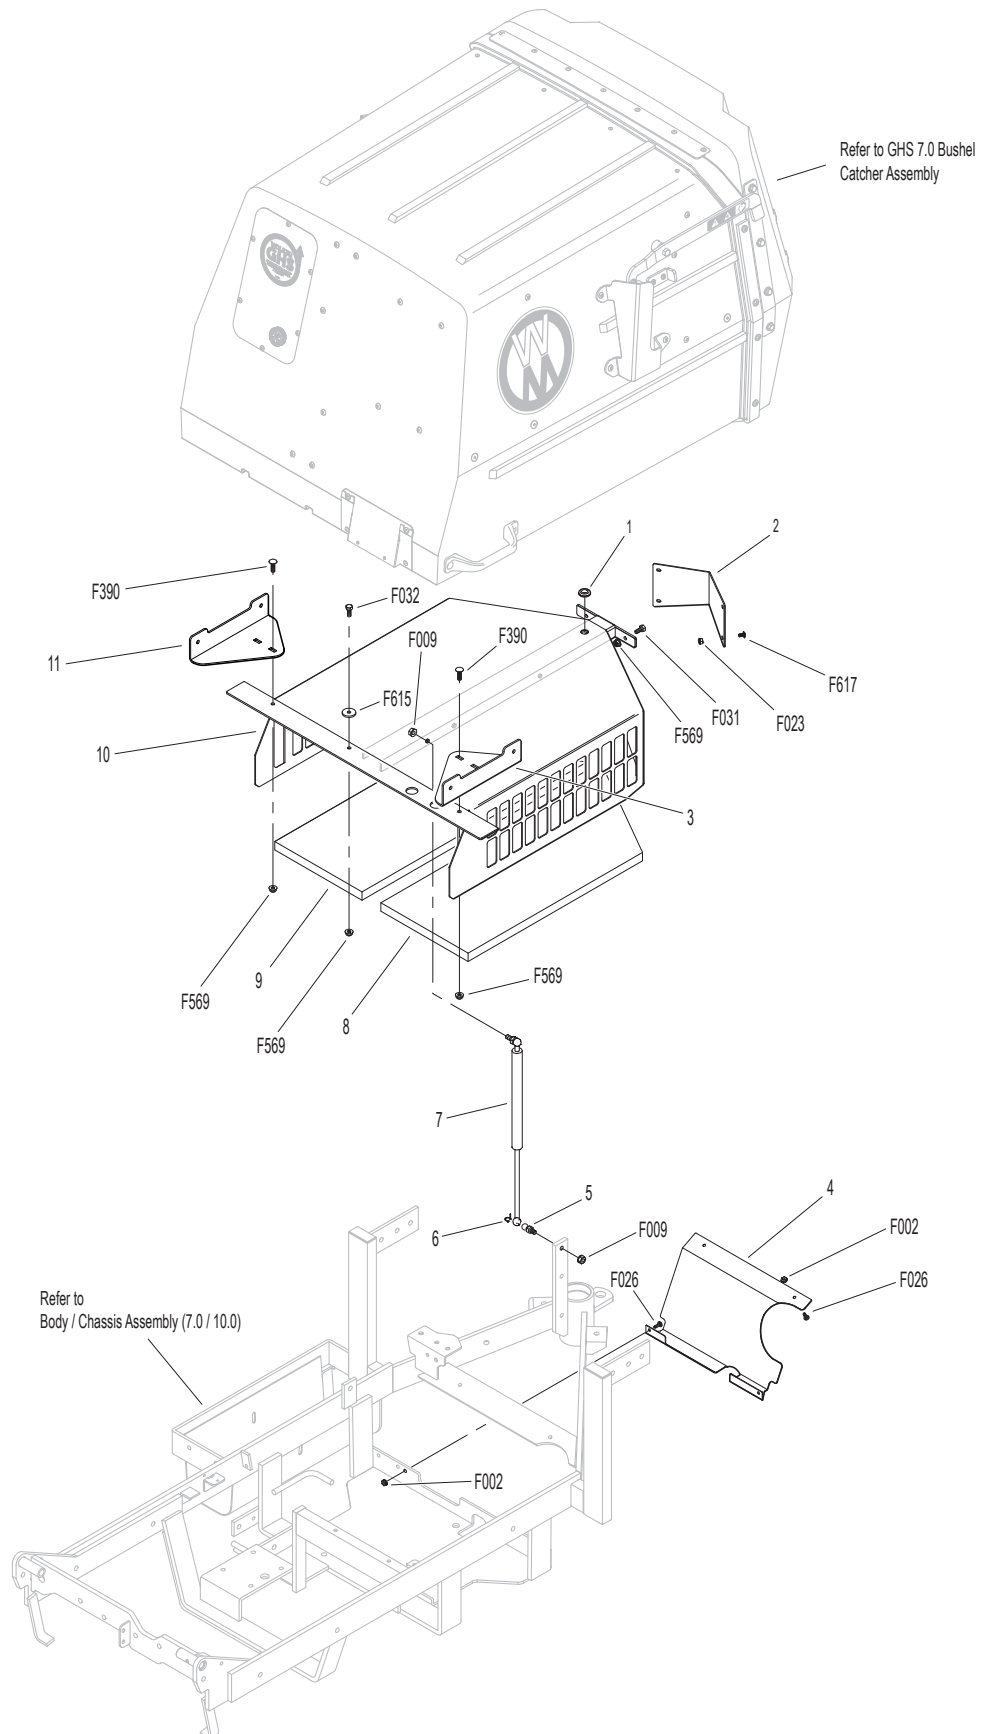

REAR BODY ASSEMBLY (10.0)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Rear Body Assembly				Fasteners			
1	7190-3	Insulation Foam Pad (5 x 20)	1	F002	10-24 Keps Nut		4
2	8082	Heat Shield	1	F009	5/16-18 Whiz Locknut		2
3	5976-2	Grommet (3/16 x 3/4)	1	F023	10-24 ESNA Nut		4
4	5105-1	Rear Body Cover	1	F026	10-24 x 1/2 PPHMS		4
5	8515-17	Catcher Handle Plate, LH	1	F031	1/4-20 x 5/8 Hex Bolt		2
6	8389-5	Splash Guard	1	F032	1/4-20 x 3/4 Hex Bolt		1
7	7146	13mm Ball Stud	2	F085	3/16 Rivet Backup Washer		2
8	7147	Spring Clip	2	F390	1/4-20 x 7/8 Carriage Bolt		2
9	7145	Gas Spring Assembly (Includes Items # 7 & 8)	1	F568	10-24 Flange Top Lock Nut		2
10	7190-1	Insulation Foam Pad, LH	1	F569	1/4-20 Flange Top Lock Nut		5
11	7190-2	Insulation Foam Pad, RH	1	F613	10-24 x 1/2 Truss Head Torx		2
12	5105-7	Rear Body / Catcher Support Frame (10.0)	1	F615	1.0 x .255 x .125 Washer		1
13	8515-18	Catcher Handle Plate, RH	1	F617	10-24 x 3/8 Truss Head Torx		4

NOTE: Rear Bumper Assembly is not shown here. Refer to **BODY / CHASSIS ASSEMBLY (7.0 / 10.0)**, Page 4.

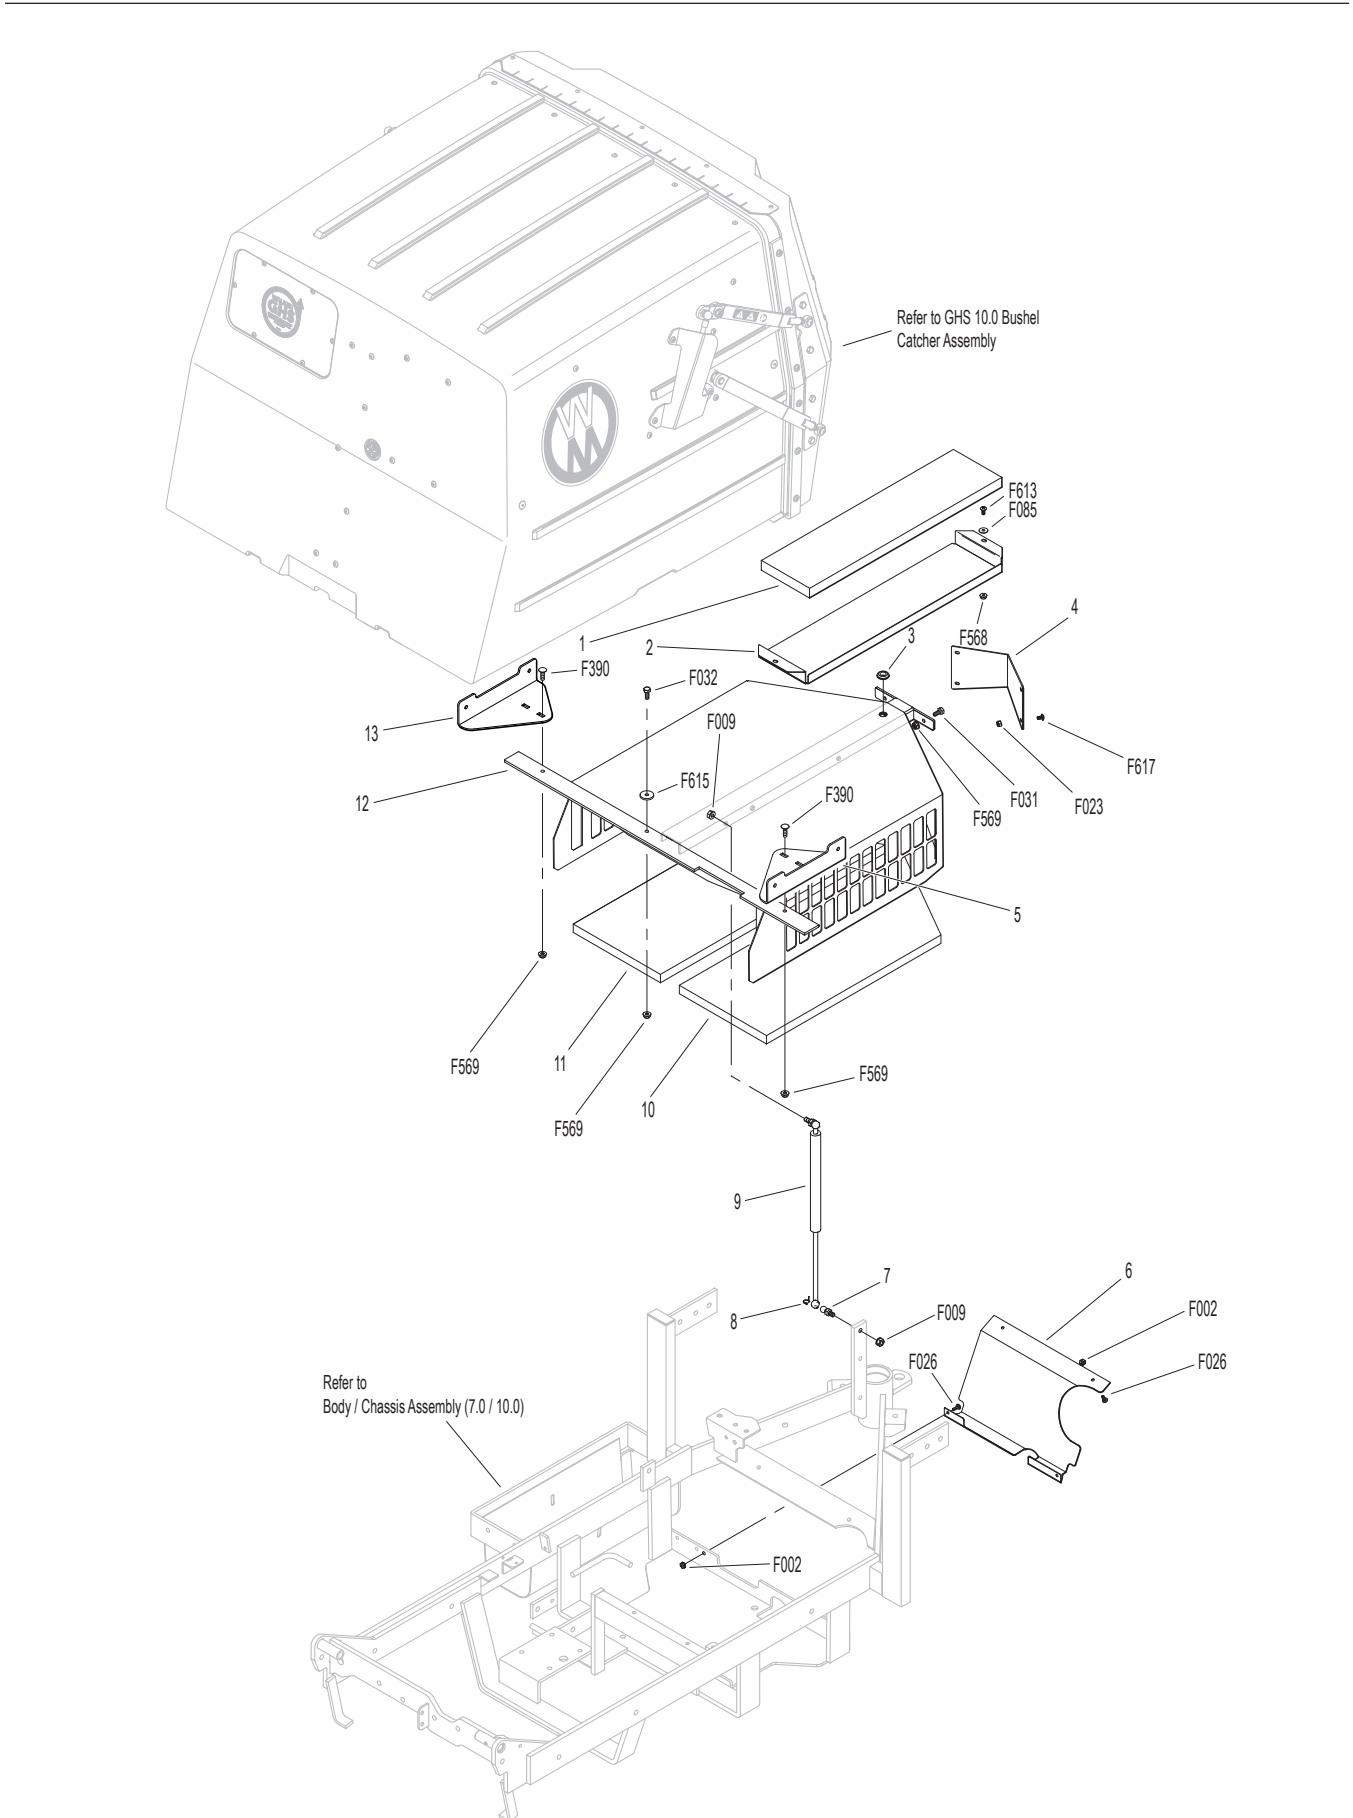

Model C19 Beginning S/N 194904
Use only genuine **Walker®** replacement parts.

MAIN COMPONENT POWER TRANSMISSION

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Clutch Lever Assembly				40	7201-4	Inner Race (1-1/2)	2
1	8358-3	Clutch Lever (Includes Items # 2 & 3)	1	41	5221-1	Extension Spring (3/4 x 5)	2
2	5830	Grease Fitting	8	42	7833	Cable Clamp (7/8 x 1/4)	1
3	4850	Handle Grip, Black	1	43	8539	Starter Relay Mount	1
4	7303-10	Clutch Actuator Bolt (3/8)	1	44	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F718)	1
5	7380-5	Knuckle Joint (3/8 ID)	1	45	5268	Bearing W/Collar (3/4)	2
6	7226-10	Compression Spring (3/4 x 2-1/2)	1	46	8349	Transmission Belt Tightener Arm	1
7	8130-5	Pushrod, Clutch Actuator (Threaded Tube) (Includes Item # 2)	1	47	5245	Idler Pulley (3")	1
8	8130-10	Clutch Actuator Rod Assembly (Includes Items # 2, 4-7, F054, F336 & F353)	1	48	8394-6	Hydro Jackshaft Mount Assembly (Includes Items # 2, 9, 12, 40, 45, 49, F012, F042, F067 & F718)	1
9	7201-3	Fiberglide Bearing	6	49	8273-1	Jackshaft (3/4 x 8-1/8)	1
10	7201-5	Inner Race (2-1/4)	1	50	7240-7	Jackshaft Drive Pulley (3.0/3V) (Includes Items # F067 & F718)	1
11	8368	PTO Belt Tightener	1	Fasteners			
12	5841	Retainer Washer (3/8 x 1-1/4)	4	F002	10-24 Keps Nut		1
13	8243-1	Clutch Idler Pulley	1	F003	1/4-28 Hex Nut		2
	8243	Clutch Idler Pulley Assembly (Includes Items # 13-15 & F070)	*	F004	1/4-20 Keps Nut		2
14	5265	Bearing (3/4)	1	F005	1/4-20 ESNA Nut		1
15	8243-3	Hub, Idler Pulley	1	F009	5/16-18 Whiz Locknut		3
16	8375	PTO Belt Tightener Stop	1	F012	3/8-16 Keps Nut		6
17	7377	Plastic Washer (1 x .438 x .025)	2	F025	10-24 x 3/8 PPHMS		1
18	7378	Pivot Bearing (7/16 x 9/16)	1	F029	1/4-20 x 1/2 Hex Bolt		1
19	5281-5	Clevis Pin (1/4 x 0.80)	2	F034	5/16-18 x 3/4 Hex Bolt		2
20	5280	Clevis (1/4)	2	F041	3/8-16 x 1-3/4 Hex Bolt		2
21	8305	Brake Actuator Rod	1	F042	3/8-16 x 2-1/4 Hex Bolt		3
22	8370	Bearing, Brake Actuator	1	F043	3/8-16 x 3 Hex Bolt		1
23	8250	Brake Spring (1/2 x 2-1/2)	1	F047	3/8-16 x 4-1/2 Hex Bolt		1
24	8369	Brake Actuator (Includes Items # 2 & 22)	1	F054	AN960616 Washer		3
PTO Drive Shaft Assembly				F061	1/4 Internal Star Lock Washer		1
25	7050-1	Dipstick, Gearbox	1	F067	3/16 x 3/16 x 1 Key		2
26	8371-1	Mount Bracket, Brake Band	1	F069	3/32 x 1/2 Cotter Pin		3
27	8377	Brake Band Guide	1	F070	1-3/4 Internal Snap Ring		1
28	8050-11	PTO Gearbox / Flange Pulley	1	F116	1/4-20 x 1-1/4 Hex Bolt		1
29	7248	Ground Drive Belt, Micro-V	1	F121	5/16-18 x 3/8 x 1 SHL Bolt		1
30	7275-16	Universal Joint Tube Assembly (Spline)	1	F131	5/16-18 x 1/2 Hex Bolt		2
31	8304	Brake Band (14-1/2)	1	F132	1/4-20 x 2-3/4 Hex Bolt		1
32	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1	F168	5/16 Split Lock Washer		10
33	6250-1	Drive Belt (3VX365)	1	F178	1/4 x 1 Fender Washer		1
34	7236-1	PTO Drive Pulley (4-1/2/3V) (Includes Items # F168 & F226)	1	F182	1/4 x 5/8 x 1/8 Washer		2
35	8237-3	Engine Pulley (4/3.8/3V) (Includes Item # F226)	1	F226	5/16-18 x 7/8 Hex Bolt		14
36	8230	Engine PTO Belt	1	F241	.375 x .875 x .10 Washer		1
Jackshaft Assembly				F261	AN960616L Washer		1
37	7245-1	Idler Pulley (3/8 Groove)	1	F336	3/8-16 Jam Nut		1
38	6325-2	Spacer Bushing (5/16)	2	F353	3/8-16 ESNA LP Nut		1
39	8349-4	Idler Arm	1	F718	5/16-18 x 5/16 Set Screw (Knurl Point)		4
				* Service Part Only			


Model C19 Beginning S/N 194904
Use only genuine **Walker®** replacement parts.



ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Precleaner Assembly				42	5086-7	Hose (1/4 x 6)	1
1	NS	Air Cleaner Band	1	43	5020-2	Fuel Filter, In Tank	1
2	7854-1	Plastic Tip, Black (.218 ID)	1	44	6055-2	Fuel Tank, 4.0 Gallon, Gas (Includes Items # 29, 30, 32, 36, 42 & 43)	1
3	6029	Hose Clamp (1-13/16 to 2-3/4)	1	Fasteners			
4	6087-6	Air Intake Hose	1		F004	1/4-20 Keps Nut	2
5	4090	Air Cleaner Assembly (90 Deg. 2") (Includes Item # 1)	*		F009	5/16-18 Whiz Locknut	9
6	5090-5	Safety Filter Insert, VLR	1		F029	1/4-20 x 1/2 Hex Bolt	2
7	5090-6	Air Cleaner Cartridge, VLR	1		F031	1/4-20 x 5/8 Hex Bolt	4
8	5091-15	Air Flow Indicator Mount	1		F034	5/16-18 x 3/4 Hex Bolt	4
9	5091-19	Air Flow Indicator W/Bracket (Vacuum 15" H2O)	1		F038	3/8-16 x 1 Hex Bolt	1
10	M258	Vacuum Hose (17")	1**		F049	5/16 SAE Washer	2
11	7334-3	Air Cleaner Bracket	1		F050	1/4 SAE Washer	4
12	7840-5	Hose Clamp (1.56 to 2.50)	1		F051	3/8 SAE Washer	2
13	5091-0	1/8 Pipe Thread Male W/Barb	1		F061	1/4 Internal Star Lock Washer	4
14	5091-16	Street Elbow 90' (1/8 x 1/8)	1		F063	3/8 Internal Star Lock Washer	2
Engine & Exhaust Assemblies					F079	A/A66D Aluminum Pop Rivet	1
15	NS	19 HP Rehlko/Kohler Engine	1		F091	5/16-18 x 5/8 Hex Bolt	4
16	8016-4	Regulator Mount	1		F151	3/8-16 x 7/8 Hex Bolt	2
17	NS	Oil Filter	1***		F175	1/2 Split Lock Washer	4
18	8123	Insulating Sleeve (3/8 x 6)	1		F184	1/4-20 x 1/2 Hex Bolt, SS	3
19	NS	Gasket (Rehlko/Kohler)	2 ^Δ		F185	1/4 Internal Star Lockwasher, SS	3
20	NS	Nut (Rehlko/Kohler)	4 ^Δ		F198	.250 x .625 x .040 Washer, SS	3
21	6013-15	Muffler	1		F273	M6 x 1.0 Nut	4
22	6013-18	Muffler Heat Shield	1		F285	1/2-13 x 1-1/2 Hex Bolt	4
23	6013-19	Muffler Brace	1		F482	8-32 Nylock Nut	2
24	8021-2	Engine Brace, Chassis	1		F483	8-32 x 3/4 PPHMS	2
25	8021-1	Engine Brace	1		F547	M6 x 1.0 x 45 Stud	2
26	8010-2	Engine Bumper Mount	1		F570	3/8-16 Flange Top Lock Nut	1
27	5845	Rubber Bumper (1.50 x 1.25)	1		F646	3/8-16 x 3/4 Serrated Hex Bolt	2
Fuel Tank Assembly				* Service Part Only			
28	5082-4	2-1/4 Ratchet Fuel Cap	1	** Required hose specifications:			
29	8055-2	Fuel Tank Gauge	1	M113 - 3/16" ID fuel/oil/vapor hose			
30	8043-8	Roll Over Valve	1	M247 - 5/16" ID low permeation fuel hose			
31	M113	Fuel Line (3/16 x 26-1/2")	1**	M258 - 7/64" ID automotive vacuum hose			
32	5083-8	Tank Tube (13")	1	*** Refer to the Operator's Manual for recommended part number.			
33	5879-3	Hose Clamp (1/2)	4	^Δ Use the engine model and spec number from Rehlko/Kohler to order this item.			
34	5975-3	Cable Tie (50# x 7")	1	NOTE: Refer to Rehlko/Kohler Engine Decal (NS) for Engine Identification Numbers.			
35	M247	Fuel Line, Tank (5/16 x 9")	1**				
36	5977-7	Roll Over Grommet (.900 x 1-1/2)	1				
37	5083-1	Bushing, Rubber	*				
38	7833	Cable Clamp (7/8 x 1/4)	1				
39	5020	Fuel Filter	1				
40	NS	Fuel Line, Engine (Rehlko/Kohler)	*				
41	8023	Fuel Tank Support	1				


ENGINE GROUP

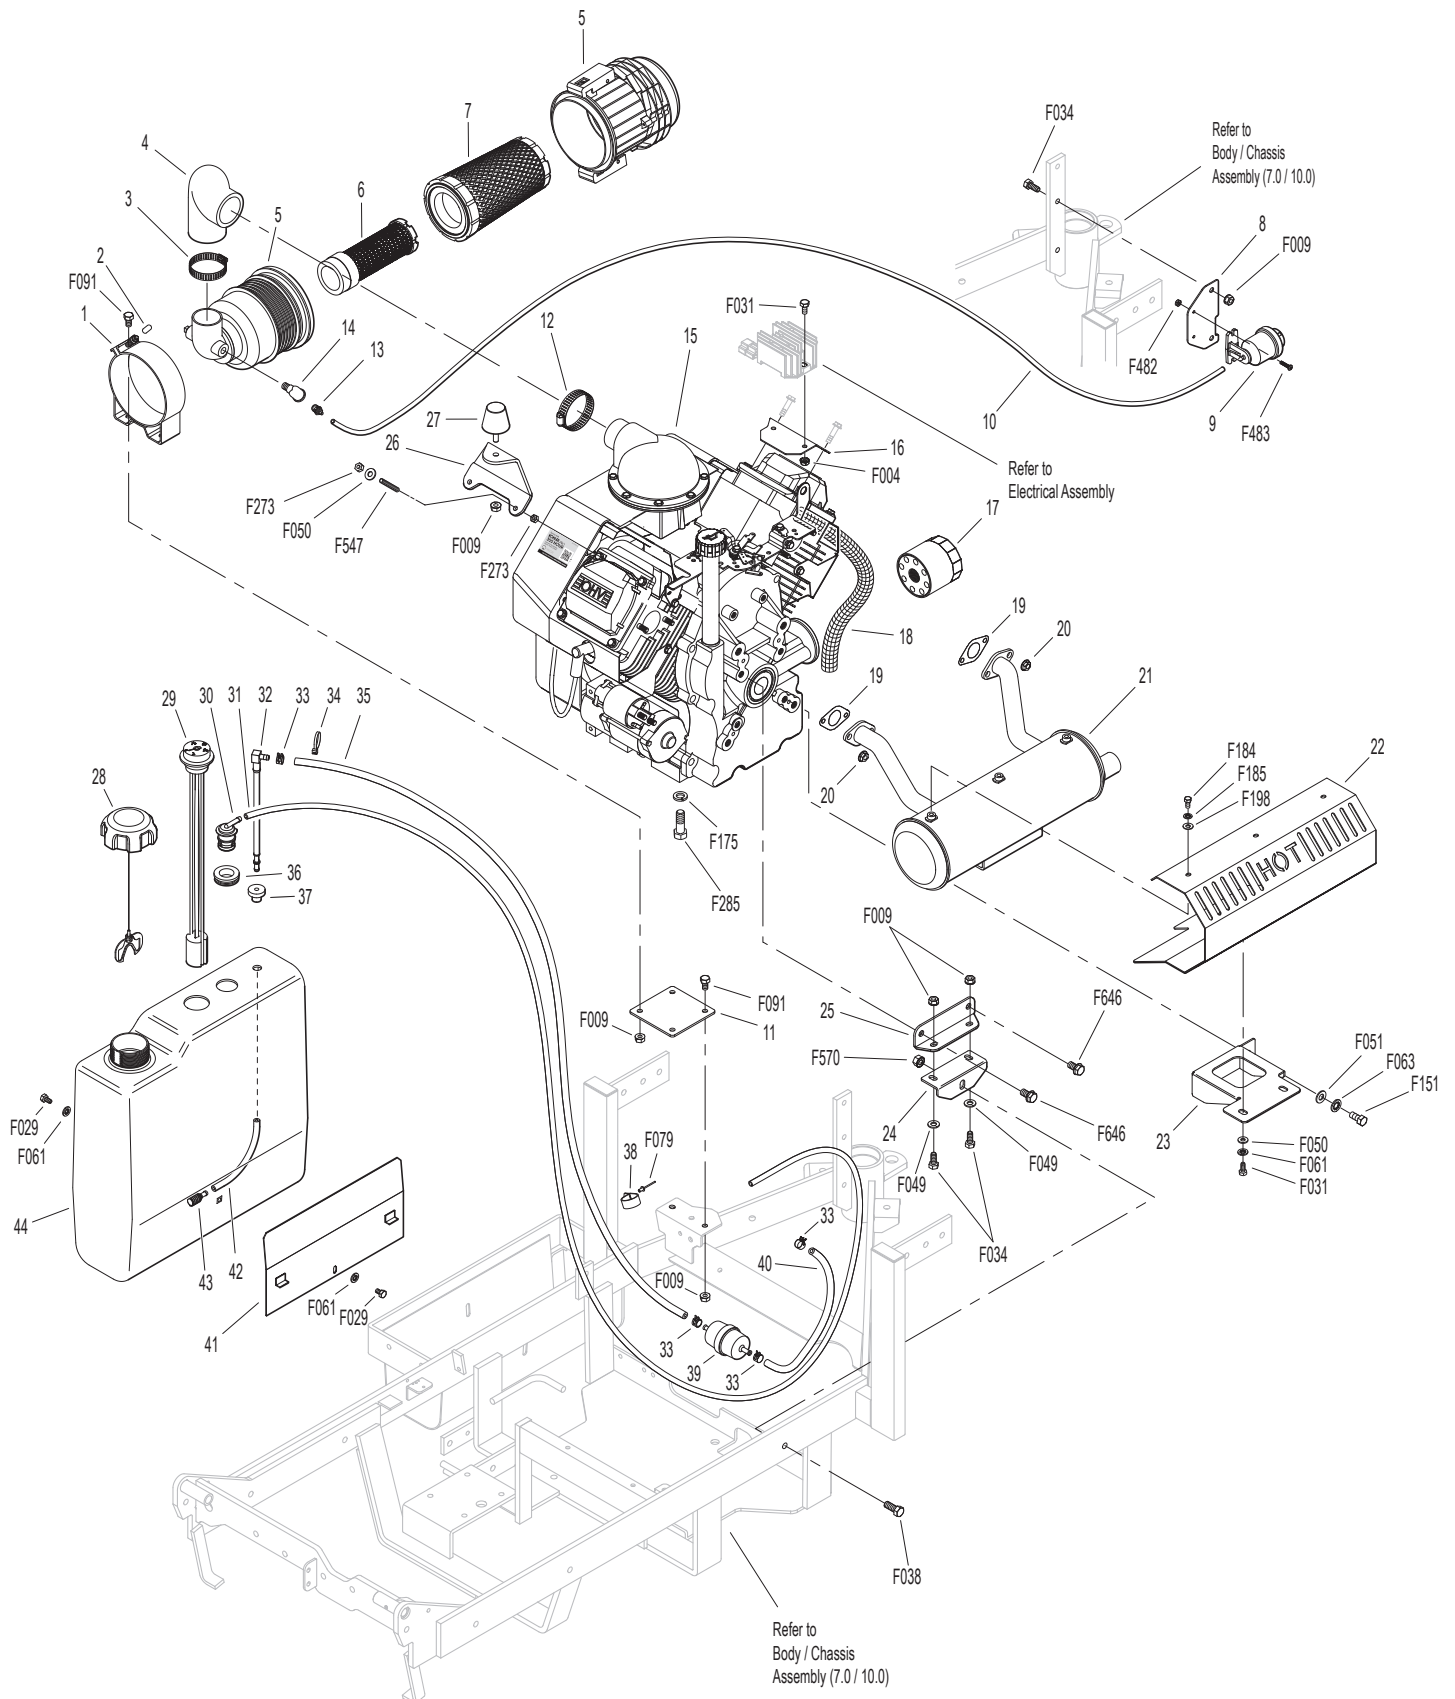

HYDROSTATIC GROUND DRIVE ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
TOPS™ Components				40	5847	Plastic Tip	2
1	5024-22	3/8 Hose Barb x #6/ORB 90 Degree	2	41	5057	Lockout Cam (Includes Item # F081)	2
2	5879-11	Hose Clamp (16mm)	6	42	5028-5	Lockout Lever	2
3	M358	High Temp Hose (3/8" x 8-1/4")	1	43	5027-5	Lockout Mount	1**
4	5024-30	Pulley	1	Deck Support Arm Assemblies			
5	5025-56	Input Housing Assembly (Includes Items # 6, F101, F182, F398, F569, F659 & F669)	1	44	6430-10	Outboard Mount, LH	1
6	5024-17	O-Ring 1/16"	1	45	6431-1	Deck Support Arm, LH (Includes Item # 49)	1
7	5025-51	Hydro Pump Assembly (Includes Items # 4, 5, 8, 21, F101, F182, F659 & F669)	1	46	5775-2	Hitch Pin (# 6)	2
8	5024-15	1/4-18 Pipe Thread, 3/8 Barb Fitting	2	47	6431-2	Deck Support Arm, RH (Includes Item # 49)	1
9	M358	High Temp Hose (3/8" x 8-3/4")	1	48	6430-9	Outboard Mount, RH	1
10	5024-13	Transmission Oil Filter	1	49	5830	Grease Fitting	2
11	5975-3	Cable Tie (50# x 7")	1	50	6840-1	Support Arm Bushing (2-1/16)	2
12	6206-1	Air Vent Valve	3	Transmission Repair Parts			
13	5024-27	1-1/16"-12 Socket Plug Reservoir Cap	1	51	5025-16	Control Shaft Repair Kit	*
14	5024-25	Oil Reservoir Sight Gauge	1	52	5025-13	Hydro Input Shaft / Repair Kit (Includes Items # 53-55)	*
15	5024-9	90 Degree Fitting W/Filter	1	53	5025-8	Bearing, Input Shaft	*
16	5025-46	Oil Tank Reservoir Assembly (Includes Items # 8, 12-15 & 17-18)	1	54	5025-7	Snap Ring	*
17	7427-12	Brass Pipe Plug (1/4 NPTF)	1	55	NS	Seal, Input Shaft	*
18	5024-23	90 Degree Male Fitting, 3/8 Barb 1/4 Thread	1	56	5025-53	O-Ring & Plug	*
19	M358	High Temp Hose (3/8" x 6-1/2")	1	Fasteners			
20	5024-11	Left Hand Hose (7-3/8")	1	F004	1/4-20 Keps Nut		2
21	5024-10	Elbow, 90 Degree (1/2-20 x 9/16-18)	4	F012	3/8-16 Keps Nut		2
22	5022	Reservoir/Casting Gasket	2	F023	10-24 ESNA Nut		2
23	5024-7	Transmission Reservoir Adapter Fitting	2	F027	10-24 x 5/8 PPHMS		2
24	5024-12	Right Hand Hose (9-3/8")	1	F029	1/4-20 x 1/2 Hex Bolt		3
Ground Drive Assemblies				F032	1/4-20 x 3/4 Hex Bolt		3
25	6209-11	Bridge Spacer Plate	1	F040	3/8-16 x 1-1/2 Hex Bolt		4
26	6209-8	Bridge Assembly (Includes Items # 25, F004, F032 & F120)	1***	F043	3/8-16 x 3 Hex Bolt		6
27	6243-6	Fan Guard	1	F053	7/16 Internal Star Lock Washer		4
28	6243-1	Hydro Fan, CW	1	F063	3/8 Internal Star Lock Washer		17
29	7244	Hydro Pulley (3-7/8/MV) (Includes Items # F064 & F718)	2	F064	1/8 x 1/2 Woodruff Key (#3)		4
30	5026-34	Hydrostatic Drive, CW	1	F081	A/A45D Aluminum Pop Rivet		2
31	6200-9	Gear Axle Drive Assembly (Includes Items # 12 & 32)	2	F101	10-24 x 1-1/4 SHC Screw		4
32	6207-12	Pipe Plug (1/4 NPTF)	4	F120	AN960416 Washer		2
33	5126	Cable Retainer (Uses existing bolt on Gear Axle Drive Assembly)	1	F160	External Snap Ring (.669 Shaft)		2
34	6233-1	Pinion Gear	2	F178	1/4 x 1 Fender Washer		2
35	6234	Spacer, Pinion Gear	2	F182	1/4 x 5/8 x 1/8 Washer		1
36	6201	O-Ring Seal	2	F194	7/16 x 1-1/4 x 1/8 Washer		2
37	5025-34	Hydrostatic Drive, CCW	1	F200	7/16-20 x 3 Grade 8 Bolt		2
38	6243-2	Hydro Fan, CCW	1	F211	1/4-20 x 7/8 Hex Bolt		2
Transmission Lockout Assembly				F244	7/16-20 x 3/4 Hex Bolt		2
39	5028-3	Transmission Lockout Assembly (Includes Items # 40-43, F023, F027 & F081)	*	F262	3/8-16 x 4 Hex Bolt All Thread		2
				F398	1/4-20 x 2 Hex Bolt		4
				F569	1/4-20 Flange Top Lock Nut		7
				F579	3/8-16 x 1 Hex Bolt Grade 8		4
				F659	1/8 x 1/8 x 3/4 Key		1
				F669	1/4-20 x 5/8 Hex Bolt W/Loctite		1
				F718	5/16-18 x 5/16 Set Screw (Knurl Point)		4
				* Service Part Only			
				** Part not used on Jackshaft side of tractor.			
				*** Includes Spacer Options—See Advisory Bulletin #23300.			


HYDROSTATIC GROUND DRIVE ASSEMBLIES

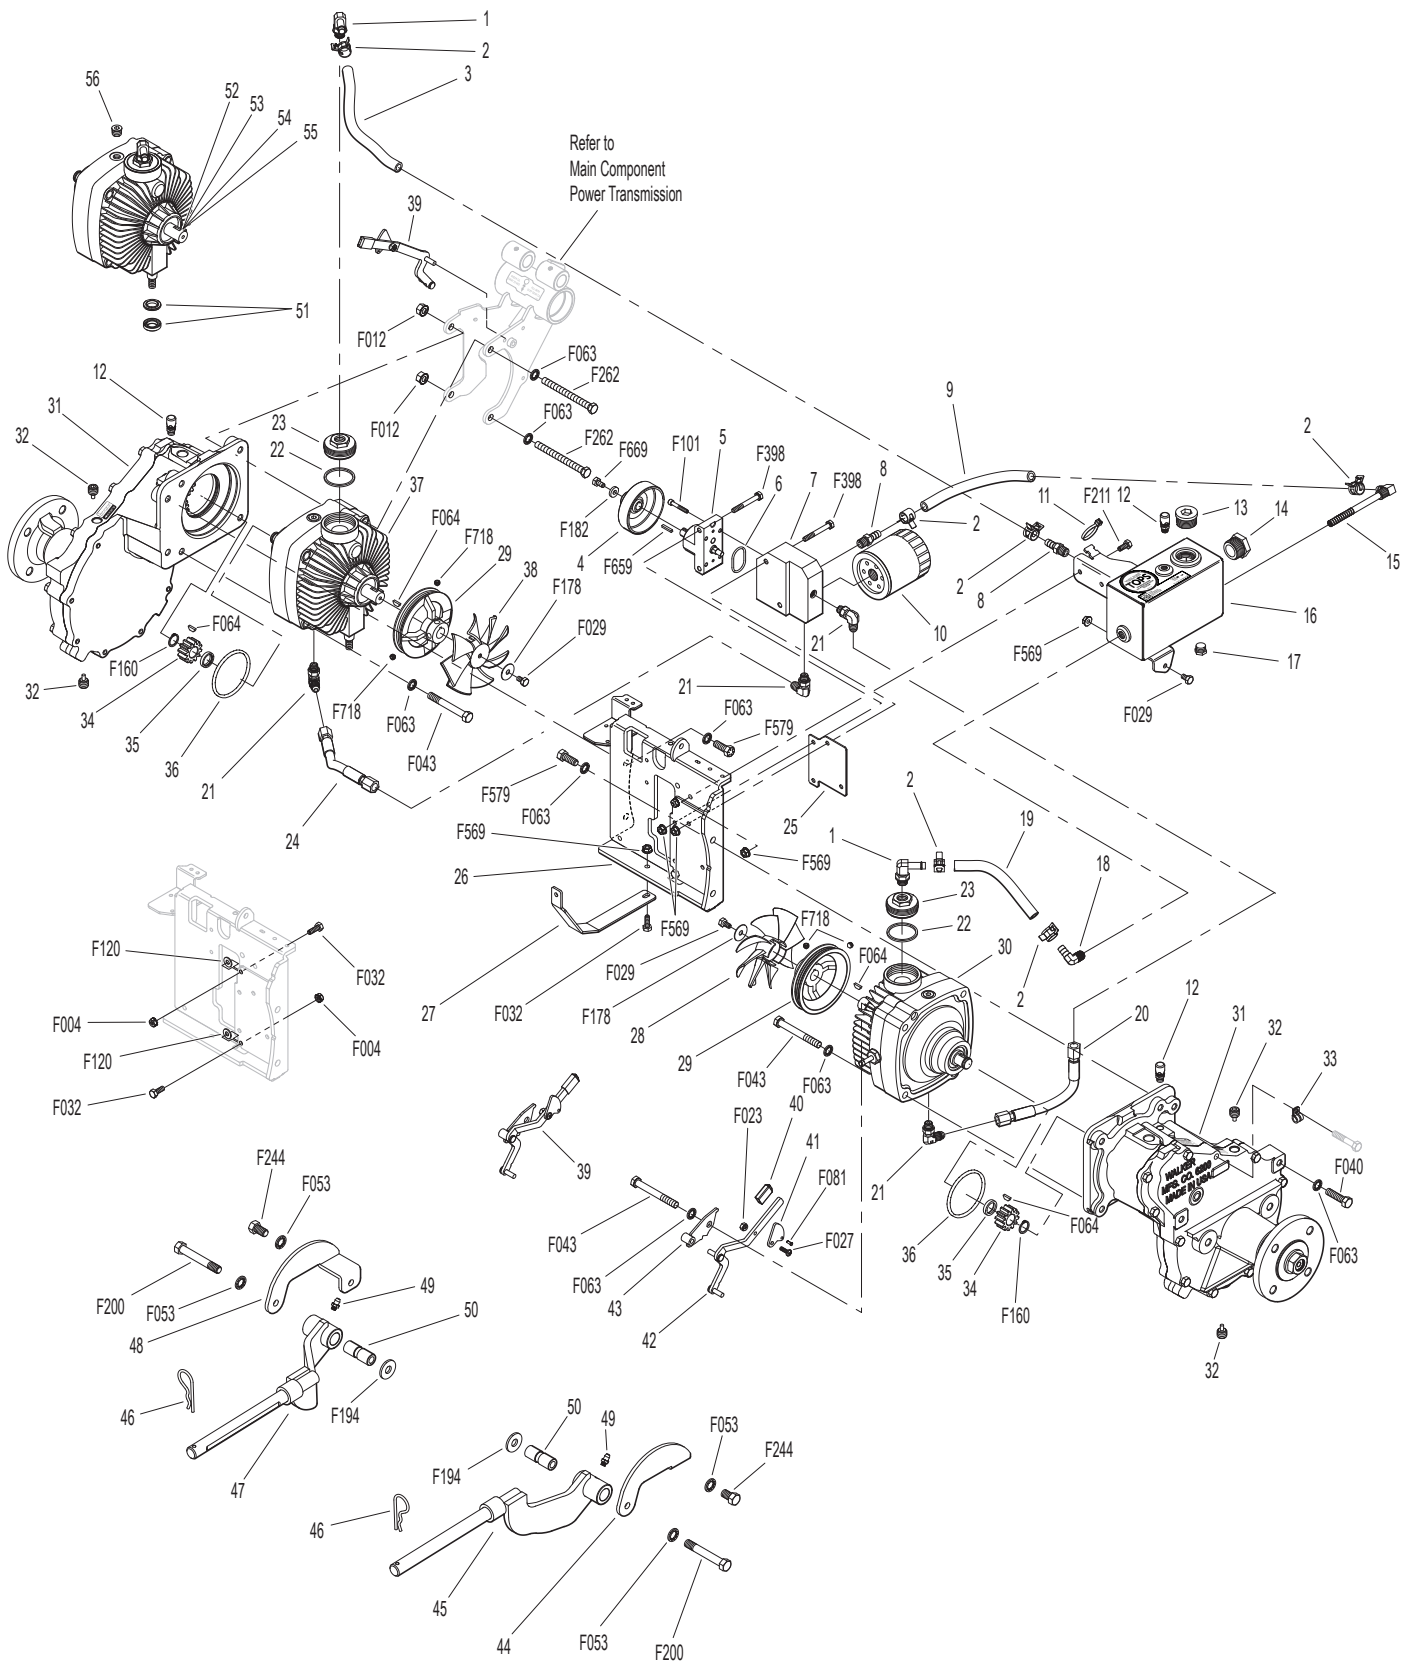

STEERING CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transmission Spring Assemblies				Steering Lever Assemblies			
1	6201-4	Shock Mount Gear Drive, RH	1	32	5217-1	Pivot Pin, Steering Lever	1
2	5146	10mm Ball Stud	4	33	5391-3	Steering Lever Support	1
3	5199-4	Steering Lever Dampener Assembly	2	34	5225-4	Extension Spring (5/8 x 2)	2
4	6201-5	Shock Mount Gear Drive, LH	1	35	5451-12	Steering Lever Assembly, LH / Adjustable (Includes Items # 2, 9-11, 17, 34, F009, F034 & F582)	1
5	5214-2	Ball Joint (5/16-24) Nylon Lined	2	36	5453-14	Steering Lever Handle, Adjustable (Includes Items # 14, F050, F188 & F390)	2
6	6212-7	Transmission Control Arm, LH	1	37	5450-12	Steering Lever Assembly, RH / Adjustable (Includes Items # 2, 9-11, 17, 34, F009, F034 & F582)	1
7	5213-3	Control Rod (6")	1	Fasteners			
8	5665-1	Compression Spring (2-1/2)	2	F004	1/4-20 Keps Nut		5
9	5463-7	Steering Lever Actuator	2	F007	5/16-18 Jam Nut		2
10	5463-5	Steering Arm Pivot Bushing (SS)	2	F009	5/16-18 Whiz Locknut		7
11	7201-2	Fiberglide Bearing 1/2"	2	F010	5/16-24 ESNA Nut		4
12	5213-4	Control Rod (14-3/4")	1	F012	3/8-16 Keps Nut		2
13	5212-7	Transmission Control Arm, RH	1	F024	5/16-24 Jam Nut		4
Forward Speed Control Assemblies				F029	1/4-20 x 1/2 Hex Bolt		2
14	5850-2	Handle Grip, Foam (5-1/2)	3	F031	1/4-20 x 5/8 Hex Bolt		1
15	7170-2	FSC Lever Assembly (Includes Item # 17)	1	F032	1/4-20 x 3/4 Hex Bolt		2
16	5975-3	Cable Tie (50# x 7")	1	F034	5/16-18 x 3/4 Hex Bolt		4
17	5830	Grease Fitting	6	F038	3/8-16 x 1 Hex Bolt		2
18	5214-4	Ball Joint (5/16-24) W/O Stud	2	F050	1/4 SAE Washer		5
19	5219	Extension Spring (3/4 x 6-3/4)	1	F051	3/8 SAE Washer		2
20	5172	Bearing, Delrin (.250 x .375 x .250)	2	F064	1/8 x 1/2 Woodruff Key (#3)		2
21	5141-6	FSC Actuator Block	1	F069	3/32 x 1/2 Cotter Pin		1
22	5140-9	FSC Brace	1	F182	1/4 x 5/8 x 1/8 Washer		1
23	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	2	F183	.312 x .700 x .074 Washer		3
24	5142-8	FSC Key	1	F186	5/64 x 1/2 Cotter Pin		1
	5140-25	FSC Control Assembly (Includes Items # 17, 23-25, 28, F182, F192 & F193)	*	F188	1/4-20 Self-Locking Nut		4
25	5140-35	FSC Friction Body (Includes Item # 17)	1	F192	3/8-24 Self-Locking Nut		1
26	5141-7	FSC Actuator Rod	1	F193	3/8 Belleville Spring Washer		3
27	5281-5	Clevis Pin (1/4 x 0.80)	1	F226	5/16-18 x 7/8 Hex Bolt		1
28	5142-9	FSC Actuator Cam	1	F316	5/16-18 x 1-3/4 Hex Bolt		1
29	5141-3	Spacer (.750 x .313 x .688)	1	F353	3/8-16 ESNA LP Nut		2
30	5141-4	FSC Rod	1	F390	1/4-20 x 7/8 Carriage Bolt		4
31	5470-2	Speed Control Stop	1	F401	.504 x .751 x .030 Washer		1
				F562	5/16-18 x 1 Set Screw		2
				F582	Washer 5/16 x 7/8 x .125		2
				F746	5/16-24 LP Nylock Nut		1
				F747	5/16-24 Hex Nut 7/16 Wide		1

* Service Part Only

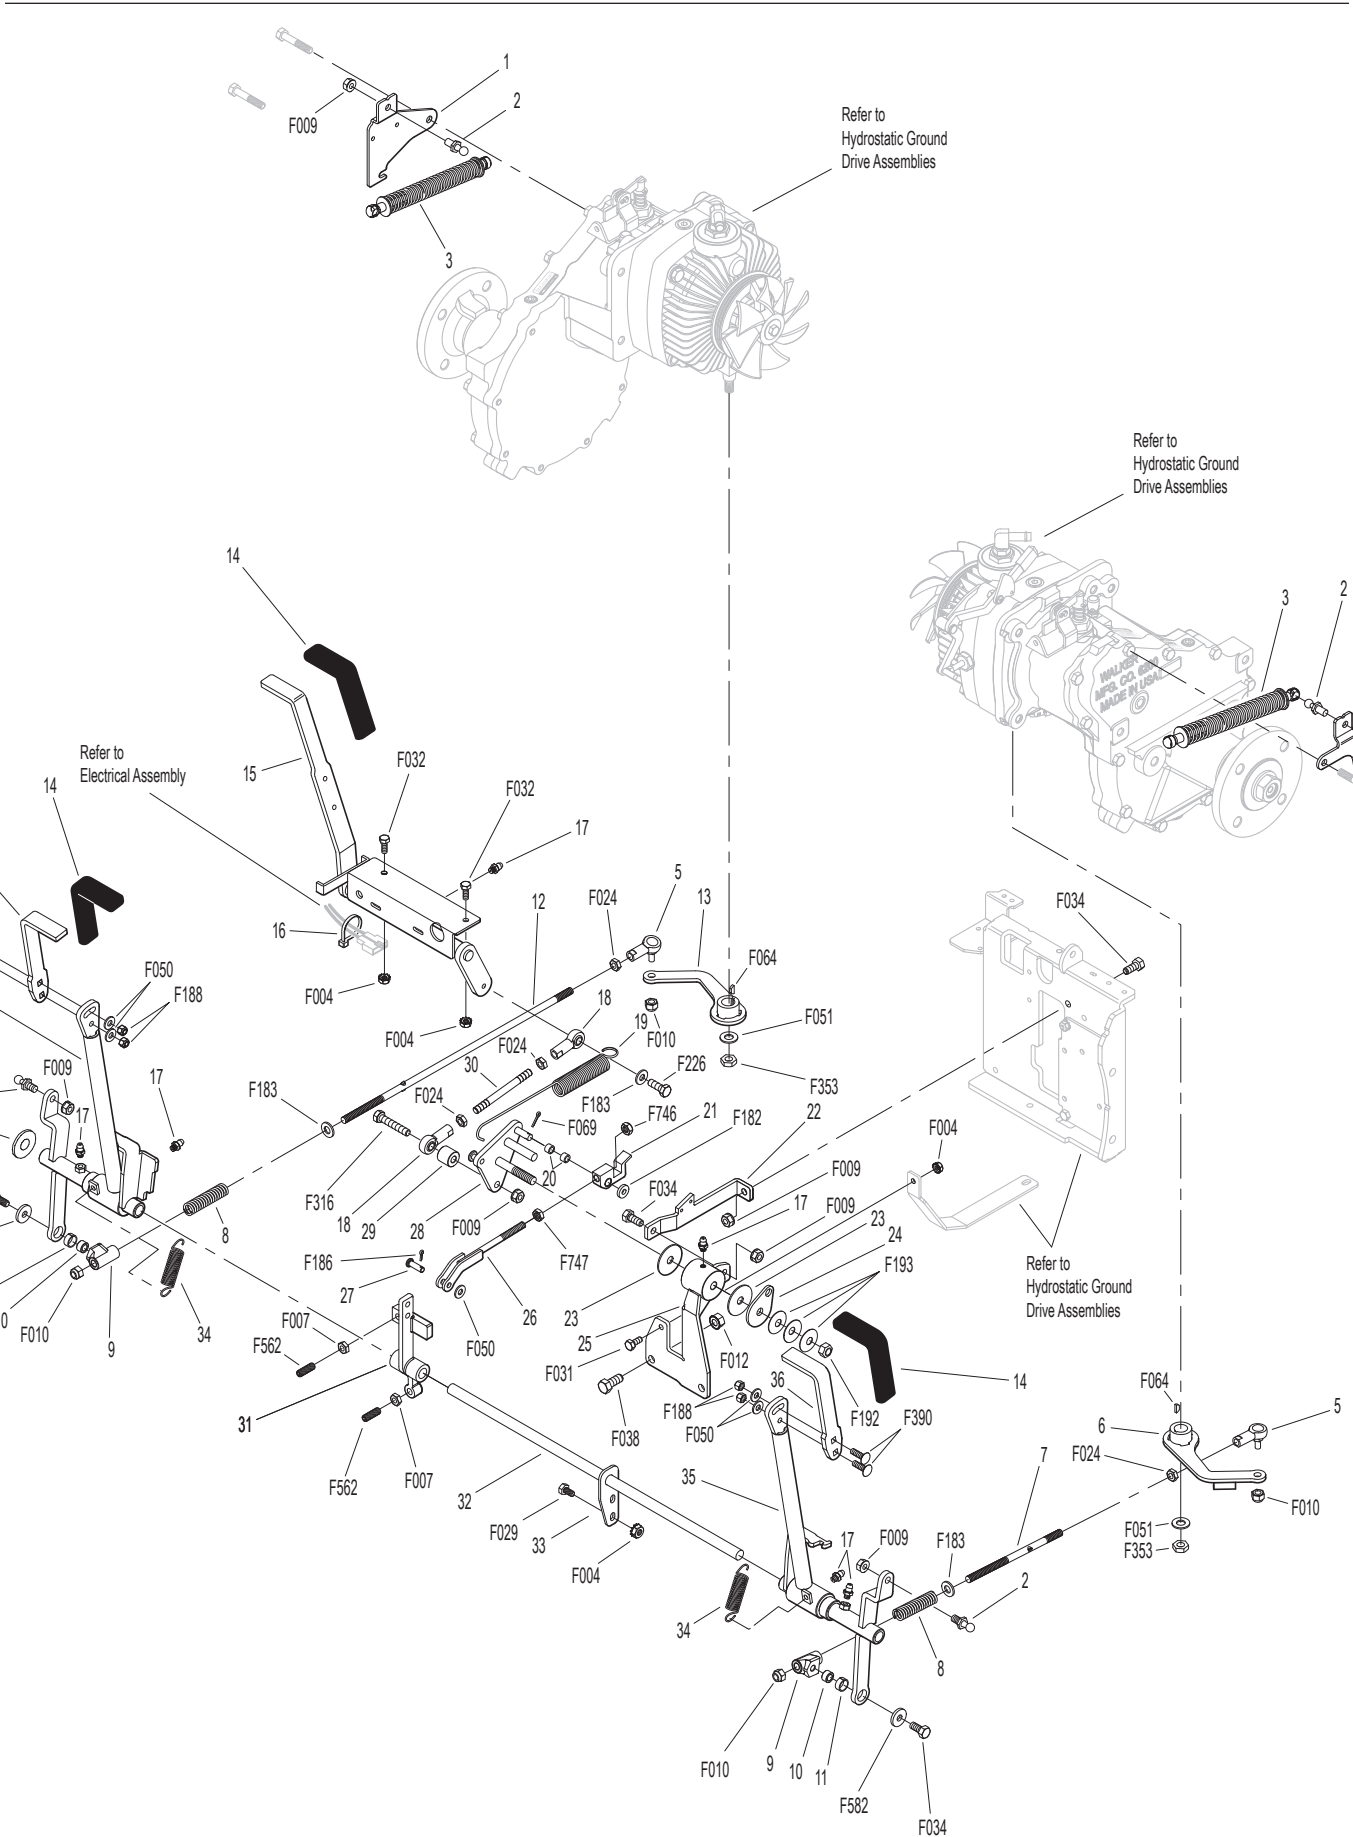


Model C19 Beginning S/N 194904
Use only genuine **Walker®** replacement parts.

THROTTLE & CHOKE CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Throttle & Choke Control Assemblies				Fasteners			
1	5108-6	Choke Control Knob, Black	1	F002	10-24 Keps Nut		2
2	5108-40	Control Lever, Choke	1	F085	3/16 Rivet Backup Washer		2
3	5108-10	Friction Washer (.125)	4	F202	10-24 x 5/8 SHC Screw GR 5		2
4	8123	Insulating Sleeve (3/8 x 6)	1	F350	1/4-20 LP Nylock		2
5	5975-1	Cable Tie (18# x 3-3/4")	2	F638	1/4-20 x 1 Carriage Bolt		2
6	8122-1	Choke Cable	1	F642	1/4 x .042 Belleville Washer		2
7	8121-1	Throttle Cable	1				
8	5172-6	Bushing, SS (.375 x .188 x .290)	2				
9	5108-29	Control Bracket	2				
10	5108-31	Control Lever, Throttle	1				
11	5108-5	Throttle Control Knob, Red	1				


THROTTLE & CHOKE CONTROL ASSEMBLIES

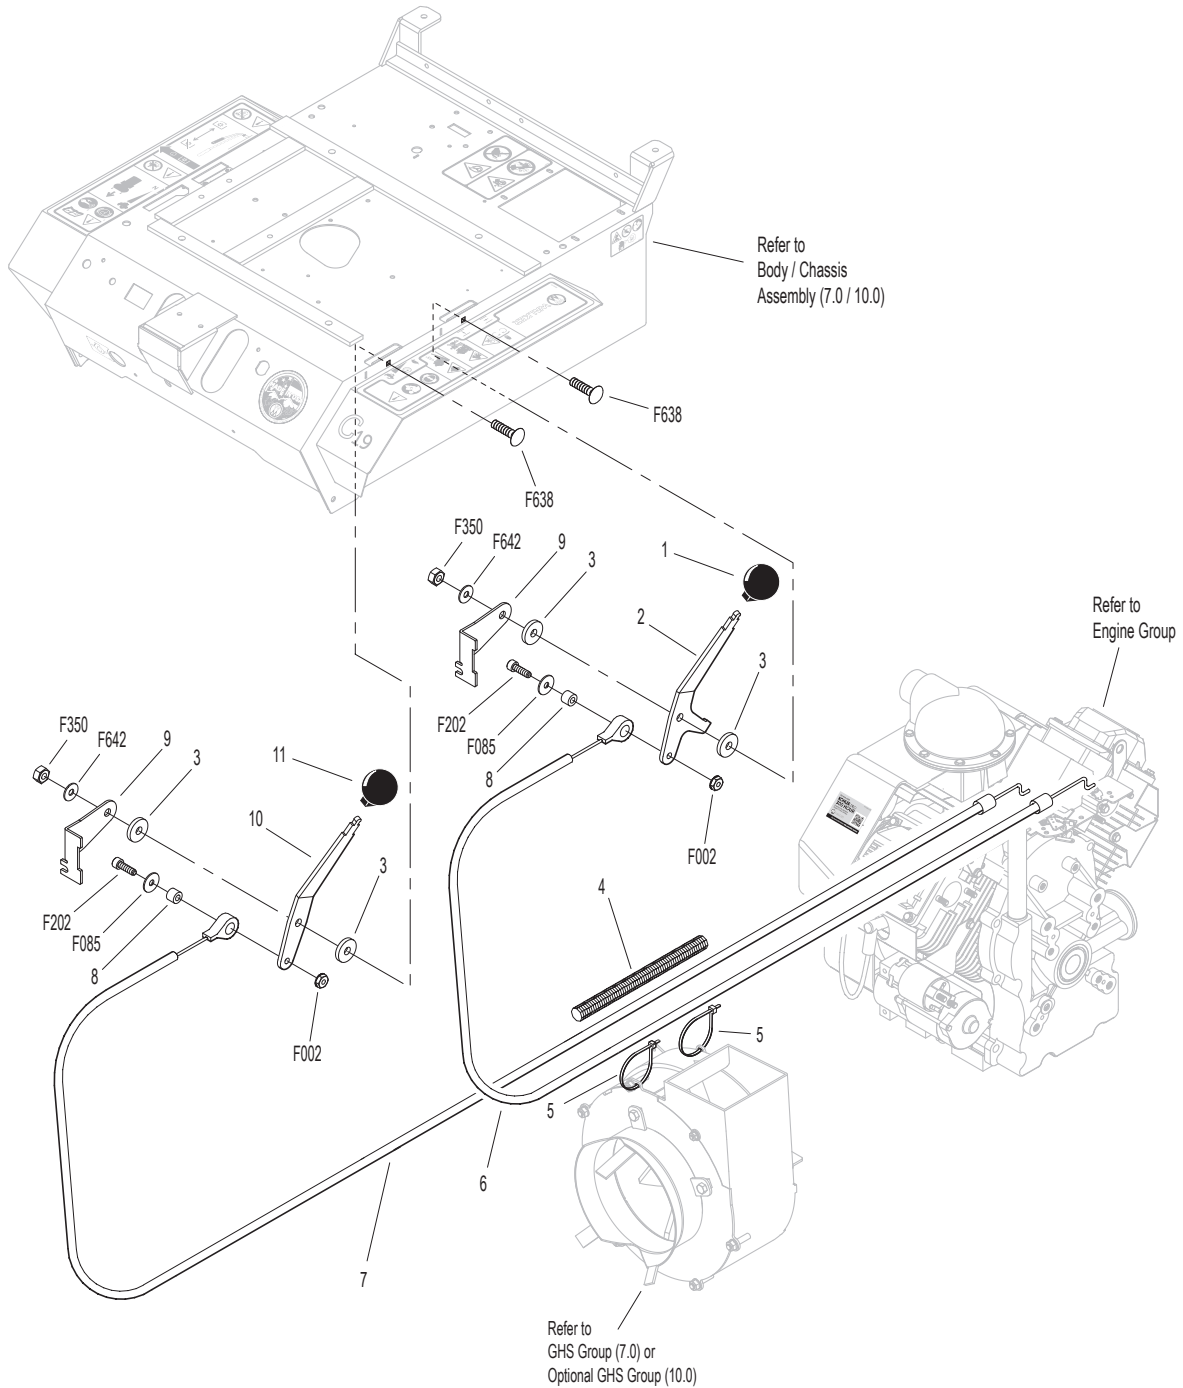

PARKING BRAKE ASSEMBLY


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Parking Brake Assembly				Fasteners			
1	7406-1	Handle Grip, Red	1	F002	10-24 Keps Nut		2
2	7406-9	Parking Brake Lever	1	F003	1/4-28 Hex Nut		1
3	7406-10	Lever Mount	1	F004	1/4-20 Keps Nut		4
4	5830	Grease Fitting	1	F025	10-24 x 3/8 PPHMS		2
5	7407	Clevis Pin (3/16 x 1/2)	2	F029	1/4-20 x 1/2 Hex Bolt		3
6	7404-6	Brake Actuator Arm	2	F032	1/4-20 x 3/4 Hex Bolt		1
7	7405	Pin, Transmission Lock	2	F054	AN960616 Washer		2
8	7402	Clevis	2	F072	1/4 "E" Retainer Ring		2
9	7408	Compression Spring (1/2 x 3/4)	2	F086	#10 SAE Washer		4
10	7415	Rubber Dust Shield (5/8 x 3/8 x 1/32)	2	F109	1/8 x 5/8 Roll Pin		2
11	5567-3	O-Ring (1/4 x 3/8)	4	F111	1/8 x 3/4 Cotter Pin		1
12	7403	Plunger Bushing, Gear Axle	2	F112	5/8 x 1-1/4 x .03 Washer		2
13	7404-7	Brake Actuator Mount	2	F127	1/16 x 1/2 Cotter Pin		4
14	7412	Clevis Pin (3/16 x 5/8)	2	F261	AN960616L Washer		5
15	5833	Cable Clamp (1/4)	2	F287	1/4-28 Keps Nut		1
16	7410	Brake Control Cable, LH (25.5")	1				
17	7409	Brake Control Cable, RH (20.5")	1				
18	7401-3	Cable Mount Bracket	1				
19	7401-1	Cable Pull Rod	1				
20	5552	Ball Joint (1/4-28)	1				

PARKING BRAKE ASSEMBLY

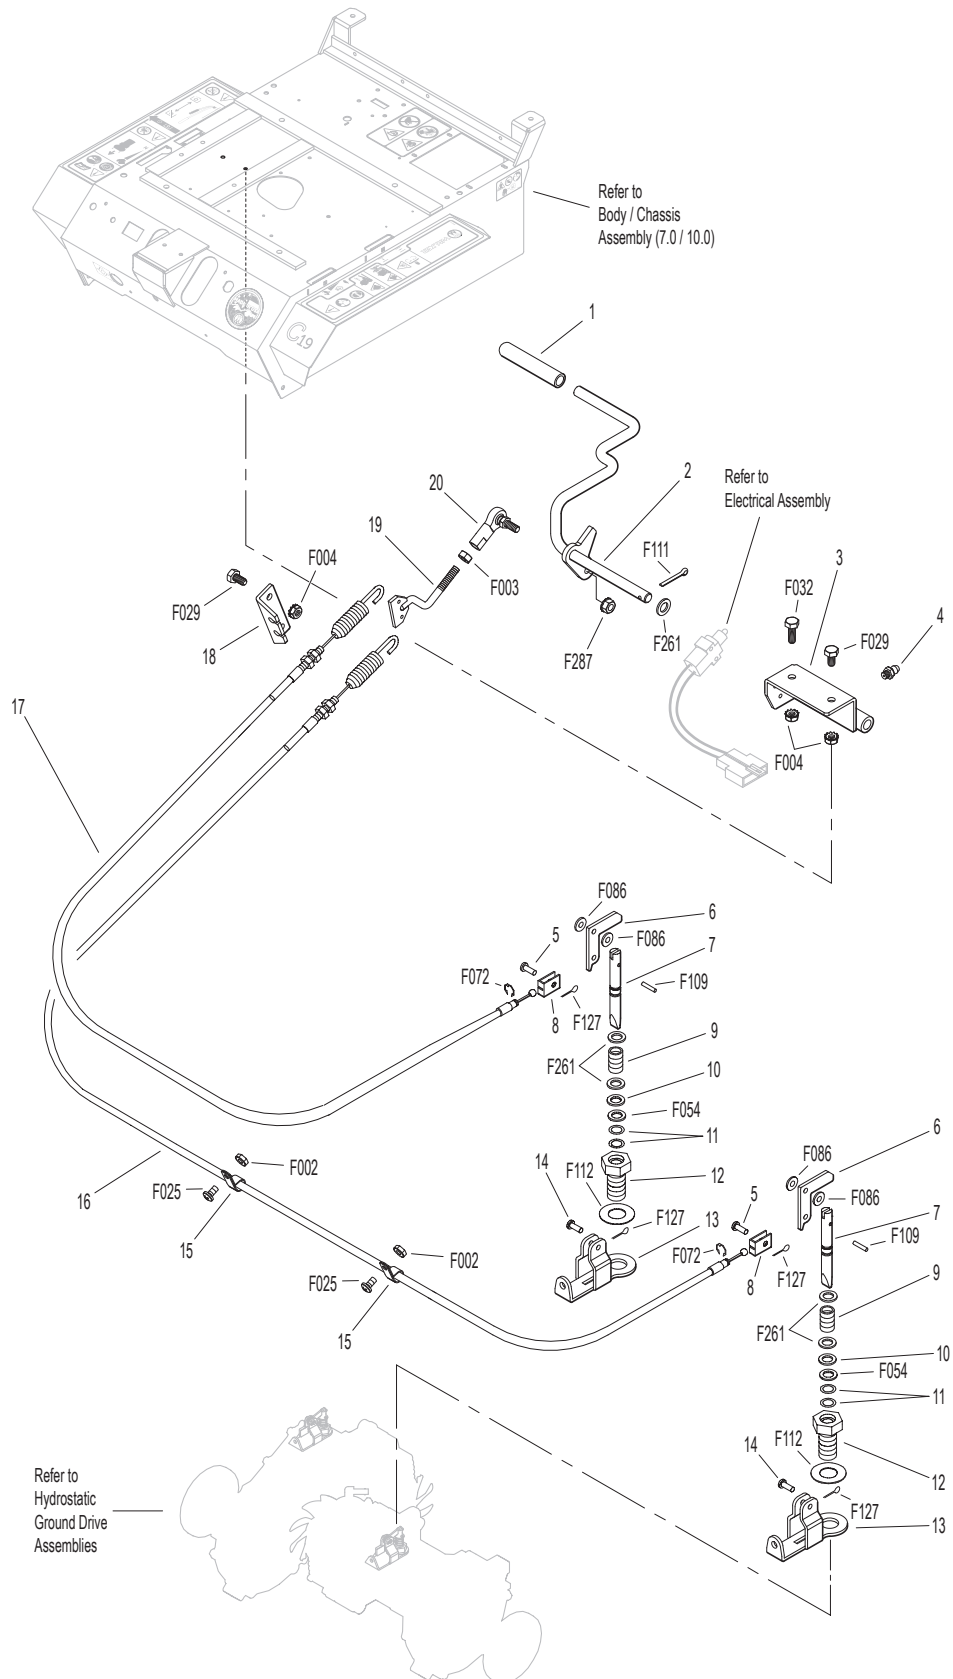

GHS GROUP (7.0)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Delivery Chute Assembly				Fasteners			
1	5515-4	Elbow Delivery Spout	1	F002	10-24 Keps Nut		4
2	5592-24	Backing Plate, Grass-Pak® Switch	1	F004	1/4-20 Keps Nut		3
3	5592-23	Grass-Pak® Housing Spacer	1	F009	5/16-18 Whiz Locknut		7
4	5578	Rear Clip, Chute Mount	1	F012	3/8-16 Keps Nut		1
5	5577	Side Clip, Chute Mount	2	F023	10-24 ESNA Nut		2
6	7511-5	Outside Chute Cover Lip	1	F029	1/4-20 x 1/2 Hex Bolt		3
7	7511-4	Inside Chute Cover Lip	1	F034	5/16-18 x 3/4 Hex Bolt		1
8	5511-3	Delivery Chute W/Clips, 7.0 (Includes Items # 4, 5 & F411)	1	F039	3/8-16 x 1-1/4 Hex Bolt		1
9	7530-4	Body Chute (10.5 Blower)	1	F040	3/8-16 x 1-1/2 Hex Bolt		1
Blower Belt Tightener Assembly				F050	1/4 SAE Washer		1
				F051	3/8 SAE Washer		1
				F054	AN960616 Washer		1
				F067	3/16 x 3/16 x 1 Key		1
10	7238-6	Blower Drive Pulley (Includes Items # F075, F114 & F231)	1	F075	5/16-18 x 1/2 SQH Set Screw		2
11	7234-2	Blower Belt (Micro-V)	1	F079	A/A66D Aluminum Pop Rivet		2
12	7239-1	Blower Pulley (Micro-V) (Includes Items # F067, F075 & F114)	1	F090	1/4-20 x 2-1/2 Hex Bolt		1
13	7364-2	Torsion Spring	1	F114	5/16-18 x 5/8 SQH Set Screw		2
14	7201-3	Fiberglide Bearing	2	F128	10-24 x 3/8 PTHMS		4
15	5830-3	Grease Fitting (45 Degree)	1	F131	5/16-18 x 1/2 Hex Bolt		3
16	7364-1	Blower Belt Tightener Arm	1	F132	1/4-20 x 2-3/4 Hex Bolt		1
17	7201-4	Inner Race (1-1/2)	1	F168	5/16 Split Lock Washer		3
18	5841	Retainer Washer (3/8 x 1-1/4)	1	F217	7/16-14 Hex Nut		1
19	5245	Idler Pulley (3")	1	F218	7/16 Split Lock Washer		1
Blower Assembly				F231	1/4 x 3/4 Woodruff Key (# 806)		1
				F281	7/16-14 x 1-3/4 Hex Bolt		1
20	7544	Blower Assembly (10.5") (Includes Items # 21-25, F004, F009, F029, F050, F131, F168 & F426)	*	F411	3/16 Bulbex Rivet		12
21	5268	Bearing W/Collar (3/4)	2	F426	1/4-20 x 1/2 Carriage Bolt		1
22	7544-3	Blower Housing (10.5")	1	F570	3/8-16 Flange Top Lock Nut		2
23	7545-2	Blower Output Shaft (10.5")	1	F577	10-24 x 5/8 Carriage Bolt		2
24	7545	Blower Wheel (10.5")	1	F743	3/8-16 x 2-3/8 Hex Bolt		1
25	7543-1	Blower Faceplate (10.5")	1				
26	7526	Intake Tube (10.5" Blower)	1				
27	5595-2	Intake Cover, GHS	**				
28	7528-5	Skid Bar	1				
				* Service Part Only			
				** Plugs Blower when GHS is not in use. Furnished only with Mulching Decks, SD Decks used on a GHS Tractor, Rotary Broom Attachment and Snowblower Attachment. Use of this part may be replaced by installing Blower Lockout Kit (P/N 7541-1).			

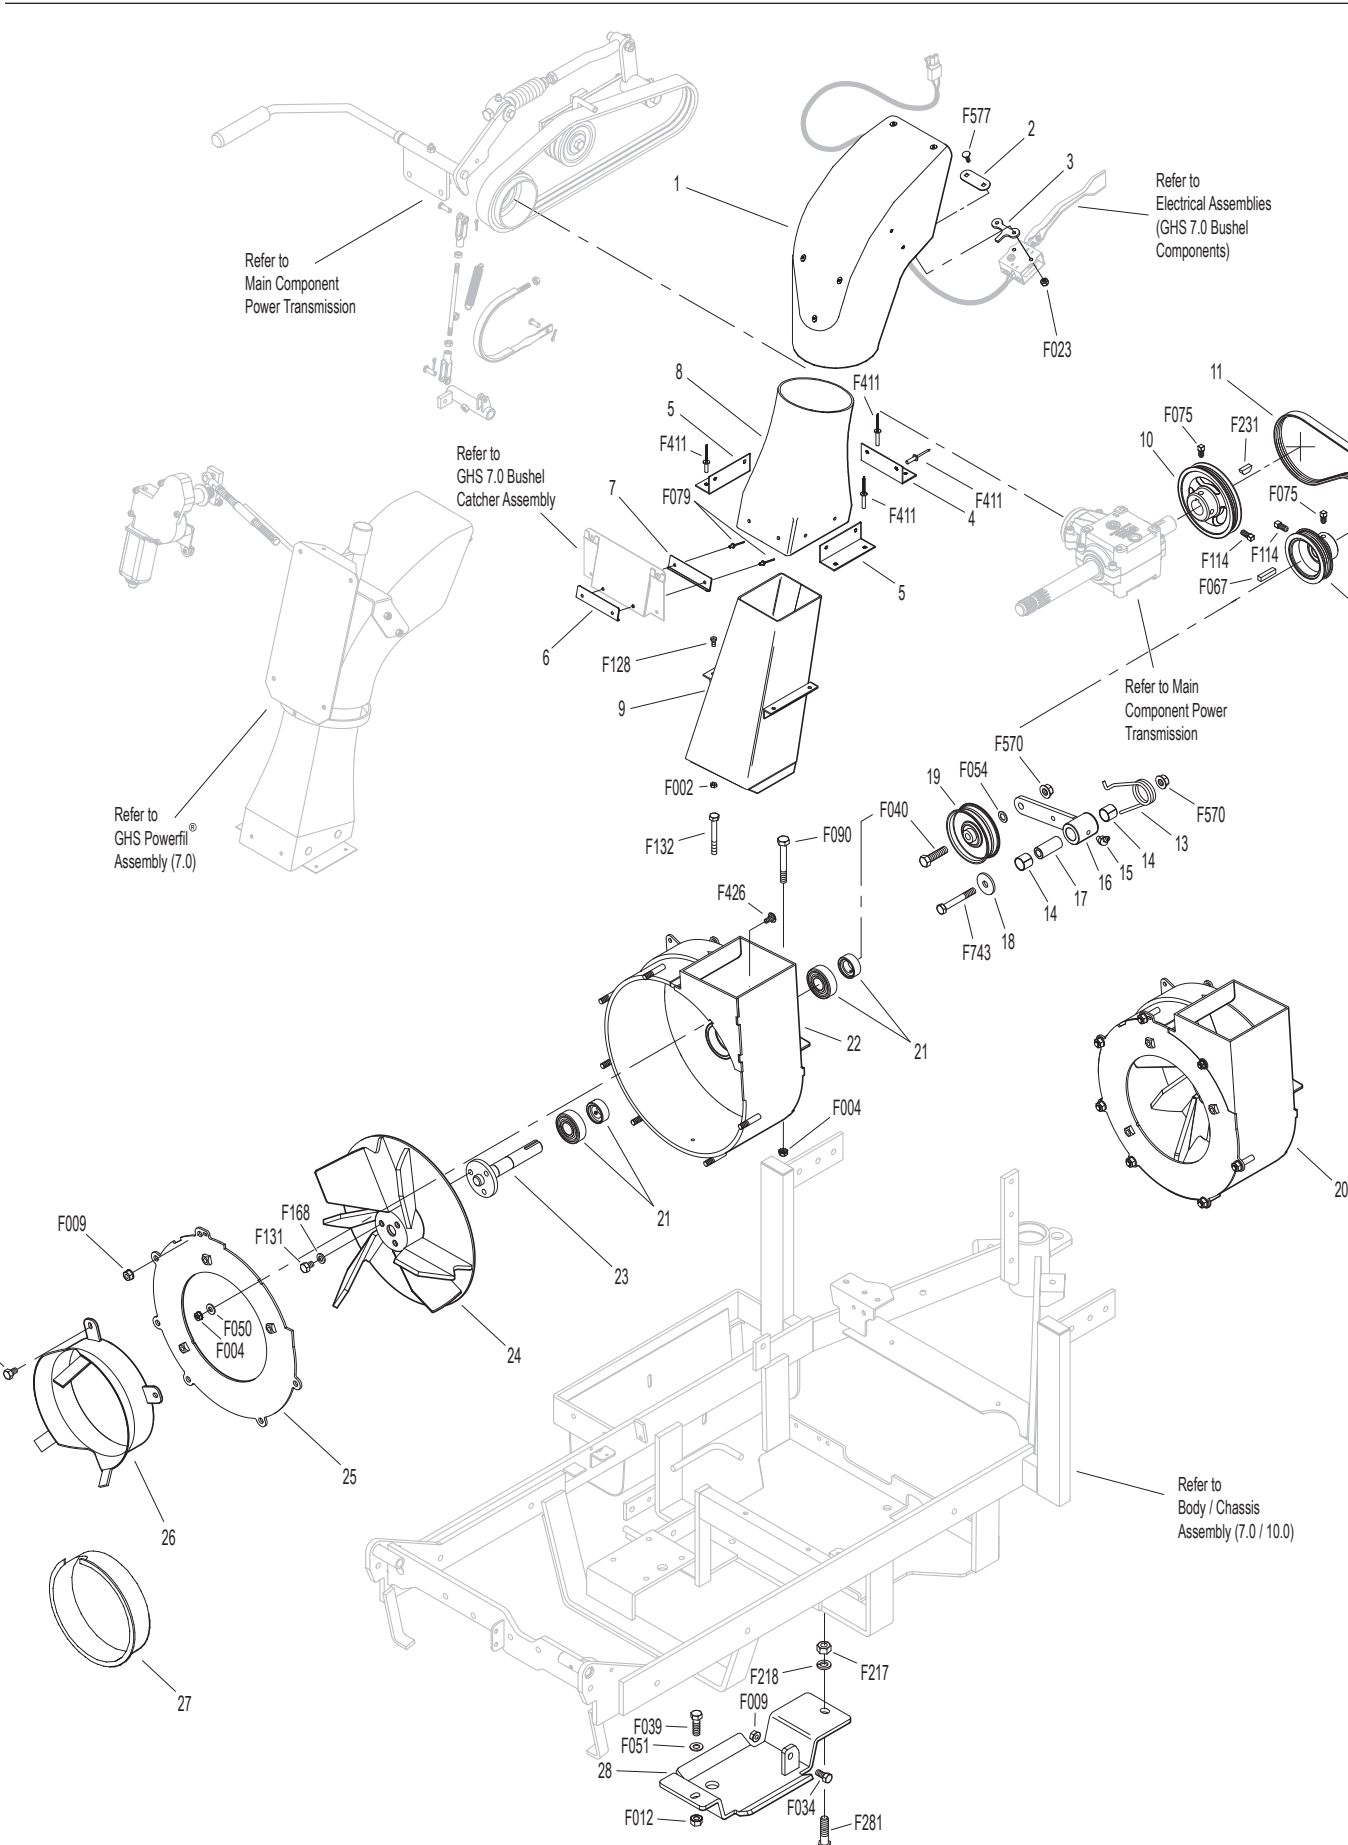

GHS GROUP (10.0)


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Delivery Chute Assembly				Fasteners			
1	5515-4	Elbow Delivery Spout	1	F002	10-24 Keps Nut		4
2	5592-24	Backing Plate, Grass-Pak® Switch	1	F004	1/4-20 Keps Nut		3
3	5592-23	Grass-Pak® Housing Spacer	1	F009	5/16-18 Whiz Locknut		7
4	5578	Rear Clip, Chute Mount	1	F012	3/8-16 Keps Nut		1
5	5577	Side Clip, Chute Mount	2	F023	10-24 ESNA Nut		2
6	8511-1	Delivery Chute W/Clips (Includes Items # 4, 5, 7, F362 & F411)	1	F029	1/4-20 x 1/2 Hex Bolt		3
7	5578-10	Front Clip, Chute Mount	1	F034	5/16-18 x 3/4 Hex Bolt		1
8	7530-4	Body Chute (10.5 Blower)	1	F039	3/8-16 x 1-1/4 Hex Bolt		1
Blower Belt Tightener Assembly				F040	3/8-16 x 1-1/2 Hex Bolt		1
				F050	1/4 SAE Washer		1
				F051	3/8 SAE Washer		1
				F054	AN960616 Washer		1
9	7238-6	Blower Drive Pulley (Includes Items # F075, F114 & F231)	1	F067	3/16 x 3/16 x 1 Key		1
10	7234-2	Blower Belt (Micro-V)	1	F075	5/16-18 x 1/2 SQH Set Screw		2
11	7239-1	Blower Pulley (Micro-V) (Includes Items # F067, F075 & F114)	1	F079	A/A66D Aluminum Pop Rivet		6
12	7364-2	Torsion Spring	1	F090	1/4-20 x 2-1/2 Hex Bolt		1
13	7201-3	Fiberglide Bearing	2	F114	5/16-18 x 5/8 SQH Set Screw		2
14	5830-3	Grease Fitting (45 Deg.)	1	F128	10-24 x 3/8 PTHMS		4
15	7364-1	Blower Belt Tightener Arm	1	F131	5/16-18 x 1/2 Hex Bolt		3
16	7201-4	Inner Race (1-1/2)	1	F132	1/4-20 x 2-3/4 Hex Bolt		1
17	5841	Retainer Washer (3/8 x 1-1/4)	1	F168	5/16 Split Lock Washer		3
18	5245	Idler Pulley (3")	1	F217	7/16-14 Hex Nut		1
Blower Assembly				F218	7/16 Split Lock Washer		1
				F231	1/4 x 3/4 Woodruff Key (# 806)		1
				F281	7/16-14 x 1-3/4 Hex Bolt		1
19	7544	Blower Assembly (10.5") (Includes Items # 20-24, F004, F009, F029, F050, F131, F168 & F426)	1	F362	A/A62D Alum. Pop Rivet (3/16D x 13/32L)		2
20	5268	Bearing W/Collar (3/4)	2	F411	3/16 Bulbex Rivet		6
21	7544-3	Blower Housing (10.5)	1	F426	1/4-20 x 1/2 Carriage Bolt		1
22	7545-2	Blower Output Shaft (10.5)	1	F570	3/8-16 Flange Top Lock Nut		2
23	7545	Blower Wheel (10.5")	1	F577	10-24 x 5/8 Carriage Bolt		2
24	7543-1	Blower Faceplate (10.5)	1	F743	3/8-16 x 2-3/8 Hex Bolt		1
25	7526	Intake Tube (10.5 Blower)	1	* Plugs Blower when GHS is not in use. Furnished only with Mulching Decks, SD Decks used on a GHS Tractor, Rotary Broom Attachment and Snowblower Attachment. Use of this part may be replaced by installing Blower Lockout Kit (P/N 7541-1).			
26	5595-2	Intake Cover / GHS	*				
27	7528-5	Skid Bar	1				



GHS POWERFIL® ASSEMBLY (7.0)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
7.0 GHS Powerfil® Assembly				Fasteners			
1	5552	Ball Joint (1/4-28)	2		F003	1/4-28 Hex Nut	2
2	5554	Actuator Arm	1		F023	10-24 ESNA Nut	10
3	5553-1	Compression Spring (1/2 x 2)	2		F054	AN960616 Washer	2
4	5553-3	Bushing, Powerfil® Actuator	4		F085	3/16 Rivet Backup Washer	1
5	5558-2	Powerfil® Actuator Rod	1		F101	10-24 x 1-1/4 SHC Screw	1
	5549	Actuator Rod Assembly (Includes Items # 1, 3-5, F003, F287 & F704)	*		F109	1/8 x 5/8 Roll Pin	1
6	5551-3	Bearing Cap, Powerfil®	1		F287	1/4-28 Keps Nut	2
7	5551-1	Pivot Bearing (#S3PP)	2		F612	10-24 x 5/8 Truss Head Torx	7
8	5518-6	Pivot, Delivery Spout	1		F613	10-24 x 1/2 Truss Head Torx	2
9	5517-2	Pivot Mount	1		F704	1/4-28 x 6-1/2 Hex Bolt	1
10	5519-5	Actuator Motor (12V) (Includes Items # 11 & 12)	1			Grade 5, Clear Zinc	
11	5519-2	Motor Mount Washer	*	* Service Part Only			
12	5519-3	Motor Mount Nut (5/8-24)	*				


GHS POWERFIL® ASSEMBLY (7.0)

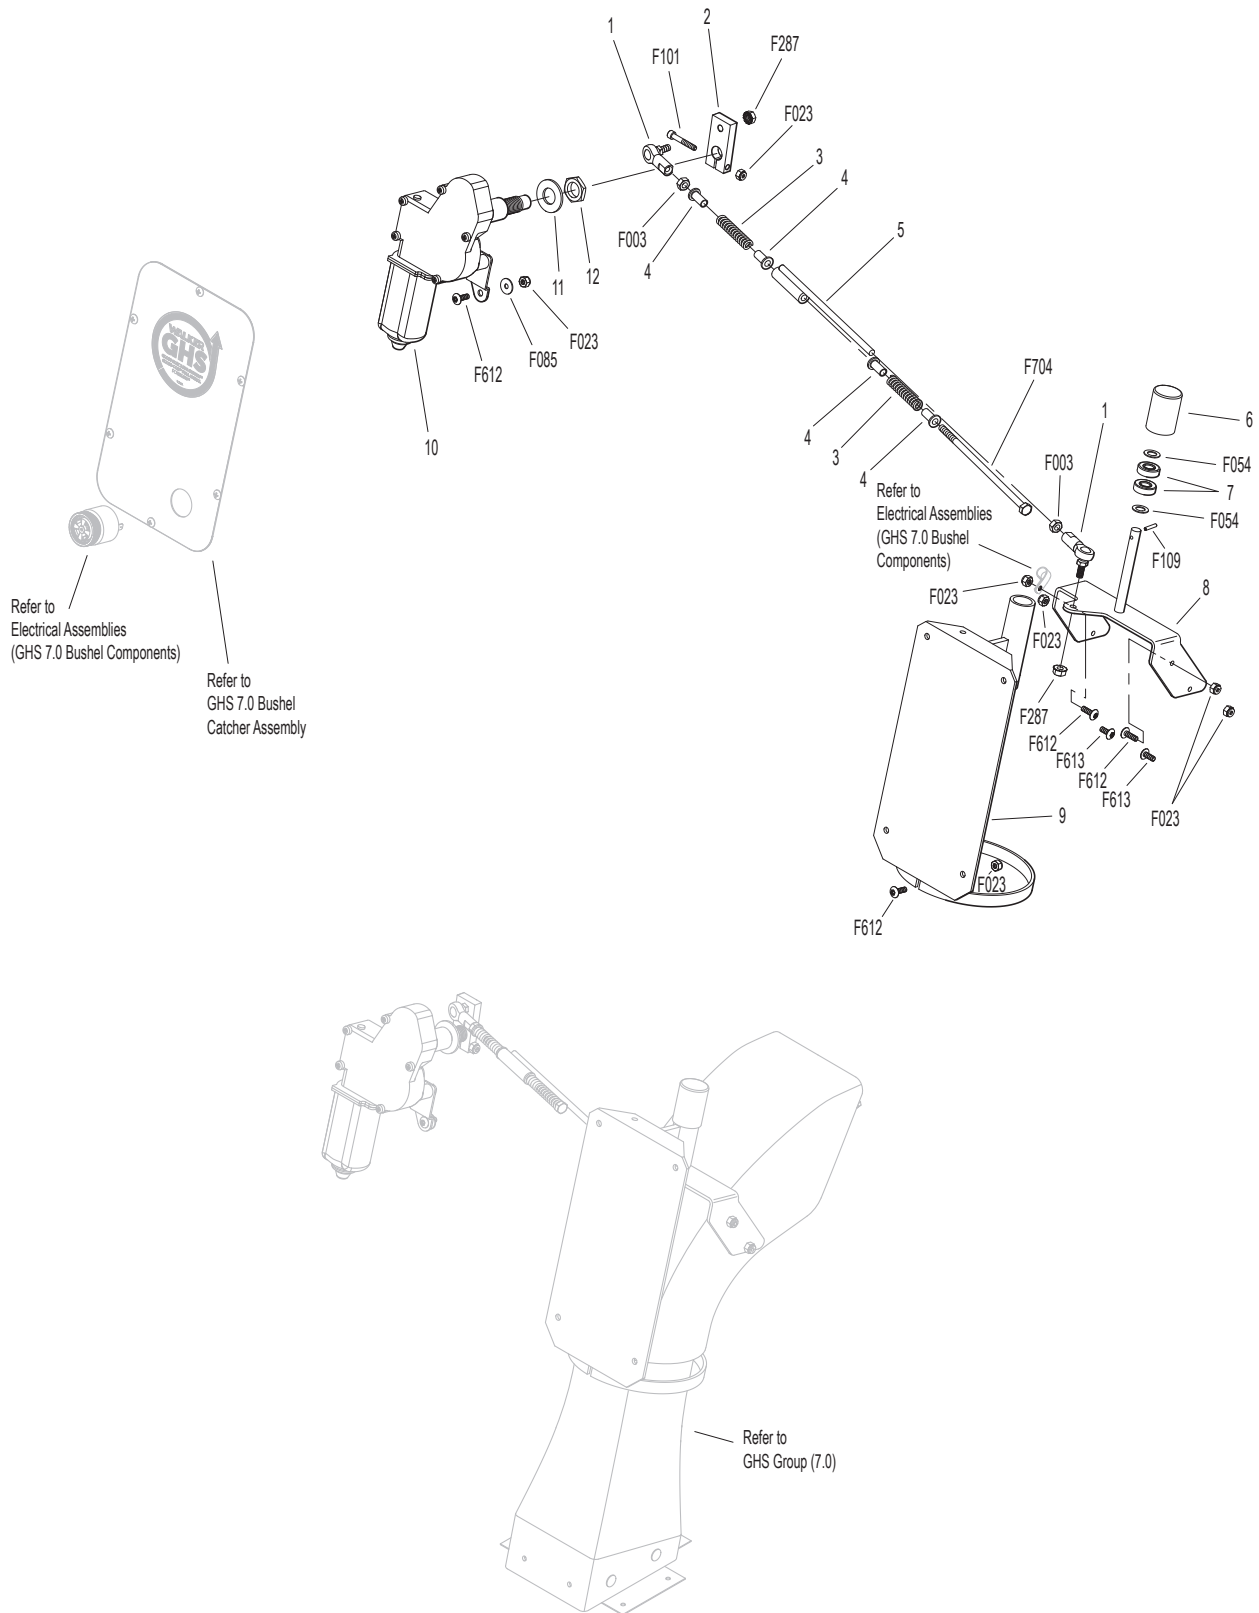

GHS POWERFIL® ASSEMBLY (10.0)


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
10.0 GHS Powerfil® Assembly				Fasteners			
1	5552	Ball Joint (1/4-28)	2		F003	1/4-28 Hex Nut	2
2	5554	Actuator Arm	1		F023	10-24 ESNA Nut	10
3	5551-3	Bearing Cap, Powerfil®	1		F054	AN960616 Washer	2
4	5551-1	Pivot Bearing (#S3PP)	2		F085	3/16 Rivet Backup Washer	1
5	5518-6	Pivot, Delivery Spout	1		F101	10-24 x 1-1/4 SHC Screw	1
6	5517-2	Pivot Mount	1		F109	1/8 x 5/8 Roll Pin	1
7	5553-3	Bushing, Powerfil® Actuator	4		F287	1/4-28 Keps Nut	2
8	5553-1	Compression Spring (1/2 x 2)	2		F612	10-24 x 5/8 Truss Head Torx	7
9	5558-2	Powerfil® Actuator Rod	1		F613	10-24 x 1/2 Truss Head Torx	2
	5549	Actuator Rod Assembly (Includes Items # 1, 7-9, F003, F287 & F704)	*		F704	1/4-28 x 6-1/2 Hex Bolt Grade 5, Clear Zinc	1
10	5519-3	Motor Mount Nut (5/8-24)	*	* Service Part Only			
11	5519-2	Motor Mount Washer	*				
12	5976-2	Grommet (3/16 x 3/4)	1				
13	5519-5	Actuator Motor (12V) (Includes Items # 10 & 11)	1				

GHS POWERFIL® ASSEMBLY (10.0)

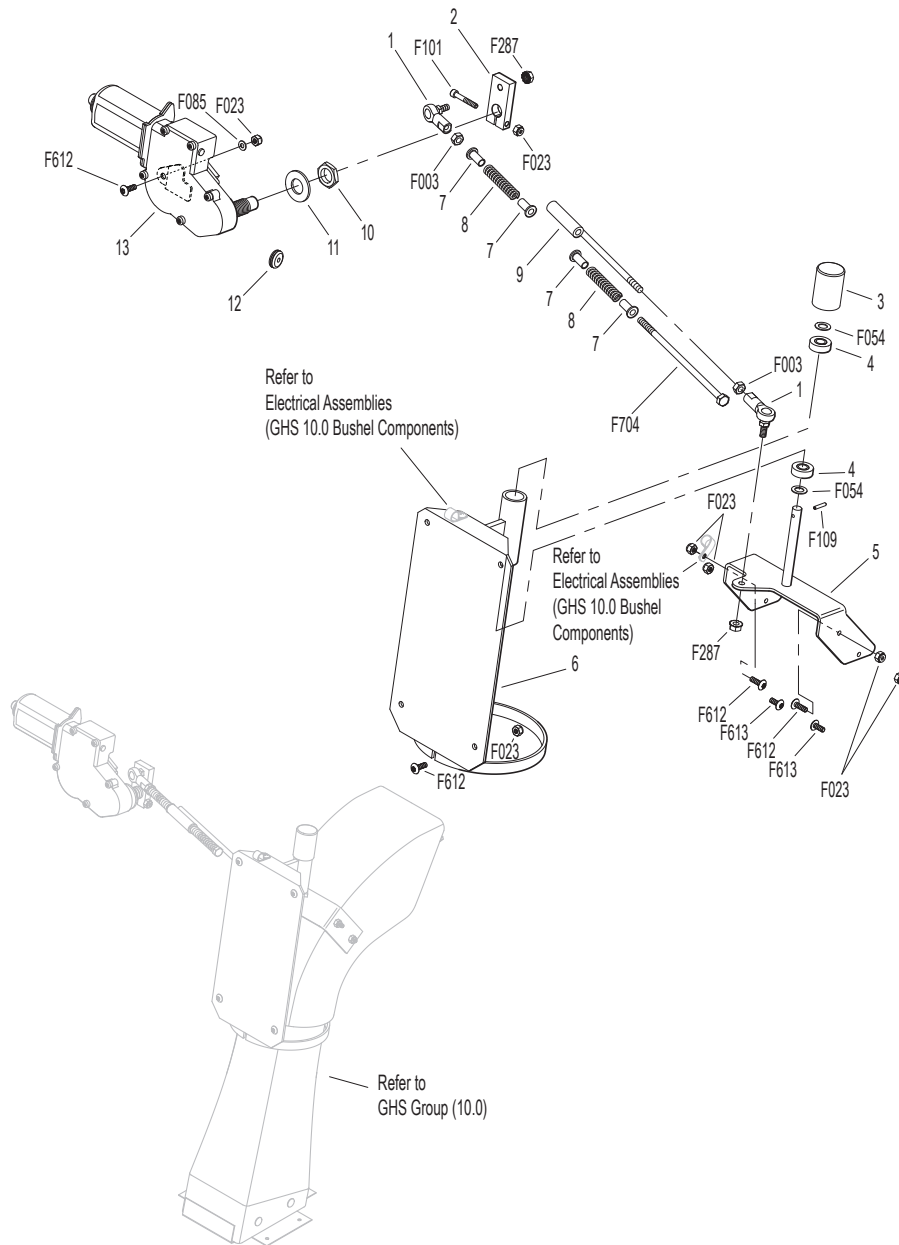

GHS 7.0 BUSHEL CATCHER ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Upper Baffle Screen Assembly (Removable)				39	7510-2	7.0 Bushel Catcher Box	1
1	7512-12	Removable Screen (3/16 Hole) (Includes Items # 2, F190 & F617)	1**		7502-5	7.0 Catcher W/Powerfil® (Includes Door)	*
2	7506	Knob / Threaded Insert (10-24)	2	40	7607-8	Powerfil® Cover Plate	1
3	7509-7	Channel Top, LH	1	41	7608-4	Hinge Plate, RH	1
4	8606-2	Channel Bottom	2	42	8155-8	7.0 Gas Spring Cover, RH	1
5	6856-1	Edge Molding (21-3/4")	1	43	7607-14	Catcher Door Arm, RH	1
6	6507	Screen Seal (23-1/4")	1	44	7584-3	Reinforcing Strap	1
7	7505	Mustache Spring	2	45	5801-4	Decal Plate, Round	2
8	7509-6	C-Channel With Spring (Includes Items # 7 & F340)	1	46	7608-5	Door Arm Stop	2
9	7509-8	Channel Top, RH	1	5598-2 Optional Dump Bag (Not Shown)			
7.0 Exhaust Deflector Door Assembly				May be ordered as an option. Contact your Walker dealer.			
10	7607-3	Upper Door Seal	1	Fasteners			
11	7510-4	7.0 Catcher Box Door (Includes Frame) (Includes Items # 10, 12, 13, 15, F085, F411, F649 & F654)	1	F020	5/16-18 ESNA Nut		2
12	5583	Handle	1	F023	10-24 ESNA Nut		28
13	7607-6	Lower Door Stiffener (7.0)	1	F029	1/4-20 x 1/2 Hex Bolt		2
14	8607-8	Door Guide	1	F031	1/4-20 x 5/8 Hex Bolt		2
15	7607-5	Upper Door Stiffener	1	F049	5/16 SAE Washer		4
GHS 7.0 Bushel Catcher Assembly				F050	1/4 SAE Washer		4
16	7503-8	Center Strap (7.0)	1	F079	A/A66D Aluminum Pop Rivet		4
17	7503-6	Upper Frame Doubler (7.0)	2	F085	3/16 Rivet Backup Washer		10
18	7503-5	Lower Frame Doubler (7.0)	2	F094	8-32 x 1/2 PTHMS		6
19	7503-4	Outside Box Strap (7.0)	2	F190	#10 Internal Star Lock Washer		2
20	8608-4	Center Frame Doubler	1	F196	1/4-20 x 1 PPHMS, SS		4
21	8608-11	Catcher Door Finger	1	F230	1/4-20 x 1-1/4 PPHMS, SS		4
22	7503-11	Catcher Mount	1	F242	1/4-20 x 7/8 PPHMS, SS		8
23	7610-4	Catcher Dump Flap Spacer (7.0)	1	F275	5/16-18 x 2 Hex Bolt		2
24	7610-9	Catcher Dump Flap (7.0)	1	F340	Rivet, Aluminum		4
25	8610-3	Backing Plate / Dump Flap	1	F351	Aluminum Pop Rivet		6
26	7620-3	Pivot Bushing (1/2 x 9/16)	4	F360	1/4-20 x 3/8 Hex Bolt		2
27	7607-7	Bushing	2	F390	1/4-20 x 7/8 Carriage Bolt		4
28	7608-3	Hinge Plate, LH	1	F411	3/16 Bulbex Rivet		32
29	7607-15	Catcher Door Arm, LH	1	F442	1/4-20 x 5/8 PTHMS		2
30	8155-7	7.0 Gas Spring Cover, LH	1	F524	3/16 x 3/8 Aluminum Rivet, Black		8
31	5155-5	Gas Spring	2	F540	1/4-20 x 1-3/4 PPHMS, SS		1
32	5155-13	10mm Ball Stud, 5/16-18 3/4 Thread	2	F551	5/16-18 Flange Top Lock Nut		2
33	5523-6	Gas Spring Plate	2	F569	1/4-20 Flange Top Lock Nut		25
34	5155-12	5/16 Ball Stud	2	F612	10-24 x 5/8 Truss Head Torx		4
35	5155-15	Box Support, Gas Spring	2	F613	10-24 x 1/2 Truss Head Torx		10
36	7532-1	Handle, Catcher Lift	2	F617	10-24 x 3/8 Truss Head Torx		4
37	7511-6	Chute Cover	1	F618	10-24 x 3/4 Truss Head Torx		12
38	7557-1	7.0 Wire Harness Channel	1	F649	3/16 x .510/.625 Grip Range Rivet, SS		4
				* Service Part Only			
				** This screen can be replaced by P/N 7512-13 Removable Screen (3/4" holes) for improved air flow performance in wet conditions.			

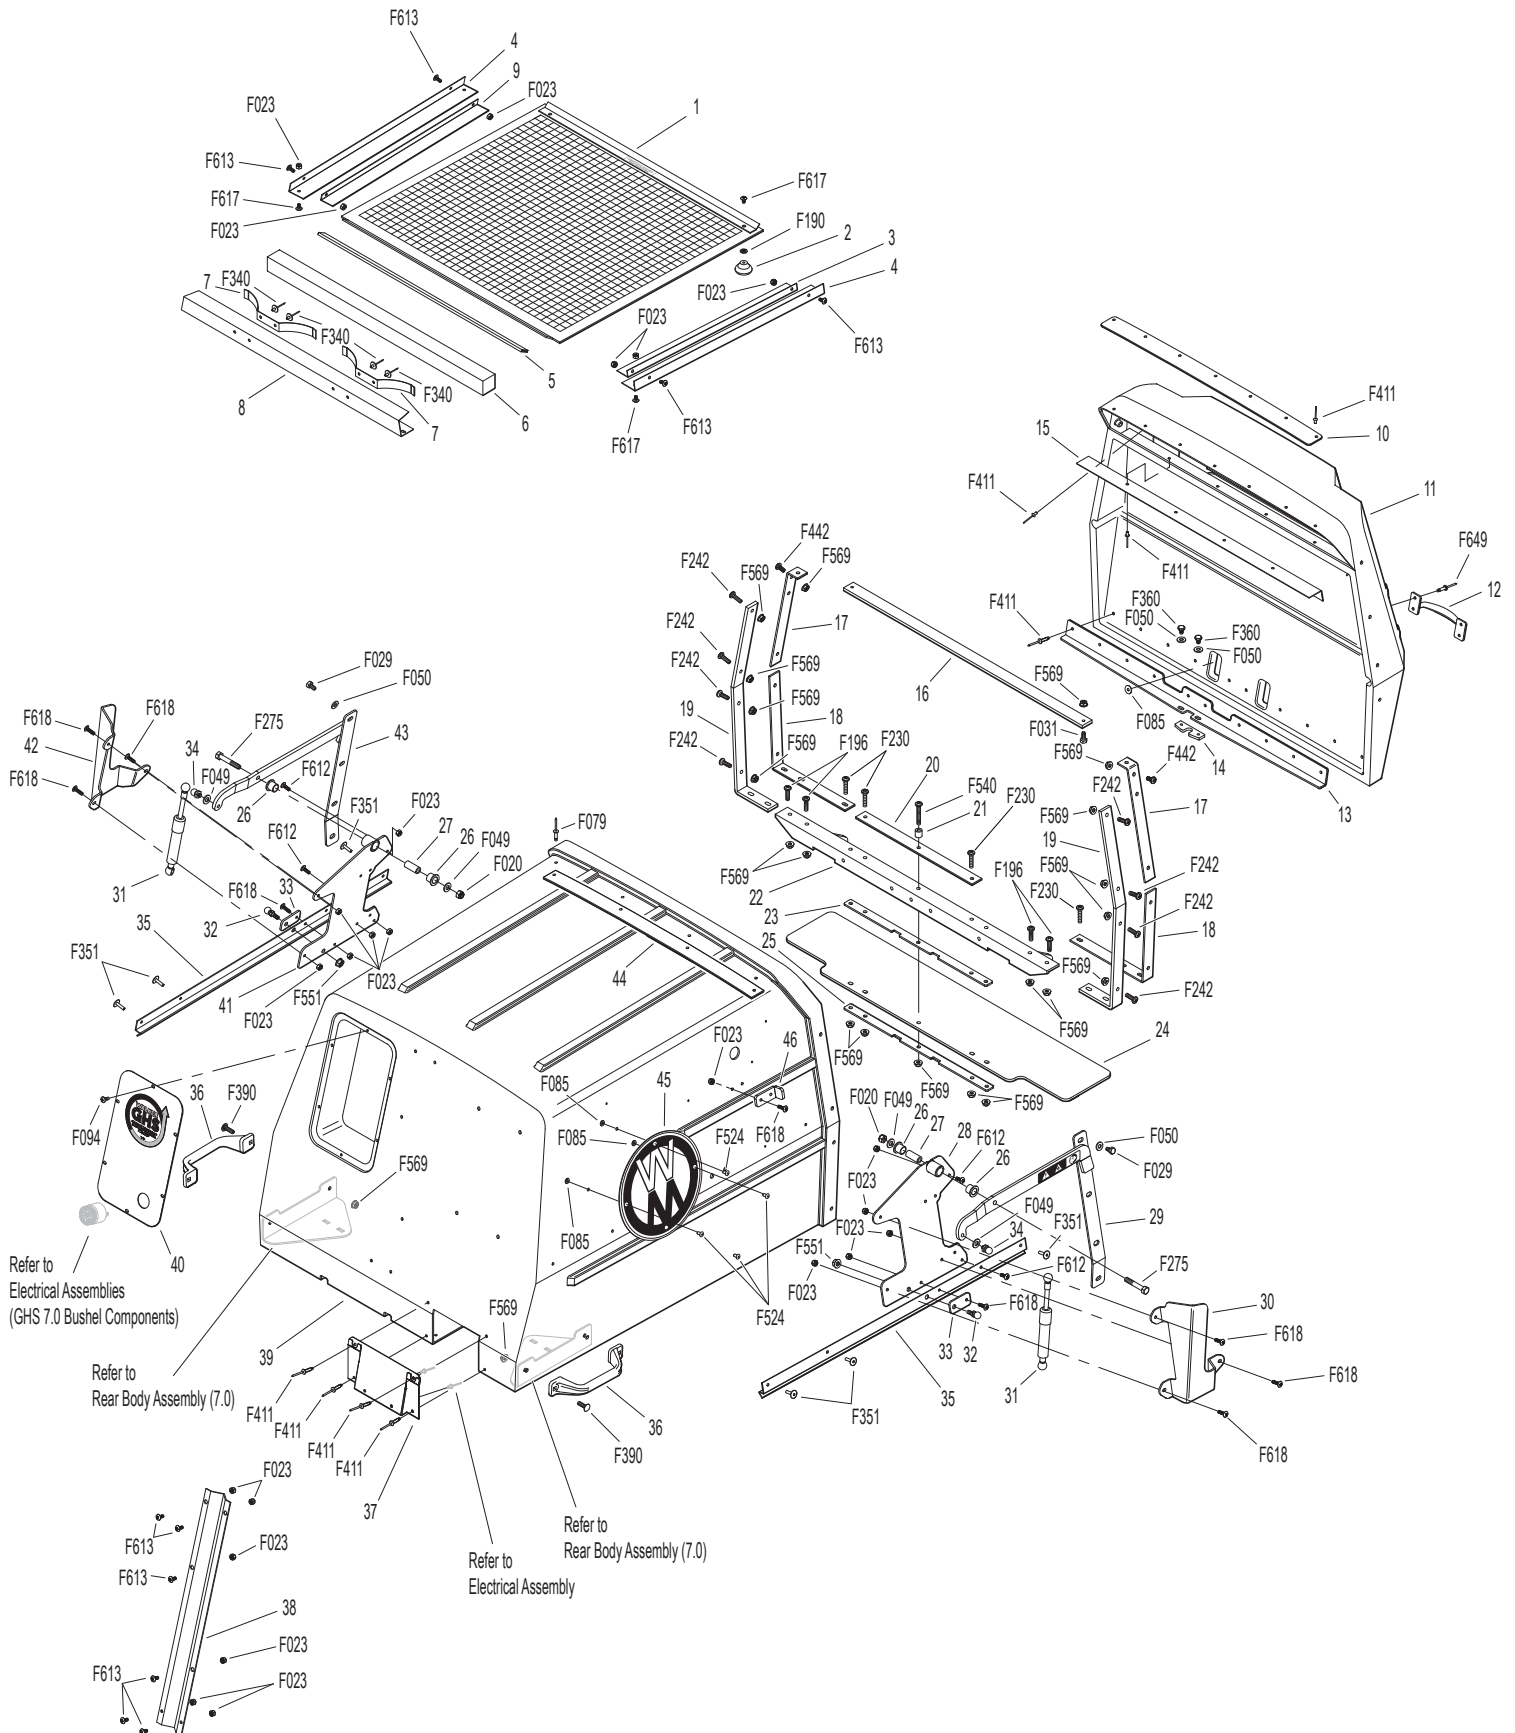


Model C19 Beginning S/N 194904
Use only genuine **Walker®** replacement parts.

GHS 10.0 BUSHEL CATCHER ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Upper Baffle Screen Assembly (Removable)				46	8117	Wire Harness Channel	1
1	7512-8	Removable Screen (3/16 Hole) (Includes Items # 2, 5, F190 & F617)	1**	47	5977-3	Grommet (9/16)	2
2	7506	Knob / Threaded Insert (10-24)	2	48	8602-3	10.0 Catcher W/O Powerfil®, Gray (Includes Door)	*
3	8606-3	Channel Top, LH	1		8602-4	10.0 Catcher W/Powerfil®, Gray (Includes Door)	*
4	8606-2	Channel Bottom	2		8610-5	10.0 Bushel Catcher Box, Gray	*
5	7856-1	Edge Molding (26")	1	49	8607-9	Powerfil® Cover Plate	1
6	7507	Screen Seal (27-1/2)	1	50	8155-2	Gas Spring Cover, RH	1
7	7505	Mustache Spring	2	51	8608-8	Hinge Plate, RH	1
8	8606	C-Channel (10.0)	1	52	8608-9	Torsion Bar	1
	8606-20	C-Channel With Spring (10.0) (Includes Items # 7, 8 & F340)	*	5598-2 Optional Dump Bag (Not Shown)			
9	8606-4	Channel Top, RH	1	May be ordered as an option. Contact your Walker dealer.			
10.0 Exhaust Deflector Door Assembly				Fasteners			
10	8607-16	Upper Seal Support	1		F020	5/16-18 ESNA Nut	2
11	8607-17	Upper Door Seal	1		F023	10-24 ESNA Nut	29
12	8607-18	Backup Plate	1		F024	5/16-24 Jam Nut	4
13	8512-4	10.0 Catcher Box Door, Gray (Includes Items # 10-14, 16, 17, F085, F411, F649 & F654)	1		F029	1/4-20 x 1/2 Hex Bolt	8
14	5583	Handle	1		F032	1/4-20 x 3/4 Hex Bolt	2
15	8607-1	Door Mount, LH	1		F049	5/16 SAE Washer	8
16	8607-12	Upper Door Stiffener	1		F050	1/4 SAE Washer	2
17	8607-7	Lower Door Stiffener	1		F068	1/8 x 1 Cotter Pin	2
18	8607-8	Door Guide	1		F079	A/A66D Aluminum Pop Rivet	5
19	8607-2	Door Mount, RH	1		F085	3/16 Rivet Backup Washer	10
GHS 10.0 Bushel Catcher Assembly					F094	8-32 x 1/2 PTHMS	6
20	8608-13	Center Strap	1		F190	#10 Internal Star Lock Washer	2
21	8608-3	Upper Frame Doubler	2		F195	1/4-20 x 3/4 PPHMS, SS	4
22	8608-1	Outside Box Strap	2		F196	1/4-20 x 1 PPHMS, SS	4
23	8608-2	Lower Frame Doubler	2		F208	5/16-18 x 2-1/4 Hex Bolt	2
24	8608-4	Center Frame Doubler	1		F230	1/4-20 x 1-1/4 PPHMS, SS	4
25	8608-11	Catcher Door Finger	1		F242	1/4-20 x 7/8 PPHMS, SS	8
26	8608-6	Catcher Mount	1		F340	Rivet, Aluminum	4
27	8610-8	Catcher Dump Flap	1		F351	Aluminum Pop Rivet	6
28	8610-3	Backing Plate, Dump Flap	1		F360	1/4-20 x 3/8 Hex Bolt	2
29	7584	Reinforcing Strap	1		F390	1/4-20 x 7/8 Carriage Bolt	4
30	5103-5	Pivot Bushing Inner	2		F411	3/16 Bulbex Rivet	21
31	5801-4	Decal Plate, Round	2		F456	5/16-18 x 3/4 SBH Cap Screw, SS	4
32	7620-3	Pivot Bushing (1/2 x 9/16)	2		F524	3/16 x 3/8 Aluminum Rivet, Black	8
33	8608-7	Hinge Plate, LH	1		F540	1/4-20 x 1-3/4 PPHMS, SS	1
34	5103-7	Outside Torsion Bushing	2		F551	5/16-18 Flange Top Lock Nut	4
35	8607-4	Upper Arm	2		F568	10-24 Flange Top Lock Nut	1
36	5214-12	Ball Joint (5/16-24)	4		F569	1/4-20 Flange Top Lock Nut	27
37	5155-12	5/16 Ball Stud	2		F612	10-24 x 5/8 Truss Head Torx	8
38	5155-4	Gas Spring	2		F613	10-24 x 1/2 Truss Head Torx	11
39	8155-1	Gas Spring Cover, LH	1		F617	10-24 x 3/8 Truss Head Torx	4
40	8607-3	Lower Arm	2		F618	10-24 x 3/4 Truss Head Torx	6
41	5103-6	Pivot Bushing Outer	2		F649	3/16 x .510/.625 Grip Range Rivet, SS	4
42	5155-13	10mm Ball Stud, 5/16-18 3/4 Thread	2		F654	3/16 x .510/.625 Grip Range Rivet	7
43	5523-6	Gas Spring Plate	2	*	Service Part Only		
44	8608-10	Box Support, Gas Spring	2	**	This screen can be replaced by P/N 7512-11 Removable Screen (3/4" holes) for improved air flow performance in wet conditions.		
45	7532-1	Handle, Catcher Lift	2				


GHS 10.0 BUSHEL CATCHER ASSEMBLY

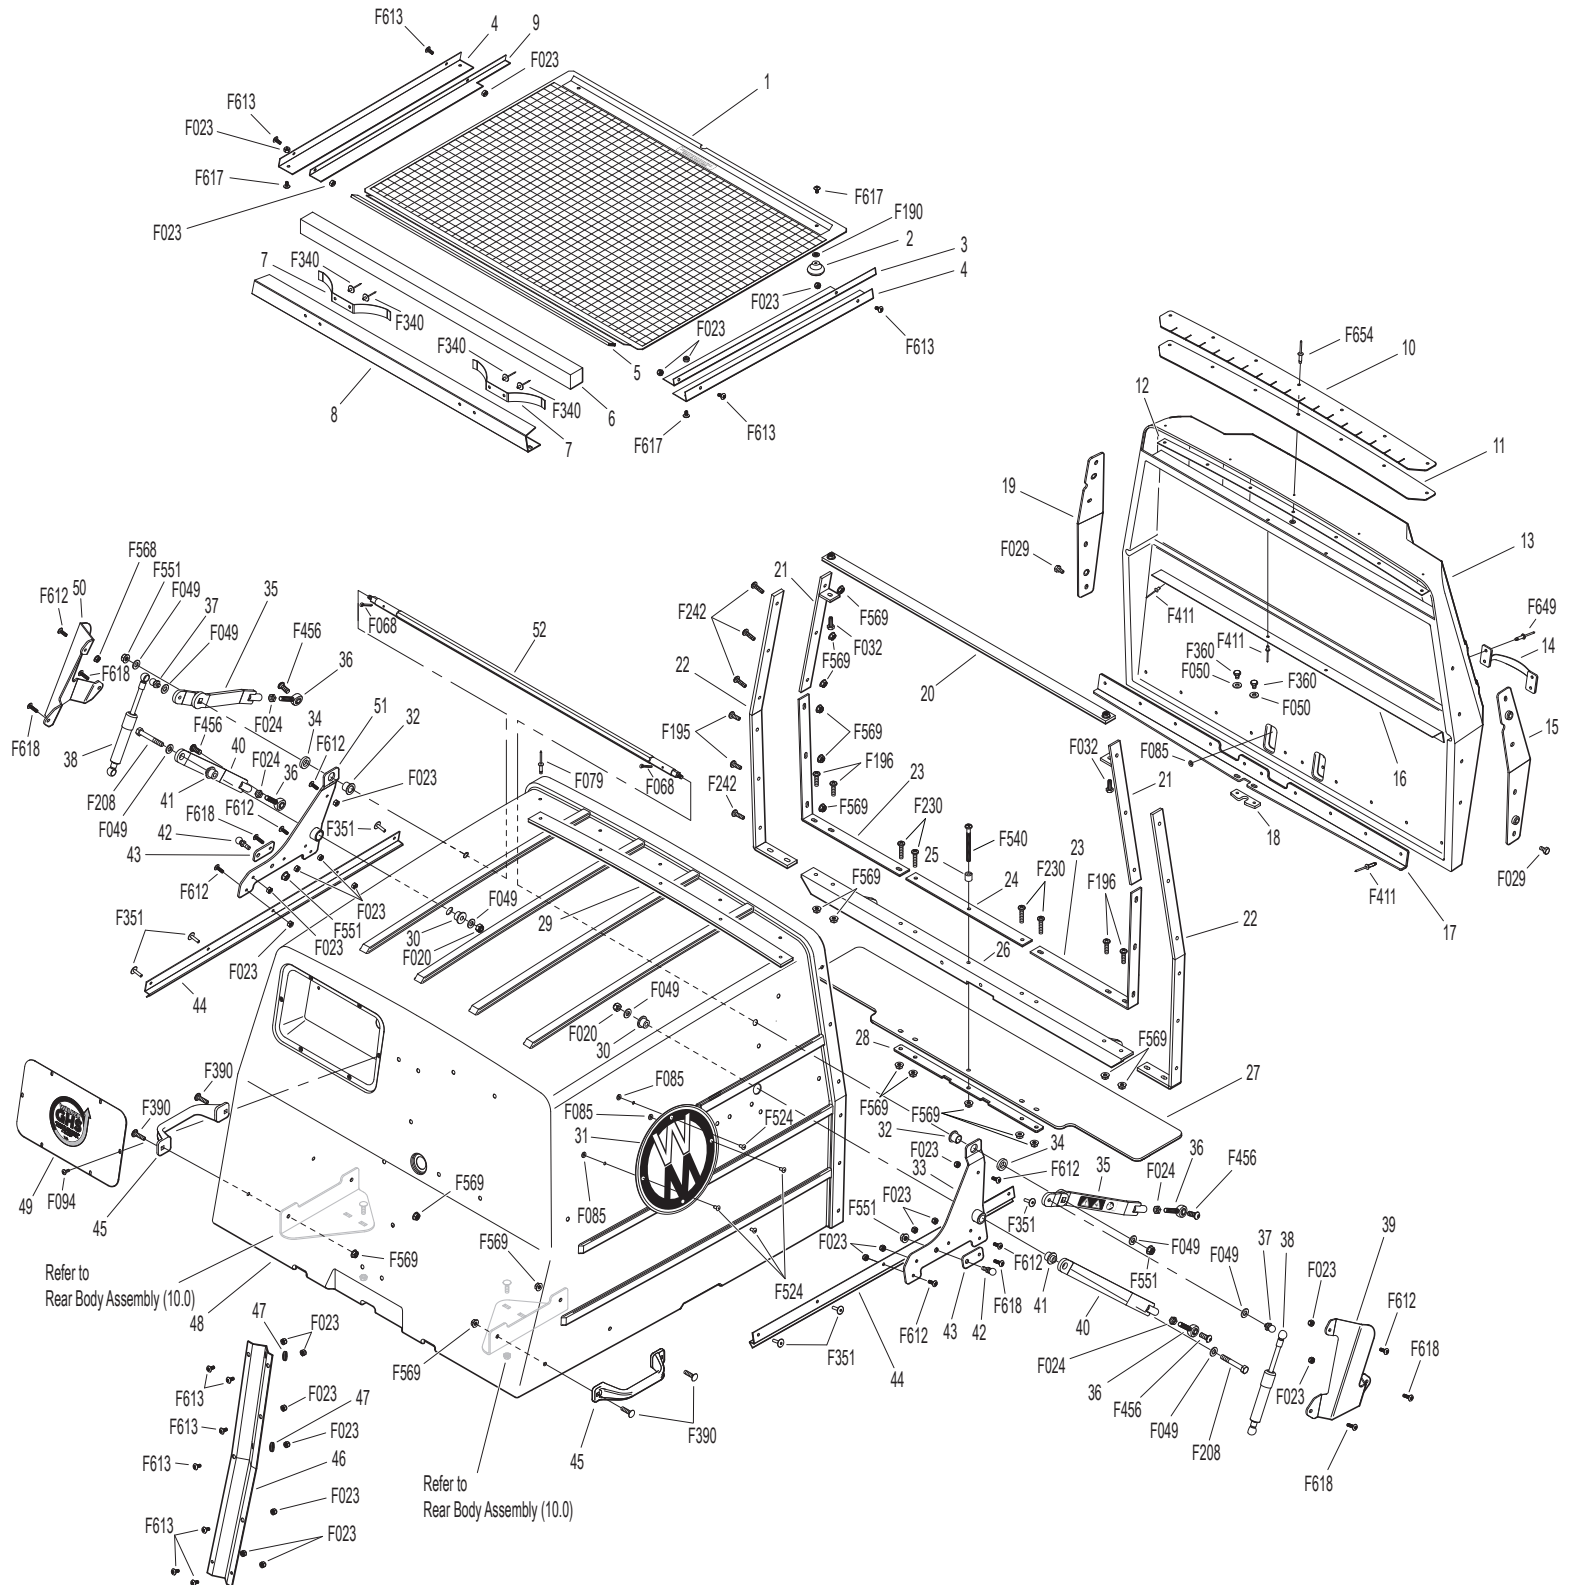

ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Harness Assembly				Fasteners			
1	7941-3	Boot, Circuit Breaker	1	F002	10-24 Keps Nut		10
2	7941-5	Circuit Breaker (7 Amp)	1	F004	1/4-20 Keps Nut		4
3	8990-1	Hourmeter (Global)	1	F009	5/16-18 Whiz Locknut		1
4	5835-3	Cable Clamp (1/2) .218 Hole	3	F019	1/4-20 ESNA Wing Nut		2
5	7834-2	Wire Saddle (2 Wires)	1	F025	10-24 x 3/8 PPHMS		2
6	6105-3	Harness Clip	1	F026	10-24 x 1/2 PPHMS		7
7	6104-12	Adapter Harness	1	F031	1/4-20 x 5/8 Hex Bolt		2
8	8960-15	Ignition Switch (With Keys) (Includes Items # 9, 10 & F349)	1	F032	1/4-20 x 3/4 Hex Bolt		2
9	8960-3	Key Set W/Umbrella	1	F050	1/4 SAE Washer		2
10	7854	Plastic Tip, Red	1	F061	1/4 Internal Star Lock Washer		1
11	8536-2	Warning Horn Assembly	1	F079	A/A66D Aluminum Pop Rivet		1
12	5942-8	Safety Switch (NO), Delta Side Mount	3	F093	5/16-18 x 1 Hex Bolt		1
13	5975-3	Cable Tie (50# x 7")	4	F129	10-24 x 1/2 PTHMS		1
14	6941-9	Relay Switch 30/40 Amp	3	F182	1/4 x 5/8 x 1/8 Washer		2
15	7948-6	Time Delay Module (.5 Second Delay)	1	F232	10-32 Keps Nut		2
16	7948-3	Time Delay Harness	1	F349	Washer .835 ID 1.122 OD, SS		1
17	8941	Circuit Breaker (30 Amp) Auto Reset / Sealed	1	F505	6-32 x 7/8 Hex Trim MS, SS		6
18	7941-10	Circuit Breaker Cap	1	F506	6-32 Nylock Nut		6
19	5832	Cable Clamp (1/2)	5	* Service Part Only			
20	6940-25	Wire Harness	1				
21	8012-6	Regulator Adapter Harness	1				
22	NS	Rectifier	*				
Battery Assembly							
23	8943	Battery Lead Wire (+)	1				
24	5975-1	Cable Tie (18# x 3-3/4")	3				
25	5933	Battery Terminal Insul., Red (+)	1				
26	5932	Battery Terminal Insul., Black (-)	1				
27	6923	Battery Cable (-)	1				
28	5844-3	Battery Hold-Down Bar	1				
29	5839	Hook Bolt	2				
30	6390-6	Battery Pan	1				
31	7910-3	Battery (12V/350A CCA)	1				


ELECTRICAL ASSEMBLY

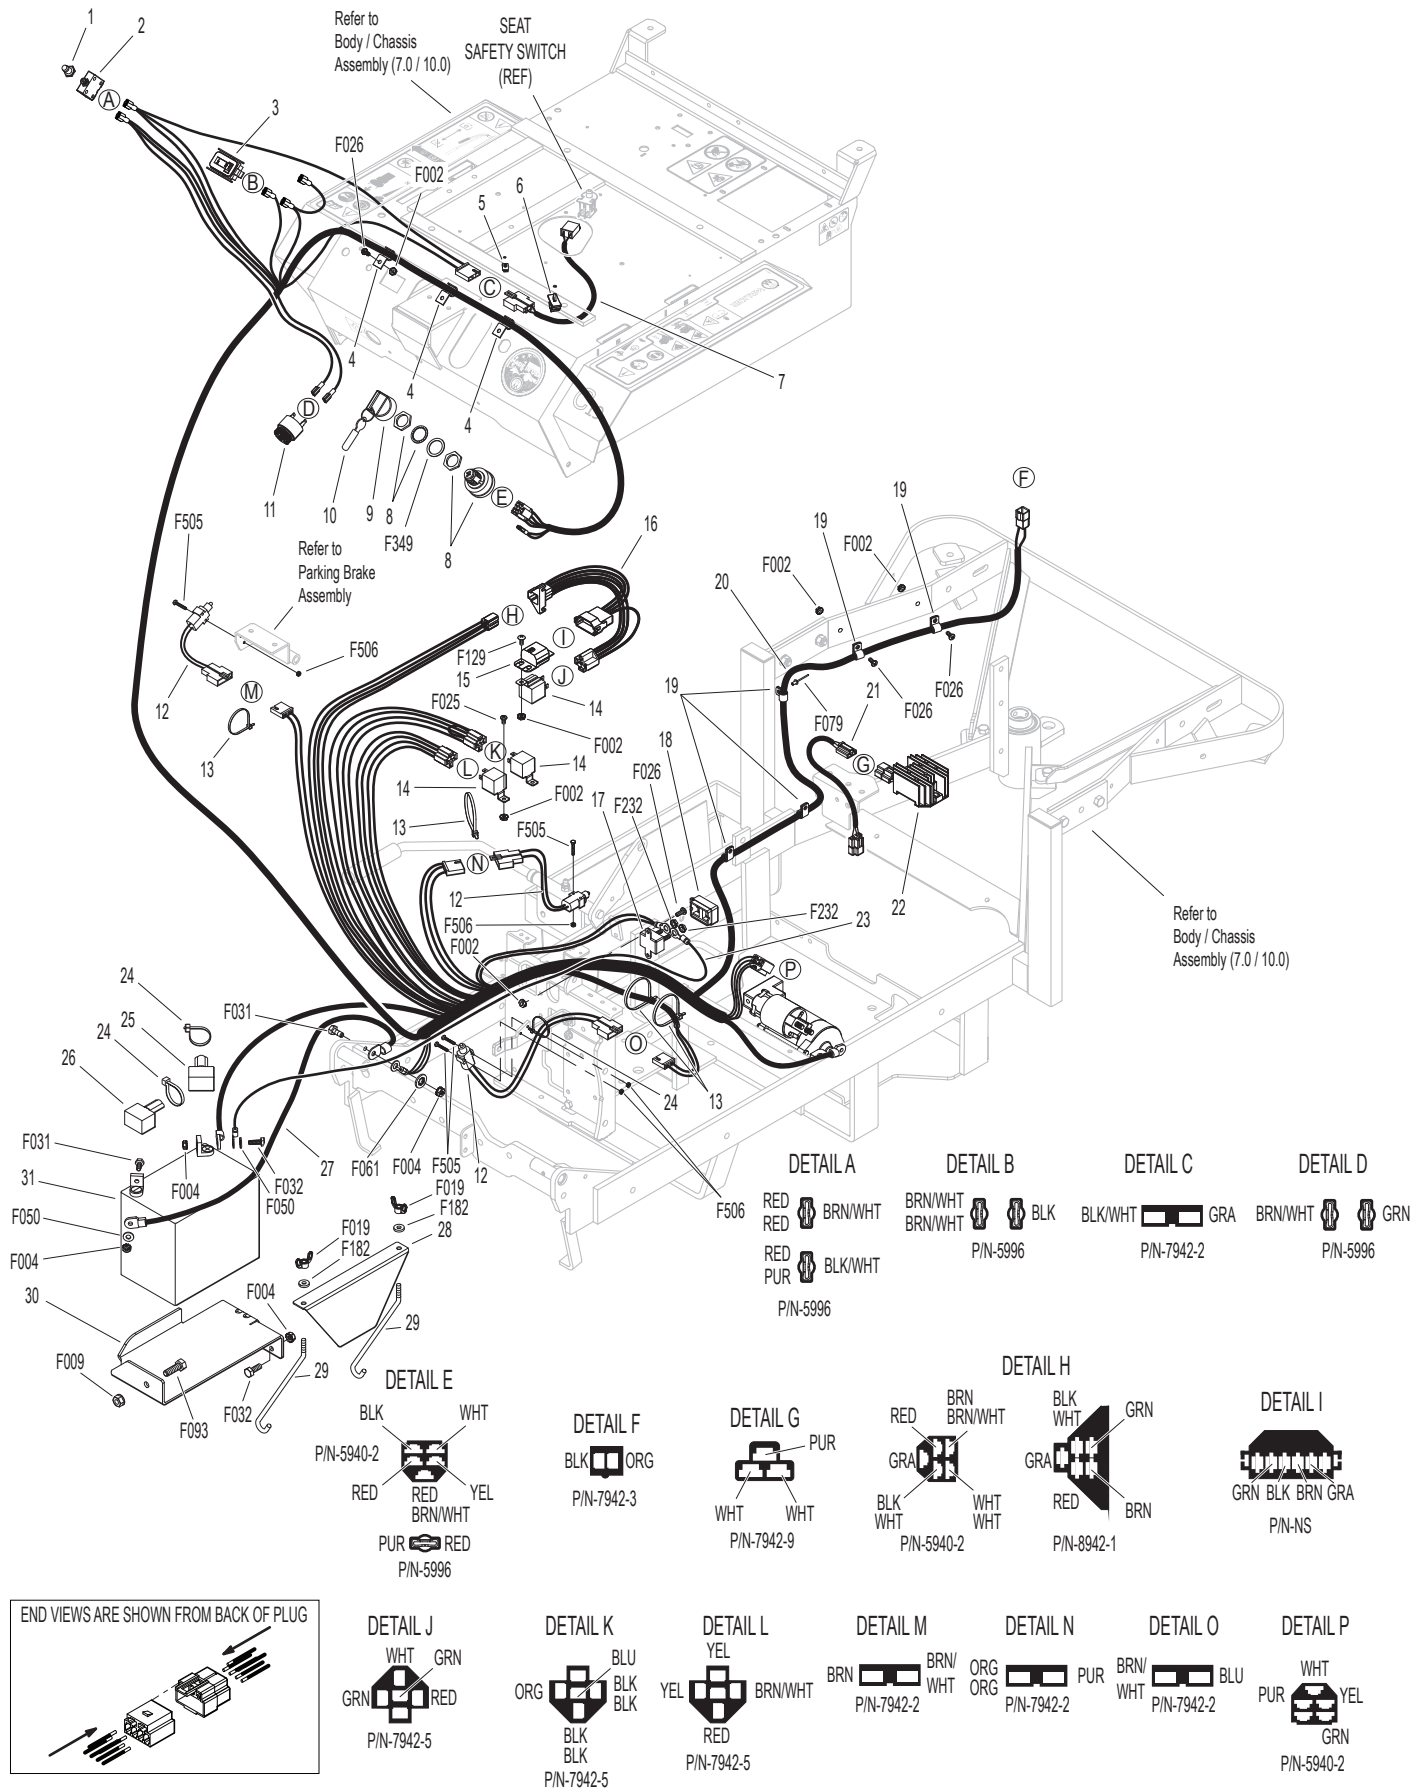

ELECTRICAL ASSEMBLIES (GHS 7.0 BUSHEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Horn & Harness Channel Assemblies				Fasteners			
1	5536-2	Horn, Full Signal	*	F002	10-24 Keps Nut		1
2	5976-2	Grommet (3/16 x 3/4)	2	F023	10-24 ESNA Nut		3
3	5975-1	Cable Tie (18# x 3-3/4")	1	F025	10-24 x 3/8 PPHMS		1
Harness & Grass-Pak® Switch Assemblies				F508	4-40 Keps Nut, SS		2
4	8950-4	Powerfil Wire Harness (7.0/10.0)	1	F612	10-24 x 5/8 Truss Head Torx		1
5	5833	Cable Clamp (1/4)	2	F613	10-24 x 1/2 Truss Head Torx		2
6	5594-7	Grass-Pak® Vane	1	F712	4-40 x 3/8 Hex Head, SS		2
7	5592-40	Grass-Pak® Switch Assembly	1	F713	Washer #4, SS		2
				*	Service Part Only		

ELECTRICAL ASSEMBLIES (GHS 7.0 BUSHEL COMPONENTS)

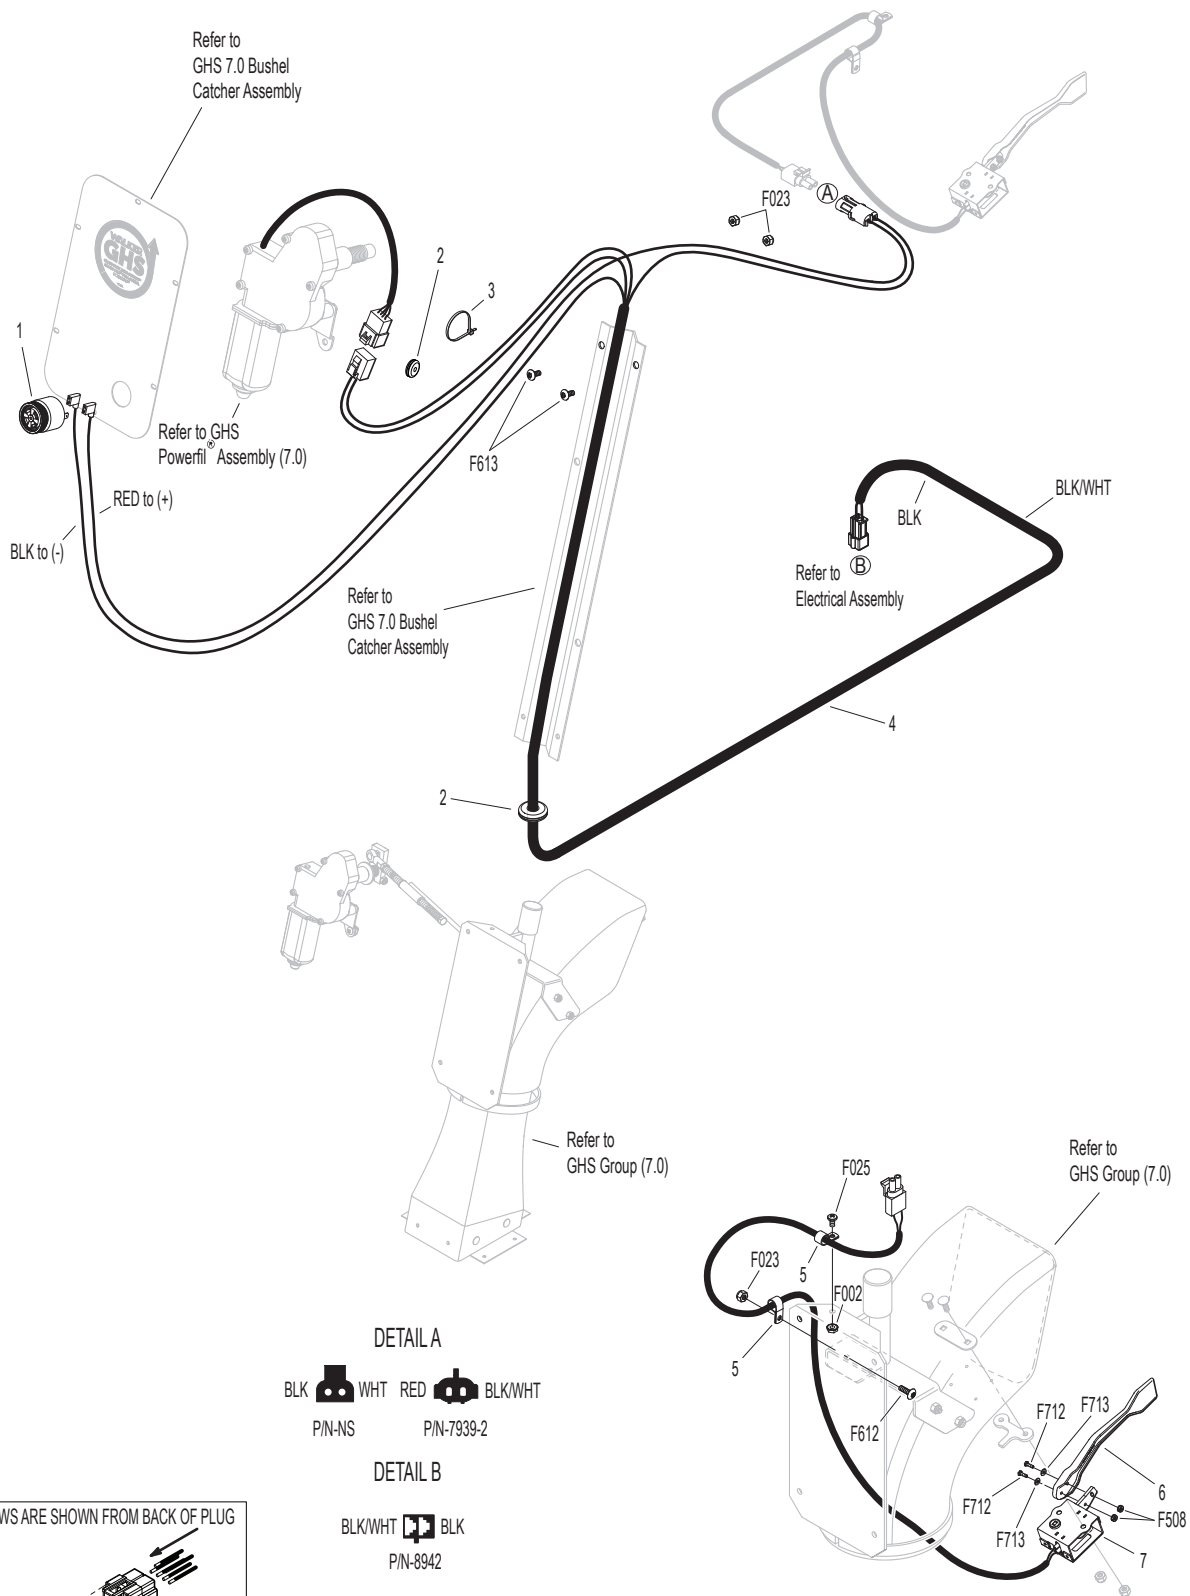

ELECTRICAL ASSEMBLIES (GHS 10.0 BUSHEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
----------	----------	-------------	-----------

Horn & Harness Channel Assemblies

1	5977-2	Grommet, Cut (1/8 x 3/8)	2
2	5975-1	Cable Tie (18# x 3-3/4")	1
3	5975-3	Cable Tie (50# x 7")	1
4	5536-2	Horn, Full Signal	*

Harness & Grass-Pak® Switch Assemblies

5	8950-4	Powerfil® Wire Harness (7.0 / 10.0)	1
6	5594-7	Grass-Pak® Vane	1
7	5592-40	Grass-Pak® Switch Assembly	1
8	5833	Cable Clamp (1/4)	2


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
----------	----------	-------------	-----------

Fasteners

F002	10-24 Keps Nut	1
F023	10-24 ESNA Nut	3
F025	10-24 x 3/8 PPHMS	1
F508	4-40 Keps Nut, SS	2
F612	10-24 x 5/8 Truss Head Torx	1
F613	10-24 x 1/2 Truss Head Torx	2
F712	4-40 x 3/8 Hex Head, SS	2
F713	Washer #4, SS	2

* Service Part Only


ELECTRICAL ASSEMBLIES (GHS 10.0 BUSHEL COMPONENTS)

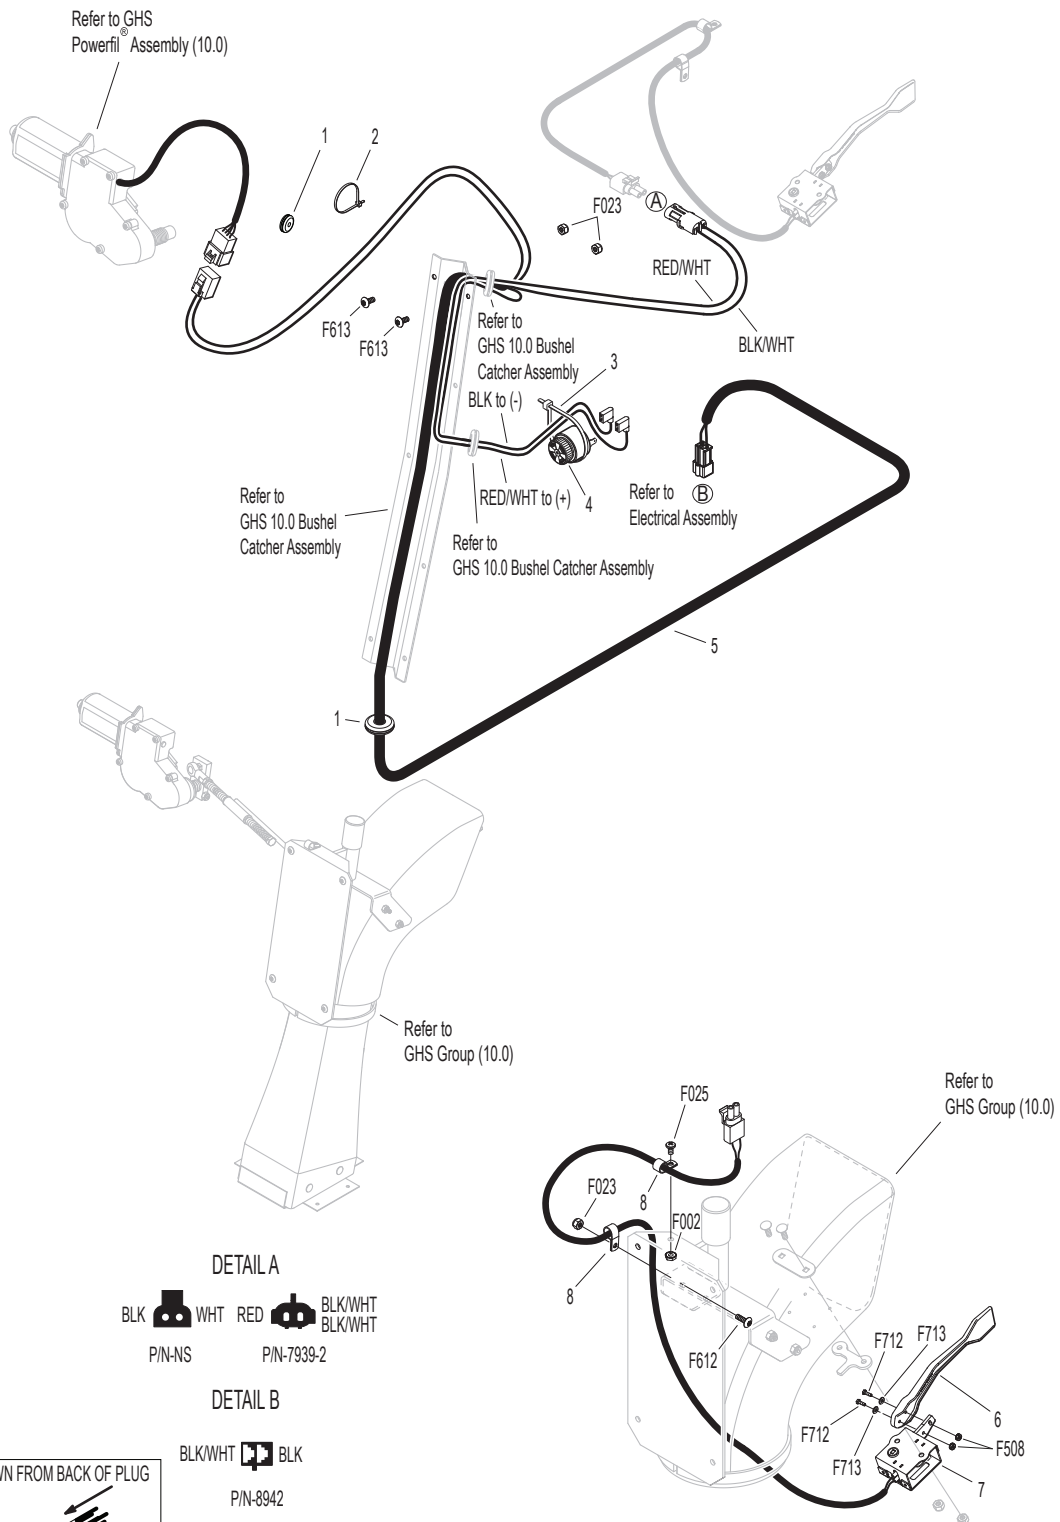

LUBRICATION POINTS


ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES	ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points				17	Brake Actuator Rod and Brake Band Pivot Pins (Clevis)	Oil	3
1	Steering Lever Pivot	Grease	4	18	Brake Actuator Pivot	Grease	1
2	Body Hinge Point	Oil	2	19	Choke Control Cable Ends	Oil	2
3	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1	20	Catcher Hinge Point	Oil	2
4	FSC Actuator Rod Pivot Pins	Oil	2	21	Throttle Control Cable Ends	Oil	2
5	(FSC) Friction Body Pivot	Grease	1	22	Engine Dipstick / Oil Fill	Oil**	1
6	FSC Lever Pivot	Grease	1	23	Belt Tightener Pivot, Blower Drive	Grease	1
7	Deck Support Arm Pivot	Grease	2	24	Belt Tightener Pivot, Ground Drive	Grease	1
8	Gear Axle	Oil**	2	25	PTO Gearbox Dipstick	Oil**	1
9	Universal Joint Tube Assembly	Grease*	1	26	Choke Control Pivot	Oil	1
10	Parking Brake Lever Pivot	Grease	1	27	Throttle Control Pivot	Oil	1
11	Universal Joint Quick Connect Spline (Grease Slide Area)	Grease	1	* Grease every 25 hours.			
12	Hydrostatic Drive / Oil Reservoir	Oil**	3	** See Operator's Manual for procedure for checking and changing oil in Engine Crankcase, Hydrostatic Transmissions, and Gear Axles.			
13	Belt Tightener Pivot, Jackshaft Drive	Grease	1	NOTE: See Model C19 Operator's Manual (P/N 6000-52) for proper lubrication intervals.			
14	PTO Clutch Lever Pivot	Grease	1				
15	Clutch Actuator Push Rod	Grease	2				
16	Belt Tightener Pivot, PTO Clutch	Grease	1				

LUBRICATION POINTS

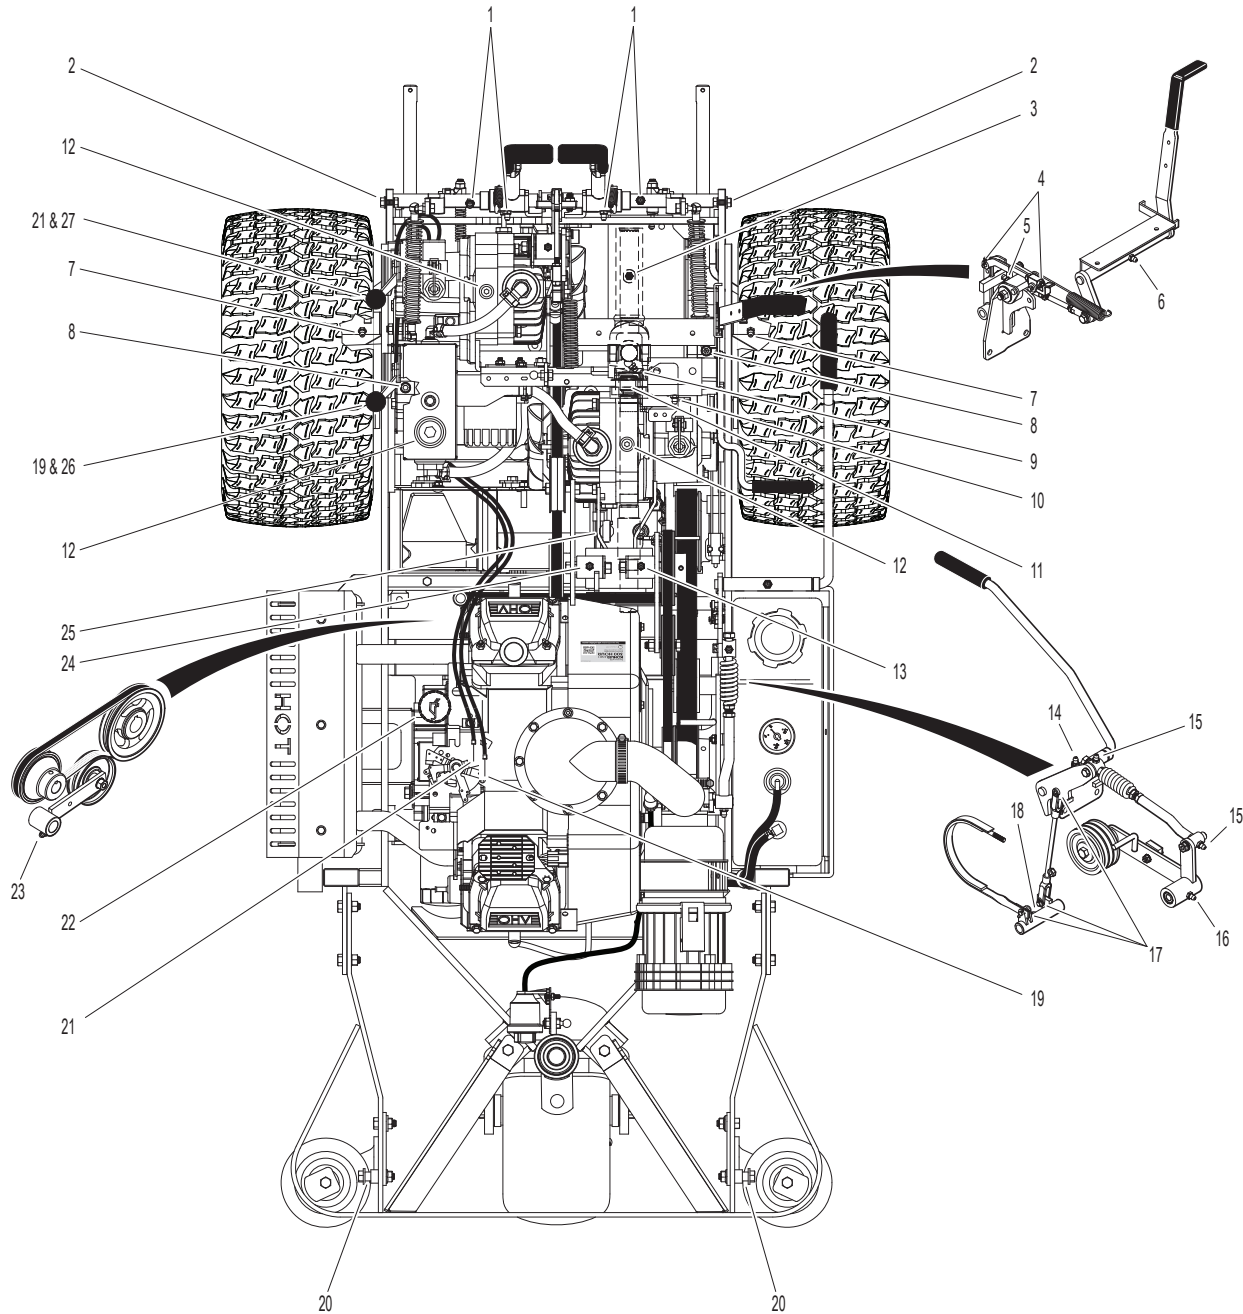

WIRING SCHEMATIC

WALKER MODEL C19 Beginning S/N 2018-154743

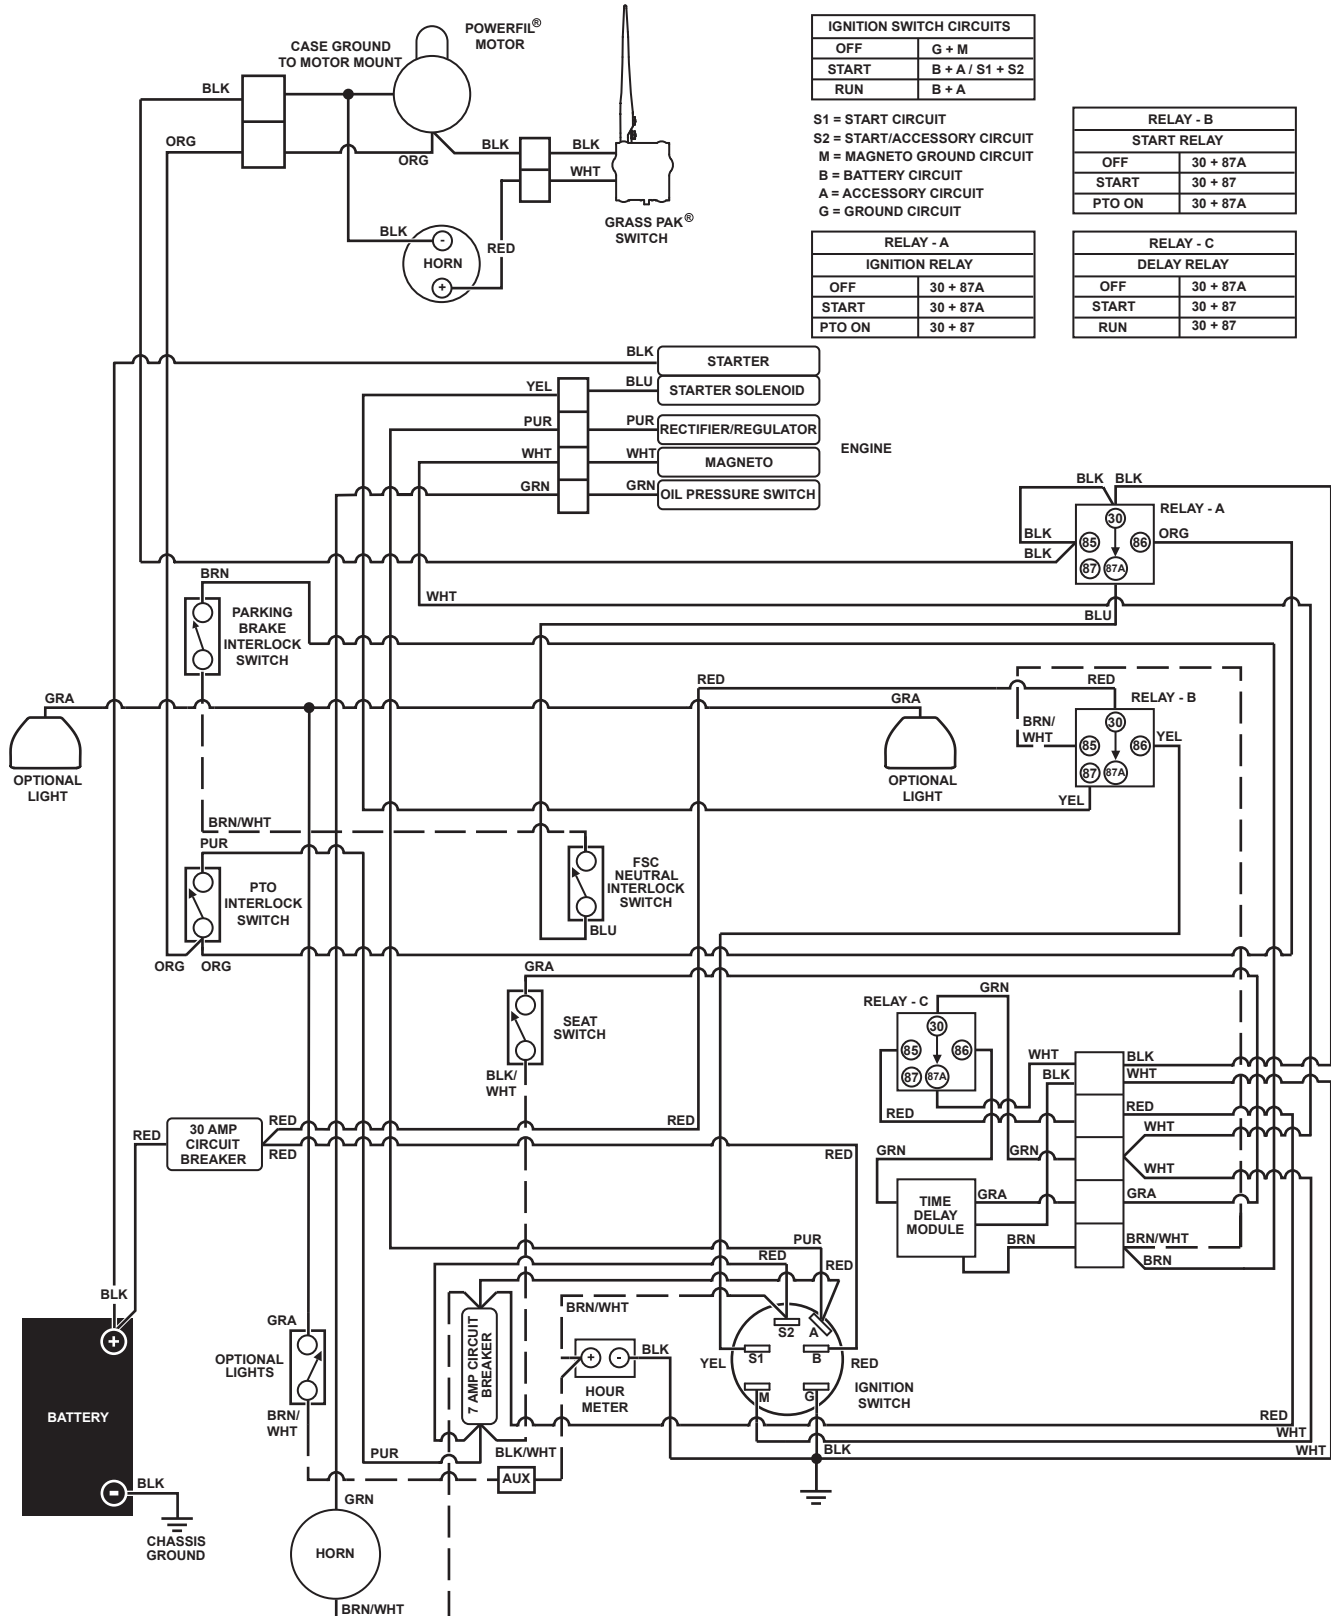

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

LIMITED WARRANTY FOR WALKER COMMERCIAL RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within two (2) years* after date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Rehiko/Kohler Engine

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

The Fulbat battery comes with a one (1) year warranty from the date of sale to the original retail purchaser. Warranty claims for the battery are administered through Walker Manufacturing.

★ Extended warranties are offered for the following powertrain components:

- A three (3) year unlimited hour warranty is offered for the Walker P/N 6200-9 Gear Axle Assembly.
- A three (3) year or 3000 hour (whichever comes first) warranty is offered for Model 7 Hydrostatic transmissions; covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 3000 hours. If the transmissions are serviced at the recommended intervals by an authorized Walker Dealer using only Walker Model 7 Hydro Oil (P/N 6450-21) or Mobil SHC™ 630 oil (P/N 6450-20) and Walker filters (P/N 5024-13), the warranty will be extended to three (3) years, full replacement coverage, and unlimited hours.

2. WHAT THIS WARRANTY DOES NOT COVER:

- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Owner's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



WALKER

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 090126 PRINTED IN USA www.walker.com ©2026 WALKER MFG. CO