




WALKER

Illustrated Parts Manual

T25i

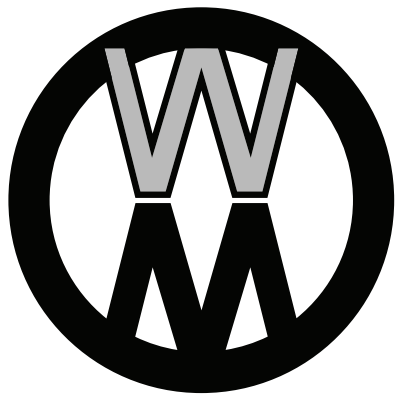

Beginning S/N: 150266
P/N 8000-40

KEY TO ABBREVIATIONS USED IN THIS MANUAL

<i>Abbreviation</i>	<i>What it Represents</i>
° (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
AT	All-Terrain
CCW	Counter-clockwise
Conn.	Connector
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal.	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz.	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt.	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
Spg.	Spring
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
Term.	Terminal
V	Volts

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

ILLUSTRATED PARTS LIST

<i>Section of Tractor Covered</i>	<i>Page</i>
Decals	
Tractor Decals	2
Body / Chassis Assemblies	
Body / Chassis Assembly (GHS Models)	4
Rear Body Assembly (GHS Models)	6
Body Assembly (Non-Collection Models)	8
Tractor Components	
Main Component Power Transmission (GHS Models)	10
(Non-Collection Models)	12
Engine Group	14
Engine Group (Fuel Components)	16
Hydrostatic Ground Drive Assemblies	18
Steering Control Assemblies	20
Throttle Control Assembly	22
Parking Brake Assembly	24
GHS Group	26
GHS Powerfil® Assembly	28
GHS 10.0 Bushel Catcher Assembly	30
Instrument Panel Assembly	32

<i>Section of Tractor Covered</i>	<i>Page</i>
Electrical Components	
Electrical Assembly	34
Electrical Assemblies (GHS 10.0 Bushel Components)	36
Electrical Connectors	38
Maintenance	
Lubrication Points	40
Wiring Schematic	42
Maintenance And Service Record Sheet	43
Warranty	
Limited Warranty	45

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQ'D GHS	NO. REQ'D NON-COLLECTION
Walker Product and Operation Decals					
1	8600-33	RH Fender	Body, RH Side Near Seat	1	1
2	5800	Walker Mower (4" Round)	Utility Bed (one on each side)	0	2
3	5800-11	Walker (8" Round)	10.0 Bushel Catcher (one on each side)	2	0
4	5813-2	Decal, 4" Grass-Pak Powerfil®	Powerfil® Cover Plate	1	0
5	5856-1	Made in USA	Body	1	1
Danger Decals Warning Decals Caution Decals					
6	8600-34	Warning, Read Manual	Body	1	1
7	5810-3	Decal, Hydro Warning	LH Gear Axle Drive Assembly	1	1
8	8600-12	Danger, Engine Exhaust	Front Body, LH Side	1	1
9	8600-10	Danger, Pinch Point	10.0 Bushel Catcher Mounting Frame Assembly (one on each side)	2	0
10	8600-4	Danger, Rotating Blower Blades	Body, Near Body Chute	1	0
Maintenance Decals					
11	8600-30	Parking Brake	Body, RH Side Below Seat	1	1
12	5855	Important, Engine Cooling	Engine	1	1
13	5869	Removable Screen	10.0 Bushel Catcher Removable Screen	1	0
14	8600-16	Front Body Closure	Rear Cross Member, Body	1	1
15	7827	Oil Level	Jackshaft Support	1	1
16	5810-1	Axle Oil Level	Gear Axle Drive Assemblies (one on each)	2	2
17	8600-31	Throttle	Body, LH Side	1	1
18	8821-11	Decal, T25i	Body	1	1
19	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1	1
20	5810-23	Reservoir	Hydrostatic Drives (one on each)	2	2

NOTE: All parts requiring decals are shipped with decals applied.


TRACTOR DECALS

Non-Collection Model

*Refer to Decks
Parts Manual
for Deck Decals*


GHS Model

*Refer to Decks
Parts Manual
for Deck Decals*

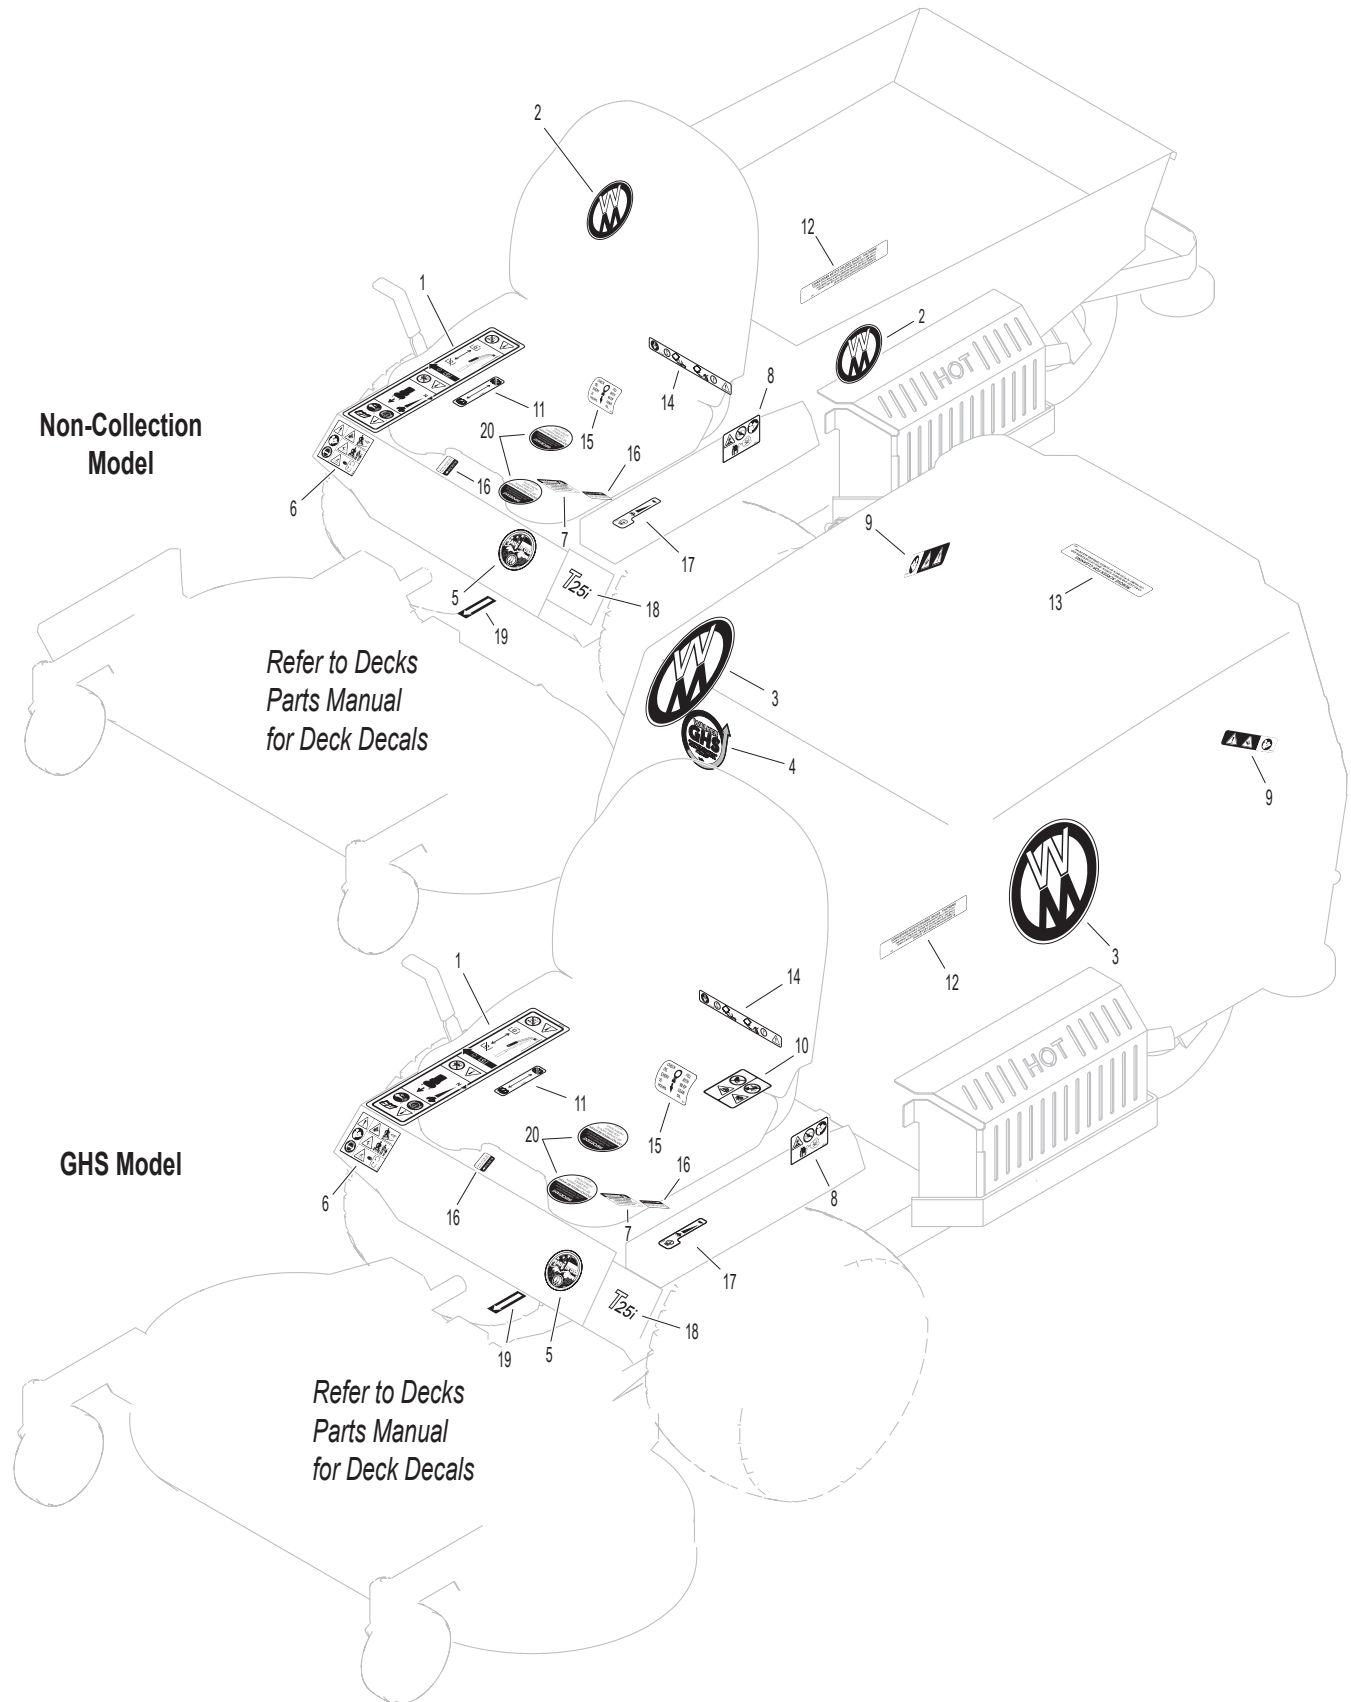

BODY / CHASSIS ASSEMBLY (GHS MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Seat Assembly				45	8035-1	Tail Wheel & Tire Assembly (13 x 4.5-6) (With Bearing Race)	2
1	6104-31	Comfort Seat	1		7035-1	Tail Wheel Tire (13 x 5.00-6)	**
2	2845-3	Aluminum Washer (5/16 x 1 x 1/4)	4		8036	Wheel & Hub (6 x 3.25) (Includes Items # 40 & Bearing Race)	**
3	7845-1	Rubber Bumper (1.375 x .750)	2		8037-2	Bearing Race	**
4	6105-1	Shoulder Washer	2		7420-20	Dual Tail Wheel & Tire Assembly (Includes Items # 41-46)	**
Rear Bumper Assembly (GHS Models Only)*				46	8038	Tail Wheel Axle (3/4 x 10-3/8)	1
5	7516	GHS Rear Bumper	1	47	7070-2	Wheel & Tire Assembly (18 x 9.50-8)	2
6	7516-5	Catcher Pivot Bushing	2		7070-1	Drive Tire (18 x 9.50-8)	**
7	5162	Roller Wheel (5" Rubber)	2		5070-4	Wide Wheel (8 x 7)	**
8	7517-3	Catcher Pivot Plate	2	48	8300-18	Chassis Frame (EFI / 5.0 gal.)	1
Body Assembly				Fasteners			
9	7383-6	Body Latch Bracket, RH	1		F002	10-24 Keps Nut	2
10	7383-5	Body Latch Lever	1		F004	1/4-20 Keps Nut	8
11	7383-7	Body Latch Bracket, LH	1		F009	5/16-18 Whiz Locknut	10
12	7222	Extension Spring (1/4 x 3)	1		F012	3/8-16 Keps Nut	4
13	5989-12	Dome Plug (3/16)	1		F014	3/8-16 ESNA Nut	4
14	5989-10	Dome Plug (9/16)	1		F020	5/16-18 ESNA Nut	1
15	8101-9	Front Body Engine Guard	1		F025	10-24 x 3/8 PPHMS	2
16	NS	Body ID Plate	1		F029	1/4-20 x 1/2 Hex Bolt	6
17	5845	Rubber Bumper (1.50 OD x 1.25)	4		F031	1/4-20 x 5/8 Hex Bolt	2
18	8118	Heat Deflector	1		F034	5/16-18 x 3/4 Hex Bolt	2
19	7422	Panel Guard	1		F035	5/16-18 x 1-1/4 Hex Bolt	4
20	5989-4	Dome Plug (3/8)	4		F038	3/8-16 x 1 Hex Bolt	6
21	5989-3	Dome Plug (5/16)	2		F040	3/8-16 x 1-1/2 Hex Bolt	2
22	5146	10mm Ball Stud	2		F041	3/8-16 x 1-3/4 Hex Bolt	2
23	7844	Rubber Bumper (1.25 OD x .250)	1		F042	3/8-16 x 2-1/4 Hex Bolt	2
24	2145	Gas Spring	1		F049	5/16 SAE Washer	2
25	5989-9	Dome Plug (1/4)	4		F050	1/4 SAE Washer	2
26	8100-8	Front Body	1		F051	3/8 SAE Washer	2
27	5180	Edge Molding, Lever Opening	2		F059	3/8 Wave Spring Washer	2
28	5989-55	Dome Plug (1/2)	1		F093	5/16-18 x 1 Hex Bolt	1
29	5989-5	Dome Plug (7/16)	1		F157	1/2-20 x 1-1/4 Wheel Lug Bolt	8
Tilt-Up Latch Assembly***					F205	5/16-18 x 1/4 Set Screw, Knurl Point	2
30	5847	Plastic Tip	1		F206	#2 x 3/16 Drive Pin	2
31	5744-20	Spring Arm, Tilt-Up Latch	1		F218	7/16 Split Lock Washer	2
32	5744-10	Spring Pivot Bushing	1		F219	7/16-14 x 1-1/4 Hex Bolt	2
33	5744-15	Compression Spring (3/8 x 5/8)	1		F241	.375 x .875 x .10 Washer	4
34	5744-13	Mount Angle, LH	1		F256	7/16 SAE Washer	2
35	5744-12	Hook, Tilt-Up Latch	1		F341	Coil Roll Pin (7/64 x 9/16)	1
36	5744-14	Mount Angle, RH	1		F342	5/16 Conical Washer	2
Chassis Assembly					F413	5/16-24 x 5/16 Set Screw	2
37	5267-1	Retainer Collar (1") (Includes Item # F413)	1		F570	3/8-16 Flange Top Lock Nut	4
38	5270-1	Ball Bearing	2		F591	7/16-14 Flange Top Lock Nut	2
39	7420	Tail Wheel Fork	1		F592	7/16-14 x 1-1/8 Hex Bolt GR 5	2
40	5830-3	Grease Fitting (45 Degree)	2	* Rear Bumper Assembly for Non-Collection Models is not shown here. Refer to BODY ASSEMBLY (NON-COLLECTION MODELS) , Page 8.			
41	8039	Nut, Tail Wheel Axle	2	** Service Part Only			
42	8768-2	Seal, Reverse Lip	4	*** Complete Tilt-Up Latch Assembly Kit available by ordering kit # 5747.			
43	8038-1	Spacer, Tail Wheel Axle (.750 ID x 1.125 OD)	2				
44	8037	Bearing Cone (3/4 ID)	4				

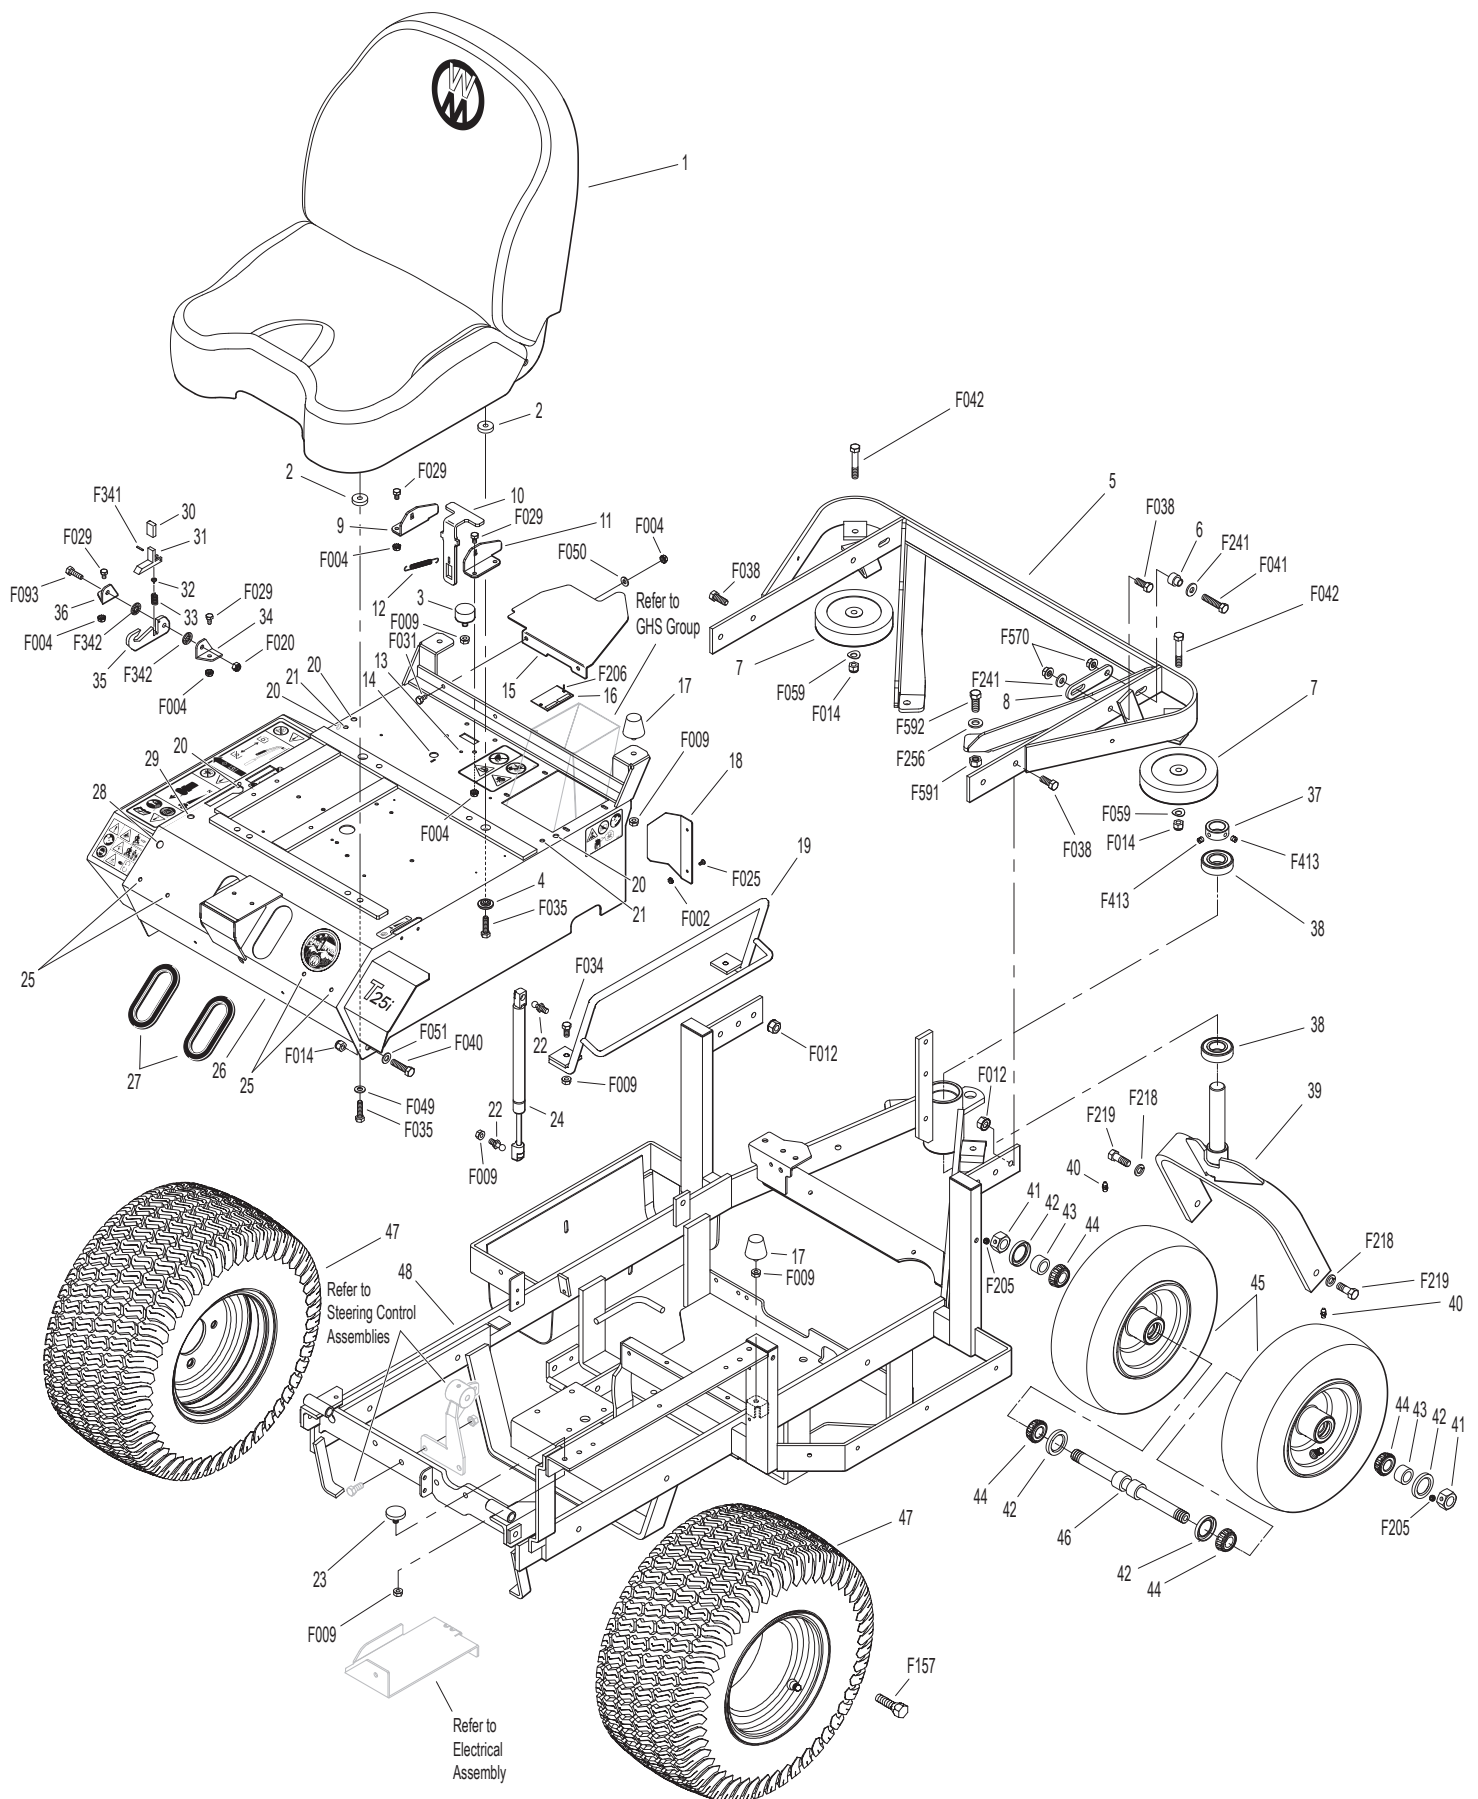

Beginning S/N 150266
Use only genuine **Walker**[®] replacement parts.

REAR BODY ASSEMBLY (GHS MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Rear Body Assembly (GHS Models)

1	7190-3	Insulation Foam Pad (5 x 20)	1
2	8082	Heat Shield	1
3	8515-14	Catcher Handle Plate, RH	1
4	8515-13	Catcher Handle Plate, LH	1
5	8615-3	Catcher Support Frame, 10.0	1
6	7190-2	Insulation Foam Pad, RH	1
7	7190-1	Insulation Foam Pad, LH	1
8	5832	Cable Clamp (1/2)	1
9	8389-5	Splash Guard	1
10	7145	Gas Spring Assembly (Includes Items # 11 & 12)	1
11	7147	Spring Clip	2
12	7146	13mm Ball Stud	2
13	8105-1	Rear Body Panel	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Fasteners

F002	10-24 Keps Nut	4
F009	5/16-18 Whiz Locknut	2
F023	10-24 ESNA Nut	8
F026	10-24 x 1/2 PPHMS	3
F027	10-24 x 5/8 PPHMS	1
F032	1/4-20 x 3/4 Hex Bolt	3
F085	3/16 Rivet Backup Washer	2
F390	1/4-20 x 7/8 Carriage Bolt	2
F568	10-24 Flange Top Lock Nut	2
F569	1/4-20 Flange Top Lock Nut	5
F613	10-24 x 1/2 Truss Head Torx	10
F615	1.0 x .255 x .125 Washer	1


NOTE: Rear Bumper Assembly for GHS Models is not shown here.
Refer to **BODY / CHASSIS ASSEMBLY (GHS MODELS)**,
Page 4.

7

BODY ASSEMBLY (NON-COLLECTION MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Utility Bed Assembly				Fasteners			
1	8650-10	Bed Liner (21.5 x 27.5)	1	F002	10-24 Keps Nut		16
2	8650-2	Utility Bed (Includes Item # 1)	1	F009	5/16-18 Whiz Locknut		2
3	7190-2	Insulation Foam Pad, RH	1	F012	3/8-16 Keps Nut		6
4	7190-1	Insulation Foam Pad, LH	1	F013	3/8-16 Whiz Locknut		2
Rear Bumper Assembly (Non-Collection Models)				F014	3/8-16 ESNA Nut		2
5	7153-3	Cover Plate	1	F025	10-24 x 3/8 PPHMS		8
6	7145	Gas Spring Assembly (Includes Items # 7 & 8)	1	F026	10-24 x 1/2 PPHMS		3
7	7147	Spring Clip	2	F027	10-24 x 5/8 PPHMS		1
8	7146	13mm Ball Stud	2	F038	3/8-16 x 1 Hex Bolt		6
9	7521	Rear Bumper	1	F040	3/8-16 x 1-1/2 Hex Bolt		2
10	5162	Roller Wheel (5" Rubber)	2	F042	3/8-16 x 2-1/4 Hex Bolt		2
11	8105-1	Rear Body Panel	1	F051	3/8 SAE Washer		2
12	8389-5	Splash Guard	1	F059	3/8 Wave Spring Washer		2
				F128	10-24 x 3/8 PTHMS		4
NOTE: Refer to BODY / CHASSIS ASSEMBLY (GHS MODELS) , Page 4 for all common parts used on both models.							


BODY ASSEMBLY (NON-COLLECTION MODELS)

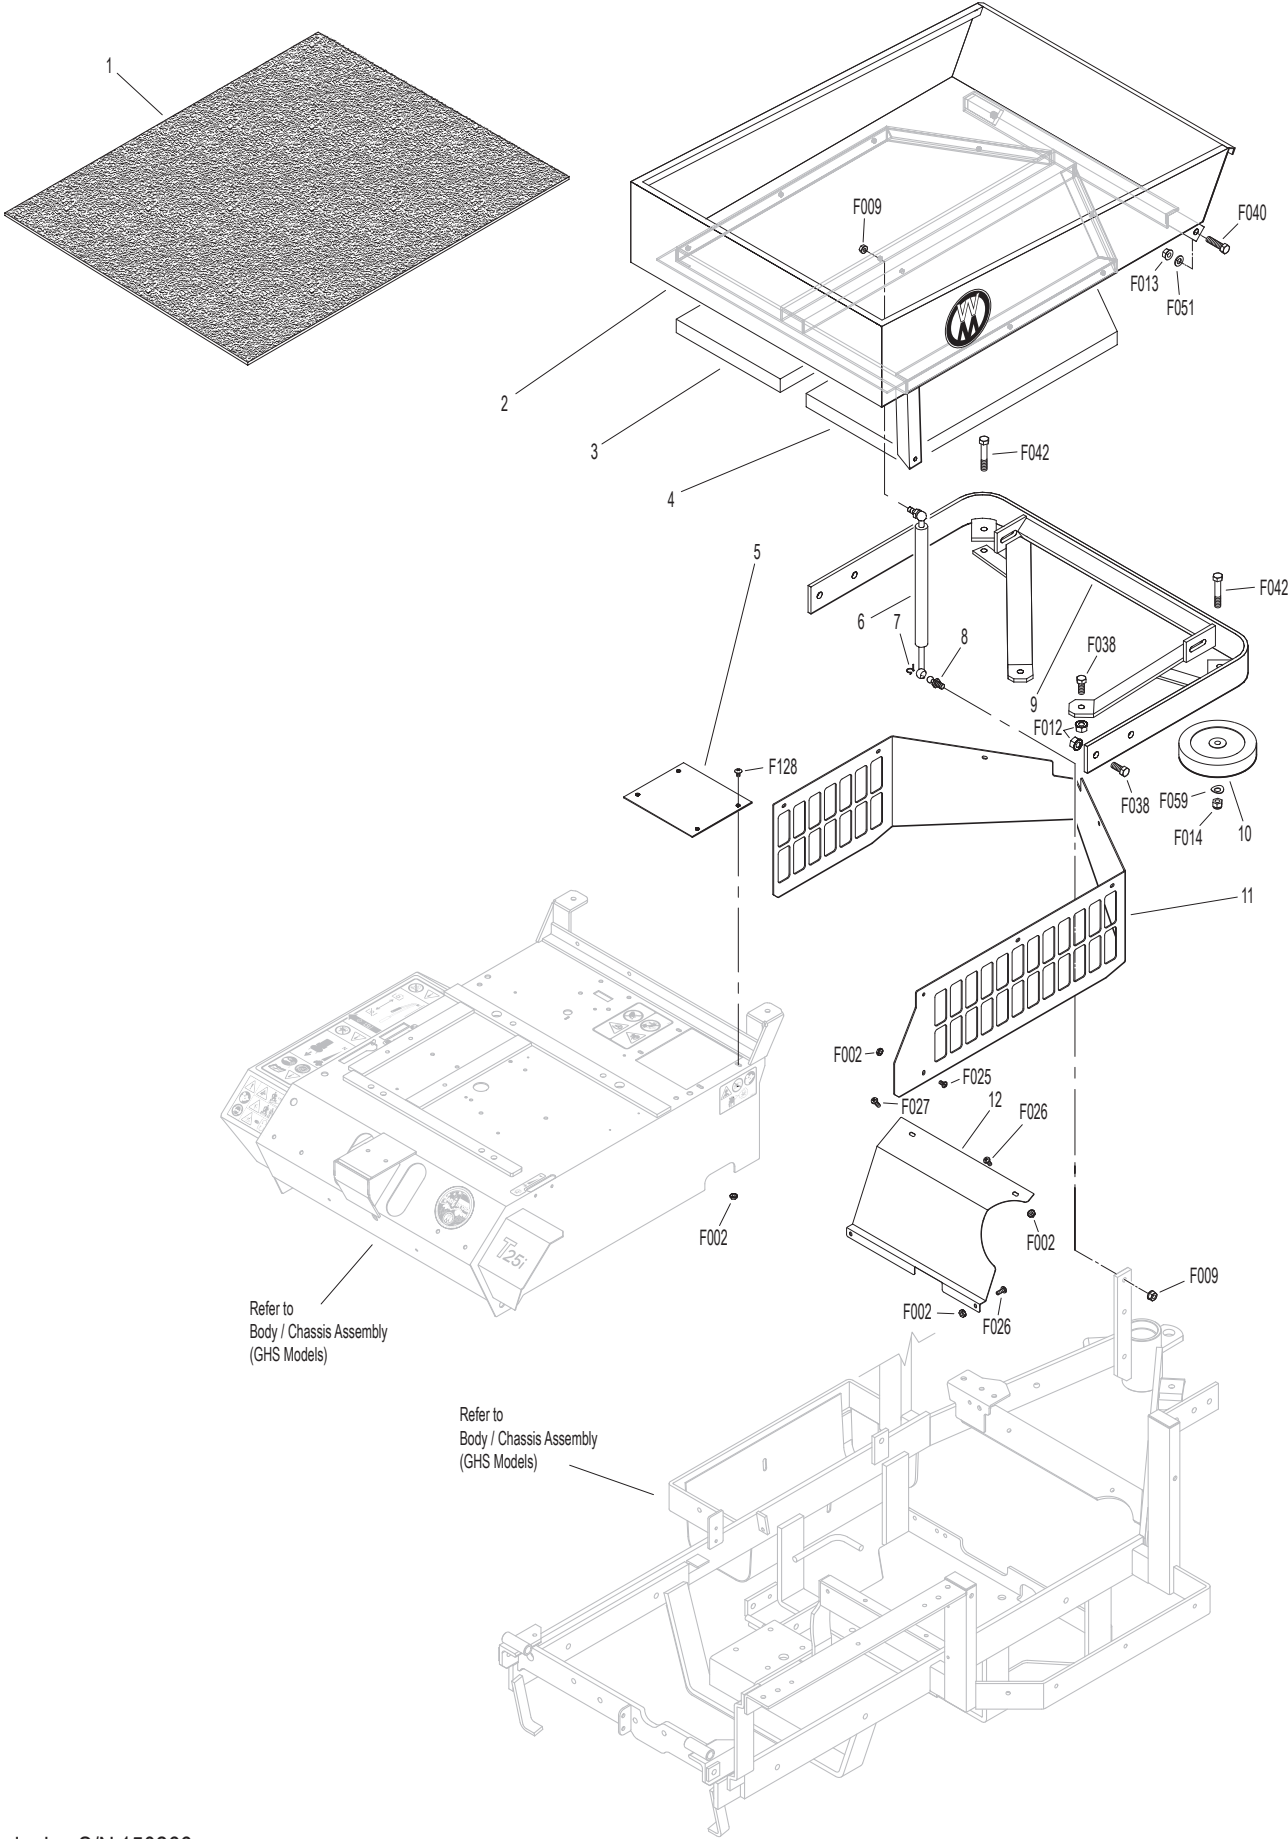

MAIN COMPONENT POWER TRANSMISSION (GHS MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Clutch Lever Assembly				41	8349-4	Idler Arm	1
1	8358-3	Clutch Lever (Includes Items # 2 & 3)	1	42	7201-4	Inner Race (1-1/2)	2
2	5830	Grease Fitting	7	43	5221-1	Extension Spring (3/4 x 5)	2
3	4850	Handle Grip, Black	1	44	8539	Starter Relay Mount	1
4	7303-10	Clutch Actuator Bolt (3/8)	1	45	5268	Bearing W/Collar (3/4)	2
5	7380-5	Knuckle Joint (3/8 ID)	1	46	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F171)	1
6	7226-10	Compression Spring (3/4 x 2-1/2)	1	47	7833	Cable Clamp (7/8 x 1/4)	1
7	8130-5	Pushrod, Clutch Actuator (Threaded Tube) (Includes Item # 2)	1	48	8349	Transmission Belt Tightener Arm	1
8	8130-10	Clutch Actuator Rod Assembly (Includes Items # 2, 4-7, F054, F336 & F353)	1	49	8393-7	Hydro Jackshaft Mount	1
9	7201-3	Fiberglide Bearing	6		8394-1	Hydro Jackshaft Mount Assembly (Includes Items # 2, 9, 42, 45, 49 & 50)	*
10	7201-5	Inner Race (2-1/4)	1	50	8273	Jackshaft (3/4 x 7-1/2)	1
11	8368	PTO Belt Tightener	1	51	7240-4	Jackshaft Drive Pulley (3.3/3V) (Includes Items # F067 & F171)	1
12	5841	Retainer Washer (3/8 x 1-1/4)	4	Fasteners			
13	8243-1	Clutch Idler Pulley	1		F003	1/4-28 Hex Nut	2
	8243	Clutch Idler Pulley Assembly (Includes Items # 14, 15 & F070)	*		F004	1/4-20 Keps Nut	3
14	5265	Bearing (3/4)	1		F005	1/4-20 ESNA Nut	1
15	8243-3	Hub, Idler Pulley	1		F009	5/16-18 Whiz Locknut	3
16	8375	PTO Belt Tightener Stop	1		F012	3/8-16 Keps Nut	7
17	7377	Plastic Washer (1 x .438 x .025)	2		F029	1/4-20 x 1/2 Hex Bolt	1
18	7378	Pivot Bearing (7/16 x 9/16)	1		F040	3/8-16 x 1-1/2 Hex Bolt	1
19	5281-5	Clevis Pin (1/4 x 0.80)	2		F041	3/8-16 x 1-3/4 Hex Bolt	2
20	5280	Clevis (1/4)	2		F042	3/8-16 x 2-1/4 Hex Bolt	3
21	8305	Brake Actuator Rod	1		F043	3/8-16 x 3 Hex Bolt	1
22	8370	Bearing, Brake Actuator	1		F047	3/8-16 x 4-1/2 Hex Bolt	1
23	8250	Brake Spring (1/2 x 2-1/2)	1		F054	AN960616 Washer	3
24	8369	Brake Actuator (Includes Items # 2 & 22)	1		F061	1/4 Internal Star Lock Washer	1
PTO Drive Shaft Assembly					F067	3/16 x 3/16 x 1 Key	2
25	7050-1	Dipstick, Gearbox	1		F069	3/32 x 1/2 Cotter Pin	3
26	8371-1	Mount Bracket, Brake Band	1		F070	1-3/4 Internal Snap Ring	1
27	8377	Brake Band Guide	1		F090	1/4-20 x 2-1/2 Hex Bolt	1
28	8050-11	PTO Gearbox / Flange Pulley	1		F116	1/4-20 x 1-1/4 Hex Bolt	1
29	5245	Idler Pulley (3")	2		F121	5/16-18 x 3/8 x 1 SHL Bolt	1
30	7248	Ground Drive Belt, Micro-V	1		F131	5/16-18 x 1/2 Hex Bolt	2
31	7275-16	Universal Joint Tube Assembly / Spline	1		F132	1/4-20 x 2-3/4 Hex Bolt	1
32	7275-9	Quick Coupler Installation Tool	1		F168	5/16 Split Lock Washer	14
33	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1		F171	5/16-18 x 3/8 Set Screw	4
34	8304	Brake Band (14-1/2)	1		F178	1/4 x 1 Fender Washer	1
35	6250-1	Drive Belt (3VX370)	1		F182	1/4 x 5/8 x 1/8 Washer	2
36	7236-1	PTO Drive Pulley (4-1/2/3V) (Includes Items # F168 & F226)	1		F226	5/16-18 x 7/8 Hex Bolt	14
37	8237-2	Engine Pulley, Bolt On (4/3.8/3V) (Includes Items # F168 & F226)	1		F241	.375 x .875 x .10 Washer	1
38	8230	Engine PTO Belt	1		F255	5/16-18 x 1-1/2 Hex Bolt	2
Jackshaft Assembly					F261	AN960616L Washer	1
39	7245-1	Idler Pulley (3/8 Groove)	1		F336	3/8-16 Jam Nut	1
40	6325-2	Spacer Bushing (5/16)	2		F353	3/8-16 ESNA LP Nut	1
				*	Service Part Only		


MAIN COMPONENT POWER TRANSMISSION (GHS MODELS)

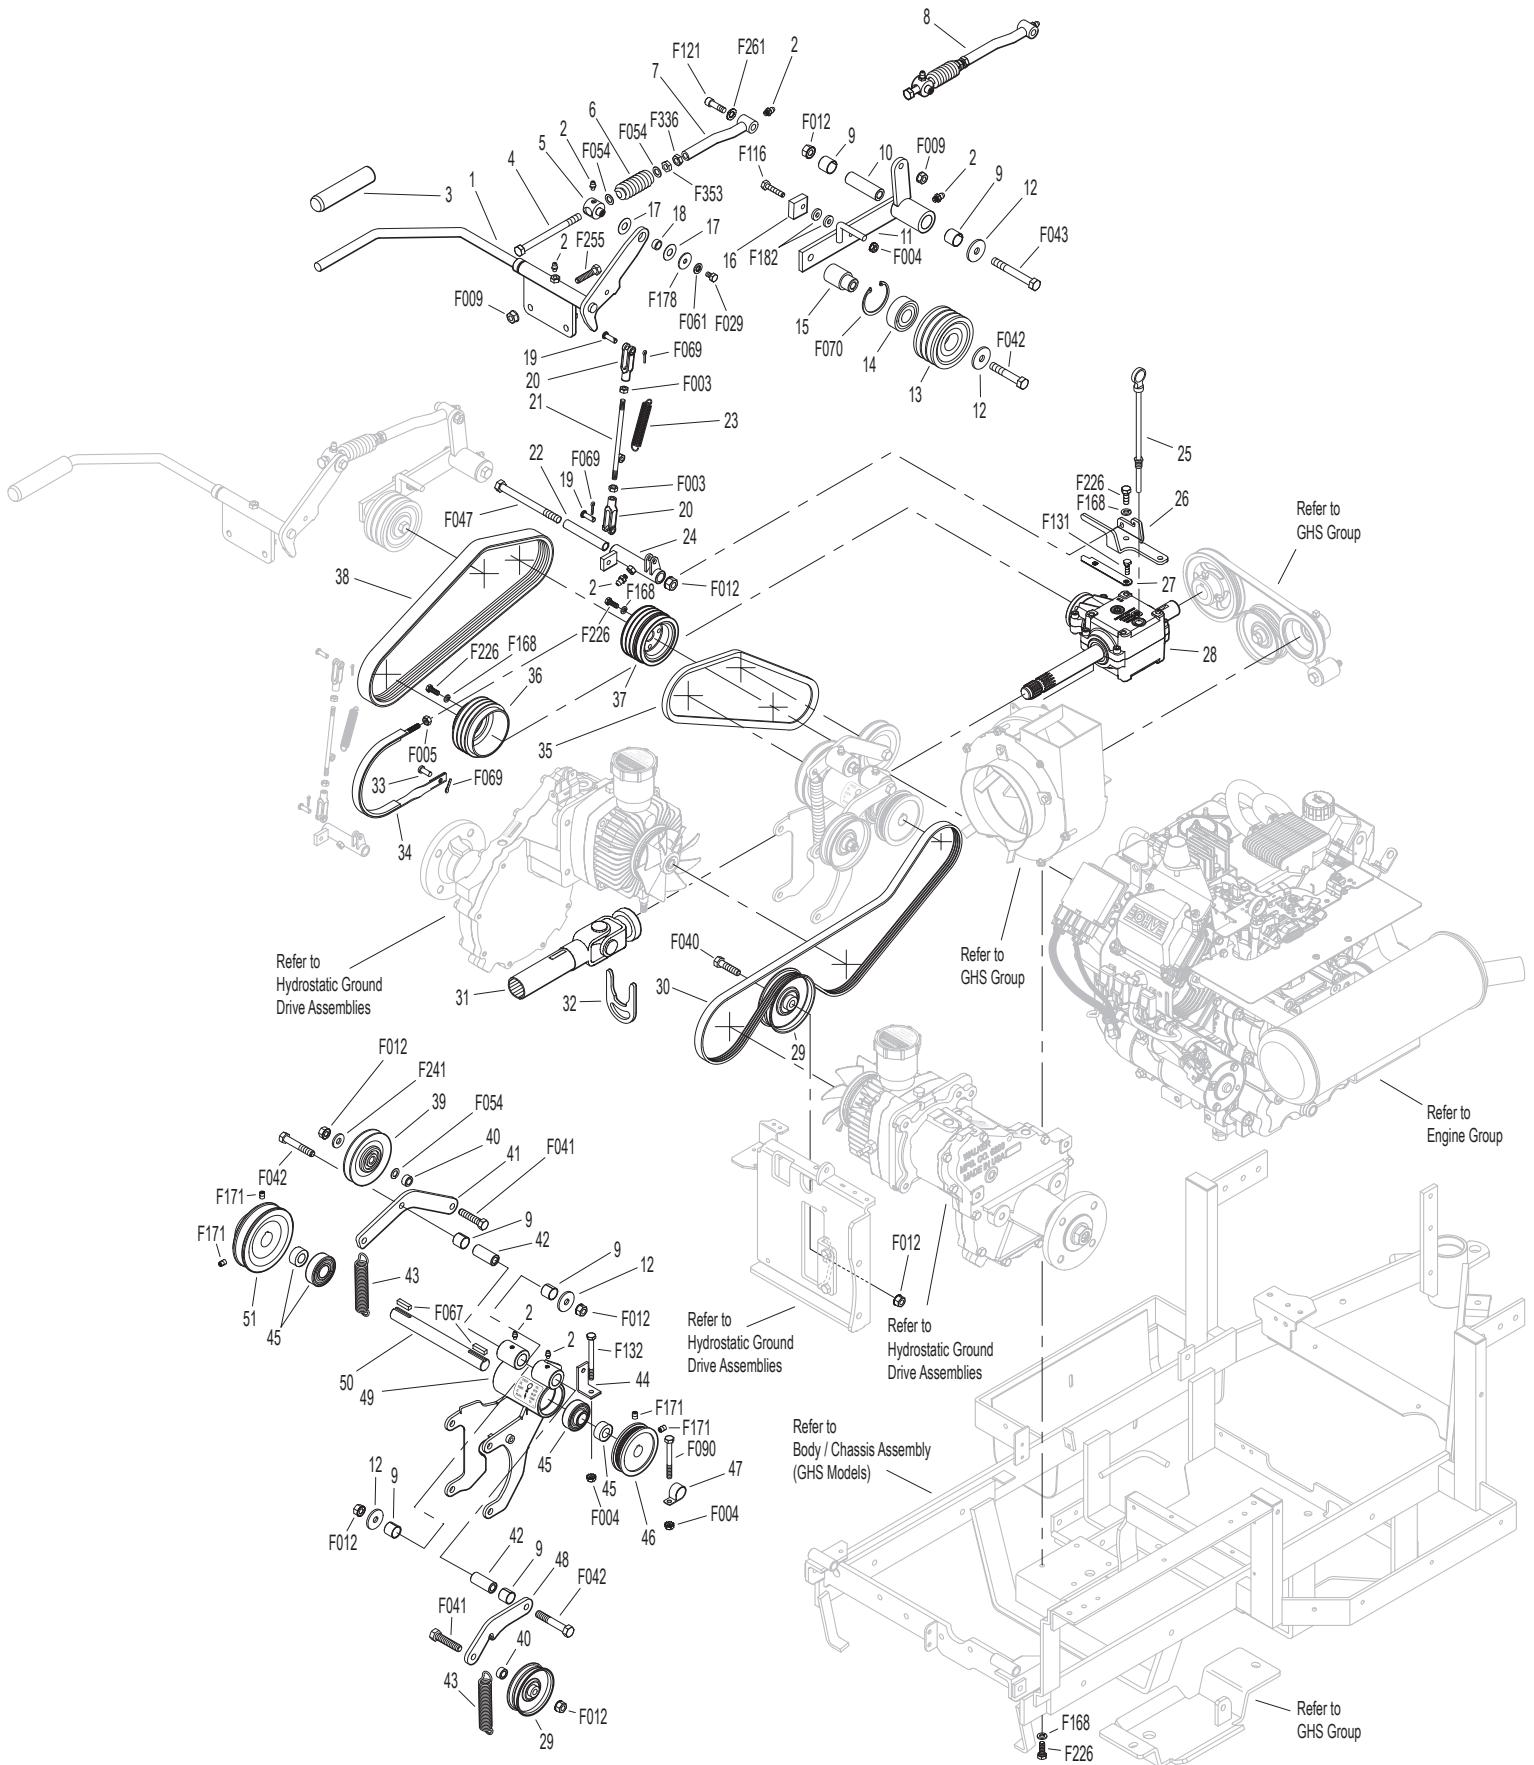

MAIN COMPONENT POWER TRANSMISSION (NON-COLLECTION MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Clutch Lever Assembly				42	7201-4	Inner Race (1-1/2)	2
1	8358-3	Clutch Lever (Includes Items # 2 & 3)	1	43	5221-1	Extension Spring (3/4 x 5)	2
2	5830	Grease Fitting	7	44	8539	Starter Relay Mount	1
3	4850	Handle Grip, Black	1	45	5268	Bearing W/Collar (3/4)	2
4	7303-10	Clutch Actuator Bolt (3/8)	1	46	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F171)	1
5	7380-5	Knuckle Joint (3/8 ID)	1	47	7833	Cable Clamp (7/8 x 1/4)	1
6	7226-10	Compression Spring (3/4 x 2-1/2)	1	48	7394-6	Idler Pulley Spring Mount	1
7	8130-5	Pushrod, Clutch Actuator (Threaded Tube) (Includes Item # 2)	1	49	8349	Transmission Belt Tightener Arm	1
8	8130-10	Clutch Actuator Rod Assembly (Includes Items # 2, 4-7, F054, F336 & F353)	1	50	8393-7	Hydro Jackshaft Mount	1
9	7201-3	Fiberglide Bearing	6		8394-1	Hydro Jackshaft Mount Assembly (Includes Items # 2, 9, 42, 45, 50 & 51)	*
10	7201-5	Inner Race (2-1/4)	1	51	8273	Jackshaft (3/4 x 7-1/2)	1
11	8368	PTO Belt Tightener	1	52	7240-4	Jackshaft Drive Pulley (3.3/3V) (Includes Items # F067 & F171)	1
12	5841	Retainer Washer (3/8 x 1-1/4)	4	Fasteners			
13	8243-1	Clutch Idler Pulley	1	F003	1/4-28 Hex Nut		2
	8243	Clutch Idler Pulley Assembly (Includes Items # 13-15 & F070)	*	F004	1/4-20 Keps Nut		3
14	5265	Bearing (3/4)	1	F005	1/4-20 ESNA Nut		1
15	8243-3	Hub, Idler Pulley	1	F009	5/16-18 Whiz Locknut		3
16	8375	PTO Belt Tightener Stop	1	F012	3/8-16 Keps Nut		7
17	7377	Plastic Washer (1 x .438 x .025)	2	F029	1/4-20 x 1/2 Hex Bolt		1
18	7378	Pivot Bearing (7/16 x 9/16)	1	F040	3/8-16 x 1-1/2 Hex Bolt		1
19	5281-5	Clevis Pin (1/4 x 0.80)	2	F041	3/8-16 x 1-3/4 Hex Bolt		2
20	5280	Clevis (1/4)	2	F042	3/8-16 x 2-1/4 Hex Bolt		3
21	8305	Brake Actuator Rod	1	F043	3/8-16 x 3 Hex Bolt		1
22	8370	Bearing, Brake Actuator	1	F047	3/8-16 x 4-1/2 Hex Bolt		1
23	8250	Brake Spring (1/2 x 2-1/2)	1	F054	AN960616 Washer		3
24	8369	Brake Actuator (Includes Items # 2 & 22)	1	F061	1/4 Internal Star Lock Washer		1
PTO Drive Shaft Assembly				F067	3/16 x 3/16 x 1 Key		2
25	7050-1	Dipstick, Gearbox	1	F069	3/32 x 1/2 Cotter Pin		3
26	8371-1	Mount Bracket, Brake Band	1	F070	1-3/4 Internal Snap Ring		1
27	8377	Brake Band Guide	1	F090	1/4-20 x 2-1/2 Hex Bolt		2
28	8050-11	PTO Gearbox / Flange Pulley	1	F116	1/4-20 x 1-1/4 Hex Bolt		1
29	5245	Idler Pulley (3")	2	F121	5/16-18 x 3/8 x 1 SHL Bolt		1
30	7248	Ground Drive Belt, Micro-V	1	F131	5/16-18 x 1/2 Hex Bolt		2
31	7275-16	Universal Joint Tube Assembly / Spine	1	F168	5/16 Split Lock Washer		14
32	7275-9	Quick Coupler Installation Tool	1	F171	5/16-18 x 3/8 Set Screw		4
33	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1	F178	1/4 x 1 Fender Washer		1
34	8304	Brake Band (14-1/2)	1	F182	1/4 x 5/8 x 1/8 Washer		2
35	6250-1	Drive Belt (3VX370)	1	F226	5/16-18 x 7/8 Hex Bolt		14
36	7236-1	PTO Drive Pulley (4-1/2/3V) (Includes Items # F168 & F226)	1	F241	.375 x .875 x .10 Washer		1
37	8237-2	Engine Pulley, Bolt On (4/3.8/3V) (Includes Items # F168 & F226)	1	F255	5/16-18 x 1-1/2 Hex Bolt		2
38	8230	Engine PTO Belt	1	F261	AN960616L Washer		1
Jackshaft Assembly				F336	3/8-16 Jam Nut		1
39	7245-1	Idler Pulley (3/8 Groove)	1	F353	3/8-16 ESNA LP Nut		1
40	6325-2	Spacer Bushing (5/16)	2	* Service Part Only			
41	8349-4	Idler Arm	1				


MAIN COMPONENT POWER TRANSMISSION (NON-COLLECTION MODELS)

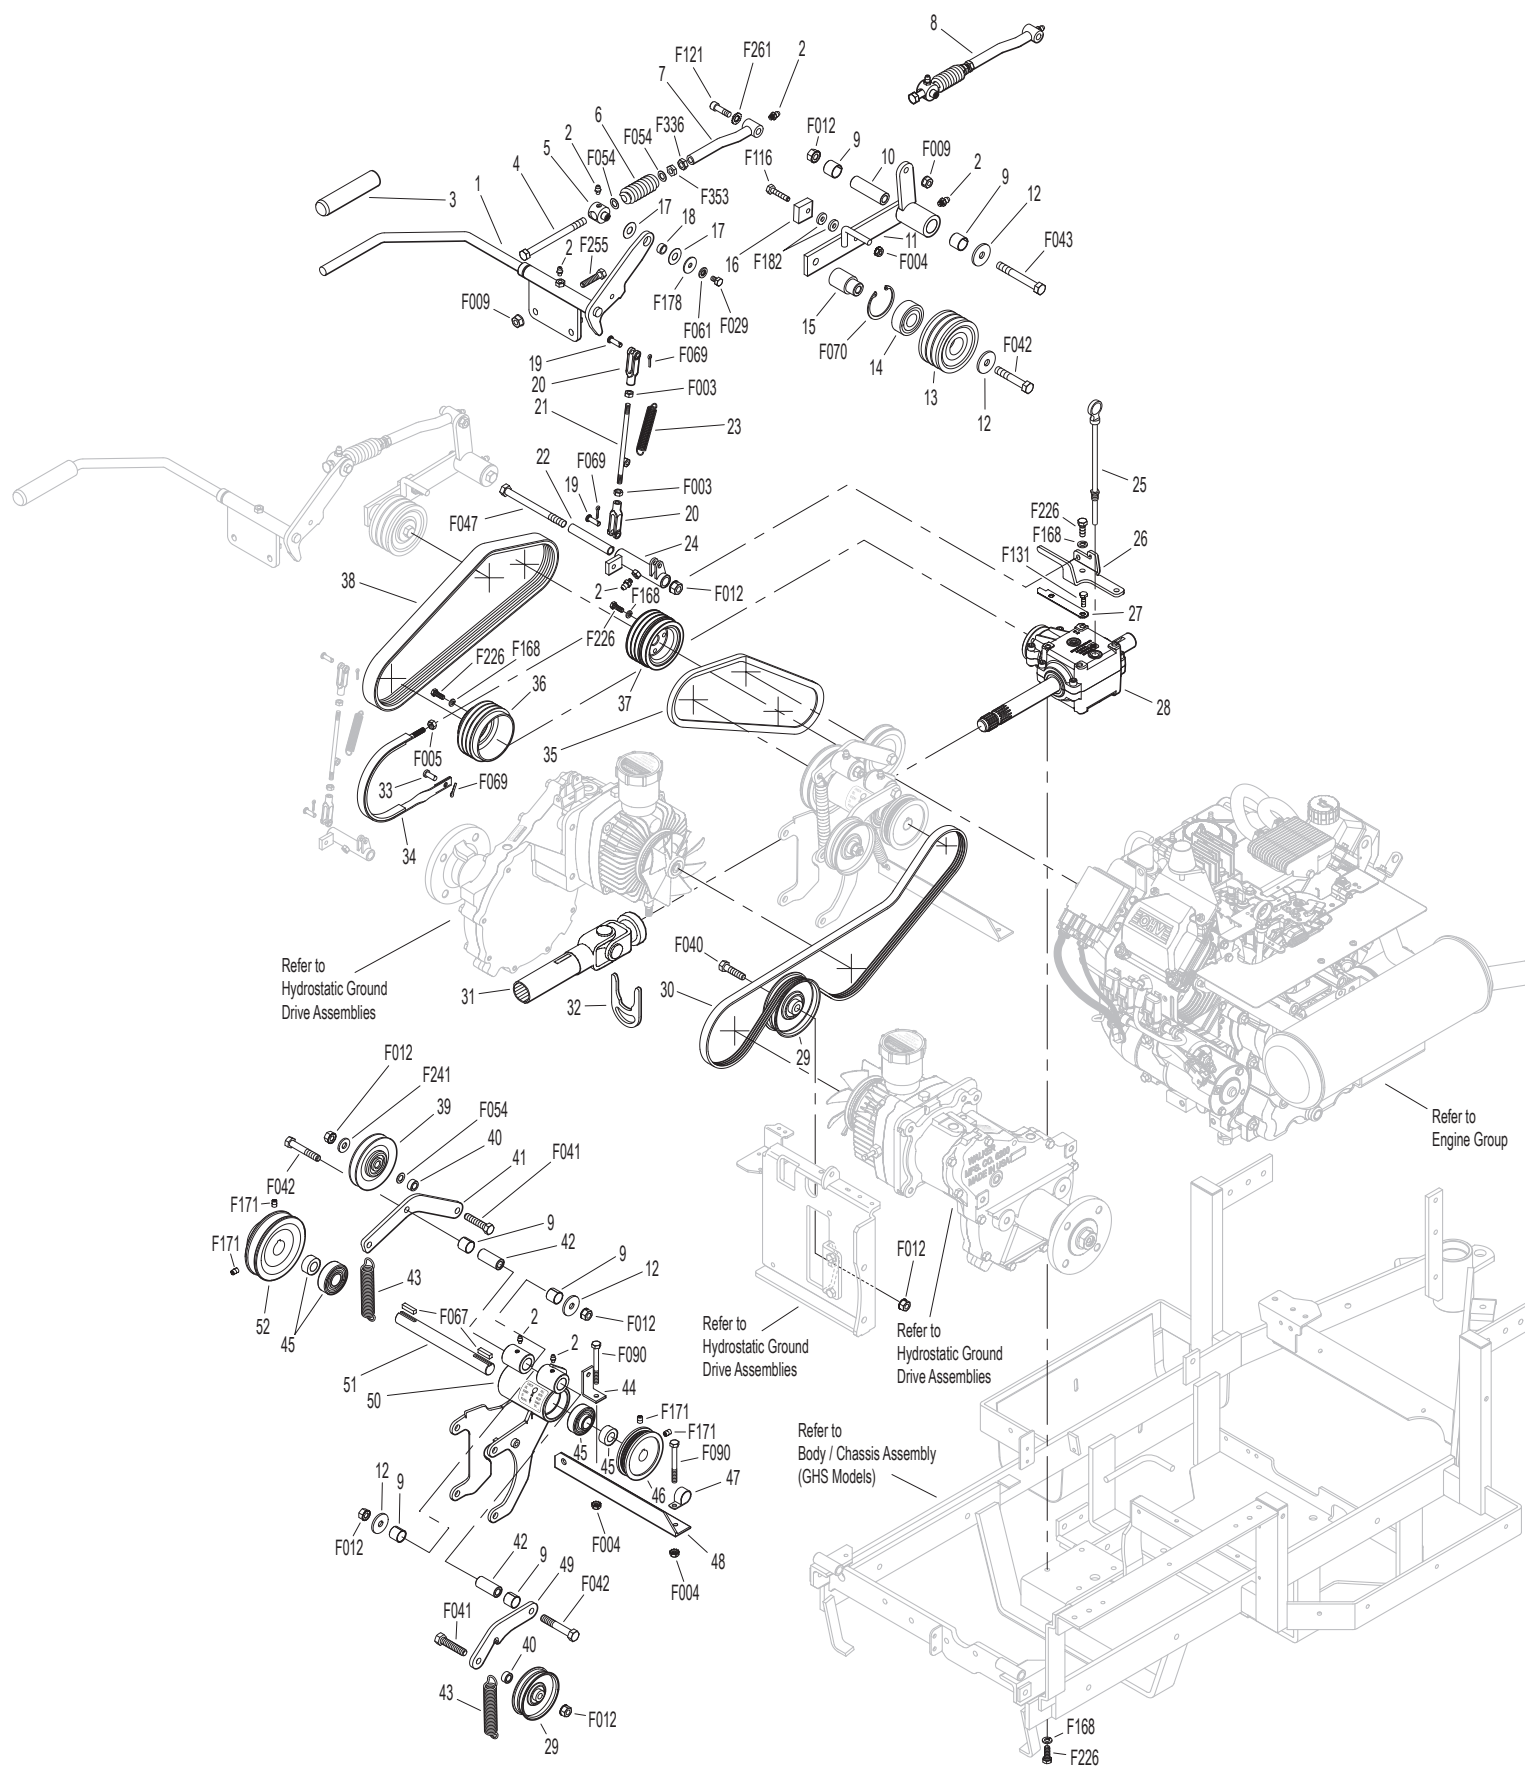

ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Precleaner Assembly				36	8013-44	Upright Support	1
1	7026-3	Remote Precleaner (Includes Item # 2)	1	37	8013-42	Heat Shield, Muffler	1
2	7840-5	Hose Clamp (1-1/2 to 2)	3	38	NS	1/4-20 x 5/8" Button Head Hex Screw	4
3	7028-5	Precleaner Tube (1-3/4)	1	39	8013-43	Muffler Heat Shield Endcap	1
4	7440	Shock Mount (1 x 3/4)	3	40	NS	10-24 x 3/8" Button Head Hex Screw	1
5	7028-20	Rear Precleaner Mount	1	41	8013-18	Muffler Brace	1
6	6029	Hose Clamp (1-3/4 to 2-1/4)	2	42	8021	Engine Brace	1
7	8026-17	Air Intake Hose	1	Fasteners			
8	6090-11	Air Cleaner Assembly (Includes Items # 10-14, 16 & 17)	*	F002	10-24 Keps Nut		6
9	7032	Elbow, Precleaner	1	F004	1/4-20 Keps Nut		8
10	5090-3	Safety Filter Insert	1	F009	5/16-18 Whiz Locknut		11
11	5090-1	Air Cleaner Cartridge	1	F012	3/8-16 Keps Nut		4
12	5088-5	Air Cleaner Draw Latch	2	F025	10-24 x 3/8 PPHMS		2
13	5088-11	Air Cleaner Cap (Includes Item # 12)	1	F029	1/4-20 x 1/2 Hex Bolt		4
14	5090-2	Vacuator Valve	1	F031	1/4-20 x 5/8 Hex Bolt		2
15	5088-3	Air Cleaner Band	1	F038	3/8-16 x 1 Hex Bolt		3
16	5091-0	1/8 Pipe Thread Male W/Barb	1	F049	5/16 SAE Washer		1
17	5091-16	Street Elbow 90° (1/8 x 1/8)	1	F050	1/4 SAE Washer		2
18	M258	Vacuum Hose (7")	1**	F052	5/16 External Star Lock Washer		2
19	5091-6	Air Flow Indicator W/Bracket	1	F053	7/16 Int. Star Lock Washer		2
20	7031-3	Tube Support Arm	1	F061	1/4 Internal Star Lock Washer		2
Engine Assembly				F063	3/8 Internal Star Lock Washer		2
21	5845	Rubber Bumper (1.50 x 1.25)	1	F091	5/16-18 x 5/8 Hex Bolt		2
22	8010-2	Engine Bumper Mount	1	F094	8-32 x 1/2 PTHMS		2
23	NS	Oil Filter (Kohler 1205001)	1	F106	3/8-16 x 5/8 Hex Bolt		2
24	NS	25-hp EFI Engine	1	F120	AN960416 Washer		2
Remote Oil Cooler Assembly				F140	7/16-14 x 1 Hex Bolt		2
25	NS	Clamp (Kohler 25 237 02-S)	4	F175	1/2 Split Lock Washer		4
26	NS	Oil Cooler Hose (Kohler 24326127)	2	F235	5/16-18 x 2-1/2 Hex Bolt		1
27	NS	Oil Cooler (Kohler 24 594 12-S)	1	F255	5/16-18 x 1-1/2 Hex Bolt		2
28	8016-8	Oil Cooler / Regulator Mount	1	F256	7/16 SAE Washer		2
Exhaust Assembly				F273	M6 x 1.0 Nut		4
29	8530-8	Grass Shield, Muffler (Includes Items # F002 & F025)	1	F285	1/2-13 x 1-1/2 Hex Bolt		4
30	NS	Screw (Kohler M645016-S)	2	F324	M8 x 1.25 x 12 Hex Bolt		2
31	NS	Sensor, Oxygen (Kohler)	1	F438	5/16-18 x 2-3/4 Hex Bolt		1
32	NS	Gasket (Kohler)	2	F482	8-32 Nylock Nut		2
33	NS	Nut (Kohler M-0841080)	4	F551	5/16-18 Flange Top Lock Nut		2
34	8013-11	Muffler (EFI)	1	F547	M6 x 1.0 x 45 Stud		2
35	NS	10-24 x 1/2" Button Head Hex Screw	3	* Service Part Only			
				** Required hose specifications: M258 - 7/64" ID automotive vacuum hose			
				NOTE: Refer to Kohler Engine Decal (NS) for Engine Identification Numbers.			

ENGINE GROUP

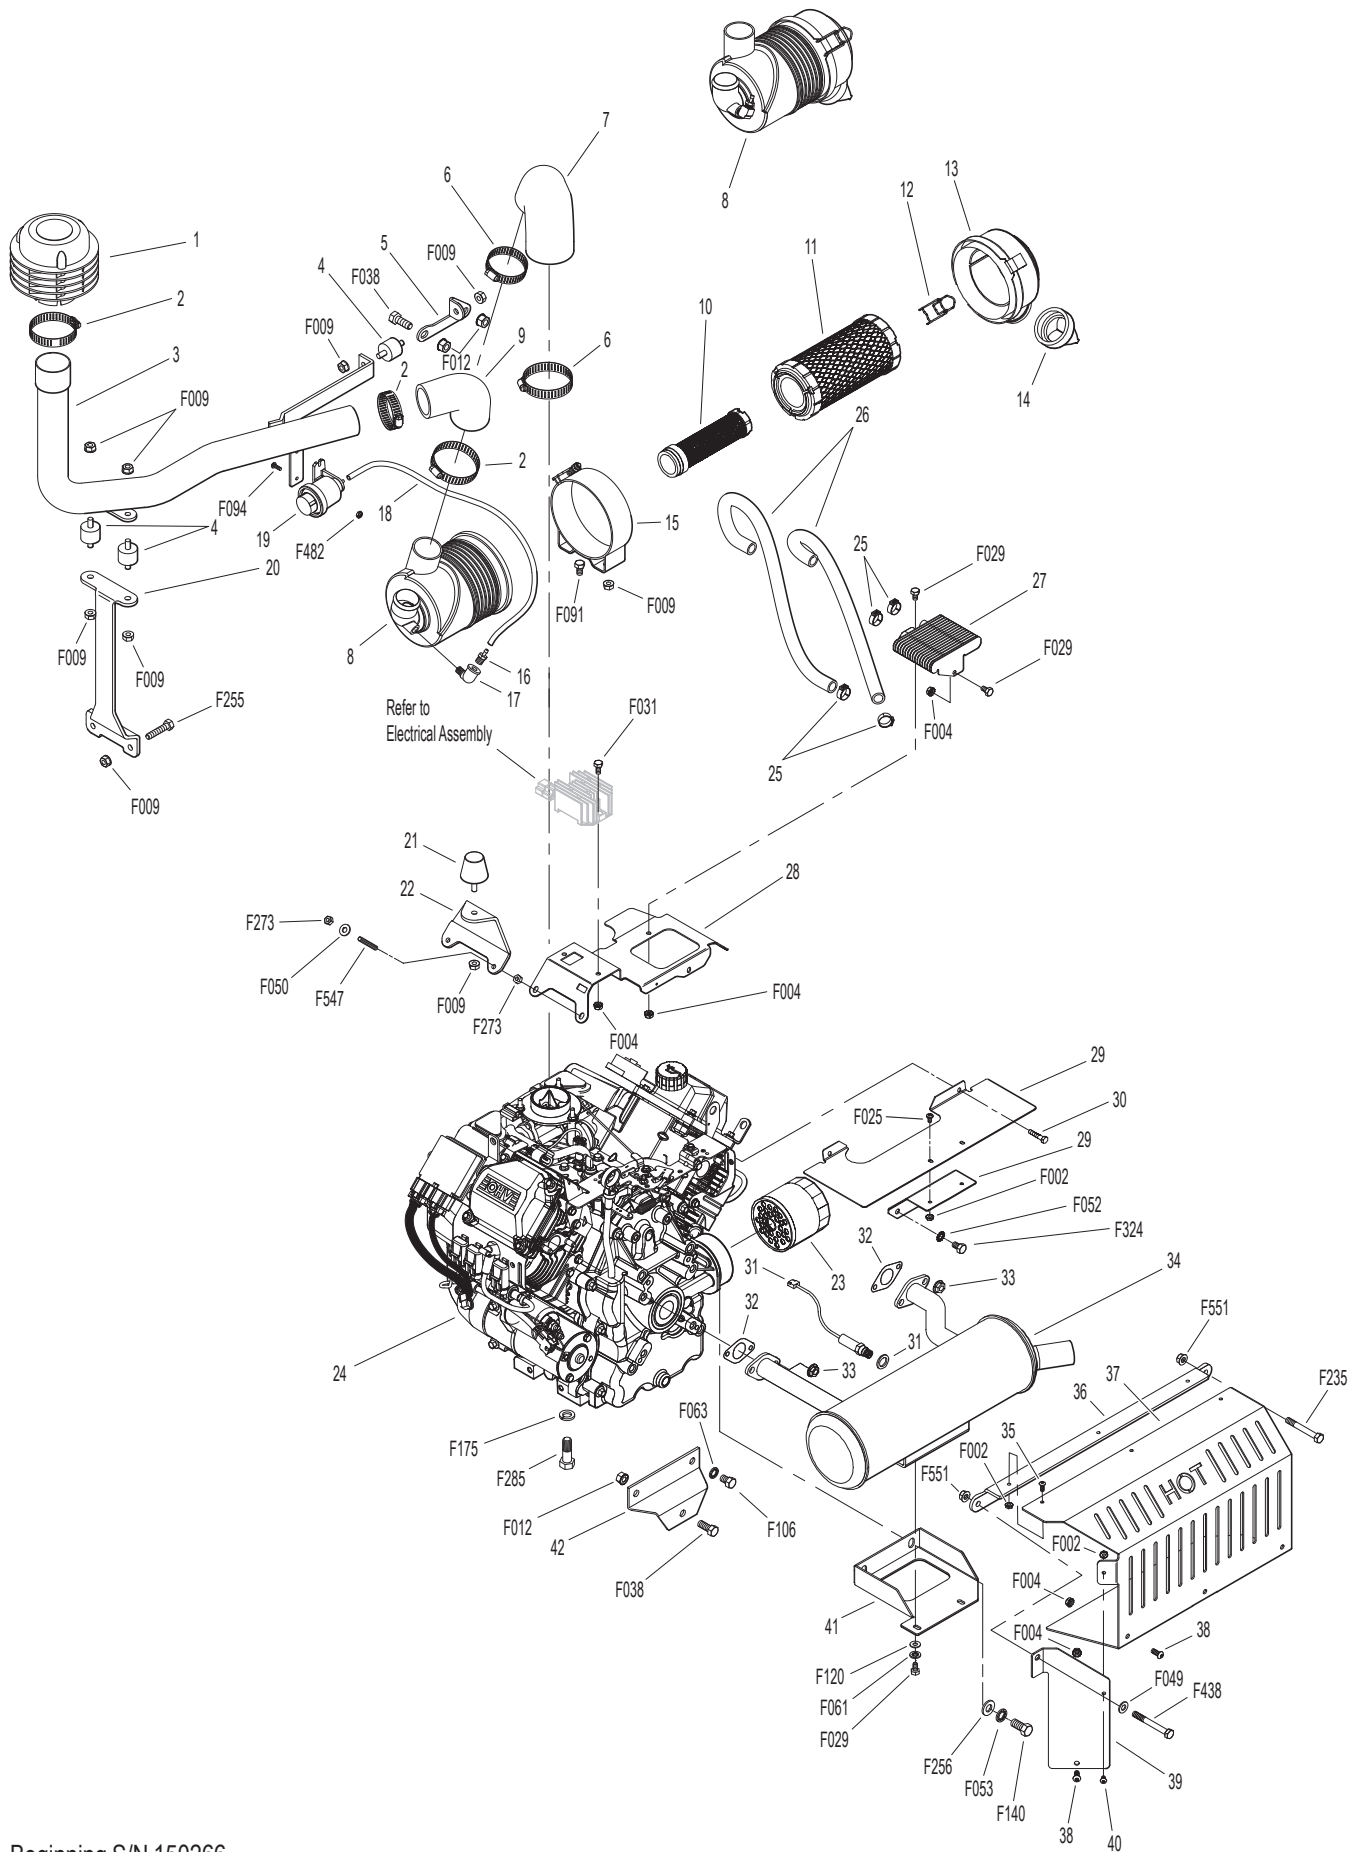

Beginning S/N 150266
Use only genuine **Walker®** replacement parts.

ENGINE GROUP (FUEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fuel Tank Assembly				Fasteners			
1	8055-1	Fuel Tank, 4.7 Gallon, Gas (Black) (Includes Items # 3-7, 26 & 28)	1	F002	10-24 Keps Nut		3
2	5082-4	2-1/4 Ratchet Fuel Cap	*	F004	1/4-20 Keps Nut		3
3	8055-2	Fuel Tank Gauge	1	F009	5/16-18 Whiz Locknut		2
4	8043-8	Roll Over Valve	1	F025	10-24 x 3/8 PPHMS		2
5	5977-7	Roll Over Grommet (.900 x 1-1/2)	1	F029	1/4-20 x 1/2 Hex Bolt		2
6	5083-8	Tank Tube (13")	1	F034	5/16-18 x 3/4 Hex Bolt		2
7	5083-1	Bushing, Rubber	1	F050	1/4 SAE Washer		3
8	5879-3	Hose Clamp (1/2)	6	F061	1/4 Internal Star Lock Washer		2
9	5975-3	Cable Tie (50# x 7")	2	F079	A/A66D Aluminum Pop Rivet		2
10	M113	Fuel Line (3/16 x 28")	1**	F128	10-24 x 3/8 PTHMS		1
11	7833	Cable Clamp (7/8 x 1/4)	2	F129	10-24 x 1/2 PTHMS		1
12	8018-4	Fuel Module Cover	1	F398	1/4-20 x 2 Hex Bolt		3
13	8018-7	Fuel Module Bracket	1				
14	8018-2	Fuel Bracket Spacer	3				
15	M113	Fuel Line (3/16 x 12")	1**				
16	5879-4	Hose Clamp (7/16)	1				
17	8046-16	Quick Connector 5/16 x 5/16 - 45°	1				
18	8046-14	Quick Connector, Male (5/16)	1				
19	M246	Fuel Line (1/4 x 20.5")	1**				
20	5879-5	Stepless Ear Clamp (5/8)	2				
21	M247	Fuel Line (5/16 x 6")	1**				
22	NS	Fuel Line, Engine (Kohler)	1				
23	5020-3	Fuel Filter, EFI (9-12 Micron)	*				
24	M246	Fuel Line (1/4 x 23")	1**				
25	8016-6	ECU Mount	1				
26	5086-7	Hose (1/4 x 6")	1				
27	8023	Fuel Tank Support	1				
28	5020-2	Fuel Filter, In Tank	1				

* Service Part Only

**** Required hose specifications:**


M113 - 3/16" ID fuel/oil/vapor hose (Gates 4219-0093 or equivalent)

M246 - 1/4" ID low permeation (<15g/m²/day) fuel hose (Parker 38904 or equivalent)

M247 - 5/16" ID low permeation (<15g/m²/day) fuel hose (Parker 38905 or equivalent)

NOTE: Refer to Kohler Engine Decal (NS) for Engine Identification Numbers.


ENGINE GROUP (FUEL COMPONENTS)

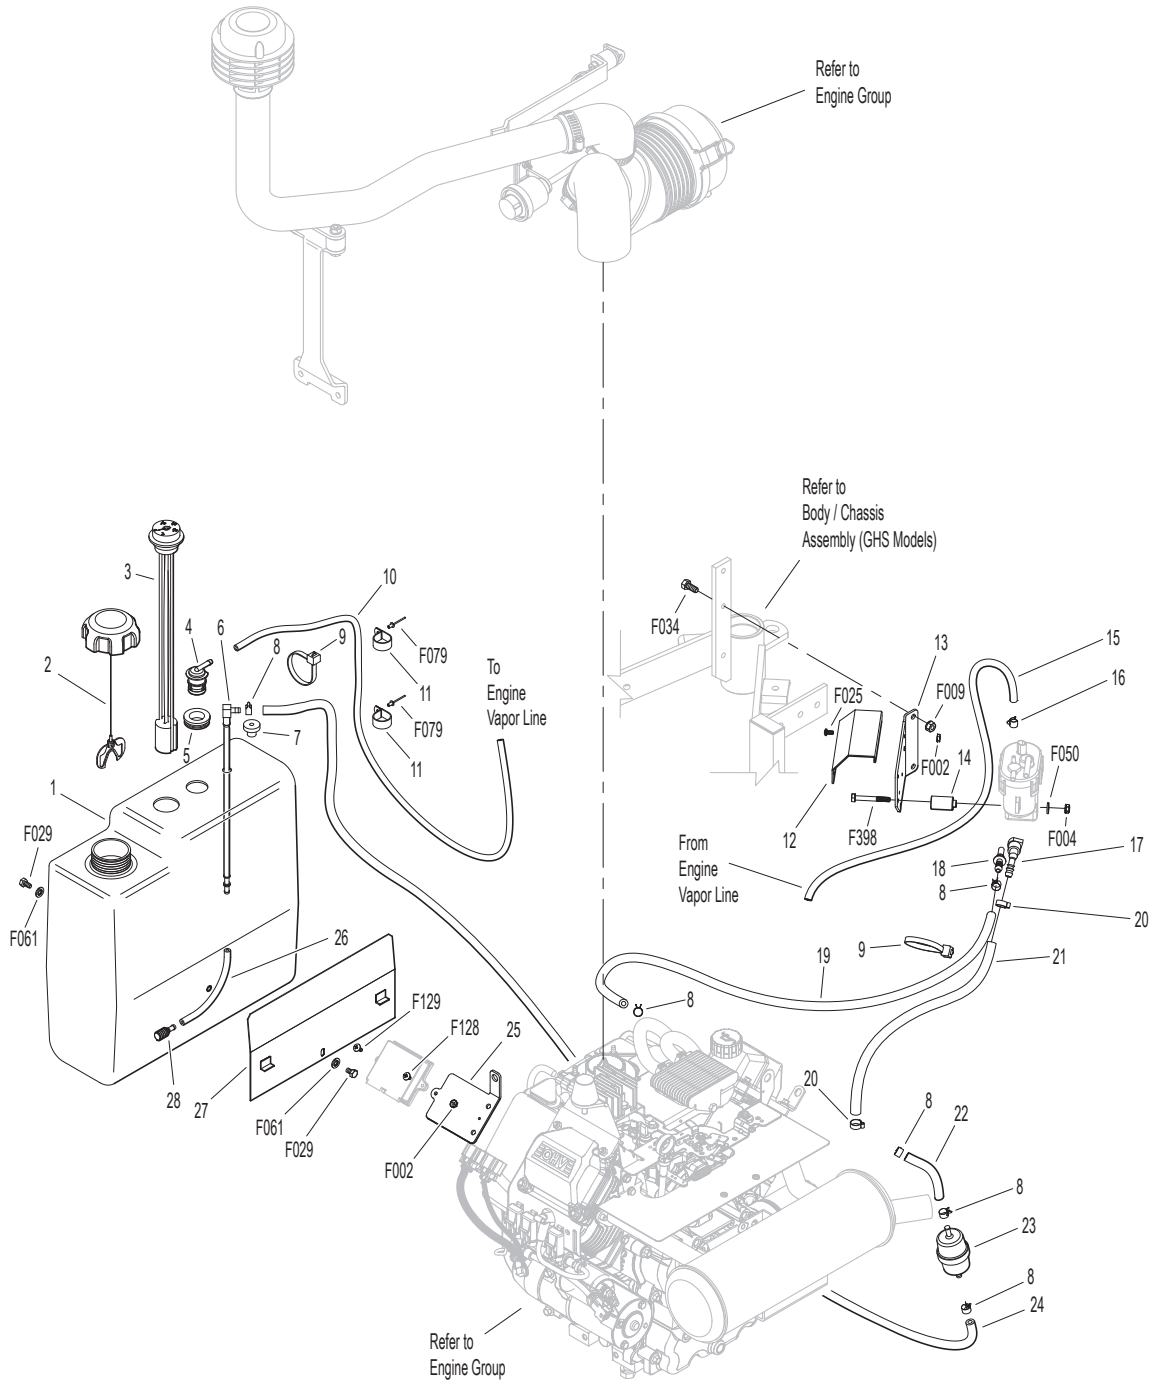

HYDROSTATIC GROUND DRIVE ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transmission Lockout Assembly				Transmission Repair Parts			
1	5028-3	Transmission Lockout Assembly (Includes Items # 2-5, F023, F027 & F081)	*	27	5025-13	Hydro Input Shaft	*
2	5847	Plastic Tip	2	28	5025-8	Bearing, Input Shaft	*
3	5057	Lockout Cam (Includes Item # F081)	2	29	5025-7	Snap Ring	*
4	5028-5	Lockout Lever	2	30	NS	Seal, Input Shaft	*
5	5027-5	Lockout Mount	1**	31	5022	Reservoir to Casting Gasket	*
Ground Drive Assemblies				32	5024	Reservoir Cap and Gasket	*
6	6209-5	Bridge Assembly	1	33	5023	Transmission Reservoir Kit	*
7	6209-10	Idler Pulley Mount	1	34	5023-1	Rubber Bladder	*
8	6243-2	Hydro Fan, CCW	1	35	5025-6	O-Ring & Plug Assembly	*
9	5026	Hydrostatic Drive, CW	1	36	5025-3	Seal, Control Shaft	*
10	6206-1	Air Vent Valve	*	Fasteners			
11	6200-9	Gear Axle Drive Assembly (Includes Items # 10 & 12)	2	F009	5/16-18 Whiz Locknut	2	
12	6207-12	Pipe Plug (1/4 NPTF)	*	F012	3/8-16 Keps Nut	2	
13	5126	Cable Retainer (Uses existing bolt on Gear Axle Drive Assembly)	1	F023	10-24 ESNA Nut	2	
14	6233-1	Pinion Gear	2	F027	10-24 x 5/8 PPHMS	2	
15	6234	Spacer, Pinion Gear	2	F034	5/16-18 x 3/4 Hex Bolt	2	
16	6201	O-Ring Seal	2	F036	1/4-20 x 1/2 SBH Screw	2	
17	7244	Hydro Pulley (3-7/8/MV) (Includes Items # F064 & F359)	2	F040	3/8-16 x 1-1/2 Hex Bolt	4	
18	6243-1	Hydro Fan, CW	1	F043	3/8-16 x 3 Hex Bolt	6	
19	5025	Hydrostatic Drive, CCW	1	F053	7/16 Internal Star Lock Washer	4	
Deck Support Arm Assemblies				F063	3/8 Internal Star Lock Washer	16	
20	6430-10	Outboard Mount, LH	1	F064	1/8 x 1/2 Woodruff Key (#3)	4	
21	6431-1	Deck Support Arm, LH (Includes Item # 25)	1	F081	A/A45D Aluminum Pop Rivet	2	
22	5775-2	Hitch Pin (# 6)	2	F160	External Snap Ring (.669 Shaft)	2	
23	6431-2	Deck Support Arm, RH (Includes Item # 25)	1	F178	1/4 x 1 Fender Washer	2	
24	6430-9	Outboard Mount, RH	1	F194	7/16 x 1-1/4 x 1/8 Washer	2	
25	5830	Grease Fitting	2	F200	7/16-20 x 3 Grade 8 Bolt	2	
26	6840-1	Support Arm Bushing (2-1/16)	2	F244	7/16-20 x 3/4 Hex Bolt	2	
				F262	3/8-16 x 4 Hex Bolt All Thread	2	
				F359	5/16-18 x 5/16 Set Screw (Unbrako Knurl Point)	4	
				F579	3/8-16 x 1 Hex Bolt Grade 8	4	
				*	Service Part Only		
				**	Part not used on Jackshaft side of tractor.		

HYDROSTATIC GROUND DRIVE ASSEMBLIES

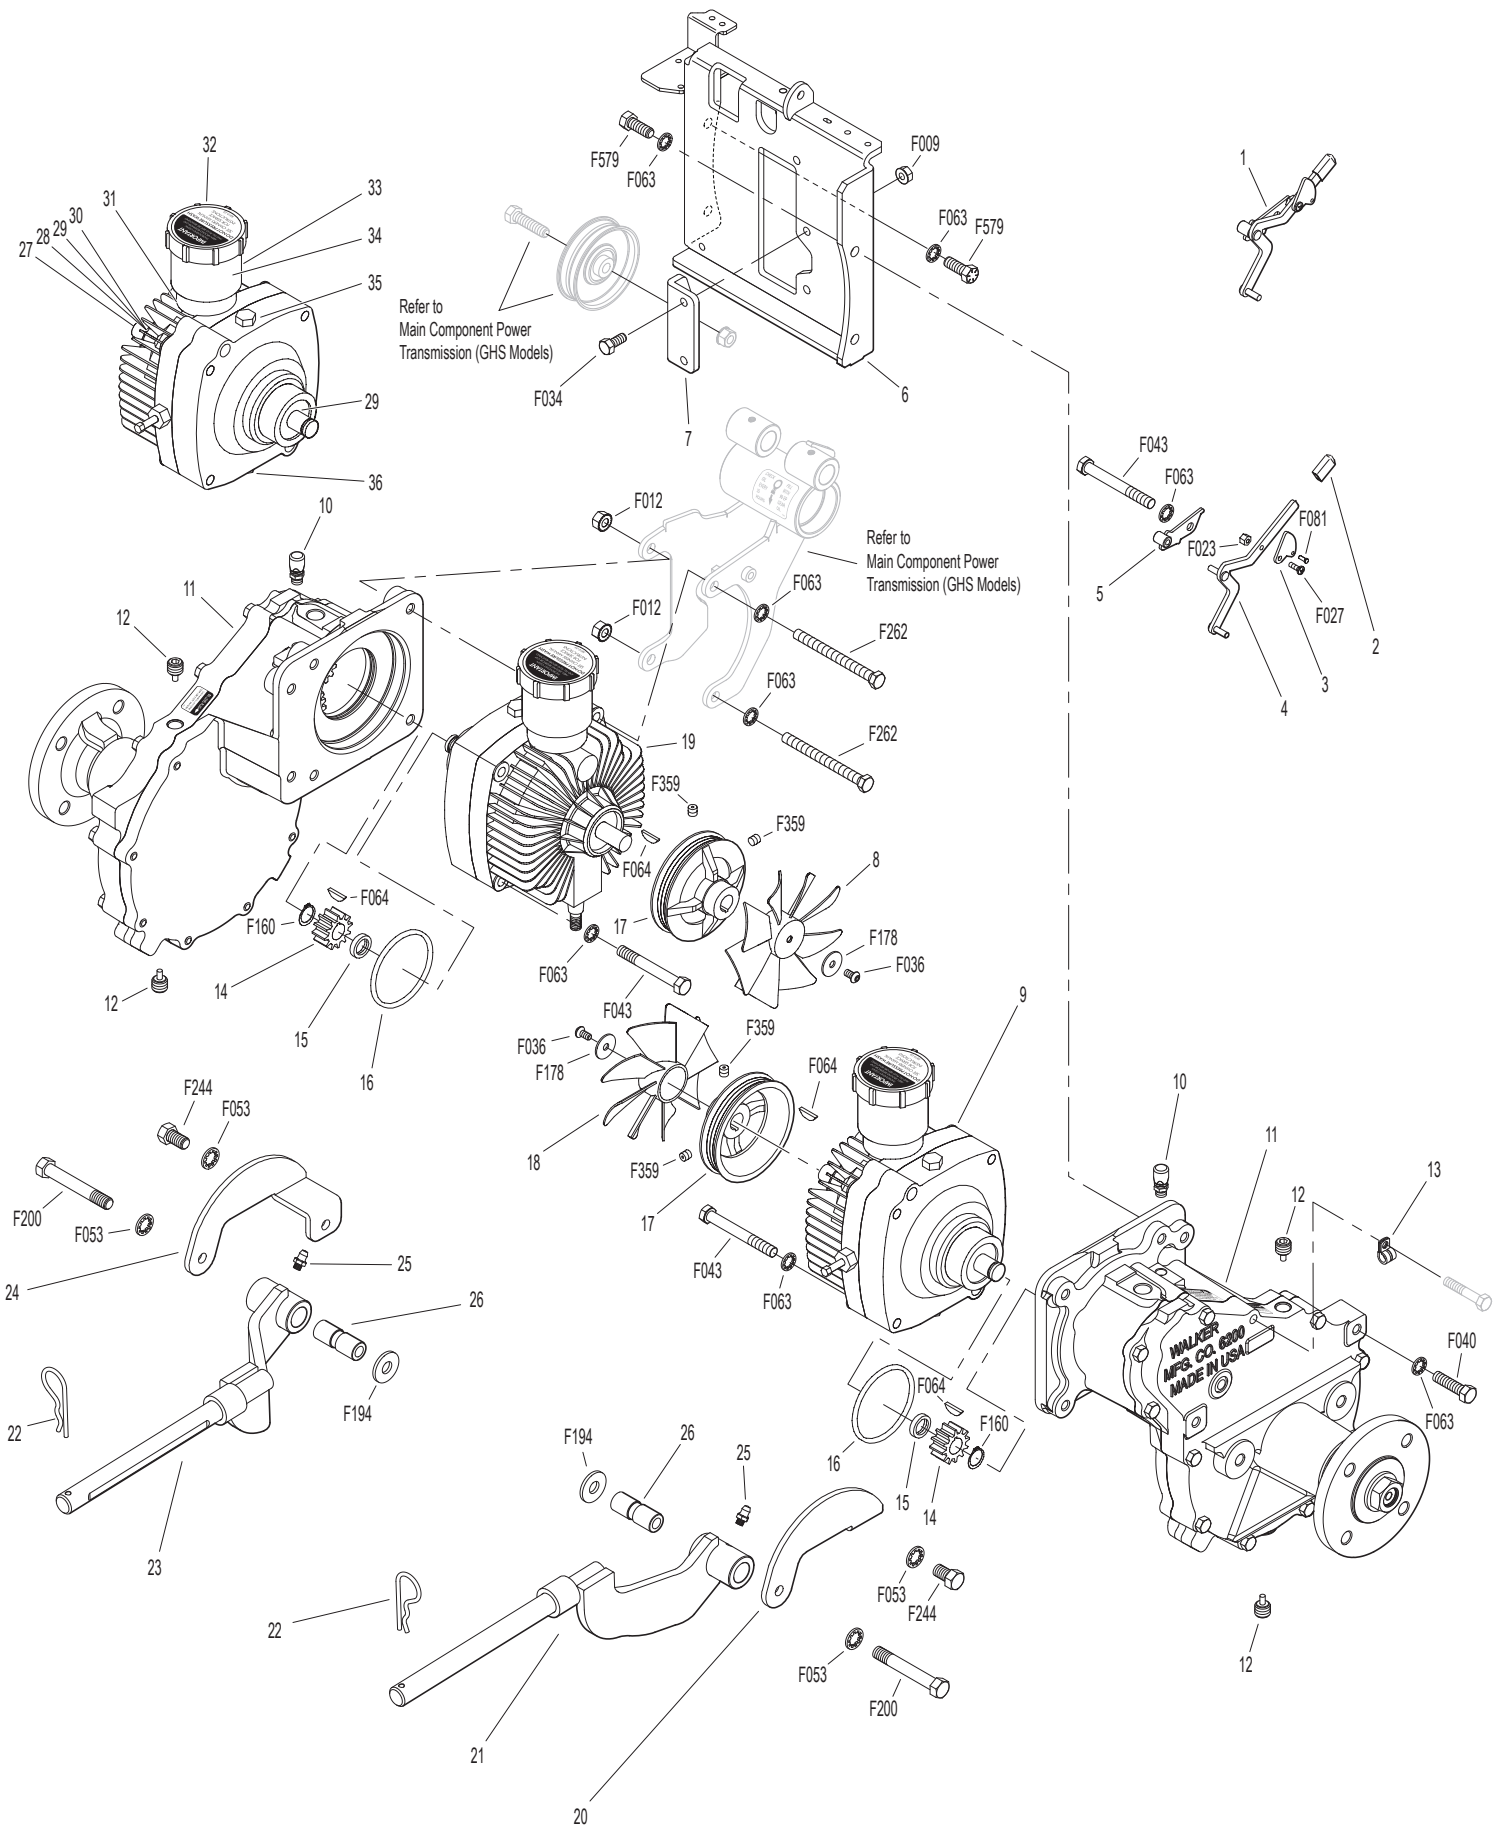


Beginning S/N 150266
Use only genuine **Walker®** replacement parts.

STEERING CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transmission Spring Assemblies				Steering Lever Assemblies			
1	6201-2	Shock Mount Gear Drive, RH	1	32	5223	Extension Spring (1/4 x 5-1/2)	2
2	5146	10mm Ball Stud	4	33	5450	D-Clip	2
3	5199-3	Steering Lever Dampener Assembly	2	34	5451-11	Steering Lever Assembly, LH / Adjustable (Includes Items # 9-11, 16, F034 & F582)	1
4	6201-1	Shock Mount Gear Drive, LH	1	35	5391-3	Steering Lever Support	1
5	5214-2	Ball Joint (5/16-24) Nylon Lined	2	36	5217	Pivot Pin, Steering Lever	1
6	6212-6	Transmission Control Arm, LH	1	37	5453-10	Steering Lever Handle, Adjustable (Includes Items # 14 & F345)	2
7	5213-3	Control Rod (6")	1	38	5450-11	Steering Lever Assembly, RH / Adjustable (Includes Items # 9-11, 16, F034 & F582)	1
8	5665-1	Compression Spring (2-1/2)	2	Fasteners			
9	7201-2	Fiberglide Bearing 1/2"	2		F004	1/4-20 Keps Nut	4
10	5463-5	Steering Arm Pivot Bushing (SS)	2		F007	5/16-18 Jam Nut	2
11	5463-4	Steering Lever Actuator	2		F008	5/16-24 Keps Nut	2
12	5213-4	Control Rod (14-3/4")	1		F009	5/16-18 Whiz Locknut	7
13	5212-6	Transmission Control Arm, RH	1		F010	5/16-24 ESNA Nut	2
Forward Speed Control Assemblies					F012	3/8-16 Keps Nut	2
14	5850-2	Handle Grip, Foam (5-1/2)	3		F024	5/16-24 Jam Nut	4
15	7170-2	FSC Lever Assembly (Includes Item # 16)	1		F029	1/4-20 x 1/2 Hex Bolt	2
16	5830	Grease Fitting	6		F032	1/4-20 x 3/4 Hex Bolt	2
17	5975-3	Cable Tie (50# x 7")	1		F034	5/16-18 x 3/4 Hex Bolt	4
18	5214-4	Ball Joint (5/16-24) W/O Stud	2		F038	3/8-16 x 1 Hex Bolt	2
19	5219	Extension Spring (3/4 x 6-3/4)	1		F050	1/4 SAE Washer	1
20	5172	Bearing, Delrin (.250 x .375 x .250)	2		F051	3/8 SAE Washer	2
21	5141-1	FSC Actuator Block	1		F064	1/8 x 1/2 Woodruff Key (#3)	2
22	5140-9	FSC Brace	1		F068	1/8 x 1 Cotter Pin	1
23	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	2		F069	3/32 x 1/2 Cotter Pin	1
24	5142-8	FSC Key	1		F093	5/16-18 x 1 Hex Bolt	1
	5140-12	FSC Control Assembly (Includes Items # 16, 23-25, 28, F182, F192 & F193)	*		F146	1/4-20 Jam Nut	1
25	5140-30	FSC Friction Body (Includes Item # 16)	1		F182	1/4 x 5/8 x 1/8 Washer	1
26	5141-2	FSC Actuator Rod	1		F183	.312 x .700 x .074 Washer	3
27	5281-5	Clevis Pin (1/4 x 0.80)	1		F186	5/64 x 1/2 Cotter Pin	1
28	5142-9	FSC Actuator Cam	1		F188	1/4-20 Self-Locking Nut	4
29	5141-3	Spacer	1		F192	3/8-24 Self-Locking Nut	1
30	5141-4	FSC Rod	1		F193	3/8 Belleville Spring Washer	3
31	5470-2	Speed Control Stop	1		F198	.250 x .625 x .040 Washer, SS	2
					F226	5/16-18 x 7/8 Hex Bolt	1
					F316	5/16-18 x 1-3/4 Hex Bolt	1
					F345	1/4-20 x .770 Knurled Bolt	4
					F350	1/4-20 LP Nylock	1
					F353	3/8-16 ESNA LP Nut	2
					F401	.504 x .751 x .030 Washer	1
					F562	5/16-18 x 1 Set Screw	1
					F582	Washer 5/16 x 7/8 x .125	2

* Service Part Only

STEERING CONTROL ASSEMBLIES

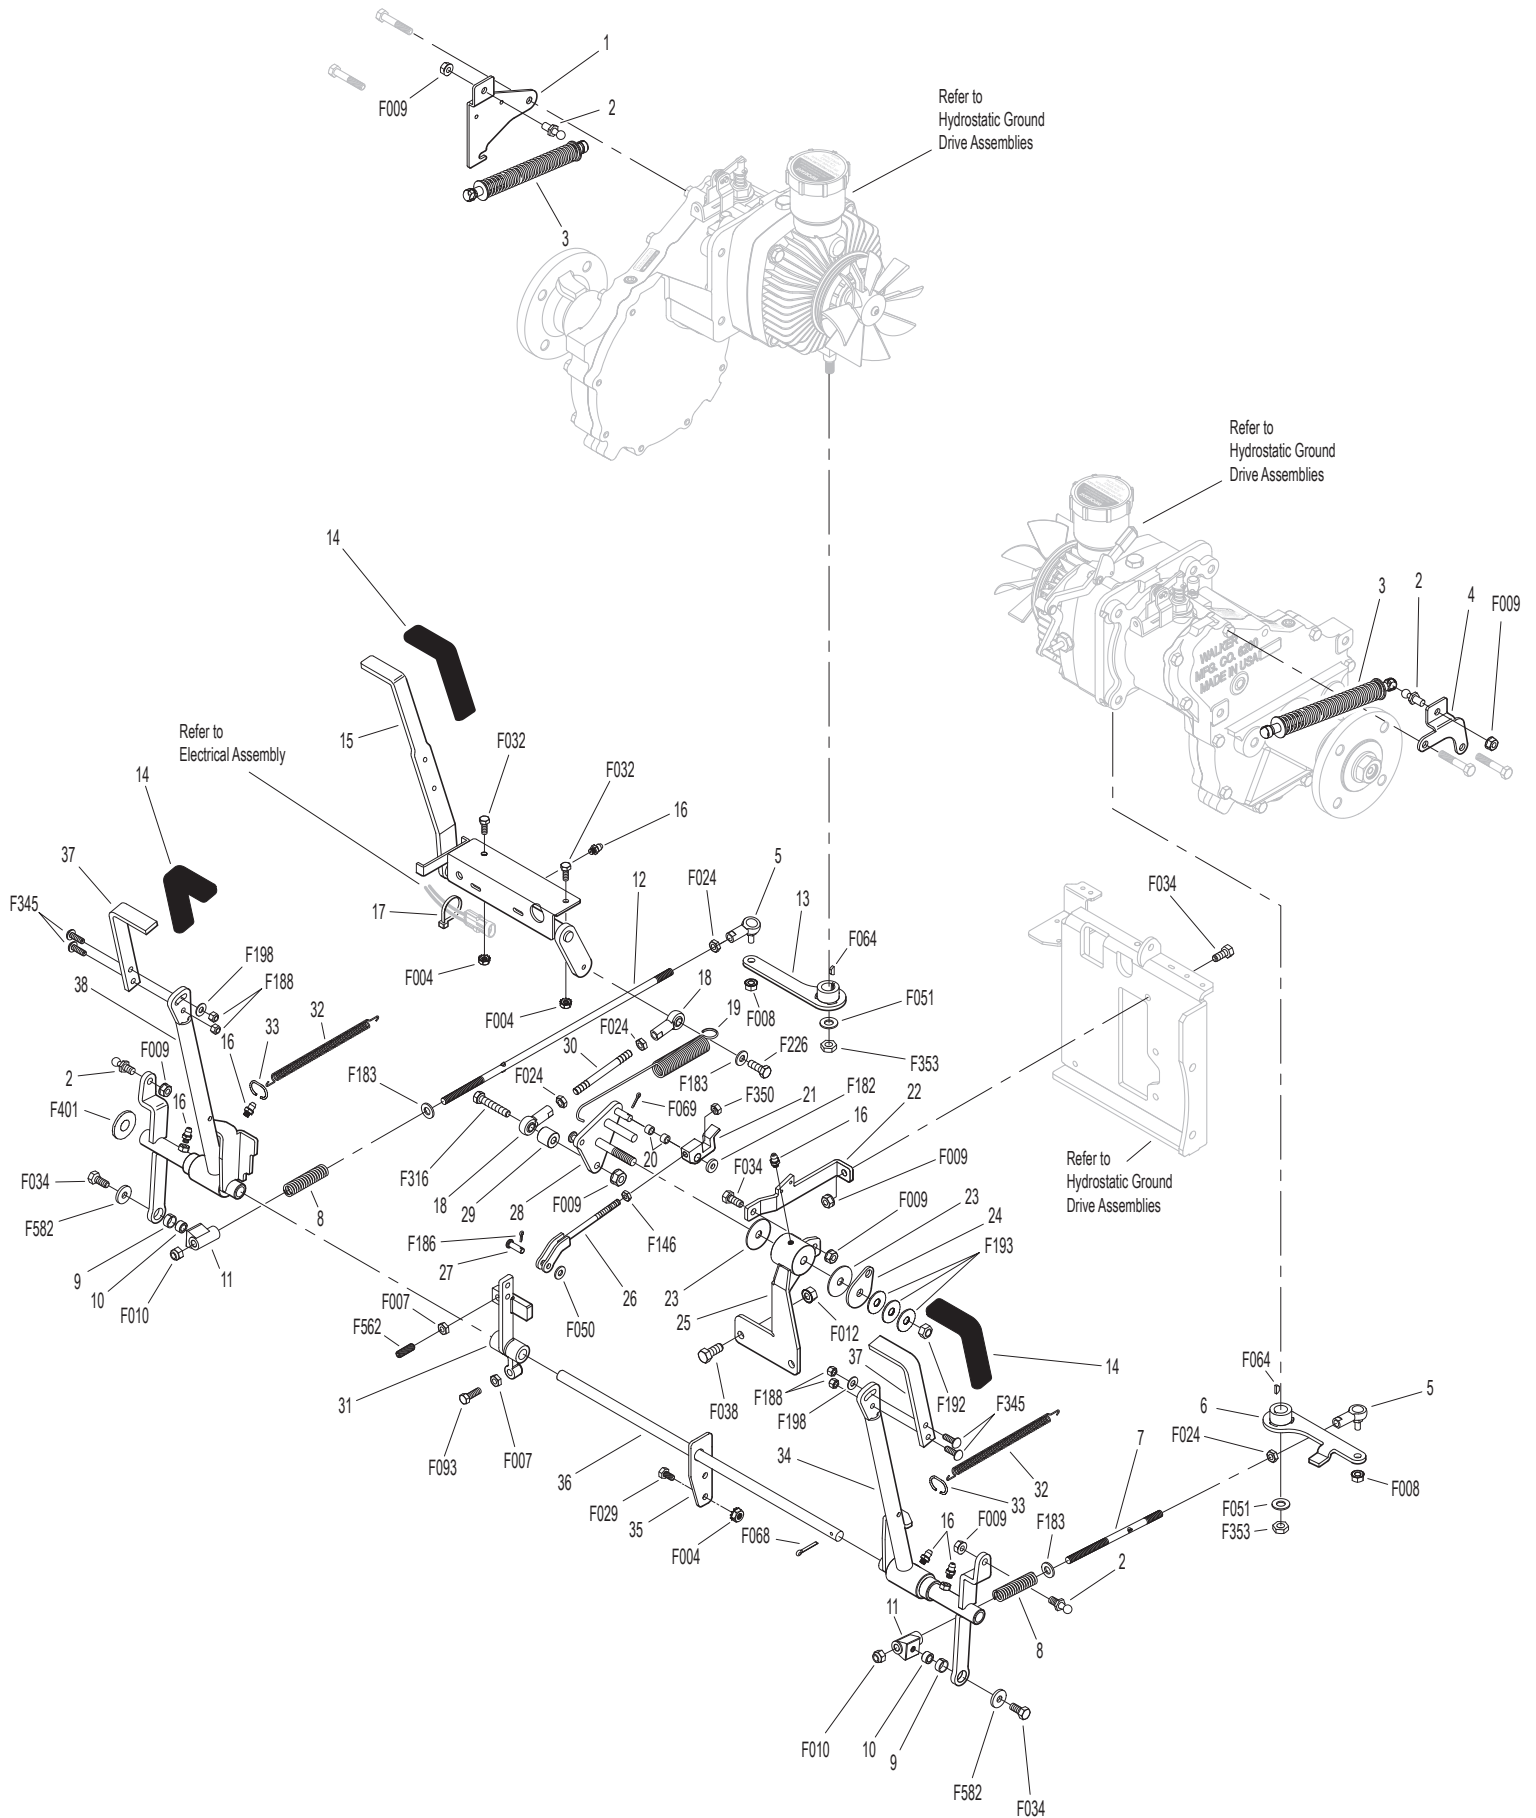


Beginning S/N 150266
Use only genuine **Walker**® replacement parts.

THROTTLE CONTROL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Throttle Control Assembly				Fasteners			
1	8121-1	Throttle Cable	1		F002	10-24 Keps Nut	2
2	5172	Bearing, Delrin (.250 x .375 x .250)	1		F005	1/4-20 ESNA Nut	1
3	5108-7	Control Lock Tab	1		F025	10-24 x 3/8 PPHMS	2
4	5108-10	Friction Washer (.125)	1		F050	1/4 SAE Washer	1
5	5108-1	Control Lever, Throttle & Choke	1		F164	10-24 x 1/4 x 3/8 SHL Bolt	1
6	5108-5	Throttle Control Knob, Red	1		F201	1/4 Belleville Spring Washer	2
7	5108-11	Friction Washer (.062)	1				
8	5108-8	Control Bracket	1	*	Service Part Only		
9	7108	Control Assembly	1				
		(Includes Items # 3-5, 7, 8 & F201)					
	8121	Throttle Control and Cable Assembly (Includes Item # 6)	*				
10	8123	Insulating Sleeve (3/8 x 6)	1				
11	5975-1	Cable Tie (18# x 3-3/4")	1				


THROTTLE CONTROL ASSEMBLY

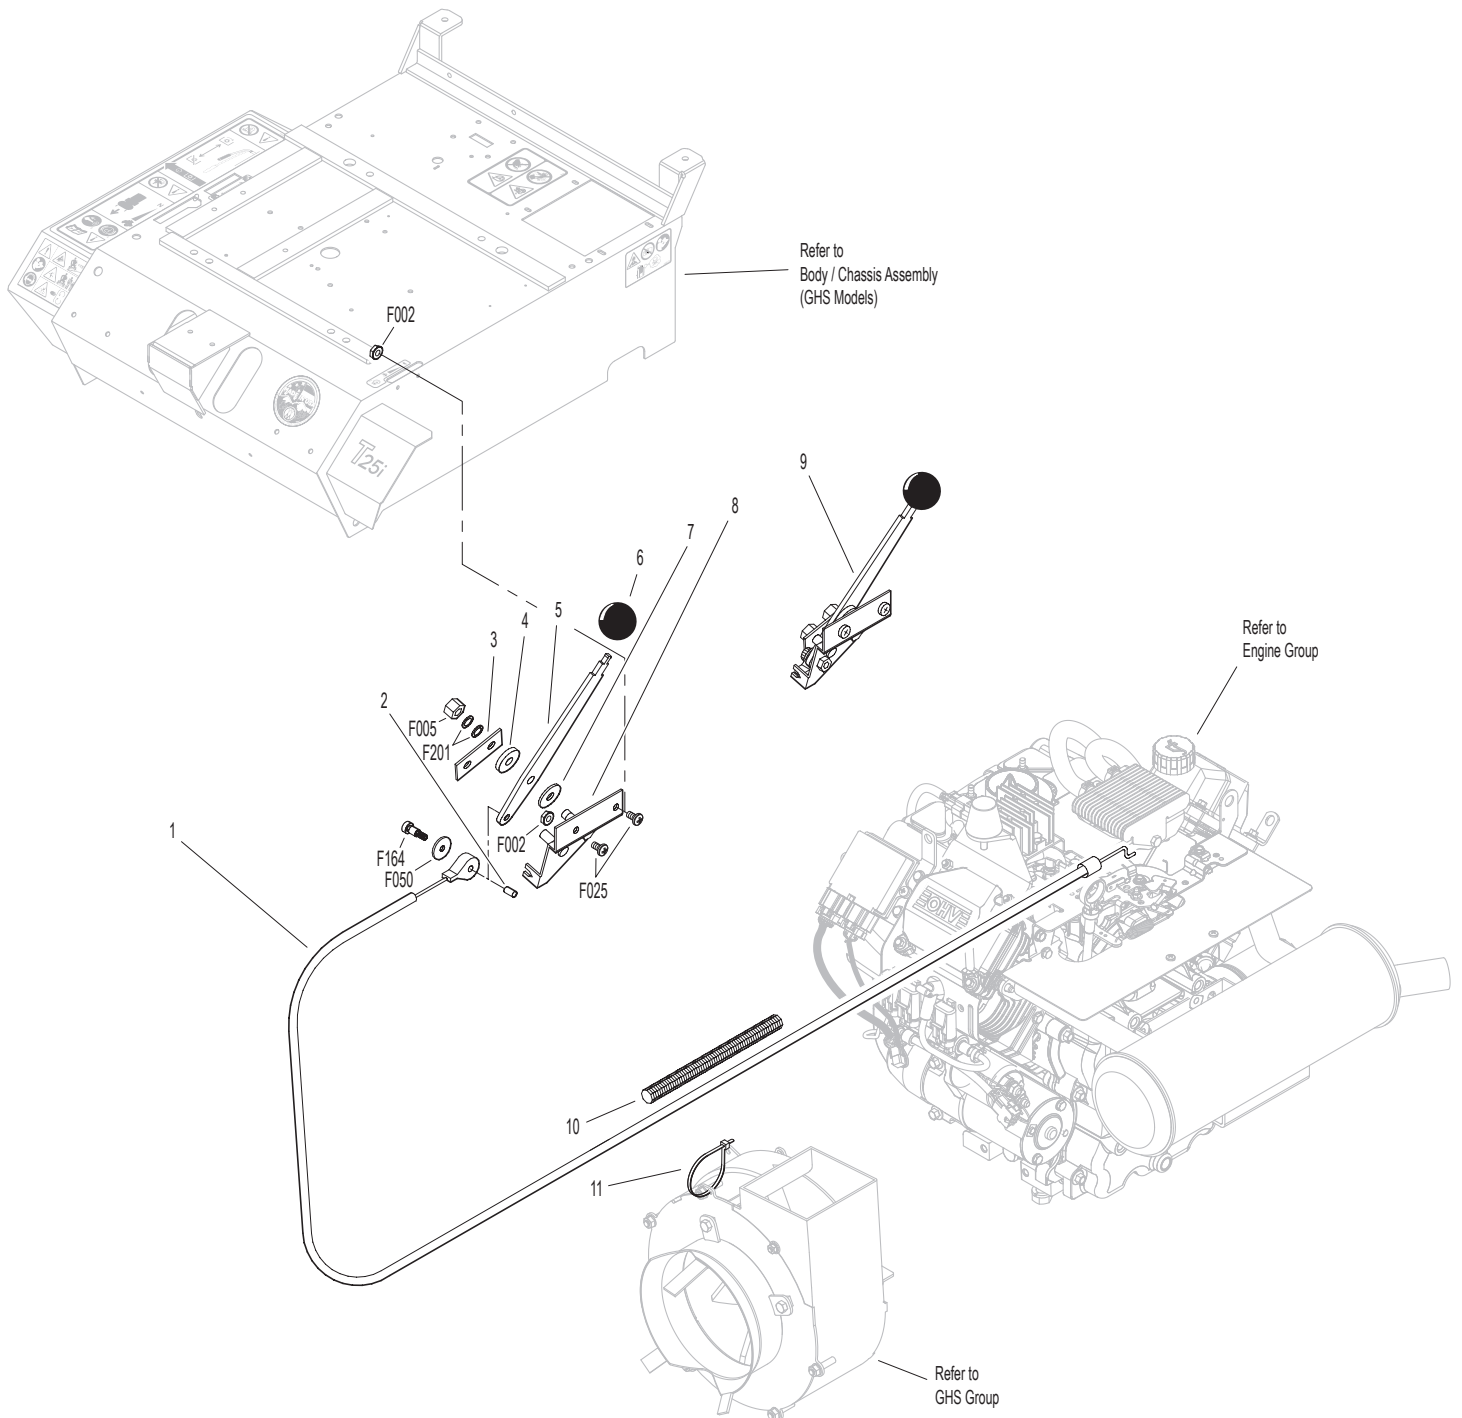

PARKING BRAKE ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Parking Brake Assembly				Fasteners			
1	7406-1	Handle Grip, Red	1	F002	10-24 Keps Nut		2
2	7406-9	Parking Brake Lever	1	F003	1/4-28 Hex Nut		1
3	7406-10	Lever Mount	1	F004	1/4-20 Keps Nut		4
4	5830	Grease Fitting	1	F025	10-24 x 3/8 PPHMS		2
5	7407	Clevis Pin (3/16 x 1/2)	2	F029	1/4-20 x 1/2 Hex Bolt		3
6	7404-6	Brake Actuator Arm	2	F032	1/4-20 x 3/4 Hex Bolt		1
7	7405	Pin, Transmission Lock	2	F054	AN960616 Washer		2
8	7402	Clevis	2	F072	1/4 "E" Retainer Ring		2
9	7408	Compression Spring (1/2 x 3/4)	2	F086	#10 SAE Washer		4
10	7415	Rubber Dust Shield (5/8 x 3/8 x 1/32)	2	F109	1/8 x 5/8 Roll Pin		2
11	5567-3	O-Ring Seal (1/4 x 3/8)	4	F111	1/8 x 3/4 Cotter Pin		1
12	7403	Plunger Bushing, Gear Axle	2	F112	5/8 x 1-1/4 x .03 Washer		2
13	7404-7	Brake Actuator Mount	2	F127	1/16 x 1/2 Cotter Pin		4
14	7412	Clevis Pin (3/16 x 5/8)	2	F261	AN960616L Washer		5
15	5833	Cable Clamp (1/4)	2	F287	1/4-28 Keps Nut		1
16	7410	Brake Control Cable, LH (25.5")	1				
17	7409	Brake Control Cable, RH (20.5")	1				
18	7401-3	Cable Mount Bracket	1				
19	7401-1	Cable Pull Rod	1				
20	5552	Ball Joint (1/4-28)	1				


PARKING BRAKE ASSEMBLY

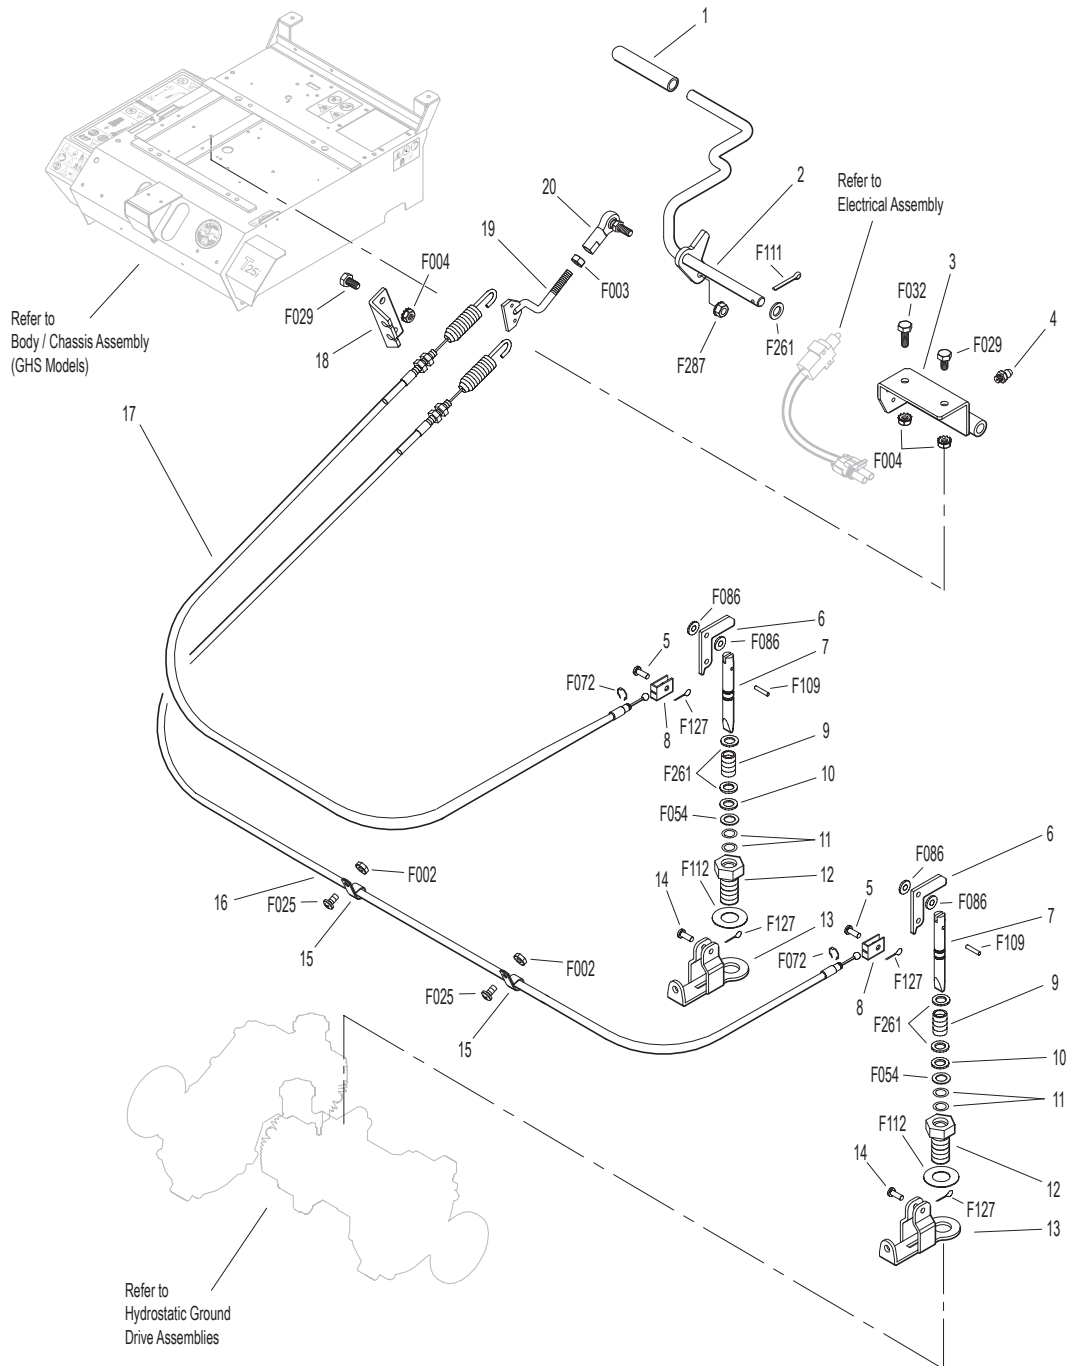

GHS GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Delivery Chute Assembly				Fasteners			
1	5515-4	Elbow Delivery Spout	1	F002	10-24 Keps Nut		4
2	5592-24	Backing Plate, Grass-Pak® Switch	1	F004	1/4-20 Keps Nut		3
3	5592-23	Grass-Pak® Housing Spacer	1	F009	5/16-18 Whiz Locknut		7
4	5578	Rear Clip, Chute Mount	1	F012	3/8-16 Keps Nut		3
5	5577	Side Clip, Chute Mount	2	F023	10-24 ESNA Nut		2
6	8511-1	Delivery Chute W/Clips (Includes Items # 4, 5, 7, F362 & F411)	1	F029	1/4-20 x 1/2 Hex Bolt		3
7	5578-10	Front Clip, Chute Mount	1	F034	5/16-18 x 3/4 Hex Bolt		1
8	7530-4	Body Chute (10.5 Blower)	1	F039	3/8-16 x 1-1/4 Hex Bolt		1
Blower Belt Tightener Assembly				F040	3/8-16 x 1-1/2 Hex Bolt		1
				F042	3/8-16 x 2-1/4 Hex Bolt		1
				F050	1/4 SAE Washer		1
				F051	3/8 SAE Washer		1
9	7238-6	Blower Drive Pulley (Includes Items # F075, F114 & F231)	1	F054	AN960616 Washer		1
10	7234-2	Blower Belt (Micro-V)	1	F067	3/16 x 3/16 x 1 Key		1
11	7239-1	Blower Pulley (Mirco-V) (Includes Items # F067, F075 & F114)	1	F075	5/16-18 x 1/2 SQH Set Screw		2
12	7364-2	Torsion Spring	1	F079	A/A66D Aluminum Pop Rivet		6
13	7201-3	Fiberglide Bearing	2	F090	1/4-20 x 2-1/2 Hex Bolt		1
14	5830-3	Grease Fitting (45 Deg.)	1	F114	5/16-18 x 5/8 SQH Set Screw		2
15	7364-1	Blower Belt Tightener Arm	1	F128	10-24 x 3/8 PTHMS		4
16	7201-4	Inner Race (1-1/2)	1	F131	5/16-18 x 1/2 Hex Bolt		3
17	5841	Retainer Washer (3/8 x 1-1/4)	1	F132	1/4-20 x 2-3/4 Hex Bolt		1
18	5245	Idler Pulley (3")	1	F168	5/16 Split Lock Washer		3
Blower Assembly				F217	7/16-14 Hex Nut		1
				F218	7/16 Split Lock Washer		1
				F231	1/4 x 3/4 Woodruff Key (# 806)		1
				F281	7/16-14 x 1-3/4 Hex Bolt		1
19	7544	Blower Assembly (10.5") (Includes Items # 20-24, F004, F009, F029, F050, F131, F168 & F426)	1	F362	A/A62D Alum. Pop Rivet (3/16D x 13/32L)		2
20	5268	Bearing W/Collar (3/4)	2	F411	3/16 Bulbex Rivet		6
21	7544-3	Blower Housing (10.5)	1	F426	1/4-20 x 1/2 Carriage Bolt		1
22	7545-2	Blower Output Shaft (10.5)	1	F577	10-24 x 5/8 Carriage Bolt		2
23	7545	Blower Wheel (10.5")	1				
24	7543-1	Blower Faceplate (10.5)	1				
25	7526	Intake Tube (10.5 Blower)	1				
26	5595-2	Intake Cover / GHS	1				
27	7528-5	Skid Bar	1				

GHS GROUP

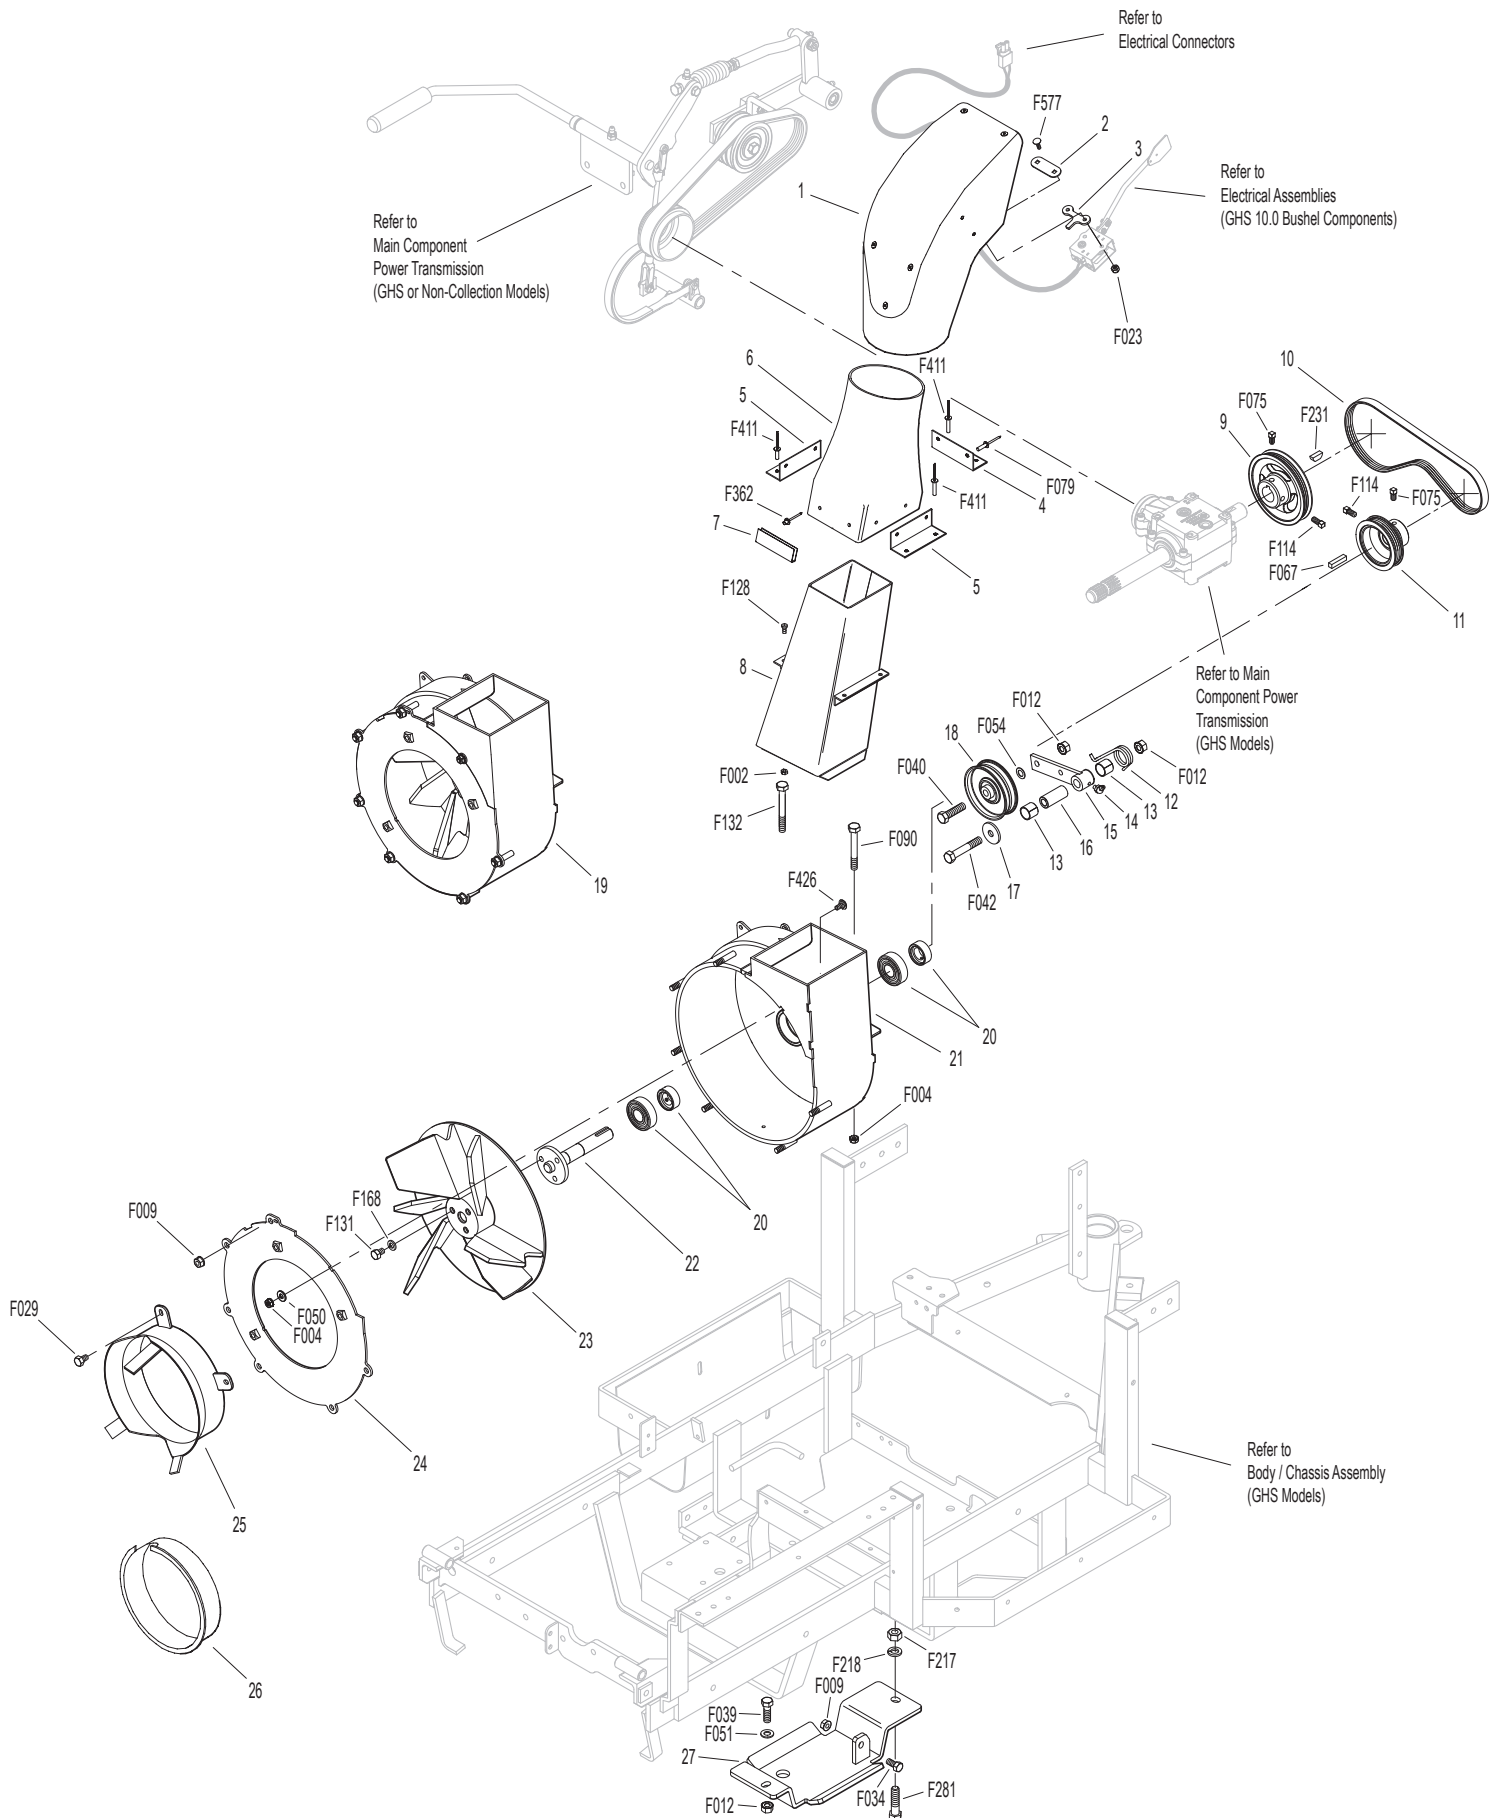

Beginning S/N 150266
Use only genuine **Walker®** replacement parts.

GHS POWERFIL® ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
10.0 GHS Powerfil® Assembly				Fasteners			
1	5551-3	Bearing Cap, Powerfil®	1		F003	1/4-28 Hex Nut	2
2	5551-1	Pivot Bearing (#S3PP)	2		F023	10-24 ESNA Nut	10
3	5518-2	Pivot, Delivery Spout	1		F054	AN960616 Washer	1
4	5517-2	Pivot Mount	1		F085	3/16 Rivet Backup Washer	1
5	5552	Ball Joint (1/4-28)	2		F101	10-24 x 1-1/4 SHC Screw	1
6	5558-1	Powerfil® Push Rod	1		F109	1/8 x 5/8 Roll Pin	1
7	5553-3	Bushing, Powerfil® Actuator	4		F261	AN960616L Washer	1
8	5553-1	Compression Spring (1/2 x 2)	2		F287	1/4-28 Keps Nut	2
9	5558-2	Powerfil® Actuator Rod	1		F612	10-24 x 5/8 Truss Head Torx	7
	5549	Actuator Rod Assembly (Includes Items # 5-9 & F003)	*		F613	10-24 x 1/2 Truss Head Torx	2
10	5554	Actuator Arm	1	* Service Part Only			
11	5519-3	Motor Mount Nut (5/8-24)	*				
12	5519-2	Motor Mount Washer	*				
13	5976-2	Grommet (3/16 x 3/4)	1				
14	5519-5	Actuator Motor (12V) (Includes Items # 11 & 12)	1				

Beginning S/N 150266
Use only genuine **Walker®** replacement parts.



GHS 10.0 BUSHEL CATCHER ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Upper Baffle Screen Assembly (Removable)				46	8117	Wire Harness Channel	1
1	7512-8	Removable Screen (3/16 Hole) (Includes Items # 2, 5, F190 & F617)	1**	47	5976-2	Grommet (3/16 x 3/4)	1
2	7506	Knob / Threaded Insert (10-24)	2	48	5977-3	Grommet (9/16)	1
3	8606-3	Channel Top, LH	1	49	8602-3	10.0 Catcher W/O Powerfil®, Gray (Includes Door)	*
4	8606-2	Channel Bottom	2		8602-4	10.0 Catcher W/Powerfil®, Gray (Includes Door)	*
5	7856-1	Edge Molding (26")	1		8610-5	10.0 Bushel Catcher Box, Gray	*
6	7507	Screen Seal (27-1/2)	1	50	8607-9	Powerfil® Cover Plate	1
7	7505	Mustache Spring	2	51	8155-2	Gas Spring Cover, RH	1
8	8606	C-Channel (10.0)	1	52	8608-8	Hinge Plate, RH	1
	8606-20	C-Channel With Spring (10.0) (Includes Items # 7, 8 & F340)	*	53	8608-9	Torsion Bar	1
9	8606-4	Channel Top, RH	1	5598-2 Optional Dump Bag (Not Shown)			
10.0 Exhaust Deflector Door Assembly				May be ordered as an option. Contact your Walker dealer.			
10	8607-16	Upper Seal Support	1	Fasteners			
11	8607-17	Upper Door Seal	1	F020	5/16-18 ESNA Nut		2
12	8607-18	Backup Plate	1	F023	10-24 ESNA		29
13	8512-4	10.0 Catcher Box Door, Gray (Includes Items # 10-14, 16, 17, F085, F330 & F411)	1	F024	5/16-24 Jam Nut		4
14	5583	Handle	1	F029	1/4-20 x 1/2 Hex Bolt		8
15	8607-1	Door Mount, LH	1	F032	1/4-20 x 3/4 Hex Bolt		2
16	8607-12	Upper Door Stiffener	1	F049	5/16 SAE Washer		6
17	8607-7	Lower Door Stiffener	1	F050	1/4 SAE Washer		2
18	8607-8	Door Guide	1	F068	1/8 x 1 Cotter Pin		2
19	8607-2	Door Mount, RH	1	F079	A/A66D Aluminum Pop Rivet		5
GHS 10.0 Bushel Catcher Assembly				F085	3/16 Rivet Backup Washer		4
20	8608-13	Center Strap	1	F094	8-32 x 1/2 PTHMS		6
21	8608-3	Upper Frame Doubler	2	F190	#10 Internal Star Lock Washer		2
22	8608-1	Outside Box Strap	2	F195	1/4-20 x 3/4 PPHMS, SS		4
23	8608-2	Lower Frame Doubler	2	F196	1/4-20 x 1 PPHMS, SS		4
24	8608-4	Center Frame Doubler	1	F208	5/16-18 x 2-1/4 Hex Bolt		2
25	8608-11	Catcher Door Finger	1	F230	1/4-20 x 1-1/4 PPHMS, SS		4
26	8608-6	Catcher Mount	1	F242	1/4-20 x 7/8 PPHMS, SS		8
27	8610-4	Catcher Dump Flap W/Plate 10.0	1	F330	3/16D x 21/32L Rivet, SS		9
28	8610-3	Backing Plate, Dump Flap	1	F340	Rivet, Aluminum		4
29	7584	Reinforcing Strap	1	F351	Aluminum Pop Rivet		6
30	5103-5	Pivot Bushing Inner	2	F360	1/4-20 x 3/8 Hex Bolt		2
31	5801-3	Decal Plate, Round (Set of 2)	1	F390	1/4-20 x 7/8 Carriage Bolt		4
32	7620-3	Pivot Bushing (1/2 x 9/16)	2	F411	3/16 Bulbex Rivet		21
33	8608-7	Hinge Plate, LH	1	F456	5/16-18 x 3/4 SBH Cap Screw, SS		4
34	5103-7	Outside Torsion Bushing	2	F524	3/16 x 3/8 Aluminum Rivet, Black		6
35	8607-4	Upper Arm	2	F540	1/4-20 x 1-3/4 PPHMS, SS		1
36	5214-12	Ball Joint (5/16-24)	4	F551	5/16-18 Flange Top Lock Nut		4
37	5155-12	5/16 Ball Stud	2	F568	10-24 Flange Top Lock Nut		1
38	5155-4	Gas Spring	2	F569	1/4-20 Flange Top Lock Nut		27
39	8155-1	Gas Spring Cover, LH	1	F612	10-24 x 5/8 Truss Head Torx		8
40	8607-3	Lower Arm	2	F613	10-24 x 1/2 Truss Head Torx		11
41	5103-6	Pivot Bushing Outer	2	F617	10-24 x 3/8 Truss Head Torx		4
42	5155-13	3/4 Ball Stud	2	F618	10-24 x 3/4 Truss Head Torx		6
43	5523-6	Gas Spring Plate	2	* Service Part Only			
44	8608-10	Box Support, Gas Spring	2	** This screen can be replaced by P/N 7512-11 Removable Screen (3/4" holes) for improved air flow performance in wet conditions.			
45	7532-1	Handle, Catcher Lift	2				


Beginning S/N 150266
Use only genuine **Walker®** replacement parts.



INSTRUMENT PANEL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Instrument Panel Assembly				18	7307-1	Shock Mount (1.0 x .25)	3
1	7307-2	Instrument Panel Cover (Optional)	**	19	7391	Panel Box Mount Plate	2
	8306-5	Instrument Panel Assembly (Includes Items # 2-12, 14, 17, 23, F228, F250, F251, F349 & F448)	1	20	8385	Panel Box W/Graphic	1
2	7307-7	Panel Frame	1	21	7977-3	Grommet (1/8 x 1-1/8)	1
3	8820-4	Panel Faceplate W/Decal	1	22	7307-16	Lining, Panel Box (1/8)	1
4	7386	Panel Gasket	1	23	8536	Warning Horn	1
5	8996-9	Red Indicator Light Assembly	3	Fasteners			
6	6942	Relay Switch 20/40 Amp (NC)	2		F004	1/4-20 Keps Nut	6
7	7941-3	Boot, Circuit Breaker	1		F228	#6 x 5/8 PPHSMS, SS	8
8	7941-5	Circuit Breaker (7 Amp)	1		F238	J Clip, Instrument Panel	8
9	8997	Voltmeter Gauge	1		F250	6-32 x 1/2 PPHMS	1
10	5995-2	Switch Boot	1		F251	6-32 Keps Nut	2
11	5995	Toggle Switch (Off-On)	1		F349	Washer .835 ID, 1.122 OD, SS	1
12	8990-1	Hourmeter (Global)	1		F448	6-32 x 5/16 PPHMS	1
13	5975-1	Cable Tie (18# x 3-3/4")	2	* Service Part Only			
14	8945-3	Wire Harness, Instrument Panel	1	** May be ordered as an option. Contact your Walker dealer.			
15	8960-3	Key Set W/Umbrella	*				
16	7854	Plastic Tip, Red	1				
17	8960-15	Ignition Switch (With Keys) (Includes Items # 15, 16 & F349)	1				
				NOTE: Refer to ELECTRICAL CONNECTORS , Page 38 for identification of all Electrical Wiring Service Parts.			

INSTRUMENT PANEL ASSEMBLY

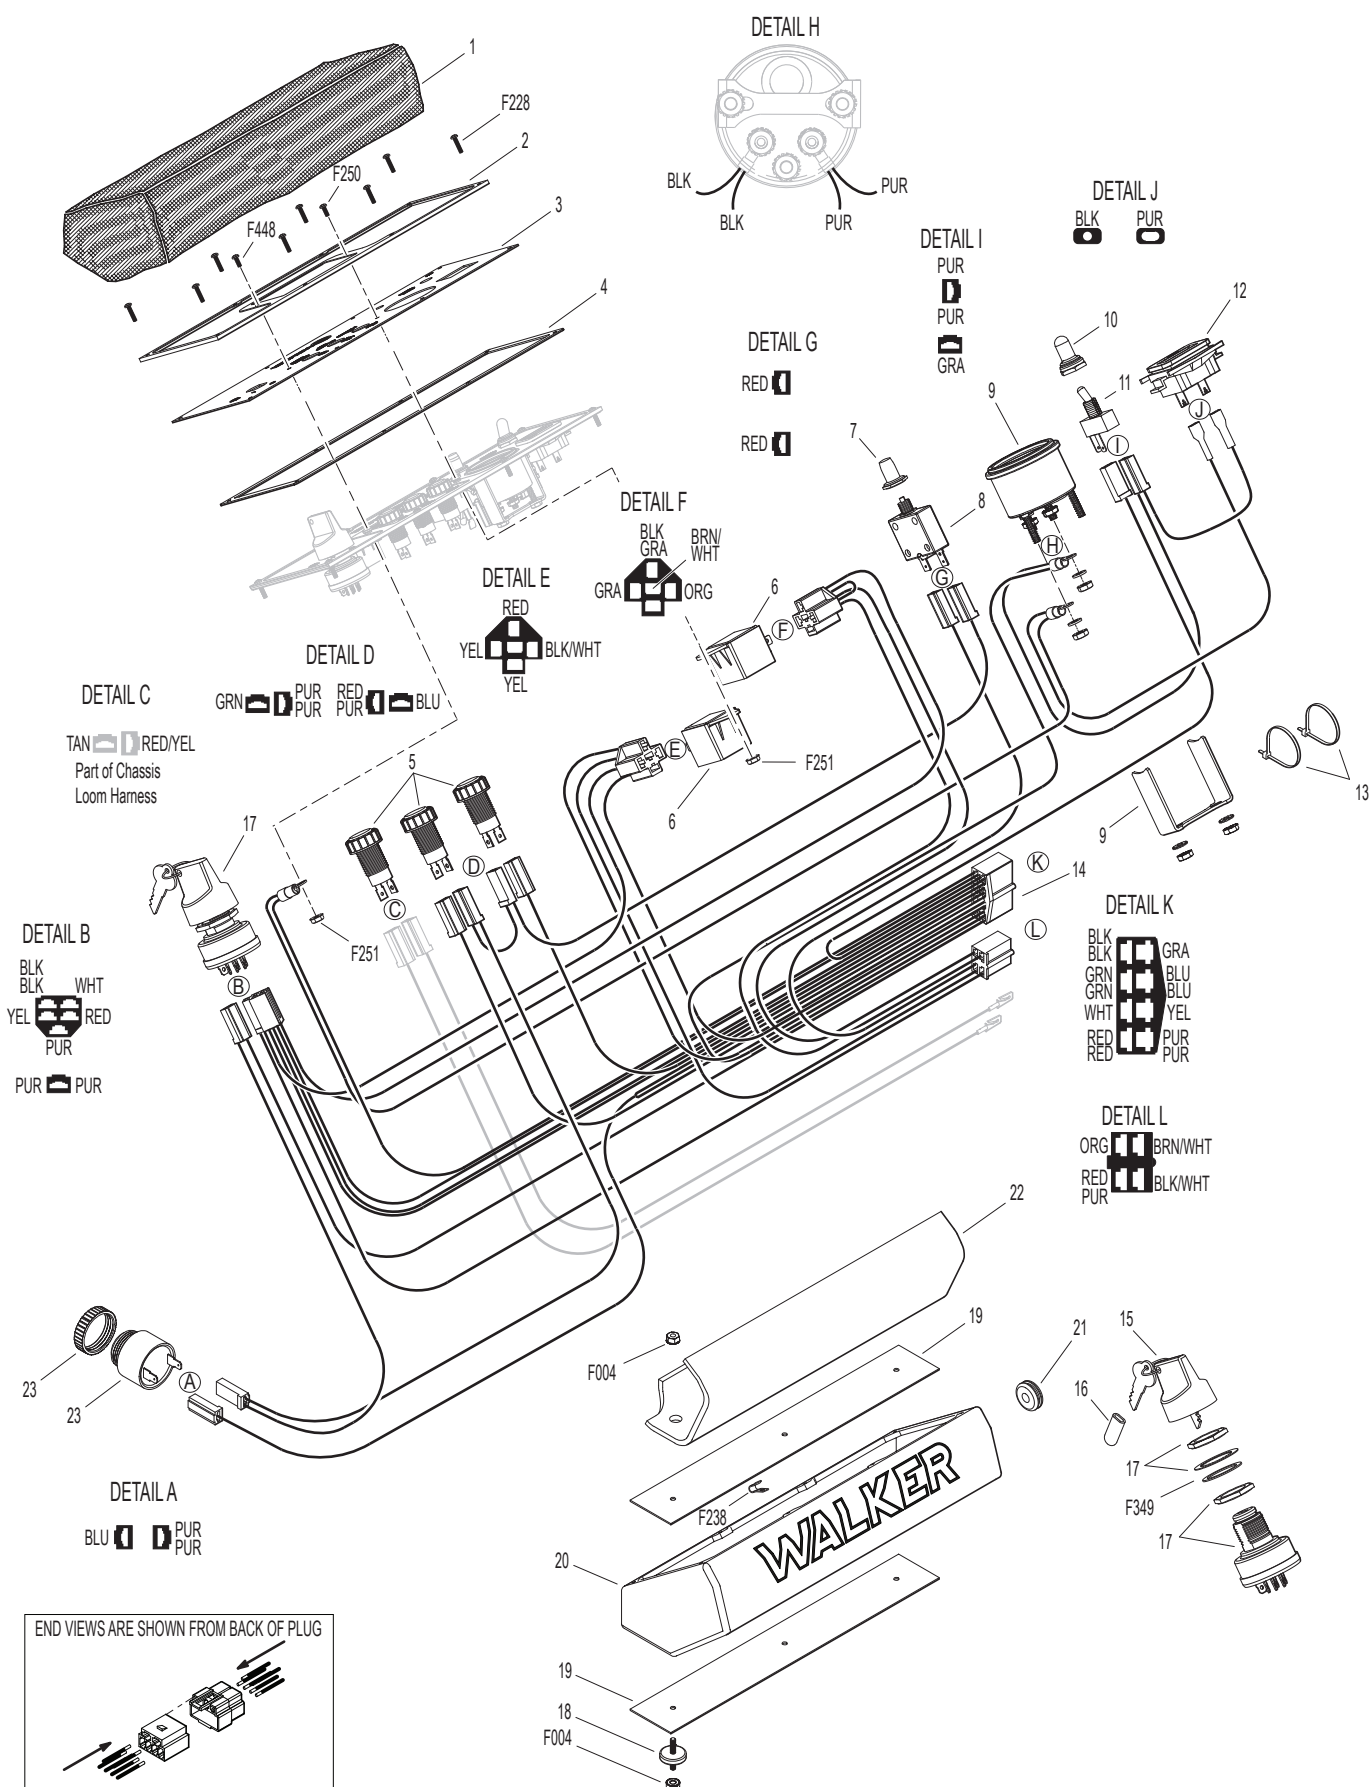

Beginning S/N 150266
Use only genuine **Walker®** replacement parts.

ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Harness Assembly				Fasteners			
1	5975-3	Cable Tie (50# x 7")	7	F002	10-24 Keps Nut		6
2	5942-4	Safety Switch (Normal Open)	1	F004	1/4-20 Keps Nut		3
3	5833	Cable Clamp (1/4)	1	F009	5/16-18 Whiz Locknut		1
4	8940-27	Wire Harness	1	F019	1/4-20 ESNA Wing Nut		2
5	7833	Cable Clamp (7/8 x 1/4)	2	F025	10-24 x 3/8 PPHMS		3
6	5832	Cable Clamp (1/2)	1	F026	10-24 x 1/2 PPHMS		2
7	8018-3	Wire Extension	1	F031	1/4-20 x 5/8 Hex Bolt		2
8	8012-5	Regulator Adapter Harness	1	F032	1/4-20 x 3/4 Hex Bolt		1
9	NS	Rectifier	*	F050	1/4 SAE Washer		2
10	8012-7	Ground Wire	1	F061	1/4 Star Lock Washer		1
11	7833-2	Cable Clamp (1 x 1/4)	2	F063	3/8 Internal Star Lock Washer		1
12	6942	Relay Switch 20/40 Amp (NC)	1	F079	A/A66D Aluminum Pop Rivet		2
13	7948-6	Time Delay Module	1	F085	3/16 Rivet Backup Washer		1
14	7948-5	Time Delay Harness	1	F093	5/16-18 x 1 Hex Bolt		1
15	8941	Circuit Breaker (30 Amp)	1	F106	3/8-16 x 5/8 Hex Bolt		1
		Auto Reset / Sealed		F124	10-32 x 3/8 Taptite Machine Screw		2
16	8943	Positive Battery Lead Wire (Red)	1	F129	10-24 x 1/2 PTHMS		1
17	5975-1	Cable Tie (18# x 3-3/4")	3	F182	1/4 x 5/8 x 1/8 Washer		2
18	5942-16	Safety Switch (Normal Open), Delta WP	2	F232	10-32 Keps Nut		2
19	6104-13	Adapter Harness	1	F505	6-32 x 7/8 Hex Trim MS, SS		4
20	5977-6	Grommet (1 x 1-1/4)	1	F506	6-32 Nylock Nut		4
21	6105-3	Harness Clip	1				
Battery Assembly				* Service Part Only NOTE: Refer to ELECTRICAL CONNECTORS , Page 38 for identification of all Electrical Wiring Service Parts.			
22	6923	Negative Battery Cable	1				
23	5933	Battery Terminal Insul., Red (+)	1				
24	5844-3	Battery Hold-Down Bar	1				
25	5839	Hook Bolt	2				
26	6390-2	Battery Pan	1				
27	NS	Battery (12V/340CCA/Dry)	1				
28	5932	Battery Terminal Insul., Black (-)	1				
29	7834-2	Wire Saddle (2 Wires)	1				



ELECTRICAL ASSEMBLIES (GHS 10.0 BUSHEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------

Horn & Harness Channel Assemblies

1	5977-2	Grommet, Cut (1/8 x 3/8)	2
2	5975-1	Cable Tie (18# x 3-3/4")	1
3	5975-3	Cable Tie (50# x 7")	1
4	5536-2	Horn, Full Signal	*

Harness & Grass-Pak® Switch Assemblies

5	8950-4	Powerfil® Wire Harness (7.0 / 10.0)	1
6	5594-6	Aluminum Shaft & Vane Assembly	1
7	5592-20	Grass-Pak® Switch Assembly	1
8	5833	Cable Clamp (1/4)	2

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
-------------	-------------	-------------	--------------


Fasteners

F002	10-24 Keps Nut	1
F023	10-24 ESNA Nut	3
F025	10-24 x 3/8 PPHMS	1
F508	4-40 Keps Nut, SS	2
F509	4-40 x 1/2 Hex Head, SS	2
F612	10-24 x 5/8 Truss Head Torx	1
F613	10-24 x 1/2 Truss Head Torx	2

* Service Part Only

NOTE: Refer to **ELECTRICAL CONNECTORS**, Page 38 for identification of all Electrical Wiring Service Parts.


ELECTRICAL ASSEMBLIES (GHS 10.0 BUSHEL COMPONENTS)

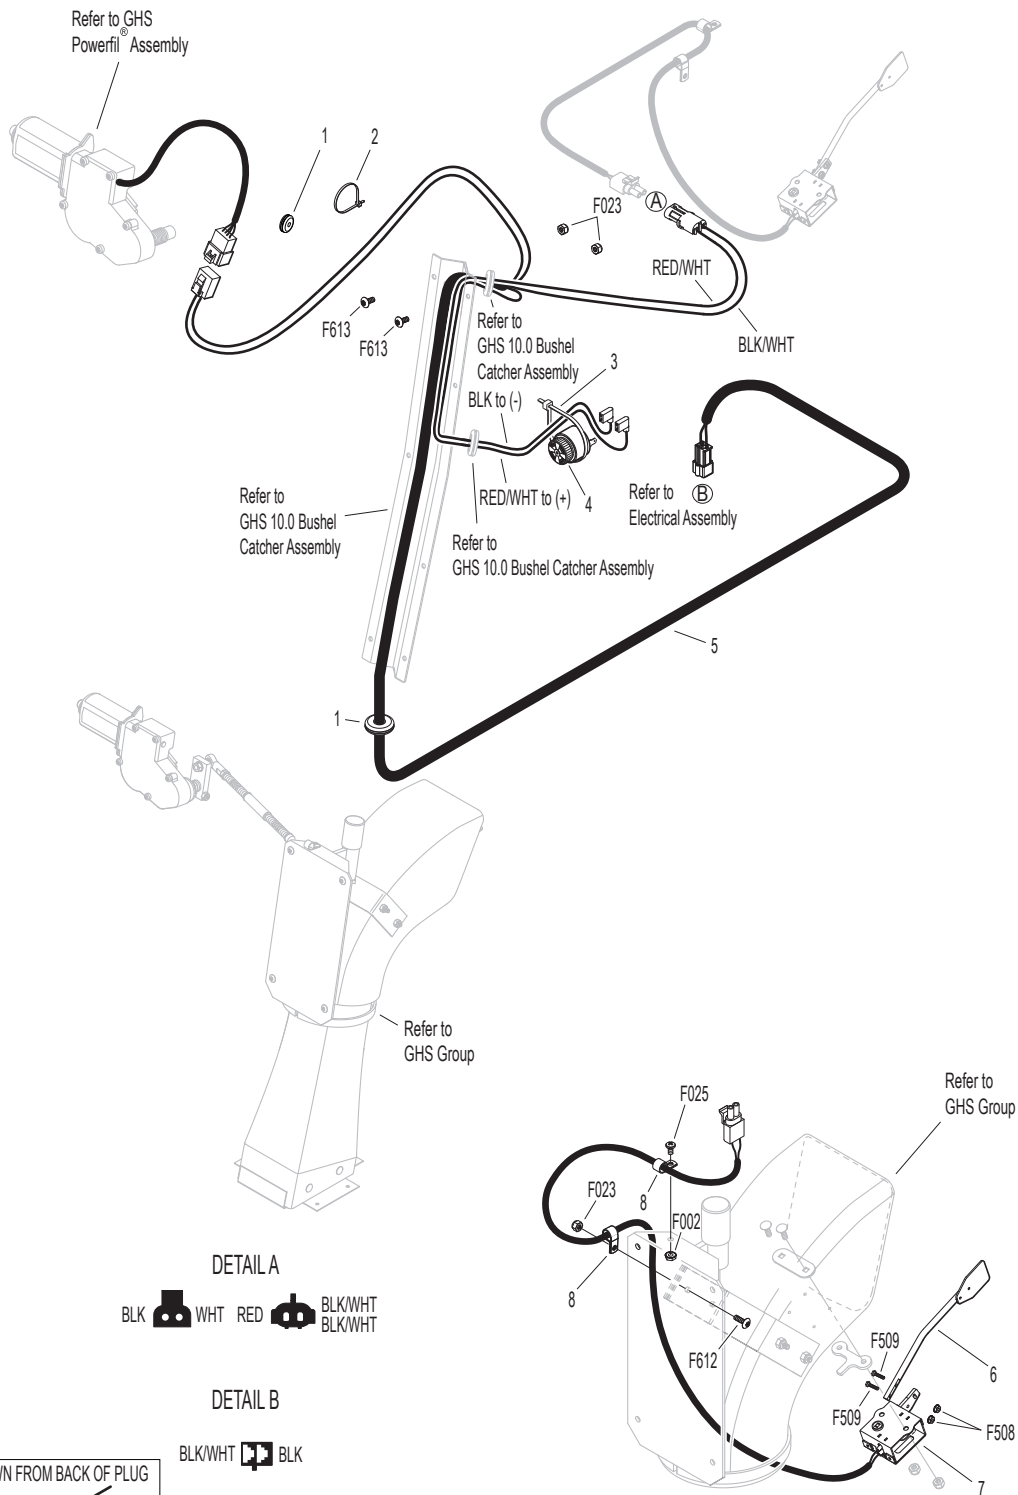

ELECTRICAL CONNECTORS

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Electrical Wiring Service Parts				29	7942-1	2-Way Locking Connector, Female	*
1	5996-1	16-14 GA Butt Connector	*	30	7942-2	2-Way Connector, Male	*
2	5996-11	12-10 GA Butt Connector	*	31	7942-3	2-Way Connector, Female	*
3	7942-14	16-14 GA Shrink Connector	*	32	7942-10	2-Way Locking Connector, Male	*
4	7942-13	12-10 GA Shrink Connector	*	33	5940-8	3-Way Connector, Male	*
5	5995-1	Wire Terminal Adapter	*	34	7942-9	3-Way Connector, Male	*
6	5996-4	16-14 GA Bullet Conn., Male	*	35	8944	3-Way Locking Connector, Male	*
7	5996-5	16-14 GA Bullet Conn., Female	*	36	8944-1	3-Way Locking Connector, Female	*
8	5940-4	16-14 GA Spg. Loaded Term., Female	*	37	7942-11	4-Way Connector, Male	*
9	5940-7	Wire Clip, Female	*	38	7942-12	4-Way Connector, Female	*
10	5996	1/4 x 16-14 GA QKS Term., Female	*	39	7942-5	5-Way Connector, Male	*
11	5996-2	3/16 x 22-18 GA QKS Term., Female	*	40	5940-2	5-Way Connector, Male	*
12	7996	16-14 GA QKS Term., Female	*	41	8942-1	5-Way Connector, Female	*
13	5940-5	16-14 GA Spg. Loaded Term., Male	*	42	7942-6	6-Way Connector, Male	*
14	5996-0	1/4 x 22-18 GA QKS Term., Male	*	43	7942-7	6-Way Connector, Male	*
15	5996-18	16-14 GA Ring Term. (#8) Nylon Insulated	*	44	7942-8	8-Way Connector, Male	*
16	7996-1	1/4 x 16-14 GA QKS Term., Male	*	45	8942-2	8-Way Connector, Female	*
17	5996-8	6 GA Ring Lug (5/16) Insulated	*	46	8942-3	5-Way Connector, Male	*
18	5996-9	22-18 GA Ring Term. (#10)	*	47	5940-9	3-Way Connector (M)	*
19	5996-10	16-14 GA Ring Term. (5/16) Insulated	*	48	7942-15	6-Way Connector (Female)	*
20	5996-12	12-10 GA Ring Term. (5/16)	*	49	7940-3	Packard Plug (Male)	*
21	5996-13	16-14 GA Ring Term. (#10) Insulated	*	50	7940-4	Packard Plug (Female)	*
22	5996-15	12-10 GA Ring Term. (1/2)	*	* Service Part Only			
23	5996-16	6 GA Ring Terminal (1/4)	*	NOTE: Not all Electrical Connectors are used with all assemblies.			
24	5996-17	16-14 GA Ring Term. (1/4)	*	NOTE: Refer to ELECTRICAL ASSEMBLY , Page 34 for locations of Wiring Harness and of all Electrical Wiring Service Parts.			
25	5996-20	12-10 GA Ring Term. (1/4) Insulated	*				
26	5996-21	12-10 GA Ring Term. (#10) Insulated	*				
27	7942-4	Single Connector, Male	*				
28	8942	2-Way Connector, Male	*				


ELECTRICAL CONNECTORS

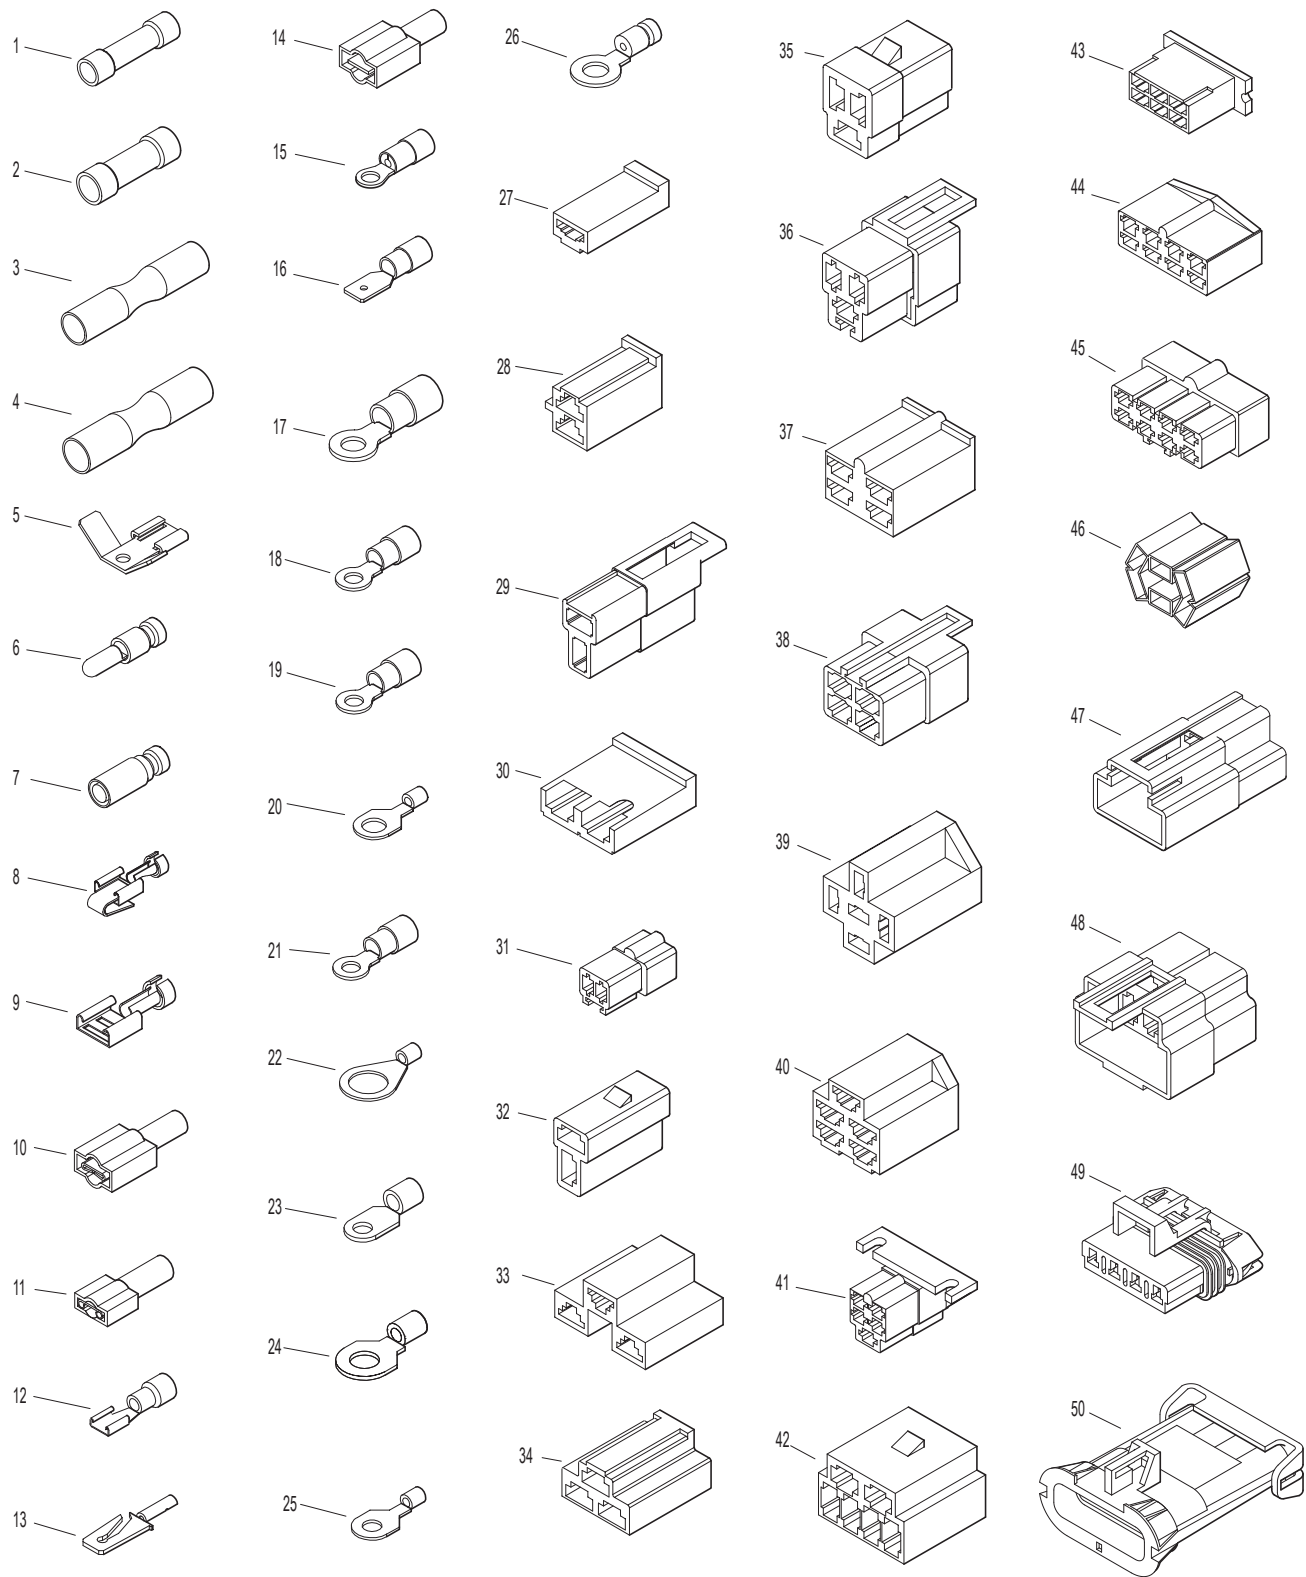


LUBRICATION POINTS

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES	ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points				17	Brake Actuator Pivot	Grease	1
1	Steering Lever Pivot	Grease	4	18	Throttle Control Cable Ends	Oil	2
2	Body Hinge Point	Oil	2	19	Catcher Hinge Point	Oil	2
3	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1	20	Rear Wheel Bearings	Grease	2
4	FSC Actuator Rod Pivots	Oil	2	21	Engine Dipstick / Oil Filler	Oil**	1
5	(FSC) Friction Body Pivot	Grease	1	22	Belt Tightener Pivot, Blower Drive (GHS Model Only)	Grease	1
6	FSC Lever Pivot	Grease	1	23	Belt Tightener Pivot, Ground Drive	Grease	1
7	Deck Support Arm Pivot	Grease	2	24	PTO Gearbox Dipstick	Oil**	1
8	Gear Axle	Oil**	2	25	Hydrostatic Drive	Oil**	2
9	Universal Joint Tube Assembly	Grease*	1	26	Throttle Control Pivot	Oil	1
10	Parking Brake Lever	Grease	1	* Grease every twenty-five (25) hours.			
11	Universal Joint Quick Connect Spline (Grease Slide Area)	Grease	1	** Refer to T25i Operator's Manual for procedure for checking and changing oil in Engine Crankcase, Hydrostatic Transmissions and Gear Axles.			
12	Belt Tightener Pivot, Jackshaft Drive	Grease	1	NOTE: See Model T25i Operator's Manual (P/N 8000-36) for proper lubrication intervals.			
13	PTO Clutch Lever Pivot	Grease	1				
14	Clutch Actuator Push Rod	Grease	2				
15	Belt Tightener Pivot, PTO Clutch	Grease	1				
16	Brake Actuator Rod and Brake Band Pivot Pins (Clevis)	Oil	3				

LUBRICATION POINTS

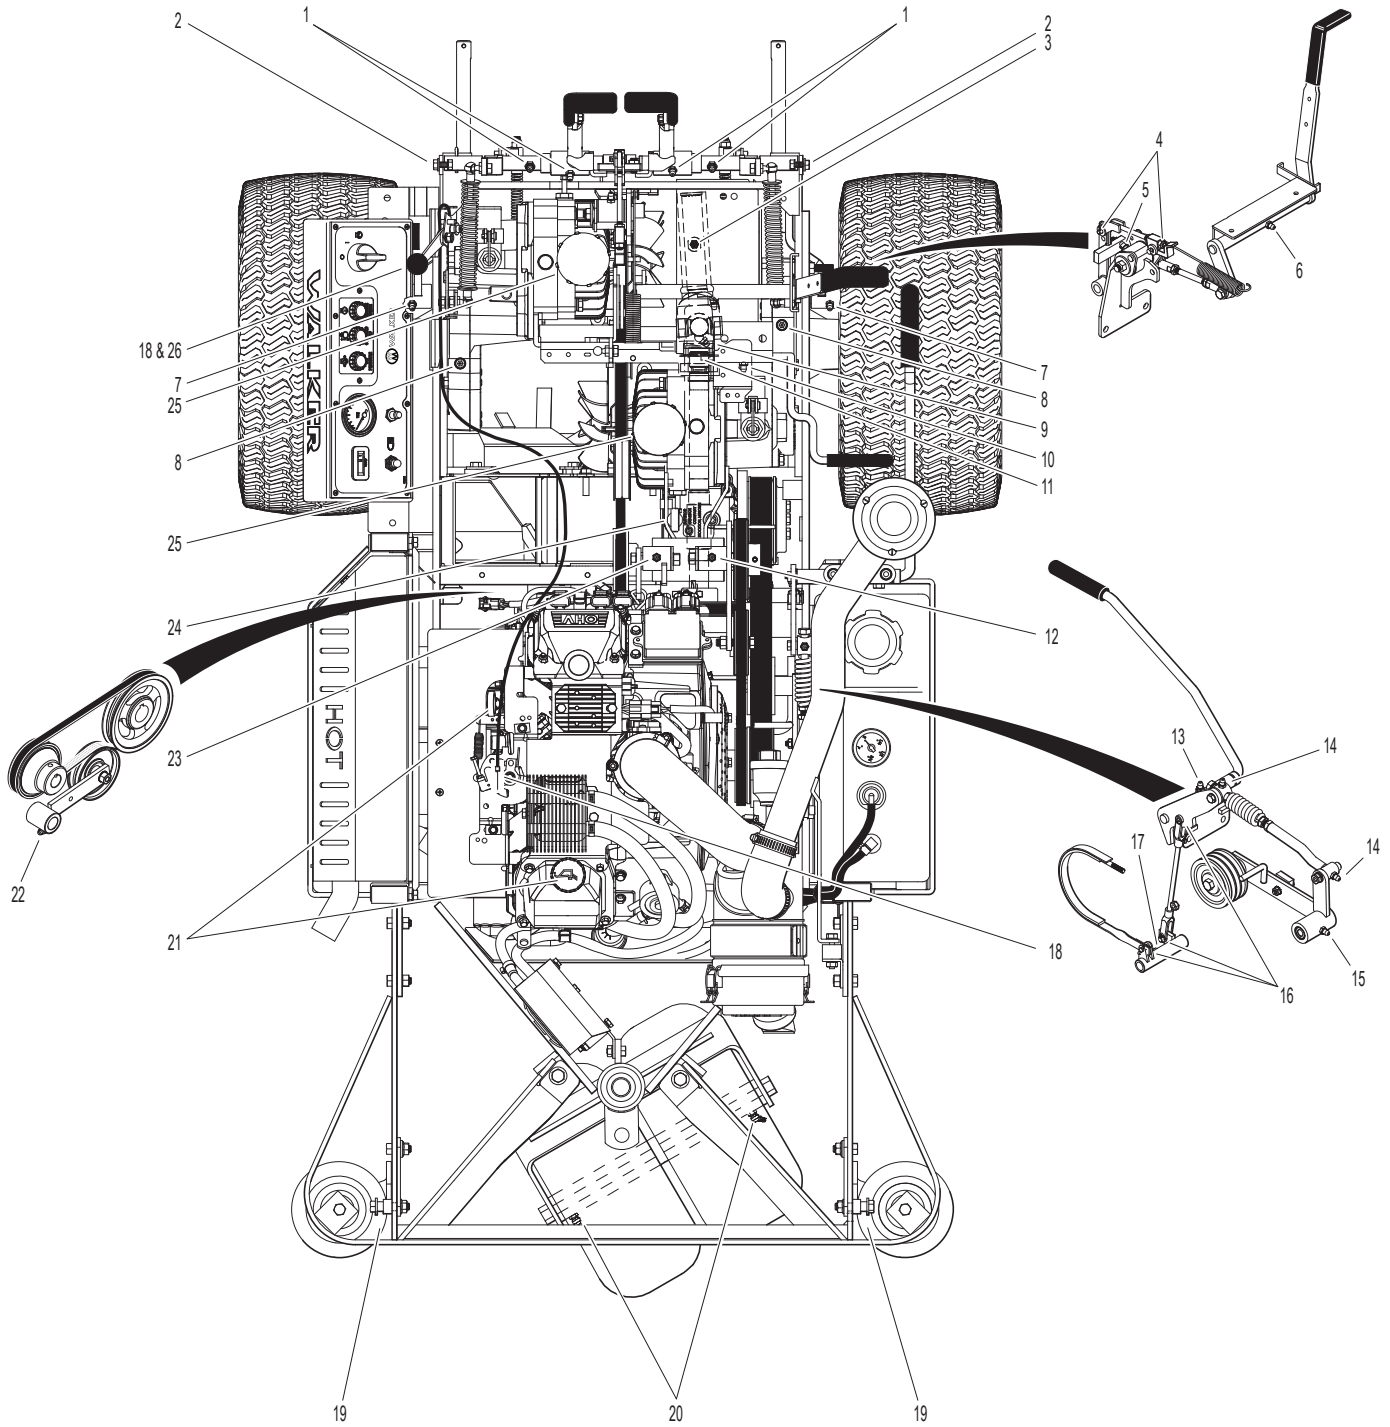

WIRING SCHEMATIC

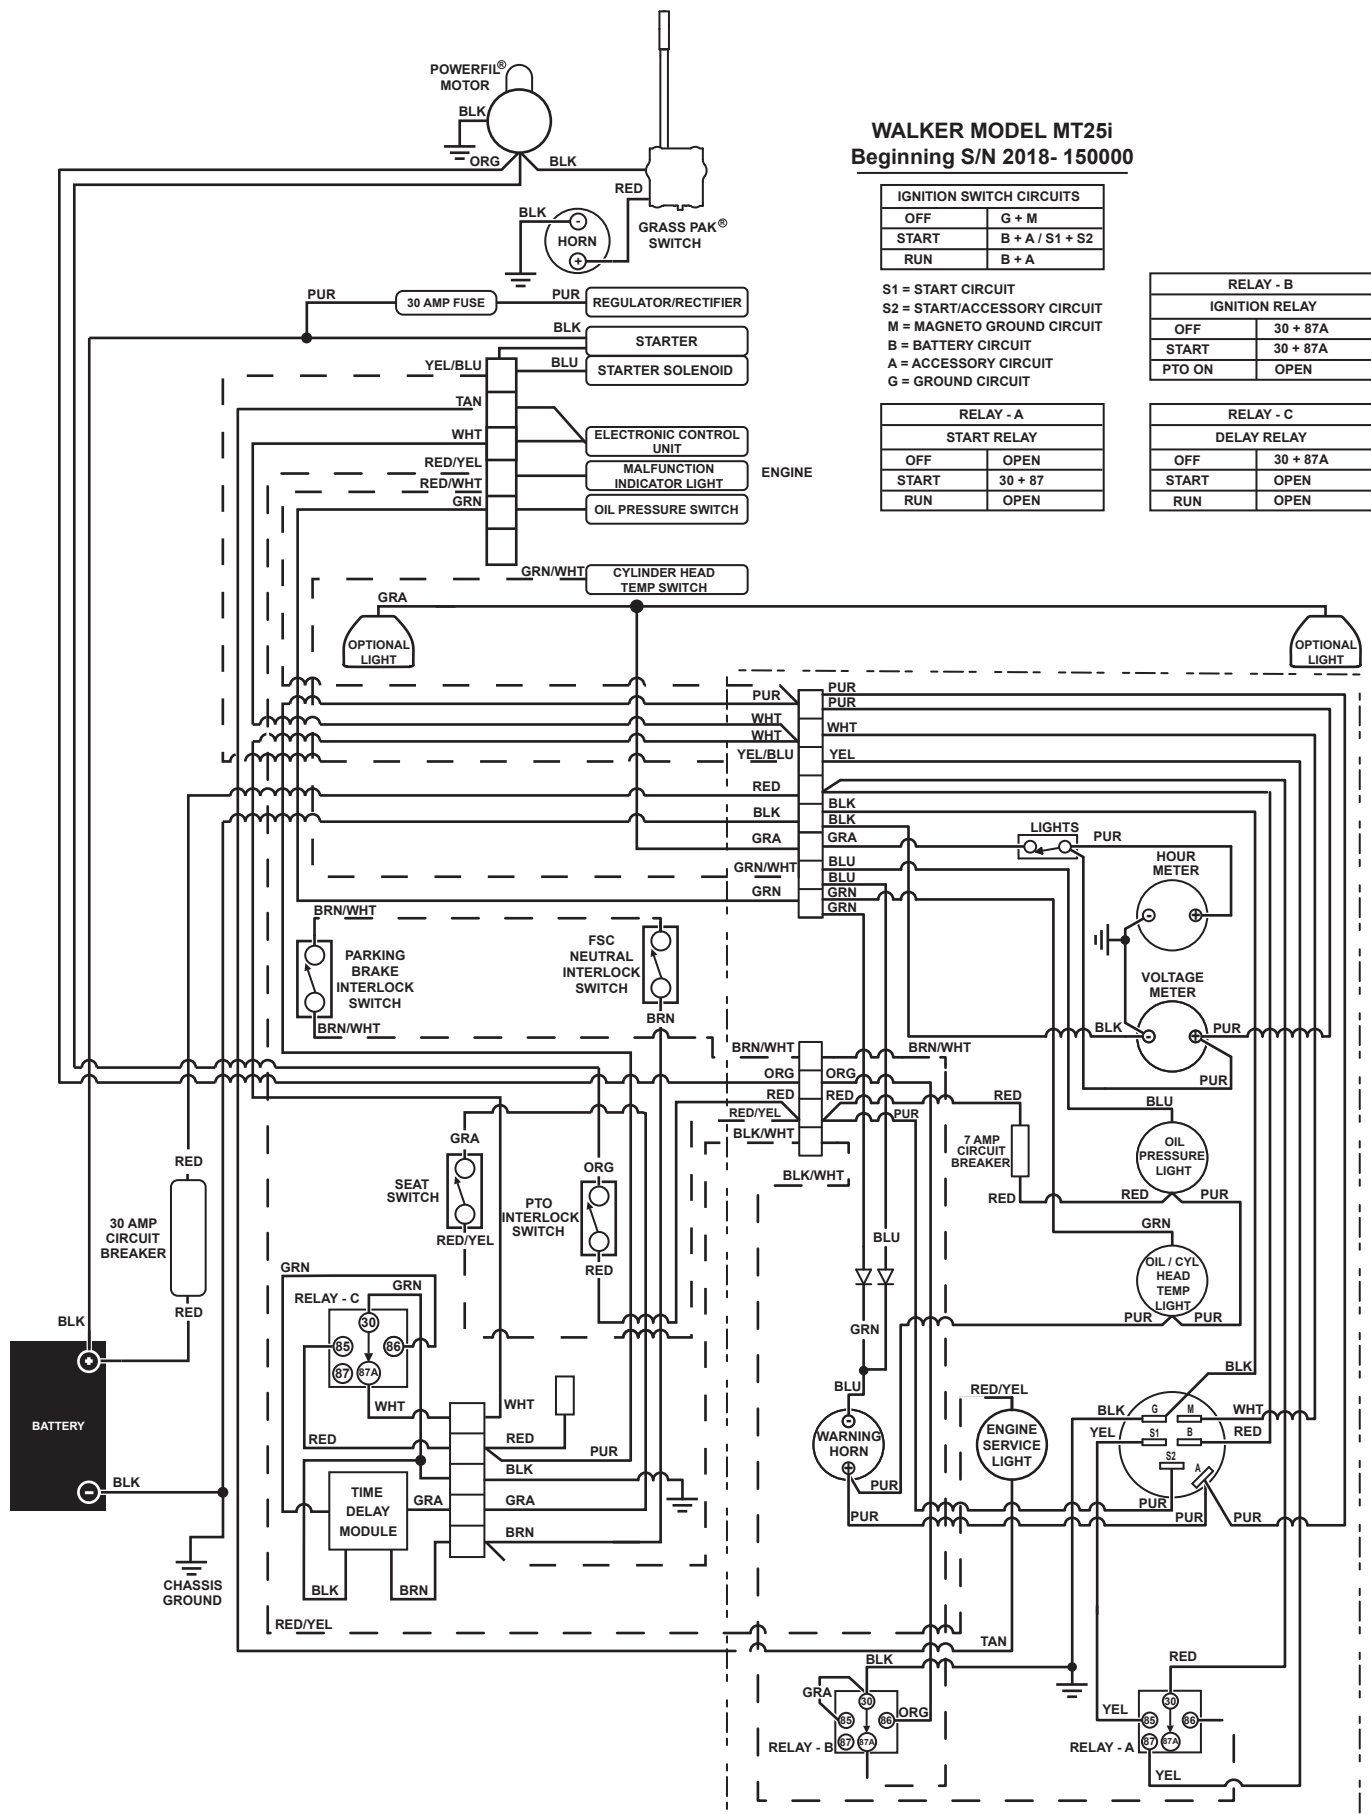

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

MAINTENANCE AND SERVICE RECORD SHEET

[illegible]

LIMITED WARRANTY FOR WALKER COMMERCIAL RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within two (2) years* after the date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Kohler Engine
Battery

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

* Extended warranties are offered for the following powertrain components:

- A three (3) year unlimited hour warranty is offered for the Walker P/N 6200-9 Gear Axle Assembly.
- A three (3) year or 3000 hour (whichever comes first) warranty is offered for Eaton Model 7 Hydrostatic transmissions; covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 3000 hours.

2. WHAT THIS WARRANTY DOES NOT COVER:


- A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Operator's Manual for operation and maintenance.
- B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.

4. WARRANTY LIMITATION:

- A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.
- C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.
- D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

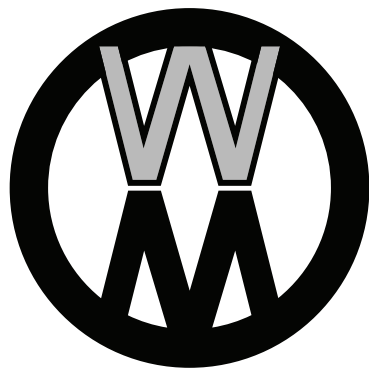

WALKER

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 010820 PRINTED IN USA www.walker.com ©2020 WALKER MFG. CO