WALKER

Illustrated Parts Manual

T23



Beginning S/N: 194904
P/N 8000-64

KEY TO ABBREVIATIONS USED IN THIS MANUAL

Abbreviation	*What it Represents*
º (Dimension)	Degrees (Angle)
" (Dimension)	inches
(-)	Negative (Polarity)
(+)	Positive (Polarity)
-1 (as deck style designation)	Standard (Aluminum) Gear Drive Deck
-2 (as deck style designation)	Heavy Duty (Cast Iron) Gear Drive Deck
-3 (as deck style designation)	Belt Drive Deck
AT	All-Terrain
CCW	Counter-clockwise
CW	Clockwise
D	Diameter
DC	Deck, Collection (number refers to size in inches)
DM	Deck, Mulching (number refers to size in inches)
DR	Deck, Rear Discharge (number refers to size in inches)
DS	Deck, Side Discharge (number refers to size in inches)
DU	Garlock (Bearing)
ESNA (Fastener)	Nylon Insert Locknut
FSC	Forward Speed Control
GA	Gauge
gal	gallon
GHS	Grass Handling System
GR (Fastener)	Grade
HD	Heavy Duty
HP	Horse Power
ID	Identification or Inside Diameter
L	Length
LH	Left Hand (orientated with operator on seat)
LP	Low Profile
mm (Dimension)	millimeters
MS (Fastener)	Machine Screw
NS (as part number)	Item is not sold by Walker Manufacturing
OD	Outside Diameter
oz	ounce
PFH (Fastener)	Phillips Flat Head
P/N	Part Number
PPH (Fastener)	Phillips Pan Head
PTH (Fastener)	Phillips Truss Head
PTO	Power Take-Off
QKS	Quick Slide
qt	quart
RH	Right Hand (orientated with operator on seat)
SAE (Fastener)	Society of Automotive Engineers
SBH (Fastener)	Socket Button Head (Bolt)
SFH (Fastener)	Slotted Flat Head
SHC (Fastener)	Socket Head Cap
SHL (Fastener)	Shoulder (Bolt)
SM (Fastener)	Sheet Metal (Screw)
S/N	Serial Number
SQH (Fastener)	Square Head
SS (Fastener)	Stainless Steel
ST (Fastener)	Self-Tapping (Screw)
TOPS™	Transmission Oil Performance System
V	Volts

NOTE: In some instances, combinations of abbreviations may be used (e.g. PPHMS - Phillips Pan Head Machine Screw).

ILLUSTRATED PARTS LIST


Section of Tractor Covered	*Page*
Decals	
Tractor Decals	2
Body / Chassis Assemblies	
Body / Chassis Assembly (GHS Models)	4
Rear Body Assembly (GHS Models)	6
Body Assembly (Non-Collection Models)	8
Tractor Components	
Main Component Power Transmission (GHS Models)	10
(Non-Collection Models)	12
Engine Group	14
Hydrostatic Ground Drive Assemblies	16
Steering Control Assemblies	18
Throttle & Choke Control Assemblies	20
Parking Brake Assembly	22
GHS Group	24
GHS Powerfil® Assembly (10.0)	26
GHS 10.0 Bushel Catcher Assembly	28
Instrument Panel Assembly	30
Electrical Components	
Electrical Assembly	32
Electrical Assemblies (GHS 10.0 Bushel Components)	34
Maintenance	
Lubrication Points	36
Wiring Schematic	38
Maintenance And Service Record Sheet	39
Warranty	
Limited Warranty	41

TRACTOR DECALS

ITEM NO.	PART NO.	DESCRIPTION	LOCATION	NO. REQ'D. GHS	NO. REQ'D NON-COLLECTION
Walker Product and Operation Decals					
1	8600-33	RH Fender	Body, RH Side Near Seat	1	1
2	5800	Walker Mower (4" Round)	Utility Bed (one on each side)	0	2
3	5800-22	Walker (8" Round)	10.0 Bushel Catcher (one on each side)	2	0
4	8821-10	Decal, T23	Body	1	1
5	5856-1	Made in USA	Body	1	1
6	5813-2	Decal, 4" Grass-Pak Powerfil®	Powerfil® Cover Plate	1	0
Danger Decals Warning Decals Caution Decals					
7	8600-34	Warning, Read Manual	Body	1	1
8	5810-3	Decal, Hydro Warning	LH Gear Axle Drive Assembly	1	1
9	8600-12	Danger, Engine Exhaust	Front Body, LH Side	1	1
10	8600-10	Danger, Pinch Point	10.0 Bushel Catcher Mounting Frame Assembly (one on each side)	2	0
11	8600-4	Danger, Rotating Blower Blades	Body, Near Body Chute	1	0
Maintenance Decals					
12	8600-30	Parking Brake	Body, RH Side below Seat	1	1
13	5855	Important, Engine Cooling	Engine	1	1
14	6895-103	Rehlko/Kohler 300 Hour Oil	Engine	1	1
15	5869	Removable Screen	10.0 Bushel Catcher Removable Screen	1	0
16	8600-16	Front Body Closure	Rear Cross Member, Body	1	1
17	7827	Oil Level	Jackshaft Support	1	1
18	5024-24	Decal, TOPS™	Oil Reservoir Tank	1	1
19	5810-1	Axle Oil Level	Gear Axle Drive Assemblies (one on each)	2	2
20	8600-32	Choke	Body, LH Side	1	1
21	8600-31	Throttle	Body, LH Side	1	1
22	6875	PTO Alignment Arrow	Universal Joint Tube Assembly	1	1

NOTE: All parts requiring decals are shipped with decals applied.

TRACTOR DECALS

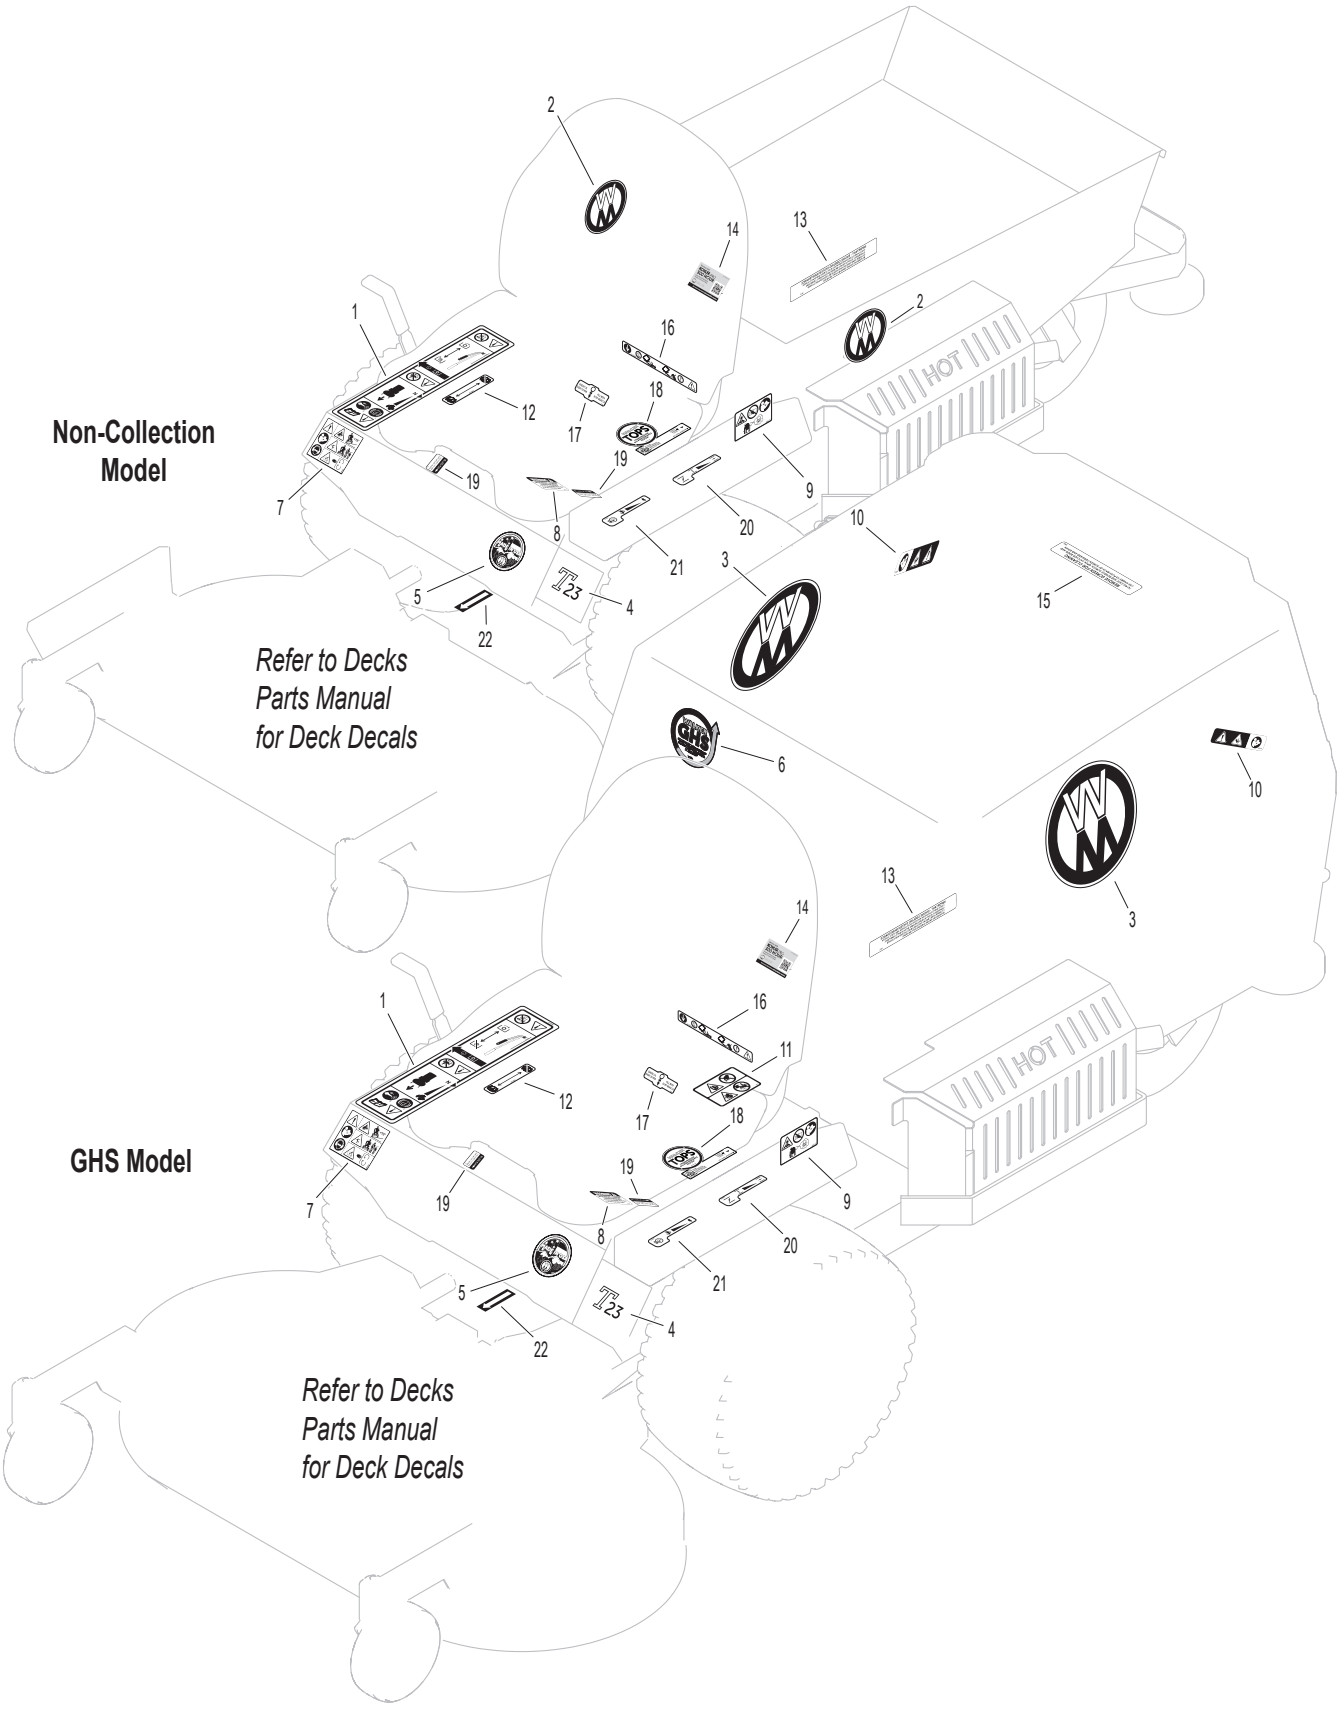

BODY / CHASSIS ASSEMBLY (GHS MODELS)


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Seat Assembly			
1	6104-31	Comfort Seat	1
2	2845-3	Aluminum Washer (5/16 x 1 x 1/4)	4
Rear Bumper Assembly (GHS Models Only)*			
3	7516	GHS Rear Bumper	1
4	7516-5	Catcher Pivot Bushing	2
5	5162	Roller Wheel (5" Rubber)	2
6	7517-3	Catcher Pivot Plate	2
Body Assembly			
7	7383-6	Body Latch Bracket, RH	1
8	7383-5	Body Latch Lever	1
9	7383-7	Body Latch Bracket, LH	1
10	7222	Extension Spring (1/4 x 3)	1
11	5845	Rubber Bumper (1.50 x 1.25)	4
12	5989-12	Dome Plug (3/16)	1
13	5989-10	Dome Plug (9/16)	1
14	8101-8	Front Body Engine Guard	1
15	NS	Body ID Plate	1
16	8118	Heat Deflector	1
17	7422	Panel Guard	1
18	5989-4	Dome Plug (3/8)	4
19	5989-3	Dome Plug (5/16)	2
20	5146	10mm Ball Stud	2
21	2145	Gas Spring Assembly (Includes Item # 20)	1
22	7844	Rubber Bumper (1.25 x .250)	1
23	5989-9	Dome Plug (1/4)	4
24	8100-15	Front Body	1
25	5180	Edge Molding, Lever Opening	2
26	5989-55	Dome Plug (1/2)	1
27	5989-5	Dome Plug (7/16)	1
Tilt-Up Latch Assembly***			
28	5847	Plastic Tip	1
29	5744-20	Spring Arm, Tilt-Up Latch	1
30	5744-10	Spring Pivot Bushing	1
31	5744-15	Compression Spring (3/8 x 5/8)	1
32	5744-13	Mount Angle, LH	1
33	5744-12	Hook, Tilt-Up Latch	1
34	5744-14	Mount Angle, RH	1
Chassis Assembly			
35	5267-1	Retainer Collar (1") (Includes Item # F413)	1
36	5270-1	Ball Bearing	2
37	7420	Tail Wheel Fork	1
38	5830-3	Grease Fitting (45 Degree)	2
39	8039	Nut, Wheel Axle	2
40	8768-2	Seal, Reverse Lip	4
41	8038-1	Spacer, Wheel Axle (.750 ID x 1.125 OD)	2
42	8037	Bearing Cone (3/4 ID)	4
43	8038	Tail Wheel Axle (3/4 x 10-3/8)	1
44	8035-4	Wheel & Tire Assembly (13 x 4.5-6) Black (With Bearing Race)	2
	8035-3	Tail Wheel Tire (13 x 4.5-6 Ply)	**
	8036-1	Wheel & Hub (6 x 3.25) Black (Includes Items # 38 & Bearing Race)	**
	8769-1	Bearing Cup (1-3/4 x 1-7/16)	**
	7420-28	Dual Tail Wheel & Tire Assembly (Black Wheels) (Includes Items # 39-44 & F718)	**
45	7070-4	Wheel & Tire Assembly (18 x 9.50-8) Black	2
	7070-3	Drive Tire (18 x 9.50-8)	**
	5070-7	Wide Wheel (8 x 7) Black	**
46	8300-20	Chassis Frame (T / 5.0 gal.)	1
Fasteners			
	F002	10-24 Keps Nut	2
	F004	1/4-20 Keps Nut	8
	F009	5/16-18 Whiz Locknut	11
	F012	3/8-16 Keps Nut	4
	F014	3/8-16 ESNA Nut	4
	F020	5/16-18 ESNA Nut	1
	F025	10-24 x 3/8 PPHMS	2
	F029	1/4-20 x 1/2 Hex Bolt	6
	F031	1/4-20 x 5/8 Hex Bolt	2
	F034	5/16-18 x 3/4 Hex Bolt	2
	F035	5/16-18 x 1-1/4 Hex Bolt	4
	F038	3/8-16 x 1 Hex Bolt	6
	F040	3/8-16 x 1-1/2 Hex Bolt	2
	F041	3/8-16 x 1-3/4 Hex Bolt	2
	F042	3/8-16 x 2-1/4 Hex Bolt	2
	F049	5/16 SAE Washer	2
	F050	1/4 SAE Washer	2
	F051	3/8 SAE Washer	2
	F059	3/8 Wave Spring Washer	2
	F093	5/16-18 x 1 Hex Bolt	1
	F157	1/2-20 x 1-1/4 Wheel Lug Bolt	8
	F206	#2 x 3/16 Drive Pin	2
	F218	7/16 Split Lock Washer	2
	F219	7/16-14 x 1-1/4 Hex Bolt	2
	F241	.375 x .875 x .10 Washer	4
	F256	7/16 SAE Washer	2
	F341	Coil Roll Pin (7/64 x 9/16)	1
	F342	5/16 Conical Washer	2
	F413	5/16-24 x 5/16 Set Screw	2
	F570	3/8-16 Flange Top Lock Nut	4
	F591	7/16-14 Flange Top Lock Nut	2
	F592	7/16-14 x 1-1/8 Hex Bolt GR 5	2
	F710	1/4-28 x 1/4 Set Screw (Knurled Cup), SS	1
	F718	5/16-18 x 5/16 Set Screw (Knurl Point)	2

* Rear Bumper Assembly for SD Models is not shown here. Refer to **BODY ASSEMBLY (SD MODELS),** Page 8.

** Service Part Only

*** Complete Tilt-Up Latch Assembly Kit available by ordering kit # 5744-5.

BODY / CHASSIS ASSEMBLY (GHS MODELS)

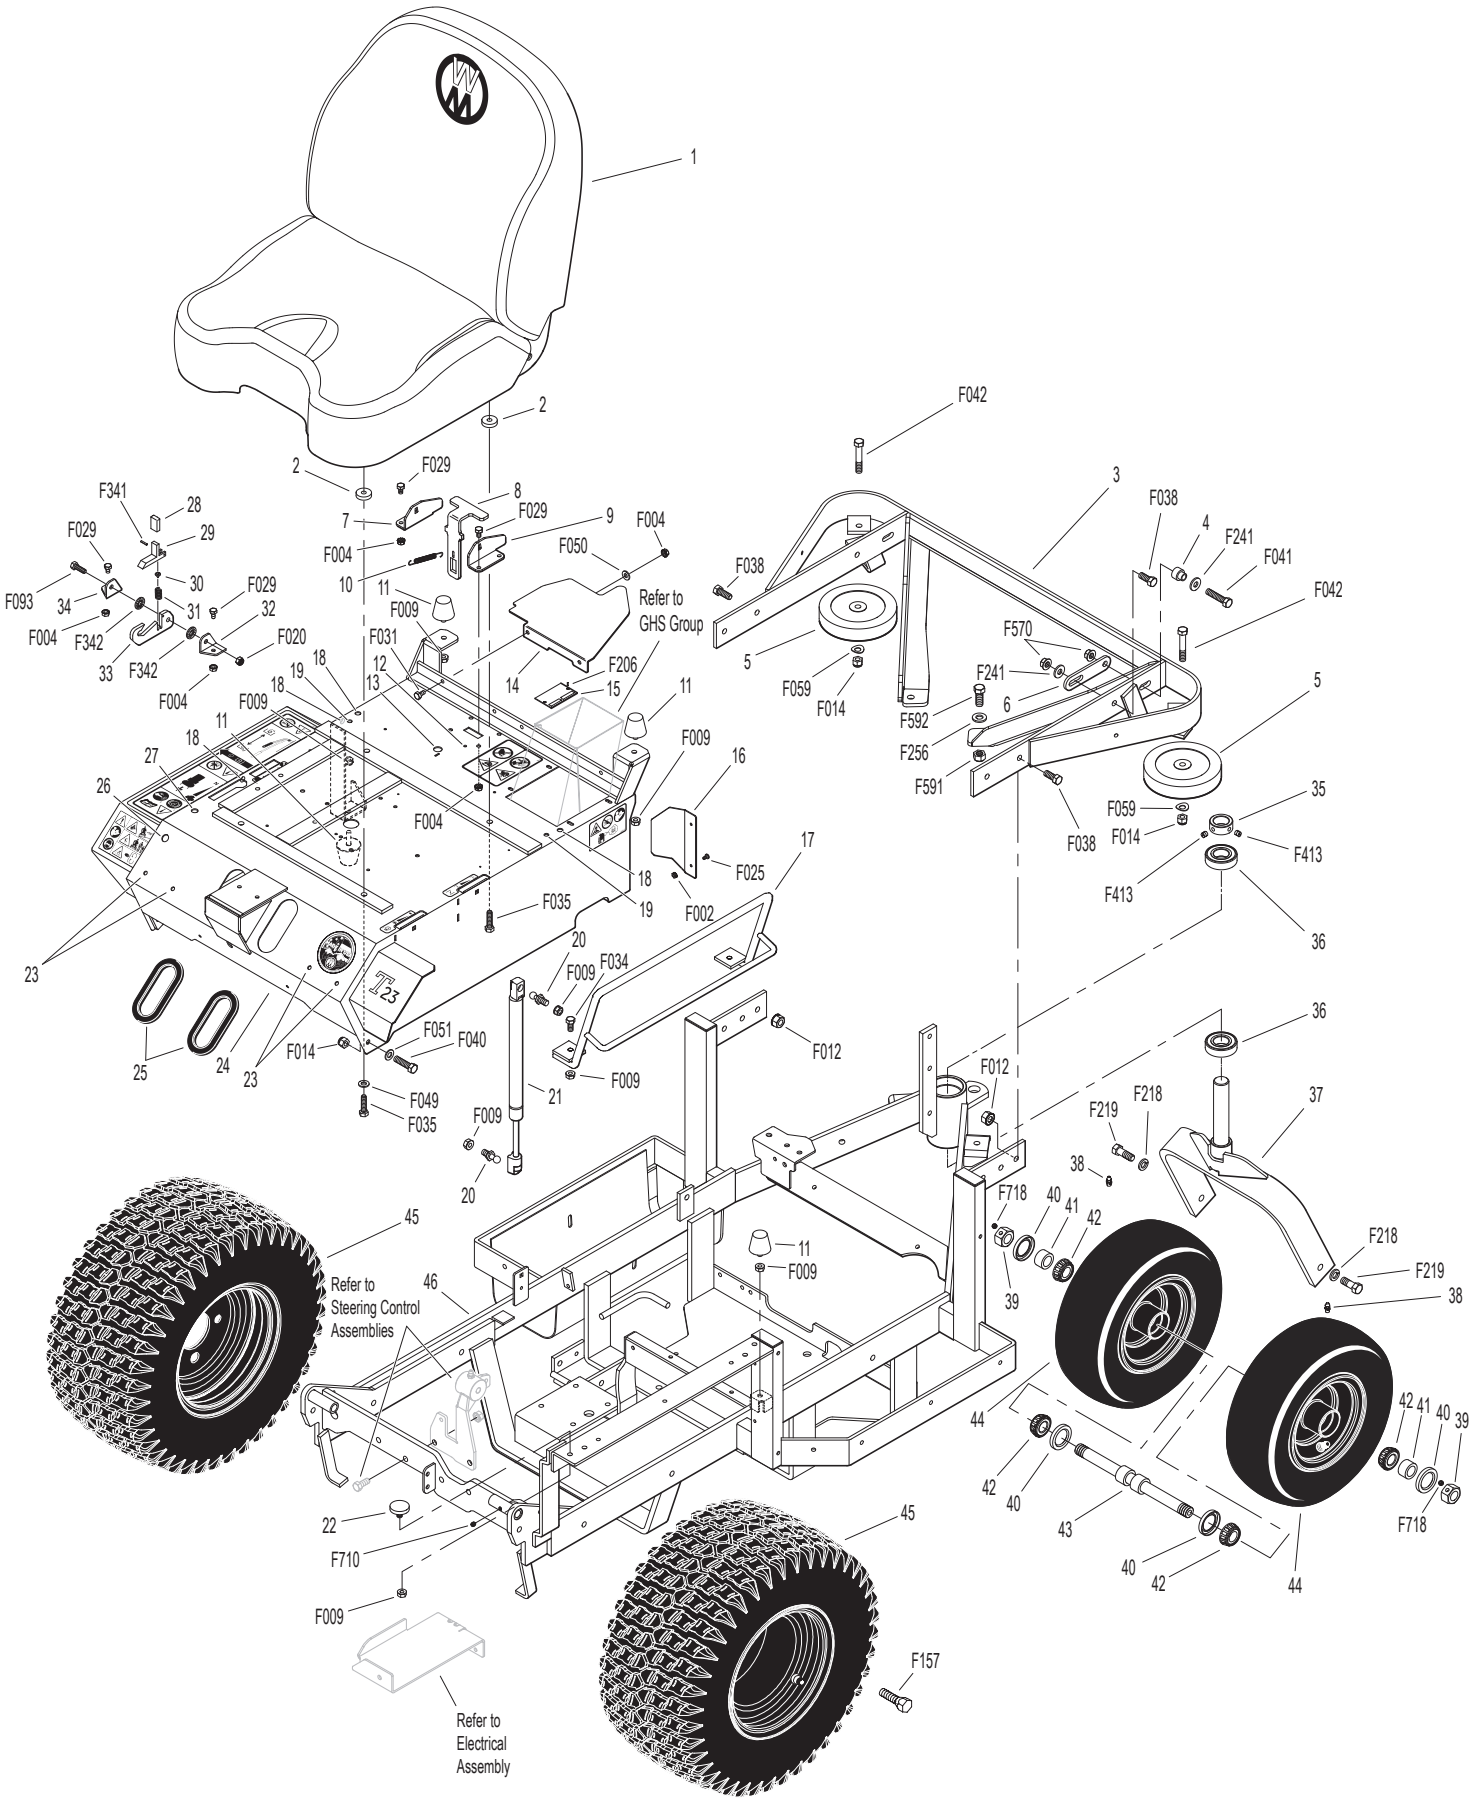


REAR BODY ASSEMBLY (GHS MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Rear Body Assembly (GHS Models)			
1	7190-3	Insulation Foam Pad (5 x 20)	1
2	8082	Heat Shield	1
3	8515-18	Catcher Handle Plate, RH	1
4	8515-17	Catcher Handle Plate, LH	1
5	8615-4	Catcher Support Frame, 10.0	1
6	7190-2	Insulation Foam Pad, RH	1
7	7190-1	Insulation Foam Pad, LH	1
8	5832	Cable Clamp (1/2)	1
9	7145	Gas Spring Assembly (Includes Items # 11 & 12)	1
10	8389-5	Splash Guard	1
11	7147	Spring Clip	2
12	7146	13mm Ball Stud	2
13	8105-10	Rear Body Panel	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fasteners			
	F002	10-24 Keps Nut	4
	F009	5/16-18 Whiz Locknut	2
	F023	10-24 ESNA Nut	7
	F026	10-24 x 1/2 PPHMS	3
	F027	10-24 x 5/8 PPHMS	1
	F032	1/4-20 x 3/4 Hex Bolt	3
	F085	3/16 Rivet Backup Washer	2
	F390	1/4-20 x 7/8 Carriage Bolt	2
	F568	10-24 Flange Top Lock Nut	2
	F569	1/4-20 Flange Top Lock Nut	5
	F613	10-24 x 1/2 Truss Head Torx	9
	F615	1.0 x .255 x .125 Washer	1

NOTE: Rear Bumper Assembly for GHS Models is not shown here. Refer to **BODY / CHASSIS ASSEMBLY (GHS MODELS),** Page 4.

REAR BODY ASSEMBLY (GHS MODELS)

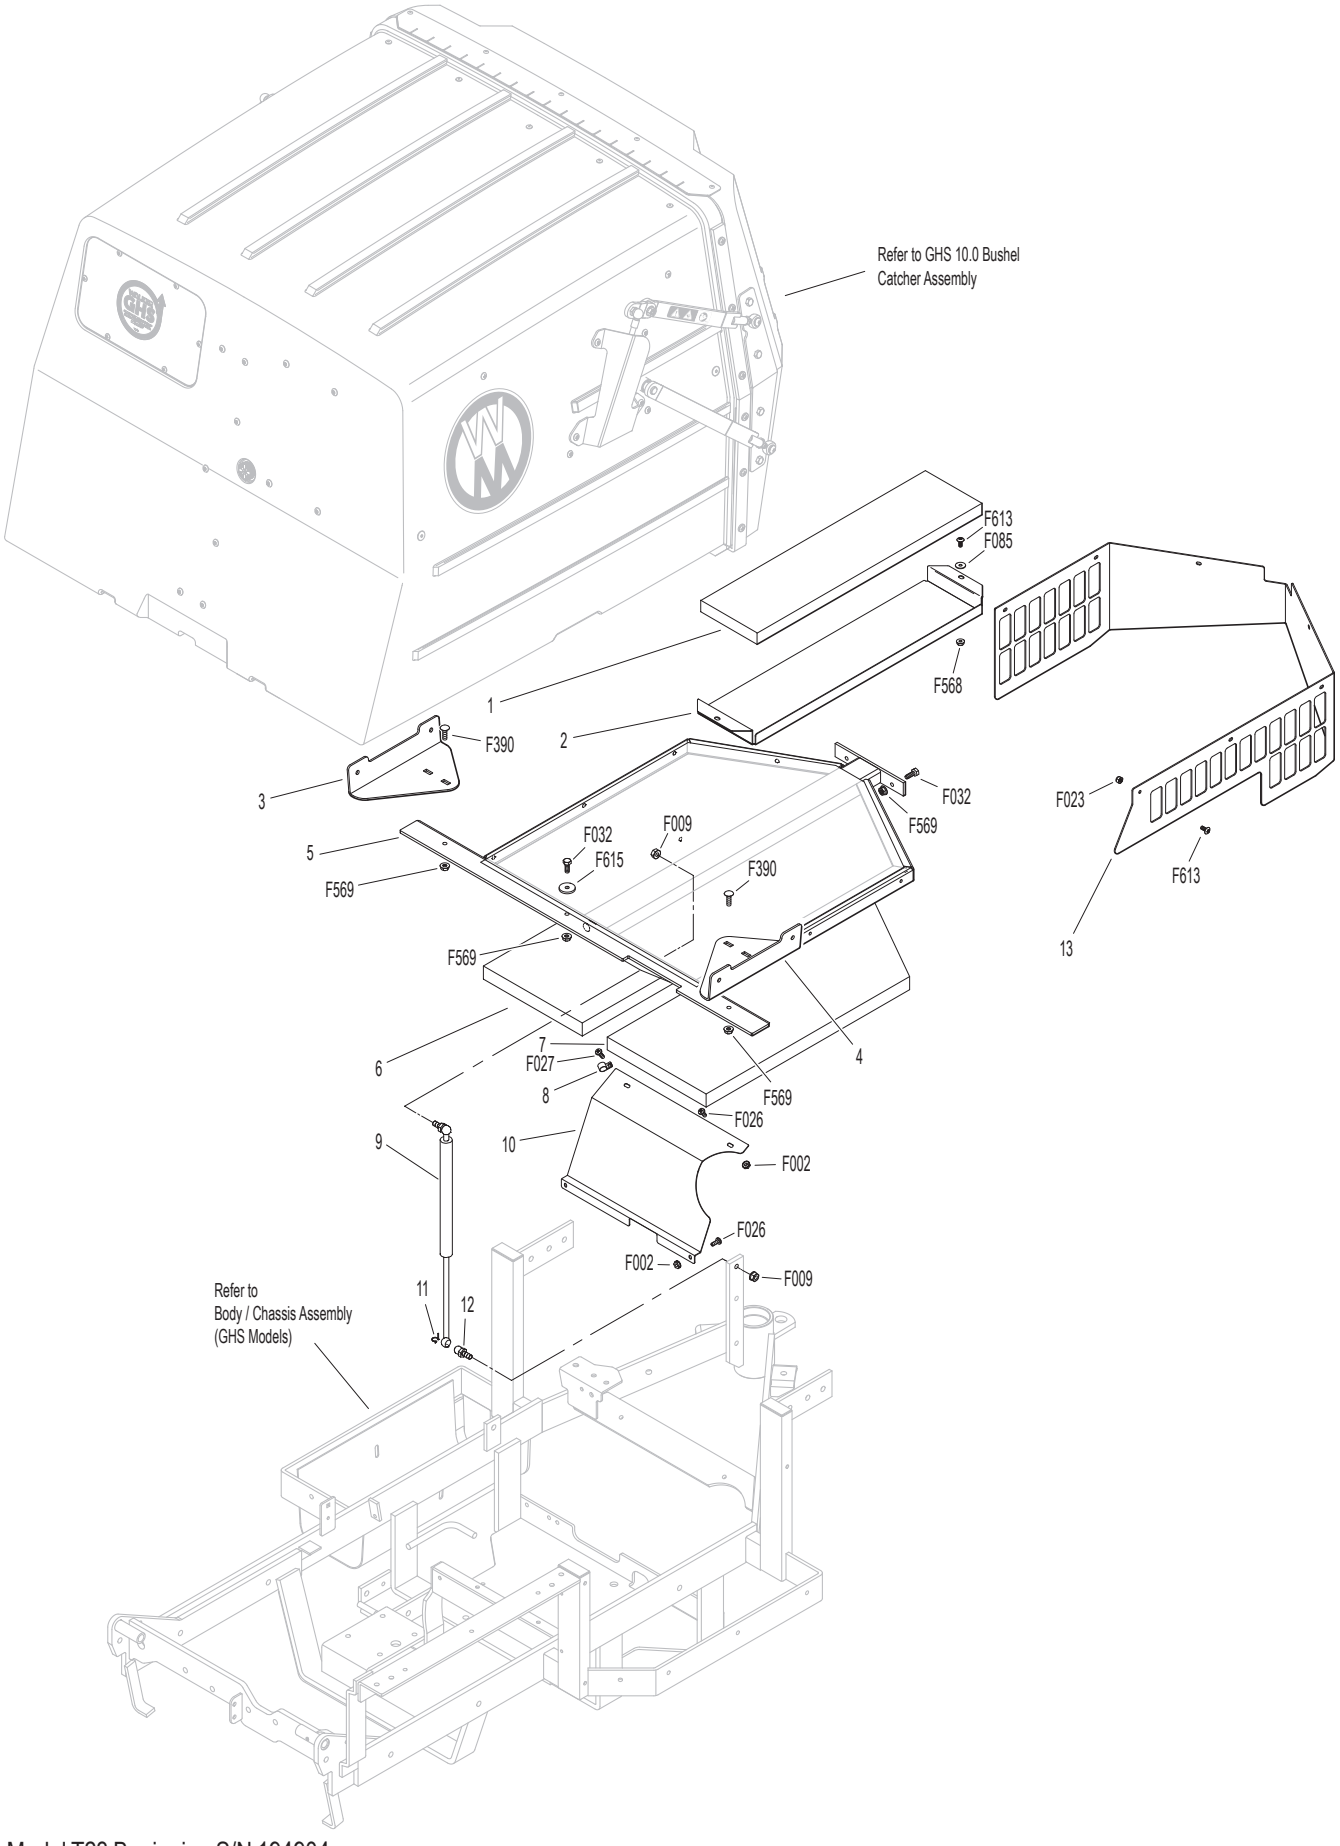


BODY ASSEMBLY (NON-COLLECTION MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Utility Bed Assembly			
1	8650-10	Bed Liner (21.5 x 27.5)	1
2	8650-2	Utility Bed (Includes Item # 1)	1
3	7190-2	Insulation Foam Pad, RH	1
4	7190-1	Insulation Foam Pad, LH	1
Rear Bumper Assembly (SD Models)			
5	7153-3	Cover Plate	1
6	7145	Gas Spring Assembly (Includes Items # 7 & 8)	1
7	7147	Spring Clip	2
8	7146	13mm Ball Stud	2
9	7521	Rear Bumper	1
10	5162	Roller Wheel (5" Rubber)	2
11	8105-10	Rear Body Panel	1
12	8389-5	Splash Guard	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fasteners			
	F002	10-24 Keps Nut	8
	F009	5/16-18 Whiz Locknut	2
	F012	3/8-16 Keps Nut	6
	F013	3/8-16 Whiz Locknut	4
	F014	3/8-16 ESNA Nut	2
	F023	10-24 ESNA Nut	7
	F026	10-24 x 1/2 PPHMS	3
	F027	10-24 x 5/8 PPHMS	1
	F038	3/8-16 x 1 Hex Bolt	6
	F040	3/8-16 x 1-1/2 Hex Bolt	2
	F042	3/8-16 x 2-1/4 Hex Bolt	2
	F051	3/8 SAE Washer	6
	F059	3/8 Wave Spring Washer	4
	F128	10-24 x 3/8 PTHMS	4
	F613	10-24 x 1/2 Truss Head Torx	7

NOTE: Refer to **BODY / CHASSIS ASSEMBLY (GHS MODELS),** Page 4 for all common parts used on both models.

BODY ASSEMBLY (NON-COLLECTION MODELS)

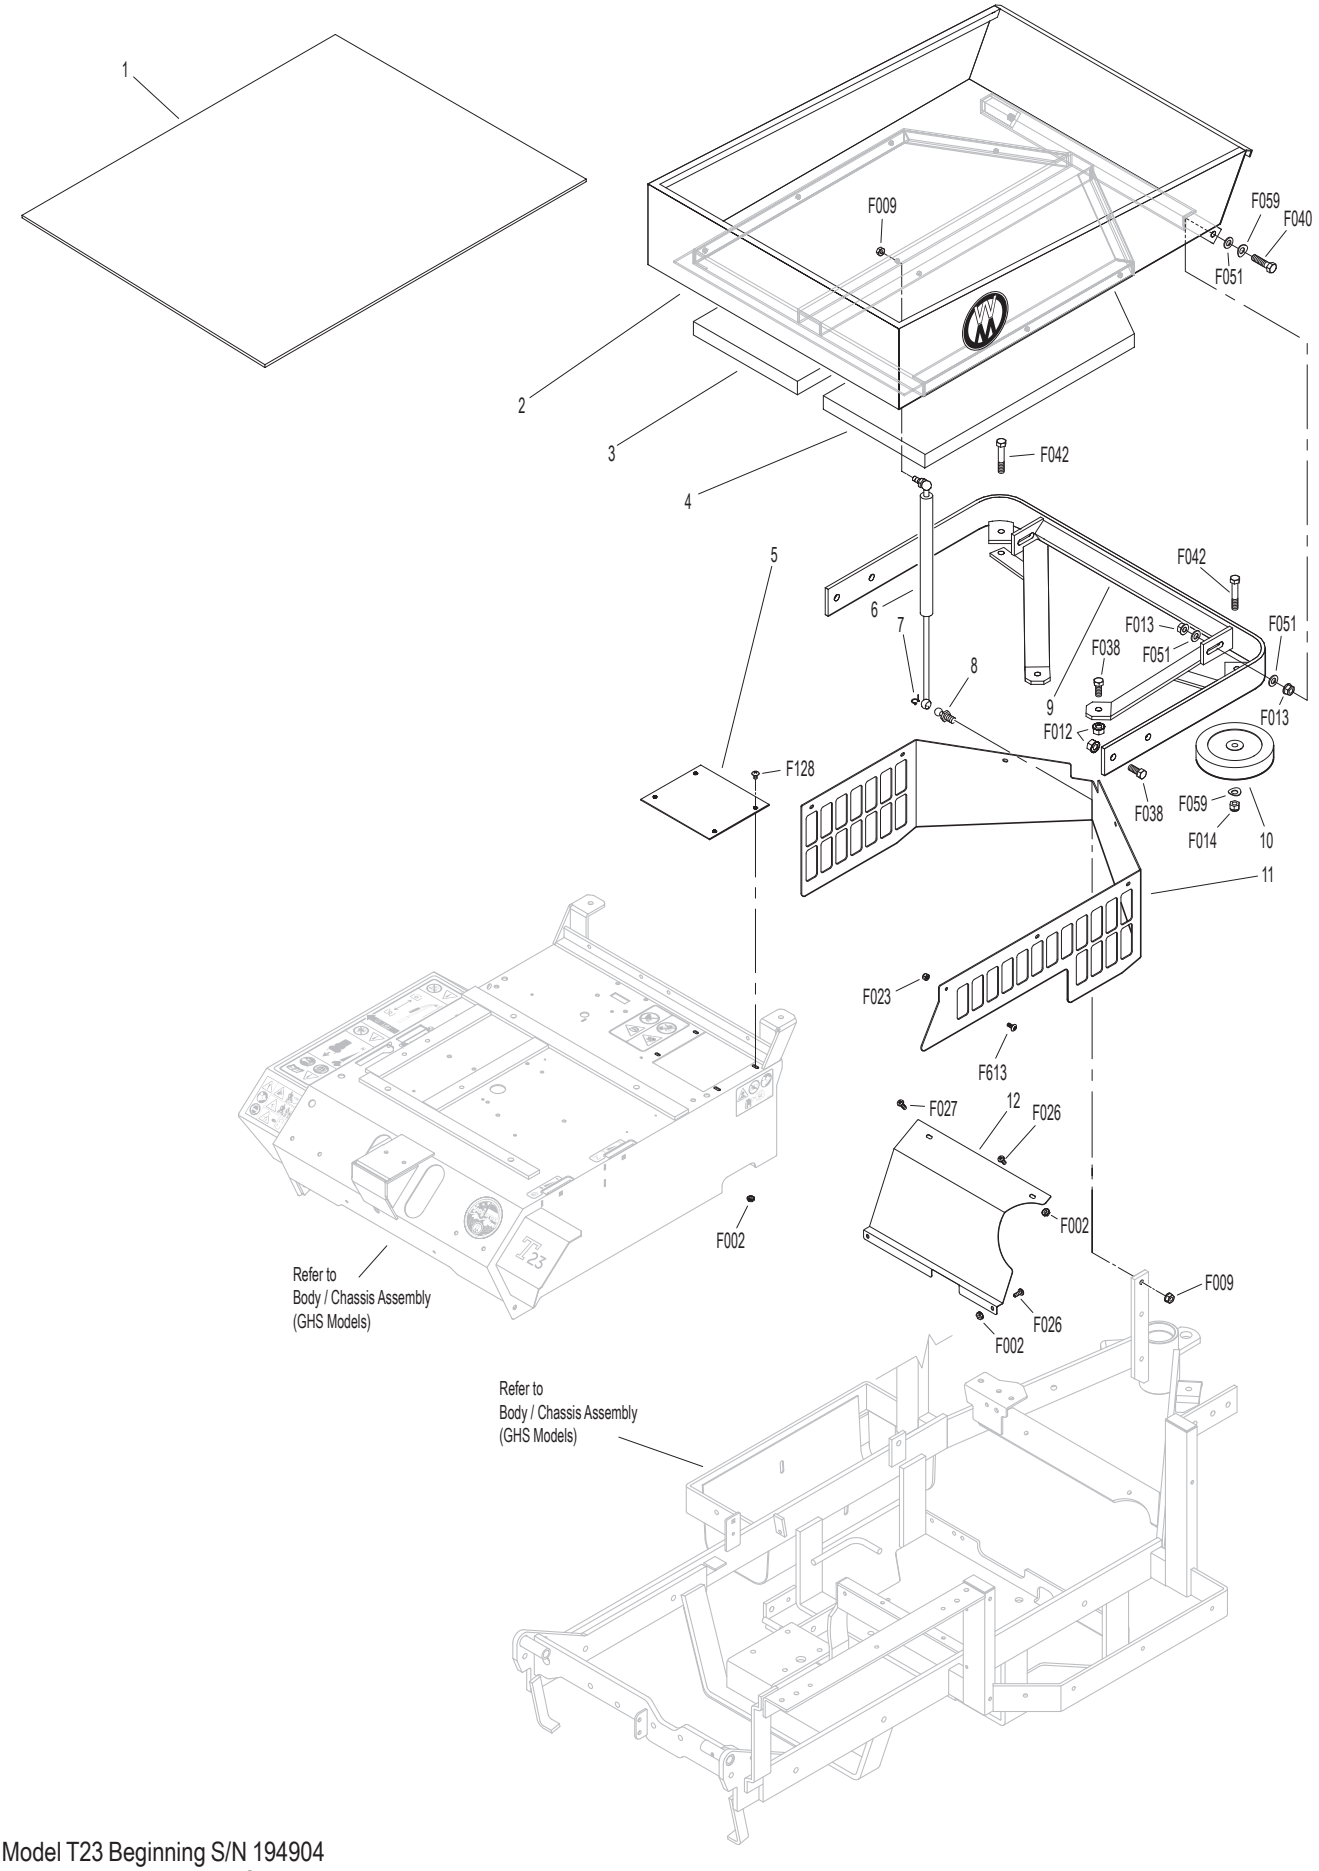


MAIN COMPONENT POWER TRANSMISSION (GHS MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Clutch Lever Assembly			
1	8358-3	Clutch Lever (Includes Items # 2 & 3)	1
2	5830	Grease Fitting	8
3	4850	Handle Grip, Black	1
4	7303-10	Clutch Actuator Bolt (3/8)	1
5	7380-5	Knuckle Joint (3/8 ID)	1
6	7226-10	Compression Spring (3/4 x 2-1/2)	1
7	8130-5	Pushrod, Clutch Actuator (Threaded Tube) (Includes Item # 2)	1
8	8130-10	Clutch Actuator Rod Assembly (Includes Items # 2, 4-7, F054, F336 & F353)	1
9	7201-3	Fiberglide Bearing	6
10	7201-5	Inner Race (2-1/4)	1
11	8368	PTO Belt Tightener	1
12	5841	Retainer Washer (3/8 x 1-1/4)	4
13	8243-1	Clutch Idler Pulley	1
	8243	Clutch Idler Pulley Assembly (Includes Items # 13-15 & F070)	*
14	5265	Bearing (3/4)	1
15	8243-3	Hub, Idler Pulley	1
16	8375	PTO Belt Tightener Stop	1
17	7377	Plastic Washer (1 x .438 x .025)	2
18	7378	Pivot Bearing (7/16 x 9/16)	1
19	5281-5	Clevis Pin (1/4 x 0.80)	2
20	5280	Clevis (1/4)	2
21	8305	Brake Actuator Rod	1
22	8370	Bearing, Brake Actuator	1
23	8250	Brake Spring (1/2 x 2-1/2)	1
24	8369	Brake Actuator (Includes Items # 2 & 22)	1
PTO Drive Shaft Assembly			
25	7050-1	Dipstick, Gearbox	1
26	8371-1	Mount Bracket, Brake Band	1
27	8377	Brake Band Guide	1
28	8050-11	PTO Gearbox / Flange Pulley	1
29	7248	Ground Drive Belt, Micro-V	1
30	7275-16	Universal Joint Tube Assembly / Spline	1
31	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1
32	8304	Brake Band (14-1/2)	1
33	6250-1	Drive Belt (3VX365)	1
34	7236-1	PTO Drive Pulley (4-1/2/3V) (Includes Items # F168 & F226)	1
35	8237-3	Engine Pulley (4/3.8/3V) (Includes Item # F226)	1
36	8230	Engine PTO Belt	1
Jackshaft Assembly			
37	7245-1	Idler Pulley (3/8 Groove)	1
38	6325-2	Spacer Bushing (5/16)	2
39	8349-4	Idler Arm	1
40	7201-4	Inner Race (1-1/2)	2
41	5221-1	Extension Spring (3/4 x 5)	2
42	8539	Starter Relay Mount	1
43	5268	Bearing W/Collar (3/4)	2
44	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F718)	1
45	7833	Cable Clamp (7/8 x 1/4)	1
46	8349	Transmission Belt Tightener Arm	1
47	5245	Idler Pulley (3")	1
48	8394-6	Hydro Jackshaft Mount Assembly (Includes Items # 2, 9, 12, 40, 43, 49, F012, F042, F067 & F718)	1
49	8273-1	Jackshaft (3/4 x 8-1/8)	1
50	7240-7	Jackshaft Drive Pulley (3.0/3V) (Includes Items # F067 & F718)	1
Fasteners			
	F003	1/4-28 Hex Nut	2
	F004	1/4-20 Keps Nut	3
	F005	1/4-20 ESNA Nut	1
	F009	5/16-18 Whiz Locknut	3
	F012	3/8-16 Keps Nut	6
	F029	1/4-20 x 1/2 Hex Bolt	1
	F041	3/8-16 x 1-3/4 Hex Bolt	2
	F042	3/8-16 x 2-1/4 Hex Bolt	3
	F043	3/8-16 x 3 Hex Bolt	1
	F047	3/8-16 x 4-1/2 Hex Bolt	1
	F054	AN960616 Washer	3
	F061	1/4 Internal Star Lock Washer	1
	F067	3/16 x 3/16 x 1 Key	2
	F069	3/32 x 1/2 Cotter Pin	3
	F070	1-3/4 Internal Snap Ring	1
	F090	1/4-20 x 2-1/2 Hex Bolt	1
	F116	1/4-20 x 1-1/4 Hex Bolt	1
	F121	5/16-18 x 3/8 x 1 SHL Bolt	1
	F131	5/16-18 x 1/2 Hex Bolt	2
	F132	1/4-20 x 2-3/4 Hex Bolt	1
	F168	5/16 Split Lock Washer	10
	F178	1/4 x 1 Fender Washer	1
	F182	1/4 x 5/8 x 1/8 Washer	2
	F226	5/16-18 x 7/8 Hex Bolt	14
	F241	.375 x .875 x .10 Washer	1
	F255	5/16-18 x 1-1/2 Hex Bolt	2
	F261	AN960616L Washer	1
	F336	3/8-16 Jam Nut	1
	F353	3/8-16 ESNA LP Nut	1
	F718	5/16-18 x 5/16 Set Screw (Knurl Point)	4

* Service Part Only

MAIN COMPONENT POWER TRANSMISSION (GHS MODELS)

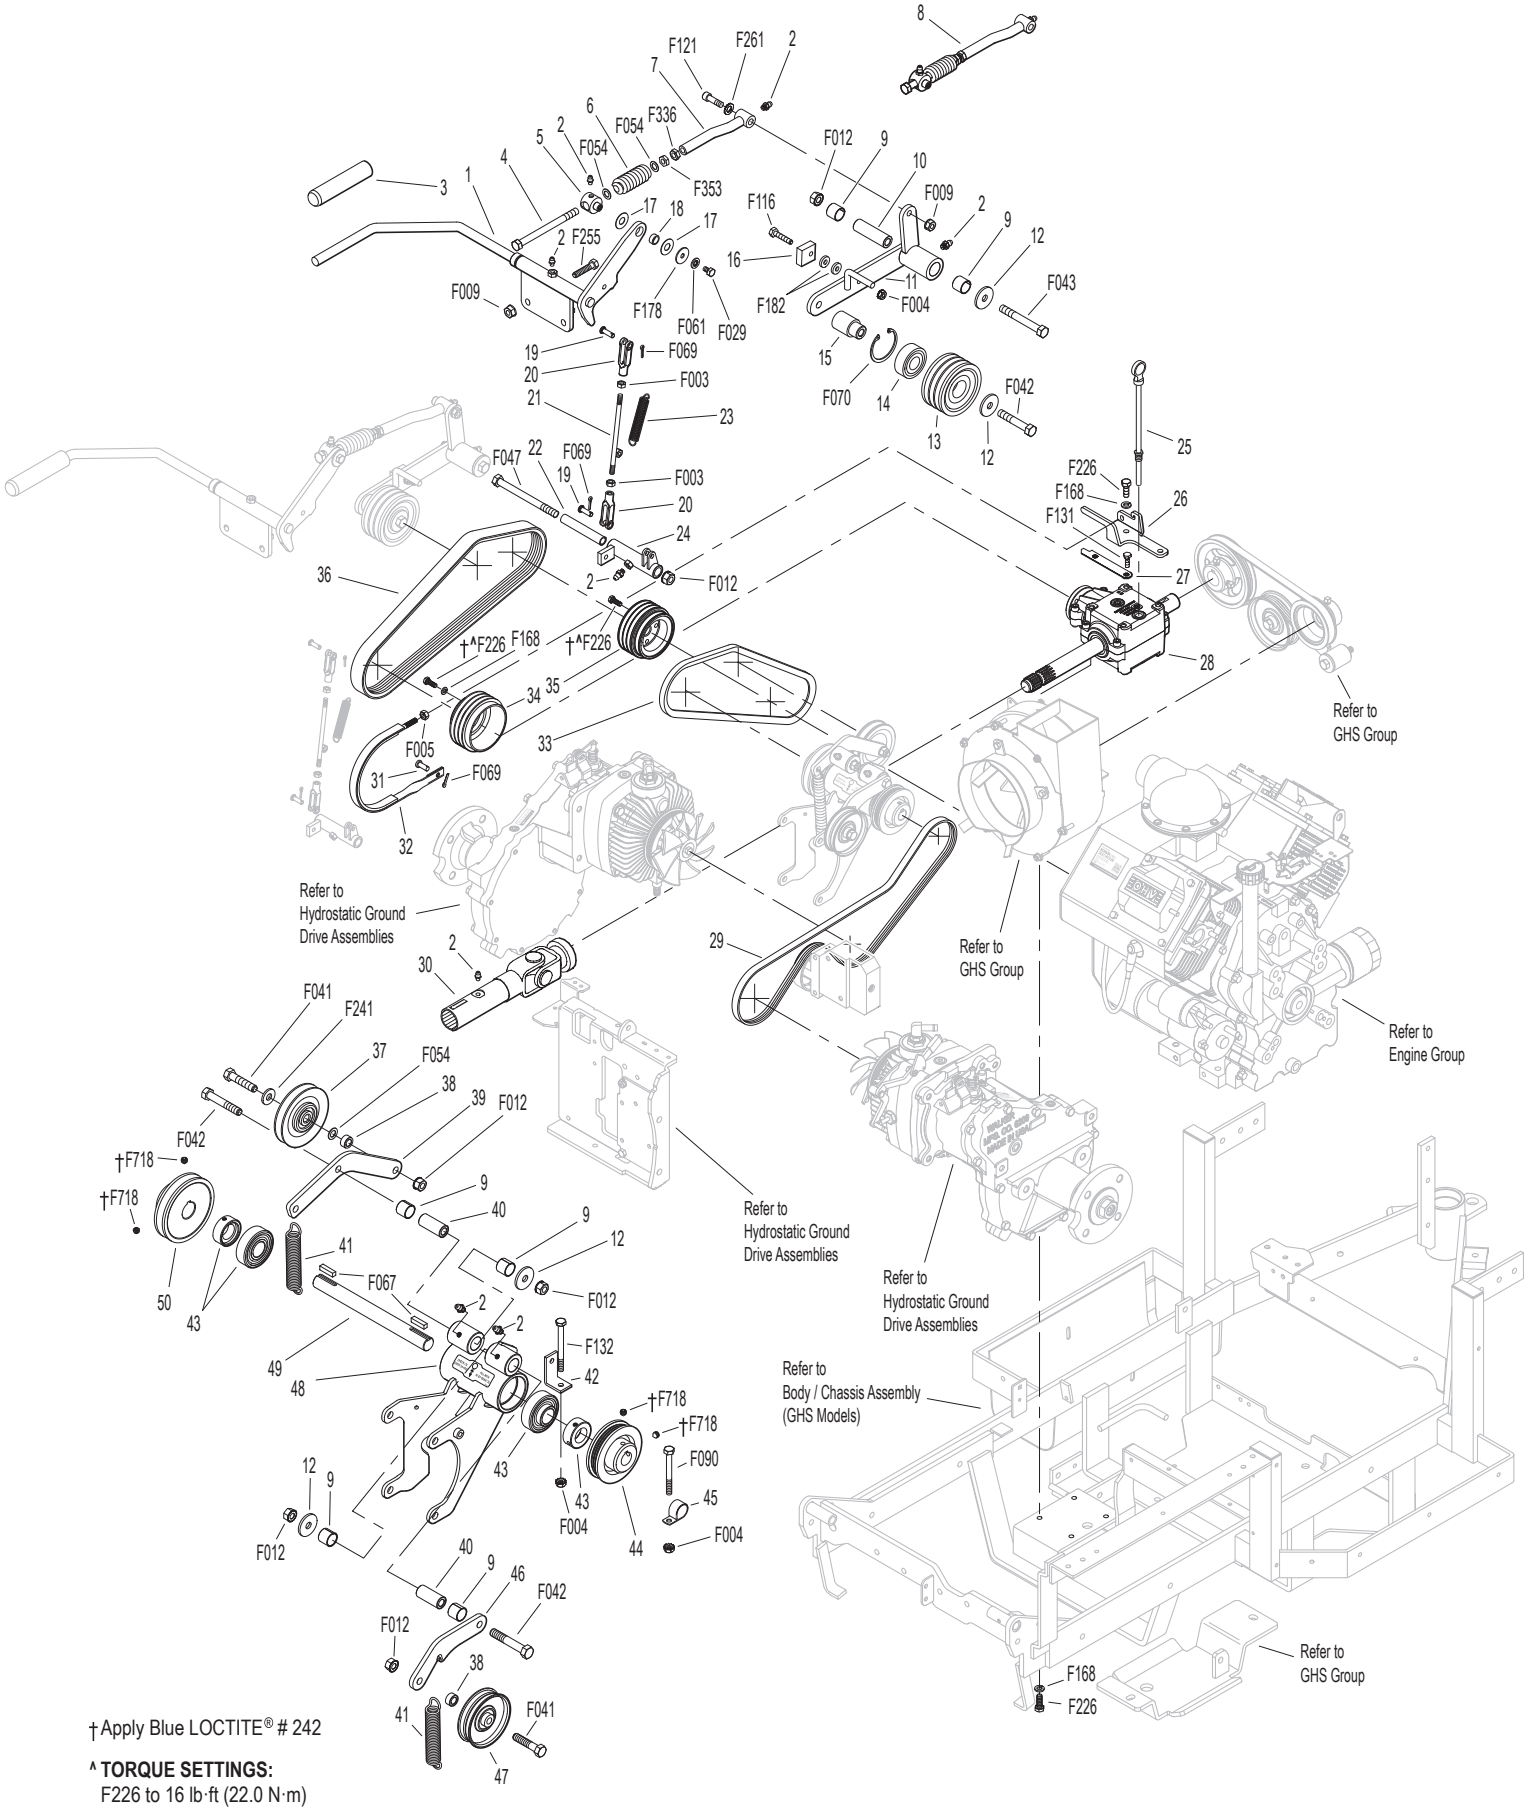


MAIN COMPONENT POWER TRANSMISSION (NON-COLLECTION MODELS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Clutch Lever Assembly			
1	8358-3	Clutch Lever (Includes Items # 2 & 3)	1
2	5830	Grease Fitting	8
3	4850	Handle Grip, Black	1
4	7303-10	Clutch Actuator Bolt (3/8)	1
5	7380-5	Knuckle Joint (3/8 ID)	1
6	7226-10	Compression Spring (3/4 x 2-1/2)	1
7	8130-5	Pushrod, Clutch Actuator (Threaded Tube) (Includes Item # 2)	1
8	8130-10	Clutch Actuator Rod Assembly (Includes Items # 2, 4-7, F054, F336 & F353)	1
9	7201-3	Fiberglide Bearing	6
10	7201-5	Inner Race (2-1/4)	1
11	8368	PTO Belt Tightener	1
12	5841	Retainer Washer (3/8 x 1-1/4)	4
13	8243-1	Clutch Idler Pulley	1
	8243	Clutch Idler Pulley Assembly (Includes Items # 13-15 & F070)	*
14	5265	Bearing (3/4)	1
15	8243-3	Hub, Idler Pulley	1
16	8375	PTO Belt Tightener Stop	1
17	7377	Plastic Washer (1 x .438 x .025)	2
18	7378	Pivot Bearing (7/16 x 9/16)	1
19	5281-5	Clevis Pin (1/4 x 0.80)	2
20	5280	Clevis (1/4)	2
21	8305	Brake Actuator Rod	1
22	8370	Bearing, Brake Actuator	1
23	8250	Brake Spring (1/2 x 2-1/2)	1
24	8369	Brake Actuator (Includes Items # 2 & 22)	1
PTO Drive Shaft Assembly			
25	7050-1	Dipstick, Gearbox	1
26	8371-1	Mount Bracket, Brake Band	1
27	8377	Brake Band Guide	1
28	8050-11	PTO Gearbox / Flange Pulley	1
29	7248	Ground Drive Belt, Micro-V	1
30	7275-16	Universal Joint Tube Assembly / Spine	1
31	7523-2	Clevis Pin W/Hole (1/4 x 5/8)	1
32	8304	Brake Band (14-1/2)	1
33	6250-1	Drive Belt (3VX365)	1
34	7236-1	PTO Drive Pulley (4-1/2/3V) (Includes Items # F168 & F226)	1
35	8237-3	Engine Pulley (4/3.8/3V) (Includes Item # F226)	1
36	8230	Engine PTO Belt	1
Jackshaft Assembly			
37	7245-1	Idler Pulley (3/8 Groove)	1
38	6325-2	Spacer Bushing (5/16)	2
39	8349-4	Idler Arm	1
40	7201-4	Inner Race (1-1/2)	2
41	5221-1	Extension Spring (3/4 x 5)	2
42	8539	Starter Relay Mount	1
43	5268	Bearing W/Collar (3/4)	2
44	7241-2	Transmission Drive Pulley (3-1/4MV) (Includes Items # F067 & F718)	1
45	7833	Cable Clamp (7/8 x 1/4)	1
46	7394-6	Idler Pulley Spring Mount	1
47	8349	Transmission Belt Tightener Arm	1
48	5245	Idler Pulley (3")	1
49	8394-6	Hydro Jackshaft Mount Assembly (Includes Items # 2, 9, 12, 40, 43, 50, F012, F042, F067 & F718)	1
50	8273-1	Jackshaft (3/4 x 8-1/8)	1
51	7240-7	Jackshaft Drive Pulley (3.0/3V) (Includes Items # F067 & F718)	1
Fasteners			
	F003	1/4-28 Hex Nut	2
	F004	1/4-20 Keps Nut	3
	F005	1/4-20 ESNA Nut	1
	F009	5/16-18 Whiz Locknut	3
	F012	3/8-16 Keps Nut	6
	F029	1/4-20 x 1/2 Hex Bolt	1
	F041	3/8-16 x 1-3/4 Hex Bolt	2
	F042	3/8-16 x 2-1/4 Hex Bolt	3
	F043	3/8-16 x 3 Hex Bolt	1
	F047	3/8-16 x 4-1/2 Hex Bolt	1
	F054	AN960616 Washer	3
	F061	1/4 Internal Star Lock Washer	1
	F067	3/16 x 3/16 x 1 Key	2
	F069	3/32 x 1/2 Cotter Pin	3
	F070	1-3/4 Internal Snap Ring	1
	F090	1/4-20 x 2-1/2 Hex Bolt	2
	F116	1/4-20 x 1-1/4 Hex Bolt	1
	F121	5/16-18 x 3/8 x 1 SHL Bolt	1
	F131	5/16-18 x 1/2 Hex Bolt	2
	F168	5/16 Split Lock Washer	10
	F178	1/4 x 1 Fender Washer	1
	F182	1/4 x 5/8 x 1/8 Washer	2
	F226	5/16-18 x 7/8 Hex Bolt	14
	F241	.375 x .875 x .10 Washer	1
	F255	5/16-18 x 1-1/2 Hex Bolt	2
	F261	AN960616L Washer	1
	F336	3/8-16 Jam Nut	1
	F353	3/8-16 ESNA LP Nut	1
	F718	5/16-18 x 5/16 Set Screw (Knurl Point)	4

* Service Part Only

MAIN COMPONENT POWER TRANSMISSION (NON-COLLECTION MODELS)

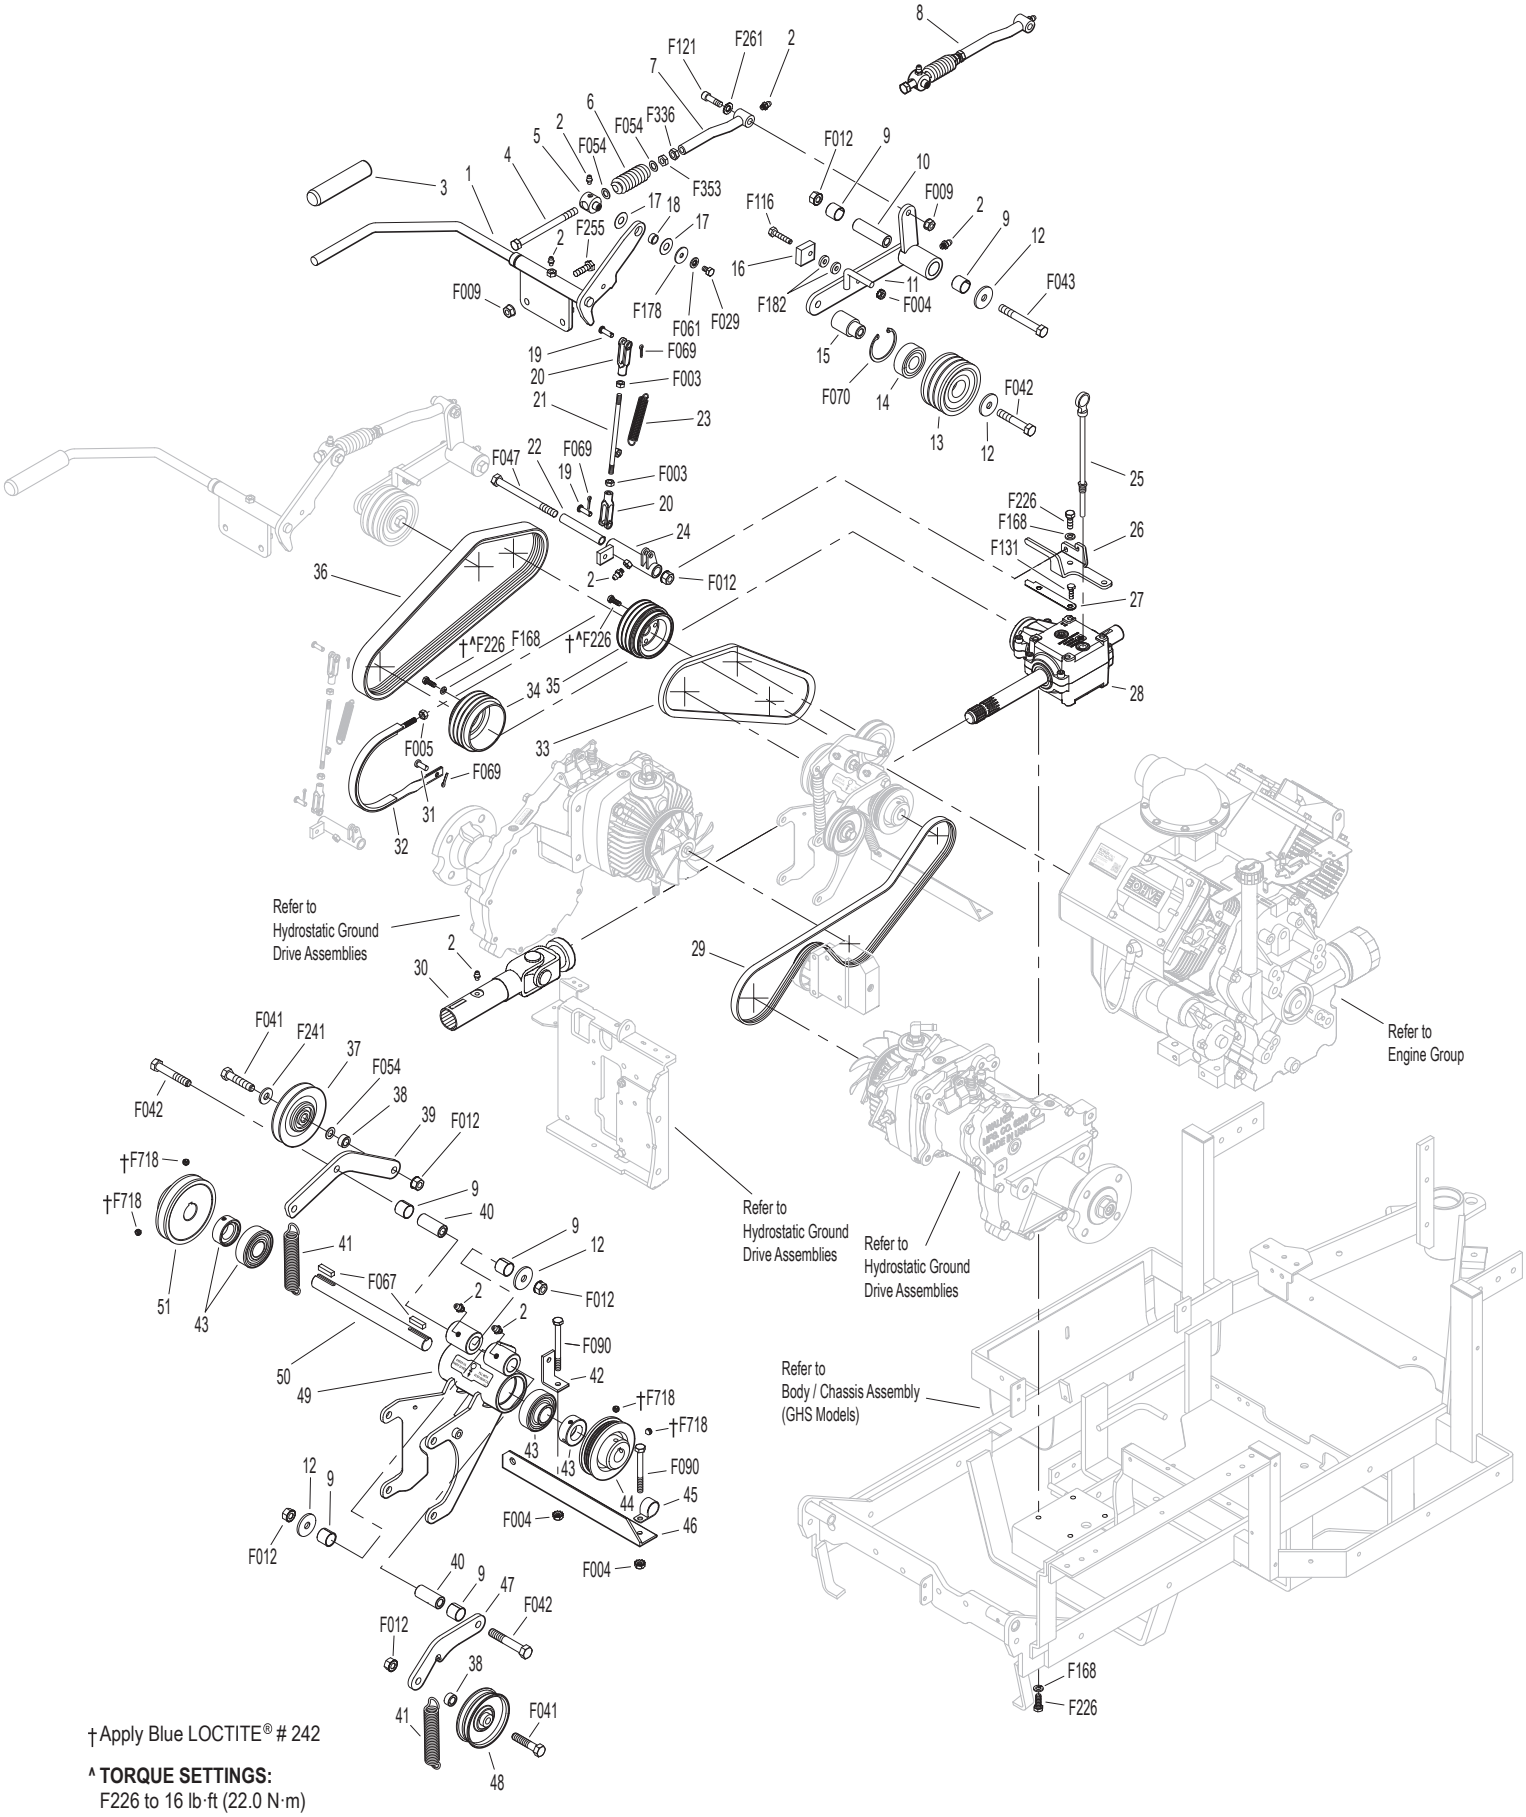

ENGINE GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Precleaner Assembly			
1	7026-3	Remote Precleaner (Includes Item # 5)	1
2	7440	Shock Mount (1 x 3/4)	3
3	7028-20	Rear Precleaner Mount	1
4	7032	Elbow, Precleaner	1
5	7840-5	Hose Clamp (1.56 - 2.50)	5
6	5091-18	Air Flow Indicator (Vacuum 15" H2O)	1
7	5088-12	Air Cleaner Assembly (Includes Items # 6, 9-13 & 17)	*
8	5088-3	Air Cleaner Band	1
9	5090-3	Safety Filter Insert	1
10	5090-1	Air Cleaner Cartridge	1
11	5088-5	Air Cleaner Draw Latch	2
12	5088-11	Air Cleaner Cap (Includes Item # 11)	1
13	5090-2	Vacuator Valve	1
14	8026-10	Air Hose, Cleaner	1
15	7031-3	Tube Support Arm	1
16	7028-6	Precleaner Tube (1-3/4)	1
17	5091-4	Indicator Nipple	1
Engine Assembly			
18	NS	Fuel Pump (Rehlko/Kohler)	1
19	5879-3	Hose Clamp (1/2)	4
20	NS	Fuel Line, Engine (Rehlko/Kohler)	*
21	5020	Fuel Filter	*
22	NS	Rectifier	*
23	8016-4	Regulator Mount	1
24	NS	Oil Filter	1***
25	NS	23 HP Engine (Rehlko/Kolher)	1
26	5845	Rubber Bumper (1.50 x 1.25)	1
27	8010-2	Engine Bumper Mount	1
28	5832	Cable Clamp (1/2)	3
Fuel Tank Assembly			
29	M246	Fuel Line, Tank (1/4 x 20-1/2")	1**
30	5083-1	Bushing, Rubber	1
31	M113	Fuel Line (3/16 x 28")	1**
32	5086-7	Hose (1/4 x 6)	1
33	8023	Fuel Tank Support	1
34	5020-2	Fuel Filter, In Tank	1
35	8055-1	Fuel Tank, 4.7 Gallon, Gas (Black) (Includes Items # 30, 32, 34 & 37-40)	1
36	5082-4	2-1/4 Ratchet Fuel Cap	*
37	8055-2	Fuel Tank Gauge	1
38	5977-7	Roll Over Grommet (.900 x 1-1/2)	1
39	8043-8	Roll Over Valve	1
40	5083-8	Tank Tube (13")	1
Exhaust Assembly			
41	8530-21	Grass Shield	1
42	7307-9	Pull Through Bumper	2
43	NS	Gasket (Rehlko/Kohler)	2Δ
44	NS	Nut (Rehlko/Kohler)	4Δ
45	8013-9	Muffler	1
46	8013-44	Upright Support	1
47	8013-47	Heat Shield, Muffler	1
48	8013-46	Muffler Heat Shield Endcap	1
49	8013-18	Muffler Brace	1
50	8021-2	Engine Brace, Chassis	1
51	8021-1	Engine Brace	1
Fasteners			
	F004	1/4-20 Keps Nut	2
	F009	5/16-18 Whiz Locknut	13
	F012	3/8-16 Keps Nut	2
	F029	1/4-20 x 1/2 Hex Bolt	4
	F031	1/4-20 x 5/8 Hex Bolt	2
	F034	5/16-18 x 3/4 Hex Bolt	2
	F038	3/8-16 x 1 Hex Bolt	3
	F049	5/16 SAE Washer	3
	F050	1/4 SAE Washer	2
	F053	7/16 Int. Star Lock Washer	2
	F061	1/4 Internal Star Lock Washer	4
	F079	A/A66D Aluminum Pop Rivet	2
	F091	5/16-18 x 5/8 Hex Bolt	2
	F128	10-24 x 3/8 PTHMS	3
	F129	10-24 x 1/2 PTHMS	4
	F140	7/16-14 x 1 Hex Bolt	2
	F175	1/2 Split Lock Washer	4
	F198	.250 x .625 x .040 Washer, SS	2
	F235	5/16-18 x 2-1/2 Hex Bolt	1
	F255	5/16-18 x 1-1/2 Hex Bolt	2
	F256	7/16 SAE Washer	2
	F273	M6 x 1.0 Nut	4
	F285	1/2-13 x 1-1/2 Hex Bolt	4
	F438	5/16-18 x 2-3/4 Hex Bolt	1
	F442	1/4-20 x 5/8 PTHMS	4
	F547	M6 x 1.0 x 45 Stud	2
	F551	5/16-18 Flange Top Lock Nut	2
	F568	10-24 Flange Top Lock Nut	7
	F569	1/4-20 Flange Top Lock Nut	4
	F570	3/8-16 Flange Top Lock Nut	1
	F646	3/8-16 x 3/4 Serrated Hex Bolt	2

* Service Part Only


** **Required hose specifications:**
M113 - 3/16" ID fuel/oil/vapor hose
M246 - 1/4" ID low permeation fuel hose

*** Refer to the Operator's Manual for recommended part number.

Δ Use the engine model and spec number from Rehlko/Kohler to order this item.

NOTE: Refer to Rehlko/Kohler Engine Decal (NS) for Engine Identification Number.

ENGINE GROUP

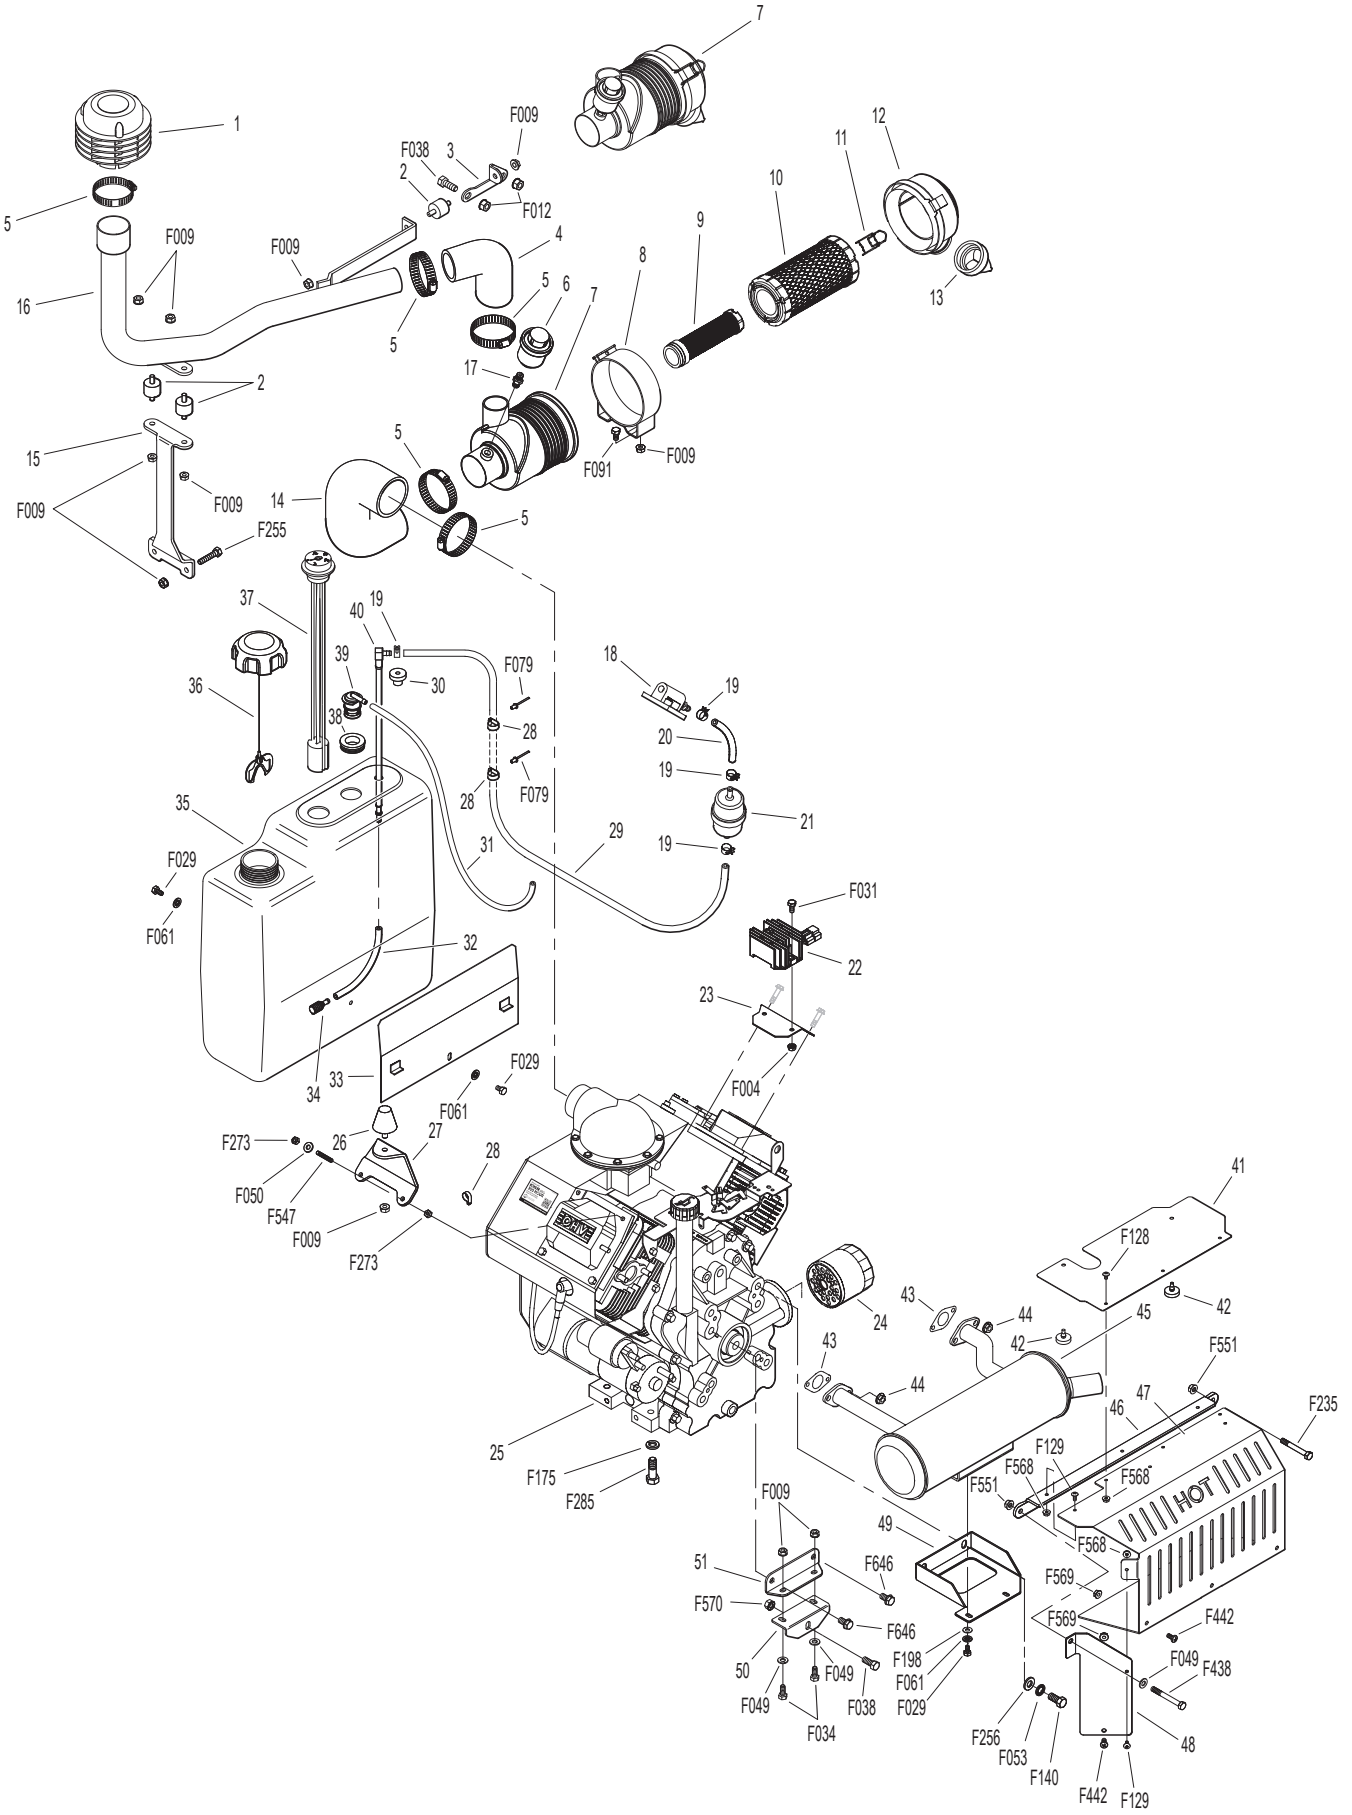

HYDROSTATIC GROUND DRIVE ASSEMBLIES


ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
TOPS™ Components			
1	5024-22	3/8 Hose Barb x #6/ORB 90 Degree	2
2	5879-11	Hose Clamp (16mm)	6
3	M358	High Temp Hose (3/8" x 8-1/4")	1
4	5024-30	Pulley	1
5	5025-56	Input Housing Assembly (Includes Items # 6, F101, F182, F398, F569, F659 & F669)	1
6	5024-17	O-Ring 1/16"	1
7	5025-51	Hydro Pump Assembly (Includes Items # 4, 5, 8, 21, F101, F182, F659 & F669)	1
8	5024-15	1/4-18 Pipe Thread, 3/8 Barb Fitting	2
9	M358	High Temp Hose (3/8" x 8-3/4")	1
10	5024-13	Transmission Oil Filter	1
11	5975-3	Cable Tie (50# x 7")	1
12	6206-1	Air Vent Valve	3
13	5024-27	1-1/16"-12 Socket Plug Reservoir Cap	1
14	5024-25	Oil Reservoir Sight Gauge	1
15	5024-9	90 Degree Fitting W/Filter	1
16	5025-46	Oil Tank Reservoir Assembly (Includes Items # 8, 12-15 & 17-18)	1
17	7427-12	Brass Pipe Plug (1/4 NPTF)	1
18	5024-23	90 Degree Male Fitting, 3/8 Barb 1/4 Thread	1
19	M358	High Temp Hose (3/8" x 6-1/2")	1
20	5024-11	Left Hand Hose (7-3/8")	1
21	5024-10	Elbow, 90 Degree (1/2-20 x 9/16-18)	4
22	5022	Reservoir/Casting Gasket	2
23	5024-7	Transmission Reservoir Adapter Fitting	2
24	5024-12	Right Hand Hose (9-3/8")	1
Ground Drive Assemblies			
25	6209-11	Bridge Spacer Plate	1
26	6209-8	Bridge Assembly (Includes Items # 25, F004, F032 & F120)	1***
27	6243-6	Fan Guard	1
28	6243-1	Hydro Fan, CW	1
29	7244	Hydro Pulley (3-7/8/MV) (Includes Items # F064 & F718)	2
30	5026-34	Hydrostatic Drive, CW	1
31	6200-9	Gear Axle Drive Assembly (Includes Items # 10 & 30)	2
32	6207-12	Pipe Plug (1/4 NPTF)	4
33	5126	Cable Retainer (Uses existing bolt on Gear Axle Drive Assembly)	1
34	6233-1	Pinion Gear	2
35	6234	Spacer, Pinion Gear	2
36	6201	O-Ring Seal	2
37	5025-34	Hydrostatic Drive, CCW	1
38	6243-2	Hydro Fan, CCW	1
Transmission Lockout Assembly			
39	5028-3	Transmission Lockout Assembly (Includes Items # 40-43, F023, F027 & F081)	*
40	5847	Plastic Tip	2
41	5057	Lockout Cam (Includes Item # F081)	2
42	5028-5	Lockout Lever	2
43	5027-5	Lockout Mount	1**
Deck Support Arm Assemblies			
44	6430-10	Outboard Mount, LH	1
45	6431-1	Deck Support Arm, LH (Includes Item # 49)	1
46	5775-2	Hitch Pin (# 6)	2
47	6431-2	Deck Support Arm, RH (Includes Item # 49)	1
48	6430-9	Outboard Mount, RH	1
49	5830	Grease Fitting	2
50	6840-1	Support Arm Bushing (2-1/16)	2
Transmission Repair Parts			
51	5025-16	Control Shaft Repair Kit	*
52	5025-13	Hydro Input Shaft / Repair Kit (Includes Items # 53-55)	*
53	5025-8	Bearing, Input Shaft	*
54	5025-7	Snap Ring	*
55	NS	Seal, Input Shaft	*
56	5025-53	O-Ring & Plug	*
Fasteners			
	F004	1/4-20 Keps Nut	2
	F012	3/8-16 Keps Nut	2
	F023	10-24 ESNA Nut	2
	F027	10-24 x 5/8 PPHMS	2
	F029	1/4-20 x 1/2 Hex Bolt	3
	F032	1/4-20 x 3/4 Hex Bolt	3
	F040	3/8-16 x 1-1/2 Hex Bolt	4
	F043	3/8-16 x 3 Hex Bolt	6
	F053	7/16 Internal Star Lock Washer	4
	F063	3/8 Internal Star Lock Washer	17
	F064	1/8 x 1/2 Woodruff Key (#3)	4
	F081	A/A45D Aluminum Pop Rivet	2
	F101	10-24 x 1-1/4 SHC Screw	4
	F120	AN960416 Washer	2
	F160	External Snap Ring (.669 Shaft)	2
	F178	1/4 x 1 Fender Washer	2
	F182	1/4 x 5/8 x 1/8 Washer	1
	F194	7/16 x 1-1/4 x 1/8 Washer	2
	F200	7/16-20 x 3 Grade 8 Bolt	2
	F211	1/4-20 x 7/8 Hex Bolt	2
	F244	7/16-20 x 3/4 Hex Bolt	2
	F262	3/8-16 x 4 Hex Bolt All Thread	2
	F398	1/4-20 x 2 Hex Bolt	4
	F569	1/4-20 Flange Top Lock Nut	7
	F579	3/8-16 x 1 Hex Bolt Grade 8	4
	F659	1/8 x 1/8 x 3/4 Key	1
	F669	1/4-20 x 5/8 Hex Bolt W/Loctite	1
	F718	5/16-18 x 5/16 Set Screw (Knurl Point)	4

* Service Part Only

** Part not used on Jackshaft side of tractor.

*** Includes Spacer Options—See Advisory Bulletin #23300.

HYDROSTATIC GROUND DRIVE ASSEMBLIES

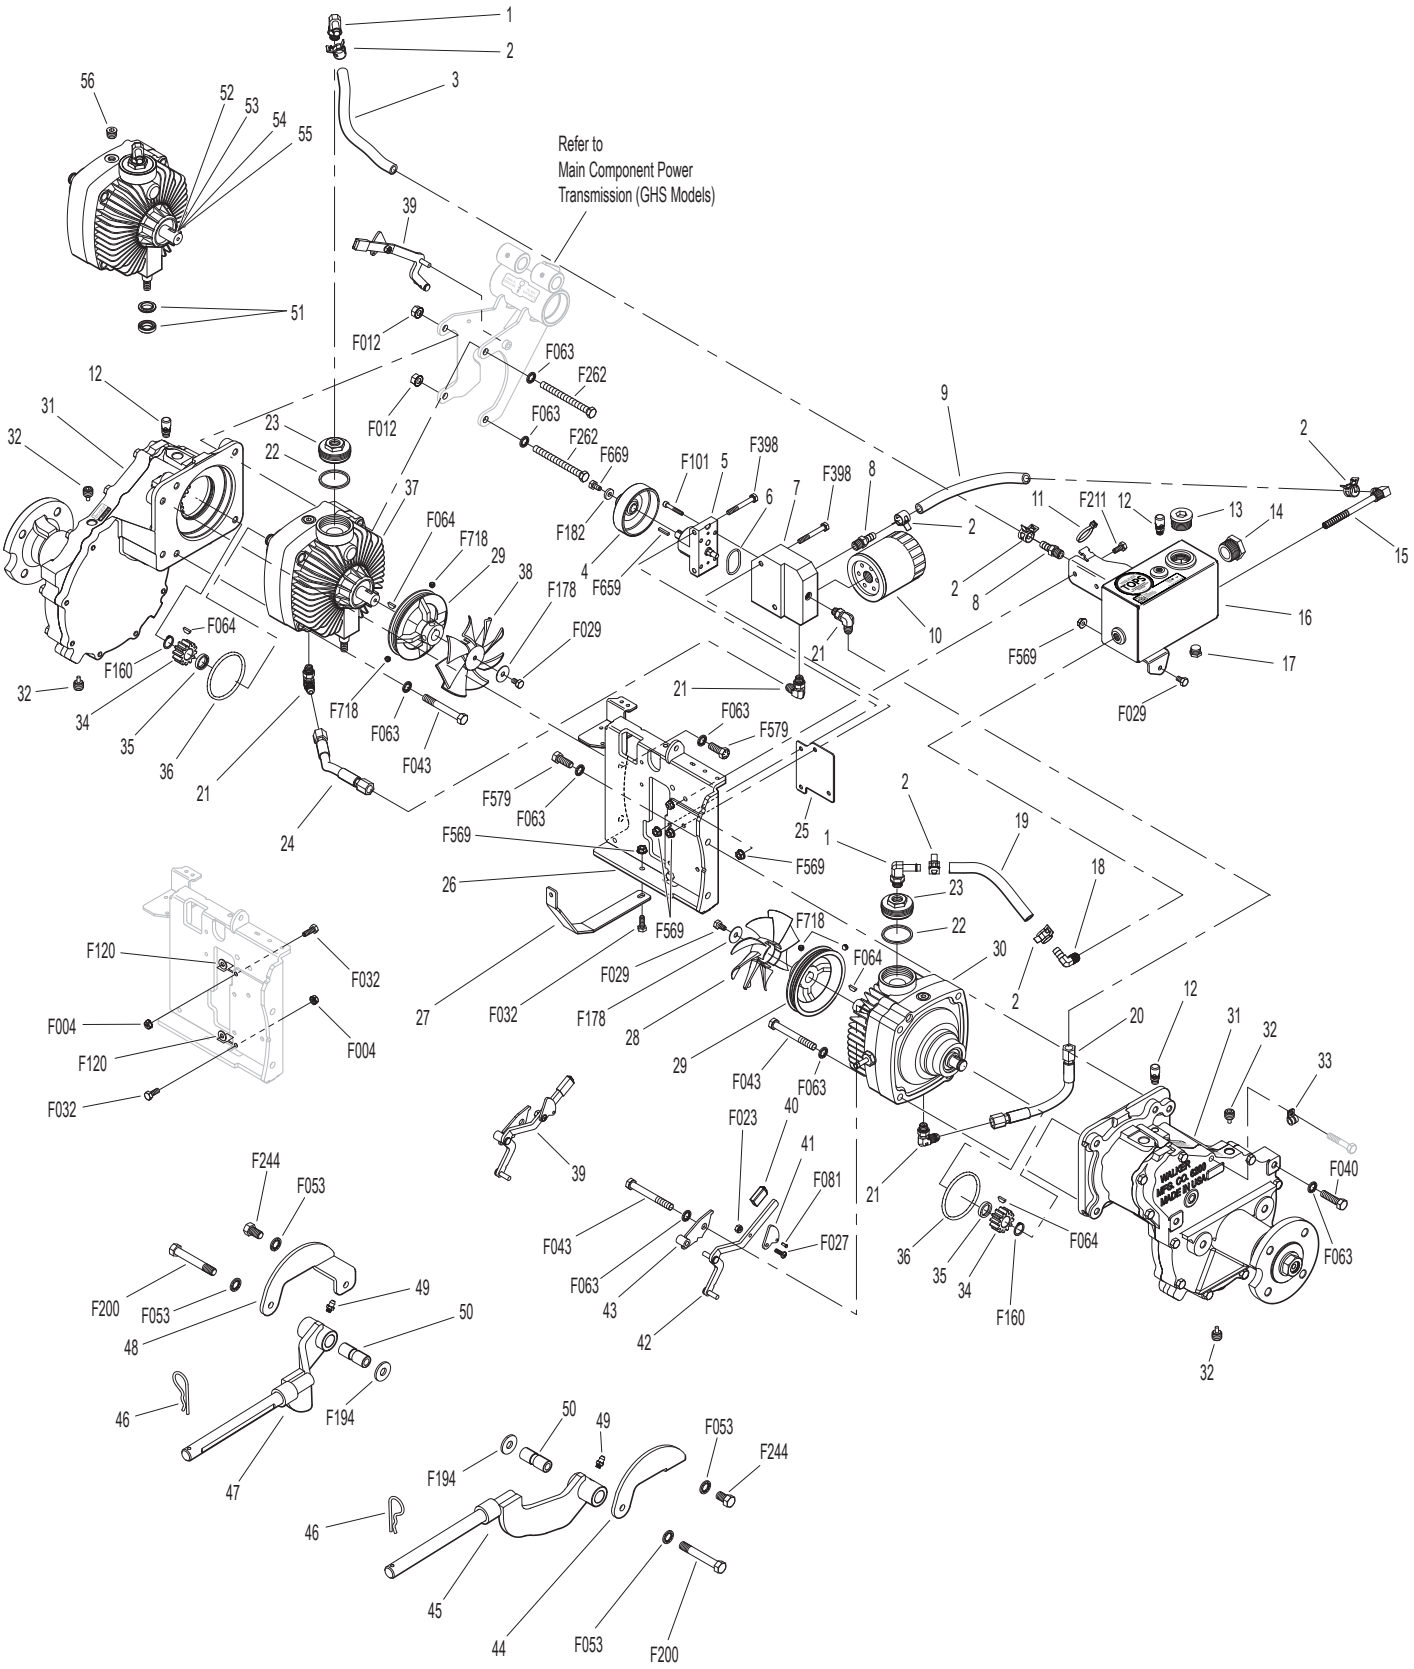


STEERING CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Transmission Spring Assemblies			
1	6201-4	Shock Mount Gear Drive, RH	1
2	5146	10mm Ball Stud	4
3	5199-4	Steering Lever Dampener Assembly	2
4	6201-5	Shock Mount Gear Drive, LH	1
5	5214-2	Ball Joint (5/16-24) Nylon Lined	2
6	6212-7	Transmission Control Arm, LH	1
7	5213-3	Control Rod (6")	1
8	5665-1	Compression Spring (2-1/2)	2
9	7201-2	Fiberglide Bearing 1/2"	2
10	5463-5	Steering Arm Pivot Bushing (SS)	2
11	5463-7	Steering Lever Actuator	2
12	5213-4	Control Rod (14-3/4")	1
13	5212-7	Transmission Control Arm, RH	1
Forward Speed Control Assemblies			
14	5850-2	Handle Grip, Foam (5-1/2)	3
15	7170-2	FSC Lever Assembly (Includes Item # 16)	1
16	5830	Grease Fitting	6
17	5975-3	Cable Tie (50# x 7")	1
18	5214-4	Ball Joint (5/16-24) W/O Stud	2
19	5219	Extension Spring (3/4 x 6-3/4)	1
20	5172	Bearing, Delrin (.250 x .375 x .250)	2
21	5141-6	FSC Actuator Block	1
22	5140-9	FSC Brace	1
23	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	2
24	5142-8	FSC Key	1
	5140-25	FSC Control Assembly (Includes Items # 16, 23-25, 28, F182, F192 & F193)	*
25	5140-35	FSC Friction Body (Includes Item # 16)	1
26	5141-7	FSC Actuator Rod	1
27	5281-5	Clevis Pin (1/4 x 0.80)	1
28	5142-9	FSC Actuator Cam	1
29	5141-3	Spacer (.750 x .313 x .688)	1
30	5141-4	FSC Rod	1
31	5470-2	Speed Control Stop	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Steering Lever Assemblies			
32	5217-1	Pivot Pin, Steering Lever	1
33	5391-3	Steering Lever Support	1
34	5225-4	Extension Spring (5/8 x 2)	2
35	5451-12	Steering Lever Assembly, LH / Adjustable (Includes Items # 2, 9-11, 16, 34, F009, F034 & F582)	1
36	5453-14	Steering Lever Handle, Adjustable (Includes Items # 14, F050, F188 & F390)	2
37	5450-12	Steering Lever Assembly, RH / Adjustable (Includes Items # 2, 9-11, 16, 34, F009, F034 & F582)	1
Fasteners			
	F004	1/4-20 Keps Nut	5
	F007	5/16-18 Jam Nut	2
	F009	5/16-18 Whiz Locknut	7
	F010	5/16-24 ESNA Nut	4
	F012	3/8-16 Keps Nut	2
	F024	5/16-24 Jam Nut	4
	F029	1/4-20 x 1/2 Hex Bolt	2
	F031	1/4-20 x 5/8 Hex Bolt	1
	F032	1/4-20 x 3/4 Hex Bolt	2
	F034	5/16-18 x 3/4 Hex Bolt	4
	F038	3/8-16 x 1 Hex Bolt	2
	F050	1/4 SAE Washer	5
	F051	3/8 SAE Washer	2
	F064	1/8 x 1/2 Woodruff Key (#3)	2
	F069	3/32 x 1/2 Cotter Pin	1
	F182	1/4 x 5/8 x 1/8 Washer	1
	F183	.312 x .700 x .074 Washer	3
	F186	5/64 x 1/2 Cotter Pin	1
	F188	1/4-20 Self-Locking Nut	4
	F192	3/8-24 Self-Locking Nut	1
	F193	3/8 Belleville Spring Washer	3
	F226	5/16-18 x 7/8 Hex Bolt	1
	F316	5/16-18 x 1-3/4 Hex Bolt	1
	F353	3/8-16 ESNA LP Nut	2
	F390	1/4-20 x 7/8 Carriage Bolt	4
	F401	.504 x .751 x .030 Washer	1
	F562	5/16-18 x 1 Set Screw	2
	F582	Washer 5/16 x 7/8 x .125	2
	F746	5/16-24 LP Nylock Nut	1
	F747	5/16-24 Hex Nut 7/16 Wide	1

* Service Part Only

STEERING CONTROL ASSEMBLIES

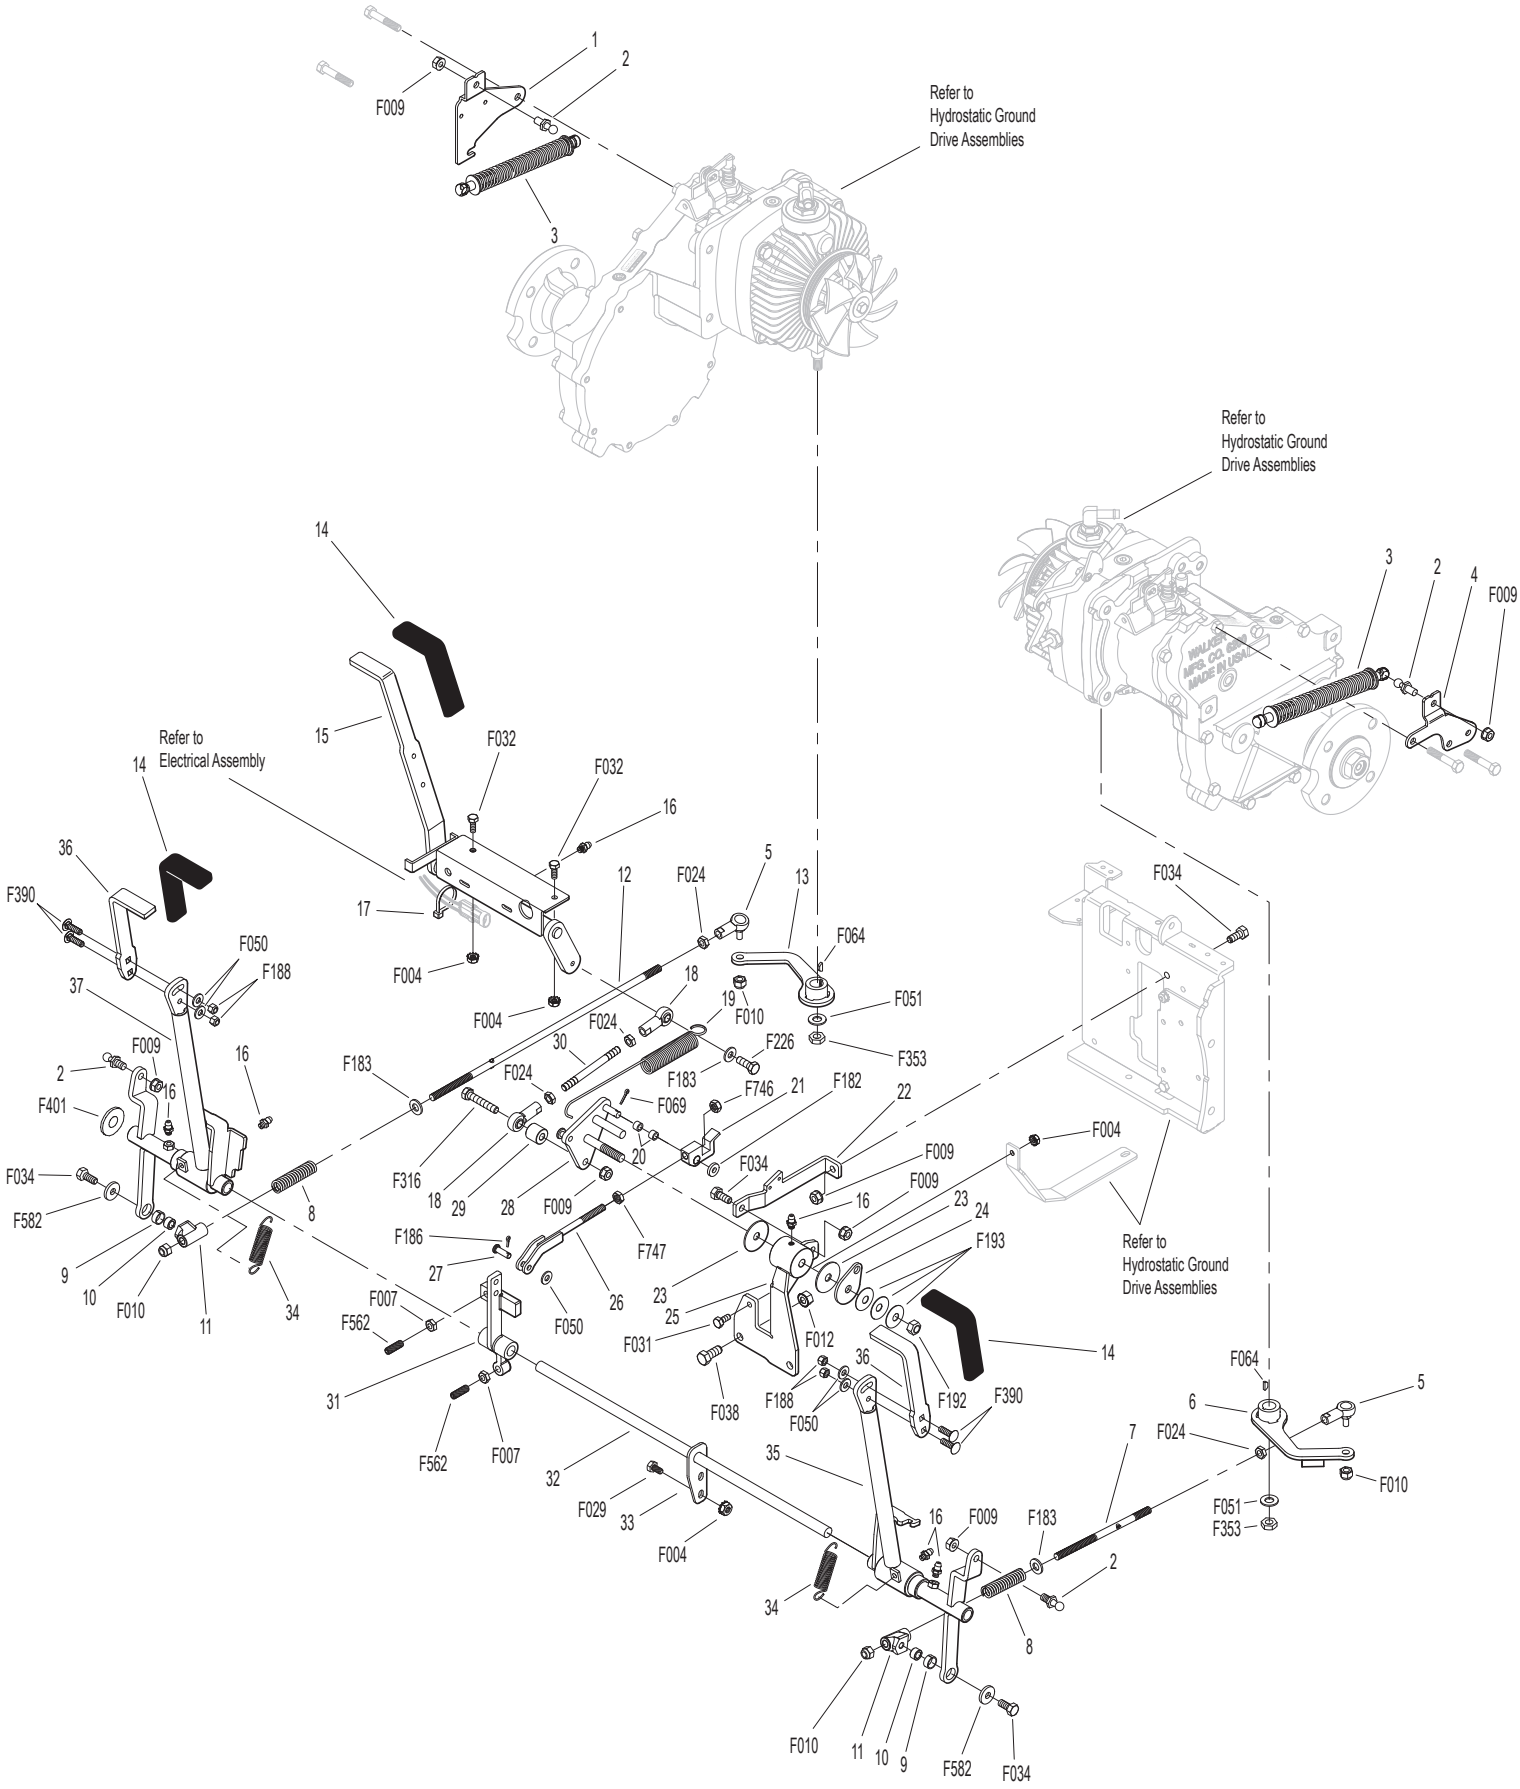


THROTTLE & CHOKE CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Throttle & Choke Control Assemblies			
1	5108-6	Choke Control Knob, Black	1
2	5108-40	Control Lever, Choke	1
3	5108-10	Friction Washer (.125)	4
4	8123	Insulating Sleeve (3/8 x 6)	1
5	5108-44	Choke Control Lever Kit (Includes Items # 1-3, 10, 11, F002, F085, F202, F350, F638 & F642)	*
6	5975-1	Cable Tie (18# x 3-3/4")	2
7	8122-1	Choke Cable	1
8	8121-1	Throttle Cable	1
9	5108-43	Throttle Control Lever Kit (Includes Items # 3, 10-13, F002, F085, F202, F350, F638 & F642)	*
10	5172-6	Bushing, SS (.375 x .188 x .290)	2
11	5108-29	Control Bracket	2
12	5108-31	Control Lever, Throttle	1
13	5108-5	Throttle Control Knob, Red	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fasteners			
	F002	10-24 Keps Nut	2
	F085	3/16 Rivet Backup Washer	2
	F202	10-24 x 5/8 SHC Screw GR 5	2
	F350	1/4-20 LP Nylock	2
	F638	1/4-20 x 1 Carriage Bolt	2
	F642	1/4 x .042 Belleville Washer	2

* Service Part Only

THROTTLE & CHOKE CONTROL ASSEMBLIES

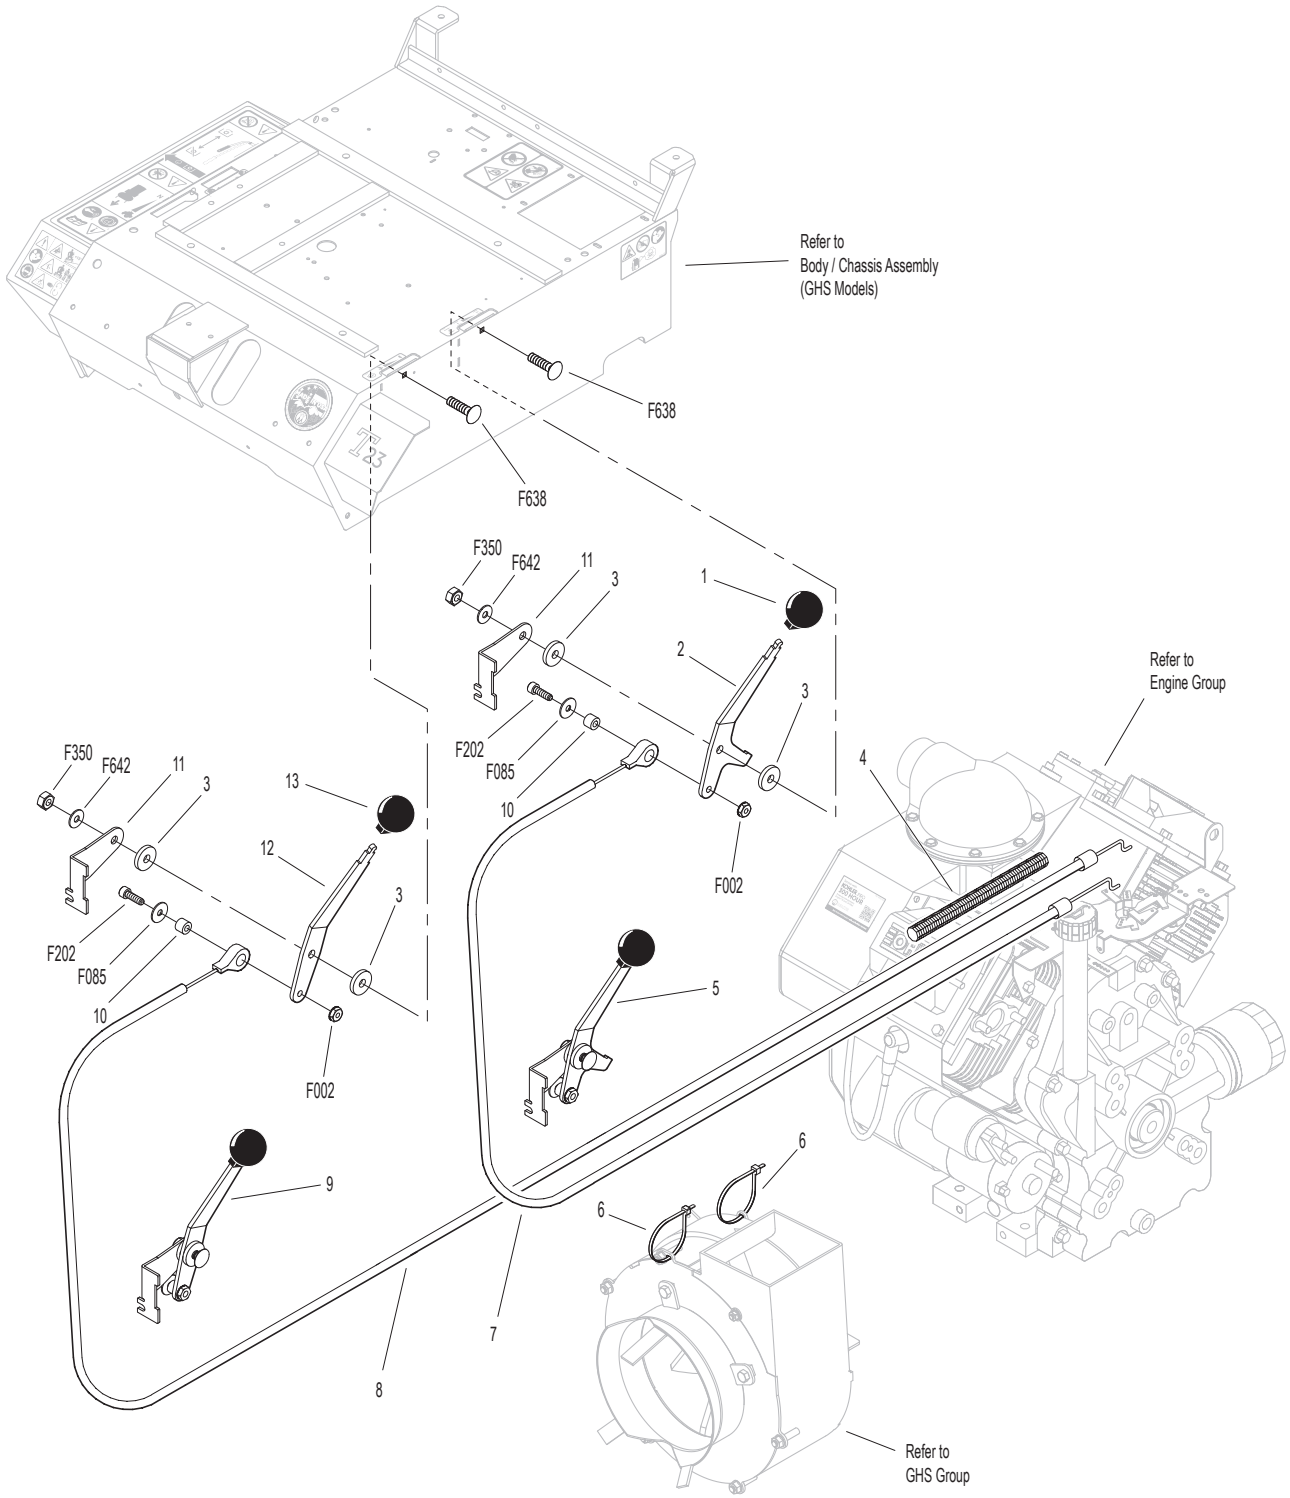


PARKING BRAKE ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Parking Brake Assembly			
1	7406-1	Handle Grip, Red	1
2	7406-9	Parking Brake Lever	1
3	7406-10	Lever Mount	1
4	5830	Grease Fitting	1
5	7407	Clevis Pin (3/16 x 1/2)	2
6	7404-6	Brake Actuator Arm	2
7	7405	Pin, Transmission Lock	2
8	7402	Clevis	2
9	7408	Compression Spring (1/2 x 3/4)	2
10	7415	Rubber Dust Shield (5/8 x 3/8 x 1/32)	2
11	5567-3	O-Ring (1/4 x 3/8)	4
12	7403	Plunger Bushing, Gear Axle	2
13	7404-7	Brake Actuator Mount	2
14	7412	Clevis Pin (3/16 x 5/8)	2
15	5833	Cable Clamp (1/4)	2
16	7410	Brake Control Cable, LH (25.5")	1
17	7409	Brake Control Cable, RH (20.5")	1
18	7401-3	Cable Mount Bracket	1
19	7401-1	Cable Pull Rod	1
20	5552	Ball Joint (1/4-28)	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fasteners			
	F002	10-24 Keps Nut	2
	F003	1/4-28 Hex Nut	1
	F004	1/4-20 Keps Nut	4
	F025	10-24 x 3/8 PPHMS	2
	F029	1/4-20 x 1/2 Hex Bolt	3
	F032	1/4-20 x 3/4 Hex Bolt	1
	F054	AN960616 Washer	2
	F072	1/4 "E" Retainer Ring	2
	F086	#10 SAE Washer	4
	F109	1/8 x 5/8 Roll Pin	2
	F111	1/8 x 3/4 Cotter Pin	1
	F112	5/8 x 1-1/4 x .03 Washer	2
	F127	1/16 x 1/2 Cotter Pin	4
	F261	AN960616L Washer	5
	F287	1/4-28 Keps Nut	1


PARKING BRAKE ASSEMBLY

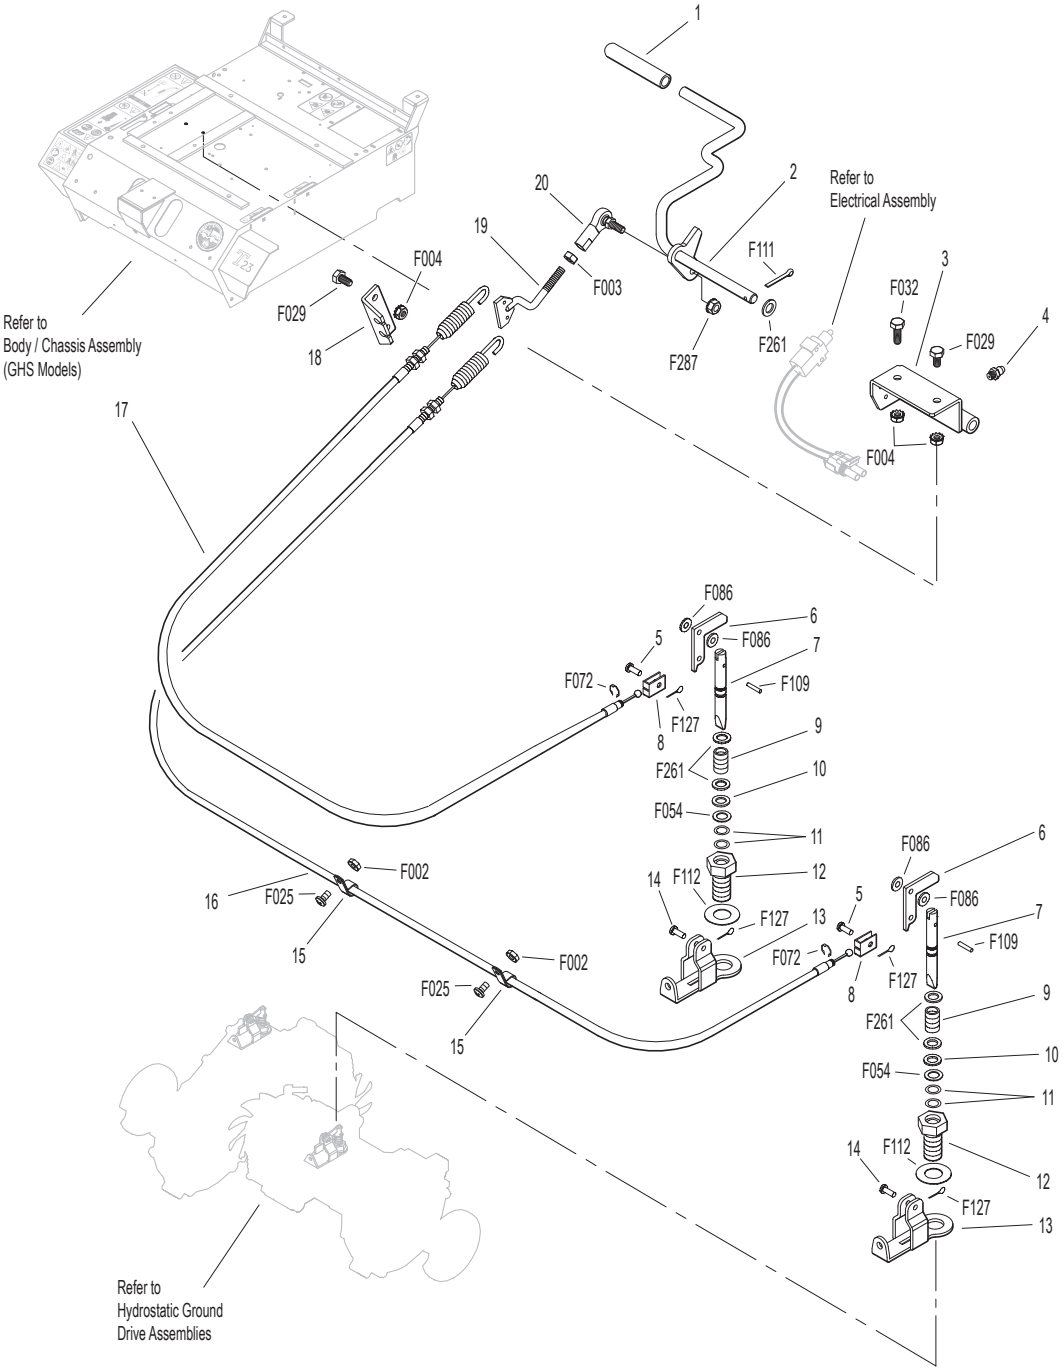

GHS GROUP

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Delivery Chute Assembly			
1	5515-4	Elbow Delivery Spout	1
2	5592-24	Backing Plate, Grass-Pak® Switch	1
3	5592-23	Grass-Pak® Housing Spacer	1
4	5578	Rear Clip, Chute Mount	1
5	5577	Side Clip, Chute Mount	2
6	8511-1	Delivery Chute W/Clips / 10.0 (Includes Items # 4, 5, 7, F362 & F411)	1
7	5578-10	Front Clip, Chute Mount	1
8	7530-4	Body Chute (10.5 Blower)	1
Blower Belt Tightener Assembly			
9	7238-6	Blower Drive Pulley (Includes Items # F075, F114 & F231)	1
10	7234-2	Blower Belt (Micro-V)	1
11	7239-1	Blower Pulley (Micro-V) (Includes Items # F067, F075 & F114)	1
12	7364-2	Torsion Spring	1
13	7201-3	Fiberglide Bearing	2
14	5830-3	Grease Fitting (45 Deg.)	1
15	7364-1	Blower Belt Tightener Arm	1
16	7201-4	Inner Race (1-1/2)	1
17	5841	Retainer Washer (3/8 x 1-1/4)	1
18	5245	Idler Pulley (3")	1
Blower Assembly			
19	7544	Blower Assembly (10.5") (Includes Items # 20-24, F004, F009, F029, F050, F131, F168 & F426)	1
20	5268	Bearing W/Collar (3/4)	2
21	7544-3	Blower Housing (10.5)	1
22	7545-2	Blower Output Shaft (10.5)	1
23	7545	Blower Wheel (10.5")	1
24	7543-1	Blower Faceplate (10.5)	1
25	7526	Intake Tube (10.5 Blower)	1
26	5595-2	Intake Cover / GHS	1
27	7528-5	Skid Bar	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fasteners			
	F002	10-24 Keps Nut	4
	F004	1/4-20 Keps Nut	3
	F009	5/16-18 Whiz Locknut	7
	F012	3/8-16 Keps Nut	1
	F023	10-24 ESNA Nut	2
	F029	1/4-20 x 1/2 Hex Bolt	3
	F034	5/16-18 x 3/4 Hex Bolt	1
	F039	3/8-16 x 1-1/4 Hex Bolt	1
	F040	3/8-16 x 1-1/2 Hex Bolt	1
	F050	1/4 SAE Washer	1
	F051	3/8 SAE Washer	1
	F054	AN960616 Washer	1
	F067	3/16 x 3/16 x 1 Key	1
	F075	5/16-18 x 1/2 SQH Set Screw	2
	F079	A/A66D Aluminum Pop Rivet	6
	F090	1/4-20 x 2-1/2 Hex Bolt	1
	F114	5/16-18 x 5/8 SQH Set Screw	2
	F128	10-24 x 3/8 PTHMS	4
	F131	5/16-18 x 1/2 Hex Bolt	3
	F132	1/4-20 x 2-3/4 Hex Bolt	1
	F168	5/16 Split Lock Washer	3
	F217	7/16-14 Hex Nut	1
	F218	7/16 Split Lock Washer	1
	F231	1/4 x 3/4 Woodruff Key (# 806)	1
	F281	7/16-14 x 1-3/4 Hex Bolt	1
	F362	A/A62D Alum. Pop Rivet (3/16D x 13/32L)	2
	F411	3/16 Bulbex Rivet	6
	F426	1/4-20 x 1/2 Carriage Bolt	1
	F570	3/8-16 Flange Top Lock Nut	2
	F577	10-24 x 5/8 Carriage Bolt	2
	F743	3/8-16 x 2-3/8 Hex Bolt	1

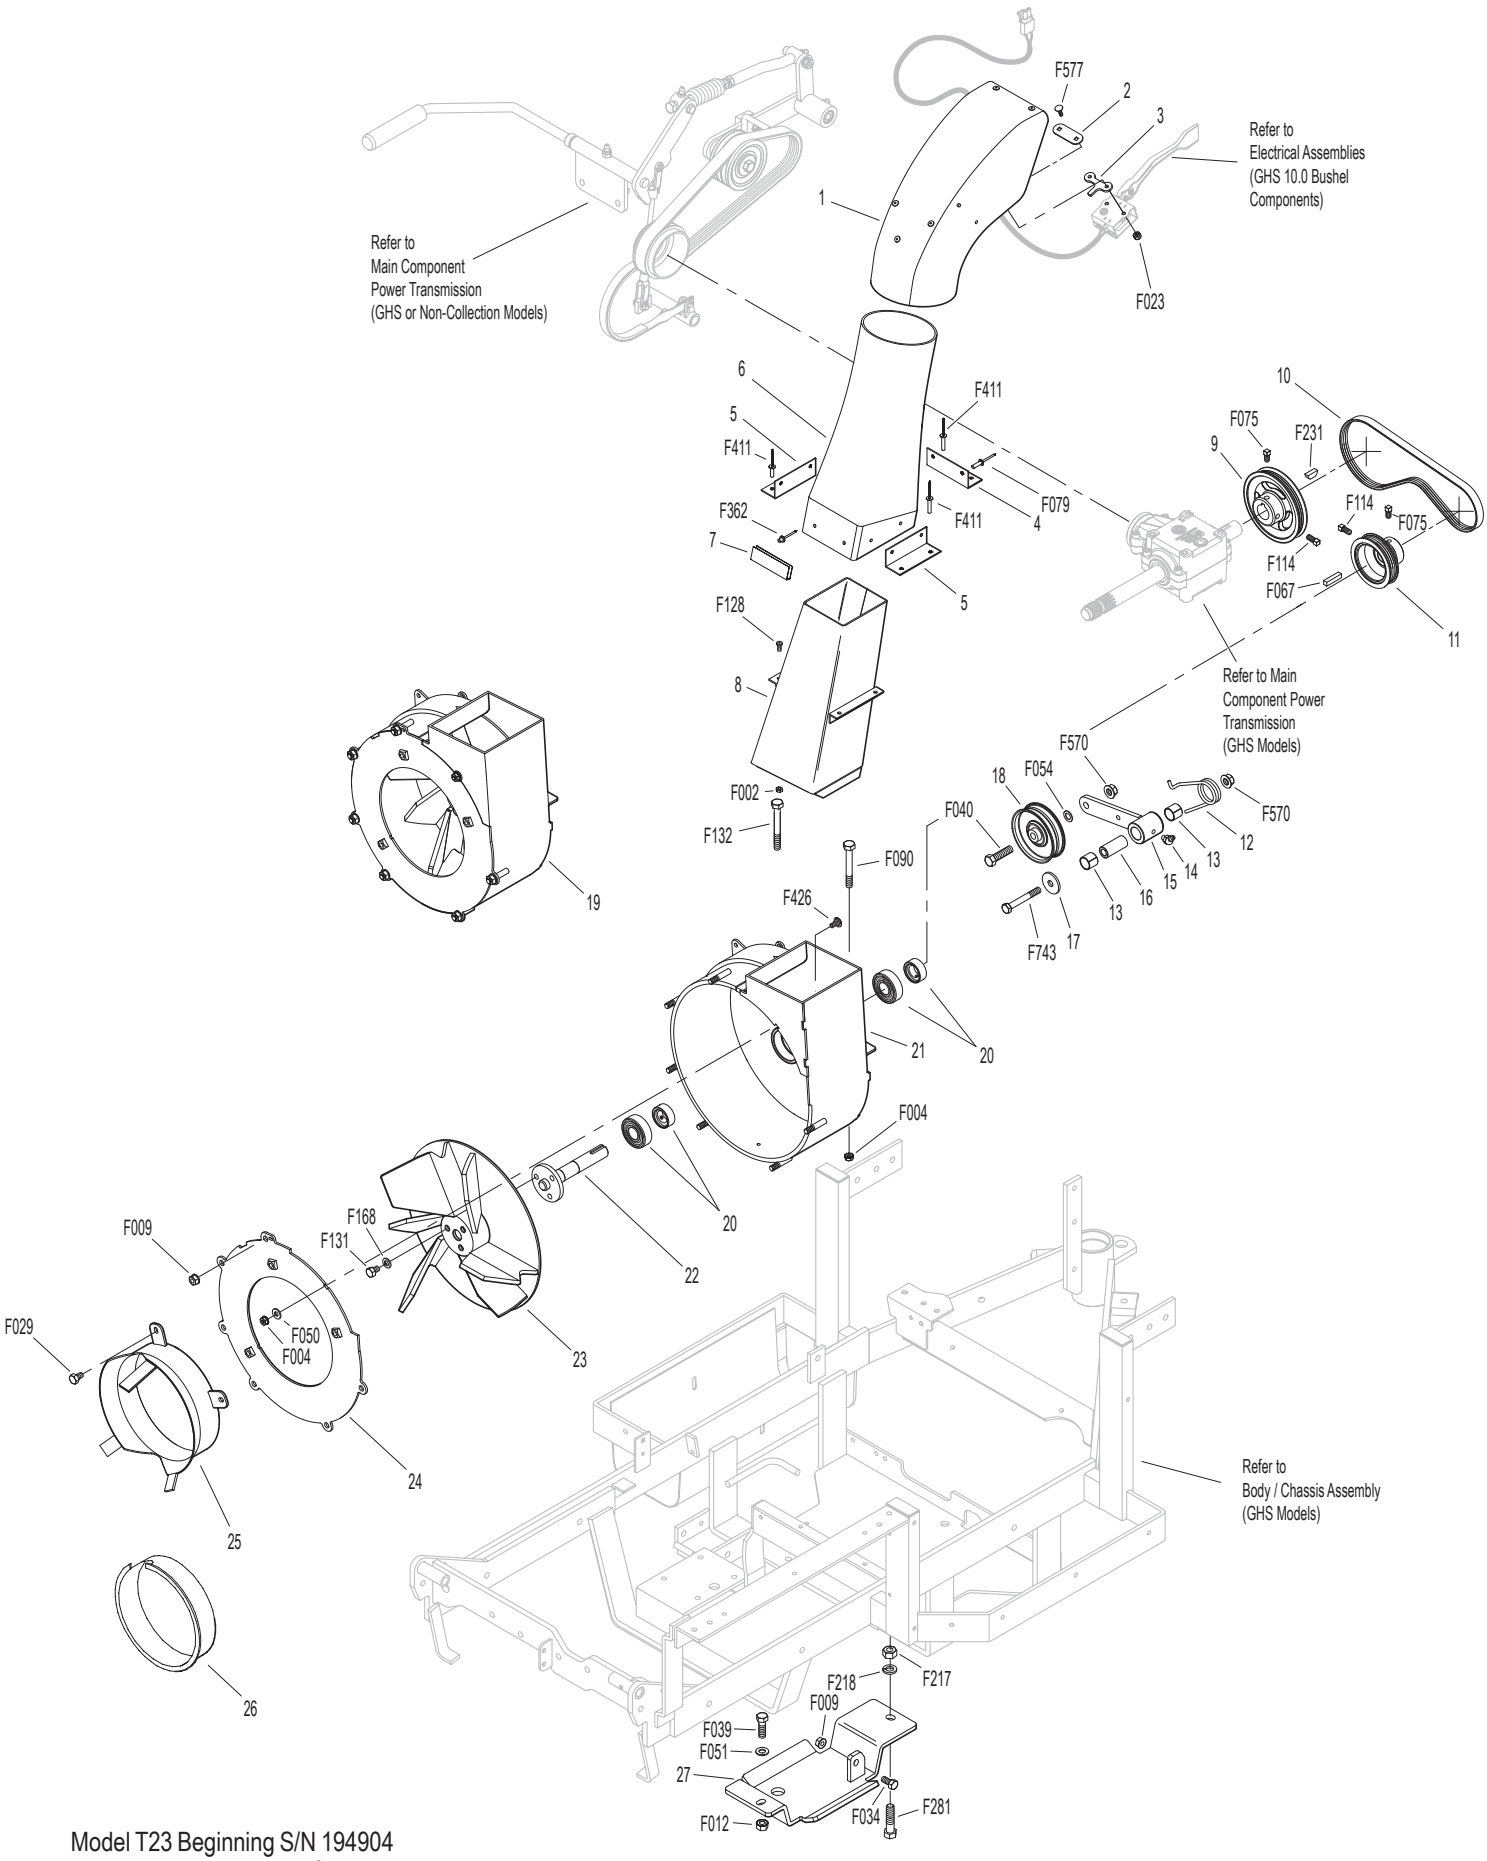
F577
2
3
Refer to
Electrical Assemblies
(GHS 10.0 Bushel
Components)
1
F023
Refer to
Main Component
Power Transmission
(GHS or Non-Collection Models)
6
F411
5
F411
F362
7
F411
4
F079
5
10
F075
F231
9
F114
F075
F114
F067
11
F128
8
F002
F132
Refer to Main
Component Power
Transmission
(GHS Models)
F570
18
F054
F040
F570
12
13
14
15
16
13
F743
17
19
F090
F426
21
20
20
F004
F009
F168
F131
F050
F004
22
23
F029
24
25
26
Refer to
Body / Chassis Assembly
(GHS Models)
F218
F217
F009
F039
F051
27
F012
F034
F281


GHS POWERFIL® ASSEMBLY (10.0)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
10.0 GHS Powerfil® Assembly			
1	5552	Ball Joint (1/4-28)	2
2	5554	Actuator Arm	1
3	5553-3	Bushing, Powerfil® Actuator	4
4	5553-1	Compression Spring (1/2 x 2)	2
5	5558-2	Powerfil® Actuator Rod	1
	5549	Actuator Rod Assembly (Includes Items # 1, 3-5, F003, F287 & F704)	*
6	5551-3	Bearing Cap, Powerfil®	1
7	5551-1	Pivot Bearing (#S3PP)	2
8	5518-6	Pivot, Delivery Spout	1
9	5517-2	Pivot Mount	1
10	5519-3	Motor Mount Nut (5/8-24)	*
11	5519-2	Motor Mount Washer	*
12	5976-2	Grommet (3/16 x 3/4)	1
13	5519-5	Actuator Motor (12V) (Includes Items # 10 & 11)	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fasteners			
	F003	1/4-28 Hex Nut	2
	F023	10-24 ESNA Nut	10
	F054	AN960616 Washer	2
	F085	3/16 Rivet Backup Washer	1
	F101	10-24 x 1-1/4 SHC Screw	1
	F109	1/8 x 5/8 Roll Pin	1
	F287	1/4-28 Keps Nut	2
	F612	10-24 x 5/8 Truss Head Torx	7
	F613	10-24 x 1/2 Truss Head Torx	2
	F704	1/4-28 x 6-1/2 Hex Bolt, Grade 5, Clear Zinc	1

* Service Part Only

GHS POWERFIL® ASSEMBLY (10.0)

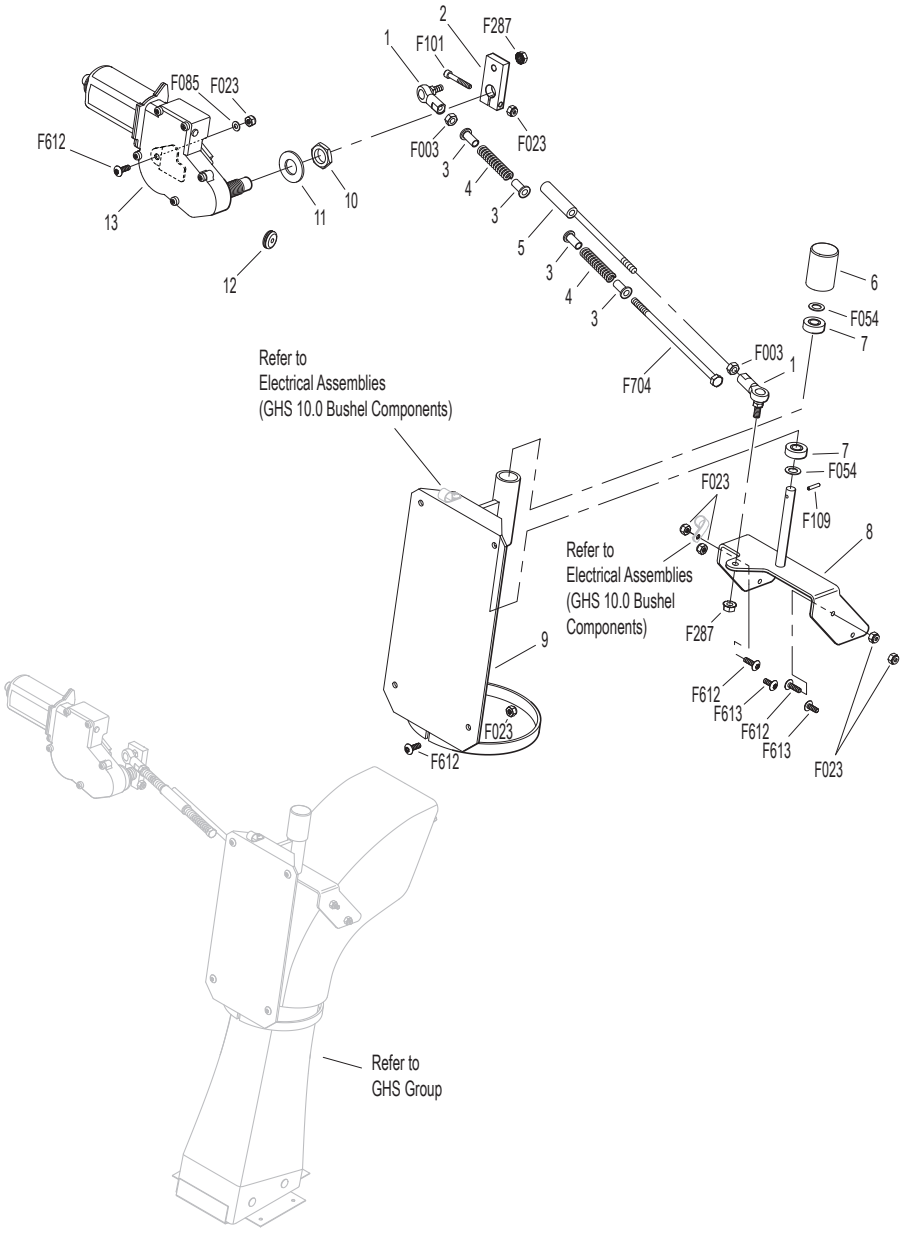


GHS 10.0 BUSHEL CATCHER ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Upper Baffle Screen Assembly (Removable)			
1	7512-8	Removable Screen (3/16 Hole) (Includes Items # 2, 5, F190 & F617)	1**
2	7506	Knob / Threaded Insert (10-24)	2
3	8606-3	Channel Top, LH	1
4	8606-2	Channel Bottom	2
5	7856-1	Edge Molding (26")	1
6	7507	Screen Seal (27-1/2)	1
7	7505	Mustache Spring	2
8	8606	C-Channel (10.0)	1
	8606-20	C-Channel With Spring (10.0) (Includes Items # 7, 8 & F340)	*
9	8606-4	Channel Top, RH	1
10.0 Exhaust Deflector Door Assembly			
10	8607-16	Upper Seal Support	1
11	8607-17	Upper Door Seal	1
12	8607-18	Backup Plate	1
13	8512-4	10.0 Catcher Box Door, Gray (Includes Items # 10-14, 16, 17, F085, F411, F649 & F654)	1
14	5583	Handle	1
15	8607-1	Door Mount, LH	1
16	8607-12	Upper Door Stiffener	1
17	8607-7	Lower Door Stiffener	1
18	8607-8	Door Guide	1
19	8607-2	Door Mount, RH	1
GHS 10.0 Bushel Catcher Assembly			
20	8608-13	Center Strap	1
21	8608-3	Upper Frame Doubler	2
22	8608-1	Outside Box Strap	2
23	8608-2	Lower Frame Doubler	2
24	8608-4	Center Frame Doubler	1
25	8608-11	Catcher Door Finger	1
26	8608-6	Catcher Mount	1
27	8610-8	Catcher Dump Flap	1
28	8610-3	Backing Plate, Dump Flap	1
29	7584	Reinforcing Strap	1
30	5103-5	Pivot Bushing Inner	2
31	5801-4	Decal Plate, Round	2
32	7620-3	Pivot Bushing (1/2 x 9/16)	2
33	8608-7	Hinge Plate, LH	1
34	5103-7	Outside Torsion Bushing	2
35	8607-4	Upper Arm	2
36	5214-12	Ball Joint (5/16-24)	4
37	5155-12	5/16 Ball Stud	2
38	5155-4	Gas Spring	2
39	8155-1	Gas Spring Cover, LH	1
40	8607-3	Lower Arm	2
41	5103-6	Pivot Bushing Outer	2
42	5155-13	10mm Ball Stud, 5/16-18 3/4 Thread	2
43	5523-6	Gas Spring Plate	2
44	8608-10	Box Support, Gas Spring	2
45	7532-1	Handle, Catcher Lift	2
46	5977-3	Grommet (9/16)	2
47	8117	Wire Harness Channel	1
48	8602-3	10.0 Catcher W/O Powerfil®, Gray (Includes Door)	*
	8602-4	10.0 Catcher W/Powerfil®, Gray (Includes Door)	*
	8610-5	10.0 Bushel Catcher Box, Gray	*
49	8607-9	Powerfil® Cover Plate	1
50	8155-2	Gas Spring Cover, RH	1
51	8608-8	Hinge Plate, RH	1
52	8608-9	Torsion Bar	1
5598-2 Optional Dump Bag (Not Shown) May be ordered as an option. Contact your Walker dealer.			
Fasteners			
	F020	5/16-18 ESNA Nut	2
	F023	10-24 ESNA Nut	29
	F024	5/16-24 Jam Nut	4
	F029	1/4-20 x 1/2 Hex Bolt	8
	F032	1/4-20 x 3/4 Hex Bolt	2
	F049	5/16 SAE Washer	8
	F050	1/4 SAE Washer	2
	F068	1/8 x 1 Cotter Pin	2
	F079	A/A66D Aluminum Pop Rivet	5
	F085	3/16 Rivet Backup Washer	6
	F094	8-32 x 1/2 PTHMS	6
	F190	#10 Internal Star Lock Washer	2
	F195	1/4-20 x 3/4 PPHMS, SS	4
	F196	1/4-20 x 1 PPHMS, SS	4
	F208	5/16-18 x 2-1/4 Hex Bolt	2
	F230	1/4-20 x 1-1/4 PPHMS, SS	4
	F242	1/4-20 x 7/8 PPHMS, SS	8
	F340	Rivet, Aluminum	4
	F351	Aluminum Pop Rivet	6
	F360	1/4-20 x 3/8 Hex Bolt	2
	F390	1/4-20 x 7/8 Carriage Bolt	4
	F411	3/16 Bulbex Rivet	21
	F456	5/16-18 x 3/4 SBH Cap Screw, SS	4
	F524	3/16 x 3/8 Aluminum Rivet, Black	8
	F540	1/4-20 x 1-3/4 PPHMS, SS	1
	F551	5/16-18 Flange Top Lock Nut	4
	F568	10-24 Flange Top Lock Nut	1
	F569	1/4-20 Flange Top Lock Nut	27
	F612	10-24 x 5/8 Truss Head Torx	8
	F613	10-24 x 1/2 Truss Head Torx	11
	F617	10-24 x 3/8 Truss Head Torx	4
	F618	10-24 x 3/4 Truss Head Torx	6
	F649	3/16 x .510/.625 Grip Range Rivet, SS	4
	F654	3/16 x .510/.625 Grip Range Rivet	7

* Service Part Only

** This screen can be replaced by P/N 7512-11 Removable Screen (3/4" holes) for improved air flow performance in wet conditions.

GHS 10.0 BUSHEL CATCHER ASSEMBLY

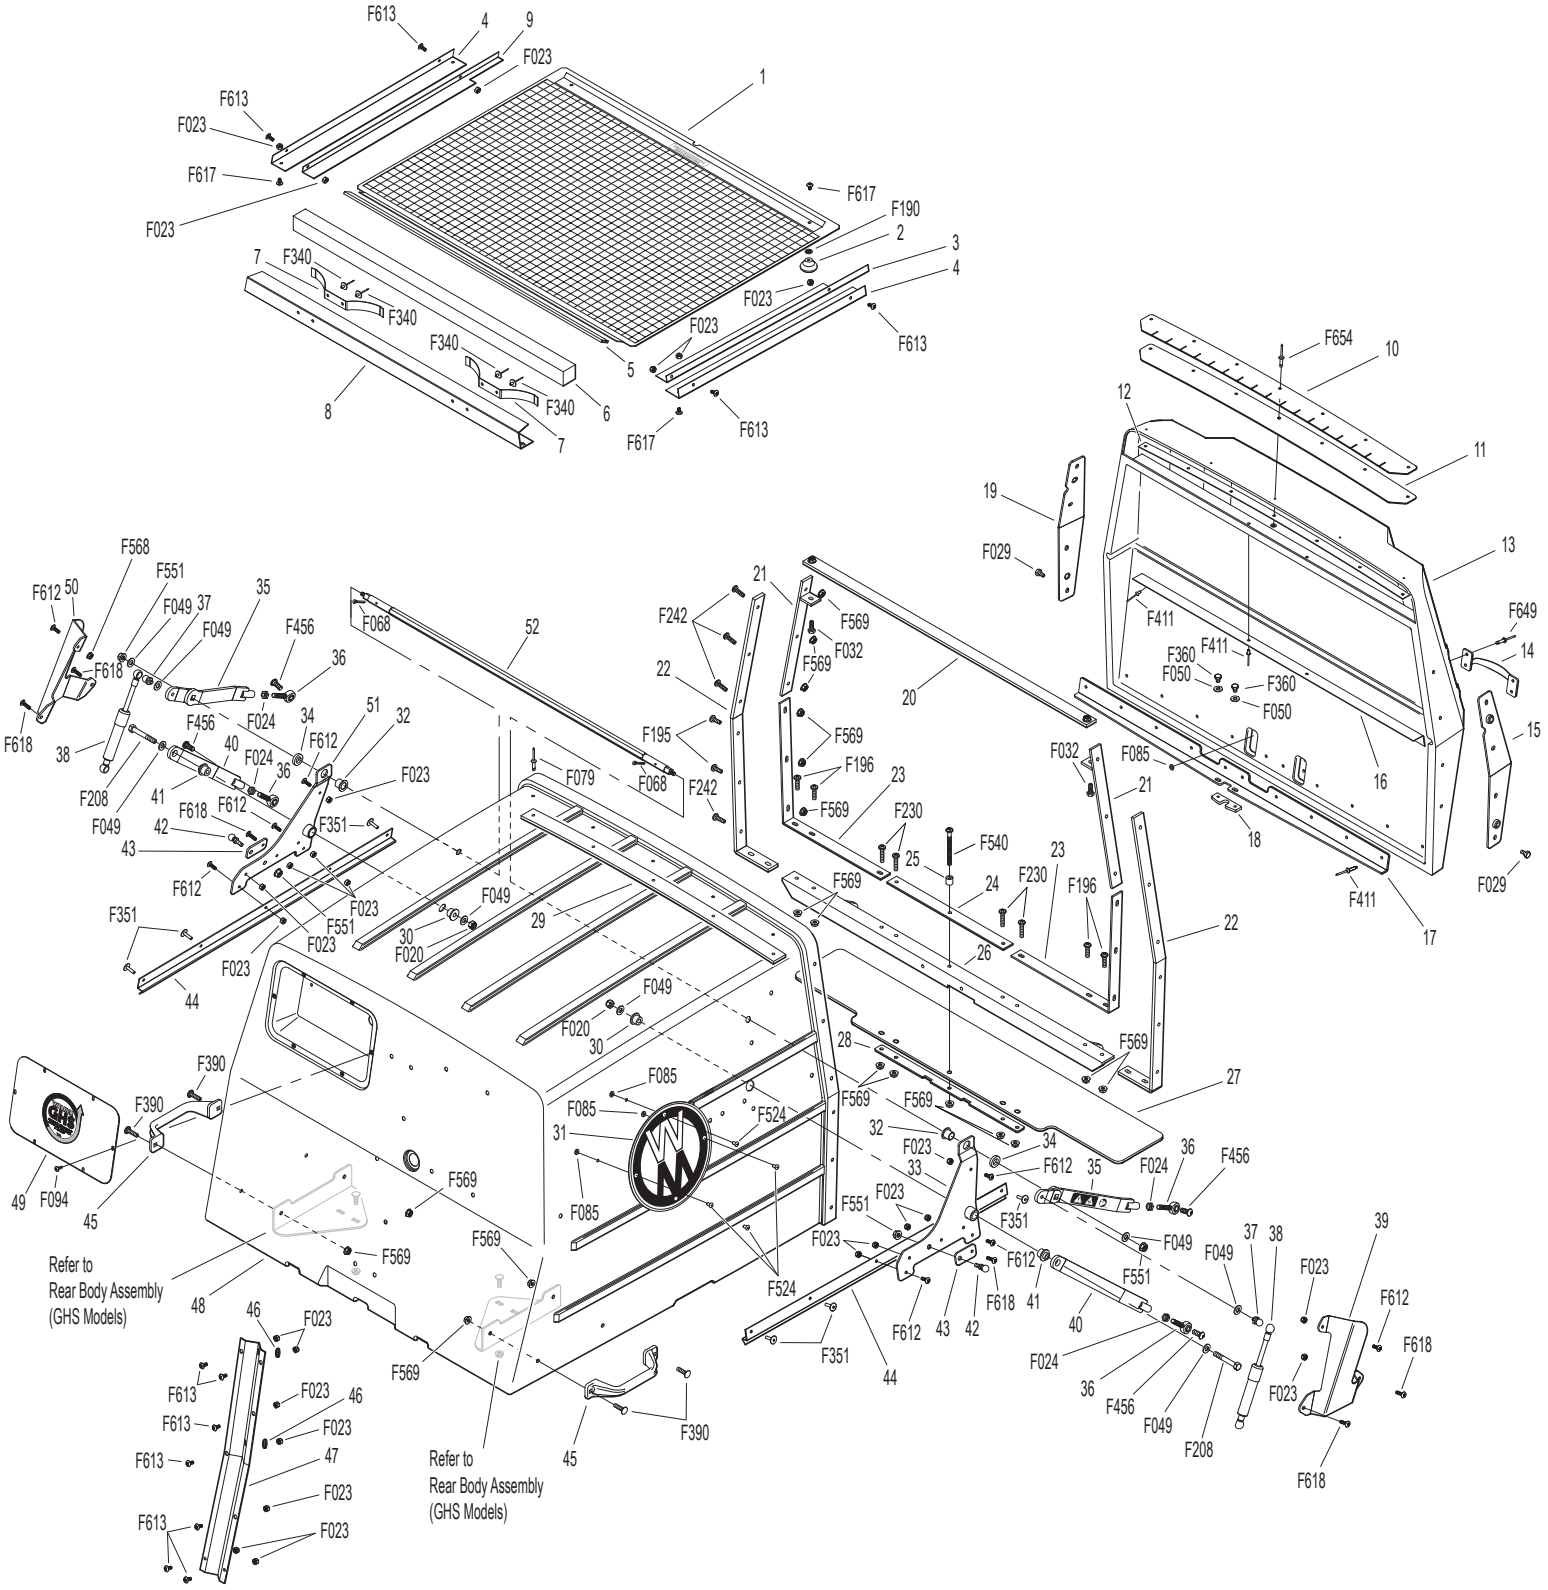


INSTRUMENT PANEL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Instrument Panel Assembly			
1	7307-2	Instrument Panel Cover (Optional)	**
	8306-4	Instrument Panel Assembly (Includes Items # 2-11, 13, 19-21, F228, F250 & F251)	1
2	7307-7	Panel Frame	1
3	8820-5	Panel Faceplate W/Decal	1
4	7386	Panel Gasket	1
5	6941-9	Relay Switch 30/40 Amp	2
6	7941-3	Boot, Circuit Breaker	1
7	7941-5	Circuit Breaker (7 Amp)	1
8	5995-2	Switch Boot	1
9	5995	Toggle Switch (Off-On)	1
10	8997	Voltmeter Gauge	1
11	8990-1	Hourmeter (Global)	1
12	5975-1	Cable Tie (18# x 3-3/4")	2
13	8945-3	Wire Harness, Instrument Panel	1
14	7307-16	Lining, Panel Box (1/8)	1
15	7391	Panel Box Mount Plate	2
16	7977-3	Grommet (1/8 x 1-1/8)	1
17	7307-1	Shock Mount (1.0 x .25)	3
18	8385	Panel Box W/Graphic	1
19	8536	Warning Horn	1
20	8960-15	Ignition Switch (With Keys) (Includes Items # 22, 23 & F349)	1
21	8996-9	Red Indicator Light Assembly	2
22	7854	Plastic Tip, Red	1
23	8960-3	Key Set W/Umbrella	*
Fasteners			
	F004	1/4-20 Keps Nut	3
	F050	1/4 SAE Washer	3
	F228	#6 x 5/8 PPHSMS, SS	8
	F238	J Clip, Instrument Panel	8
	F250	6-32 x 1/2 PPHMS	2
	F251	6-32 Keps Nut	2
	F349	Washer .835 ID 1.122 OD, SS	1
	F350	1/4-20 LP Nylock	3

* Service Part Only

** May be ordered as an option. Contact your Walker dealer.

INSTRUMENT PANEL ASSEMBLY

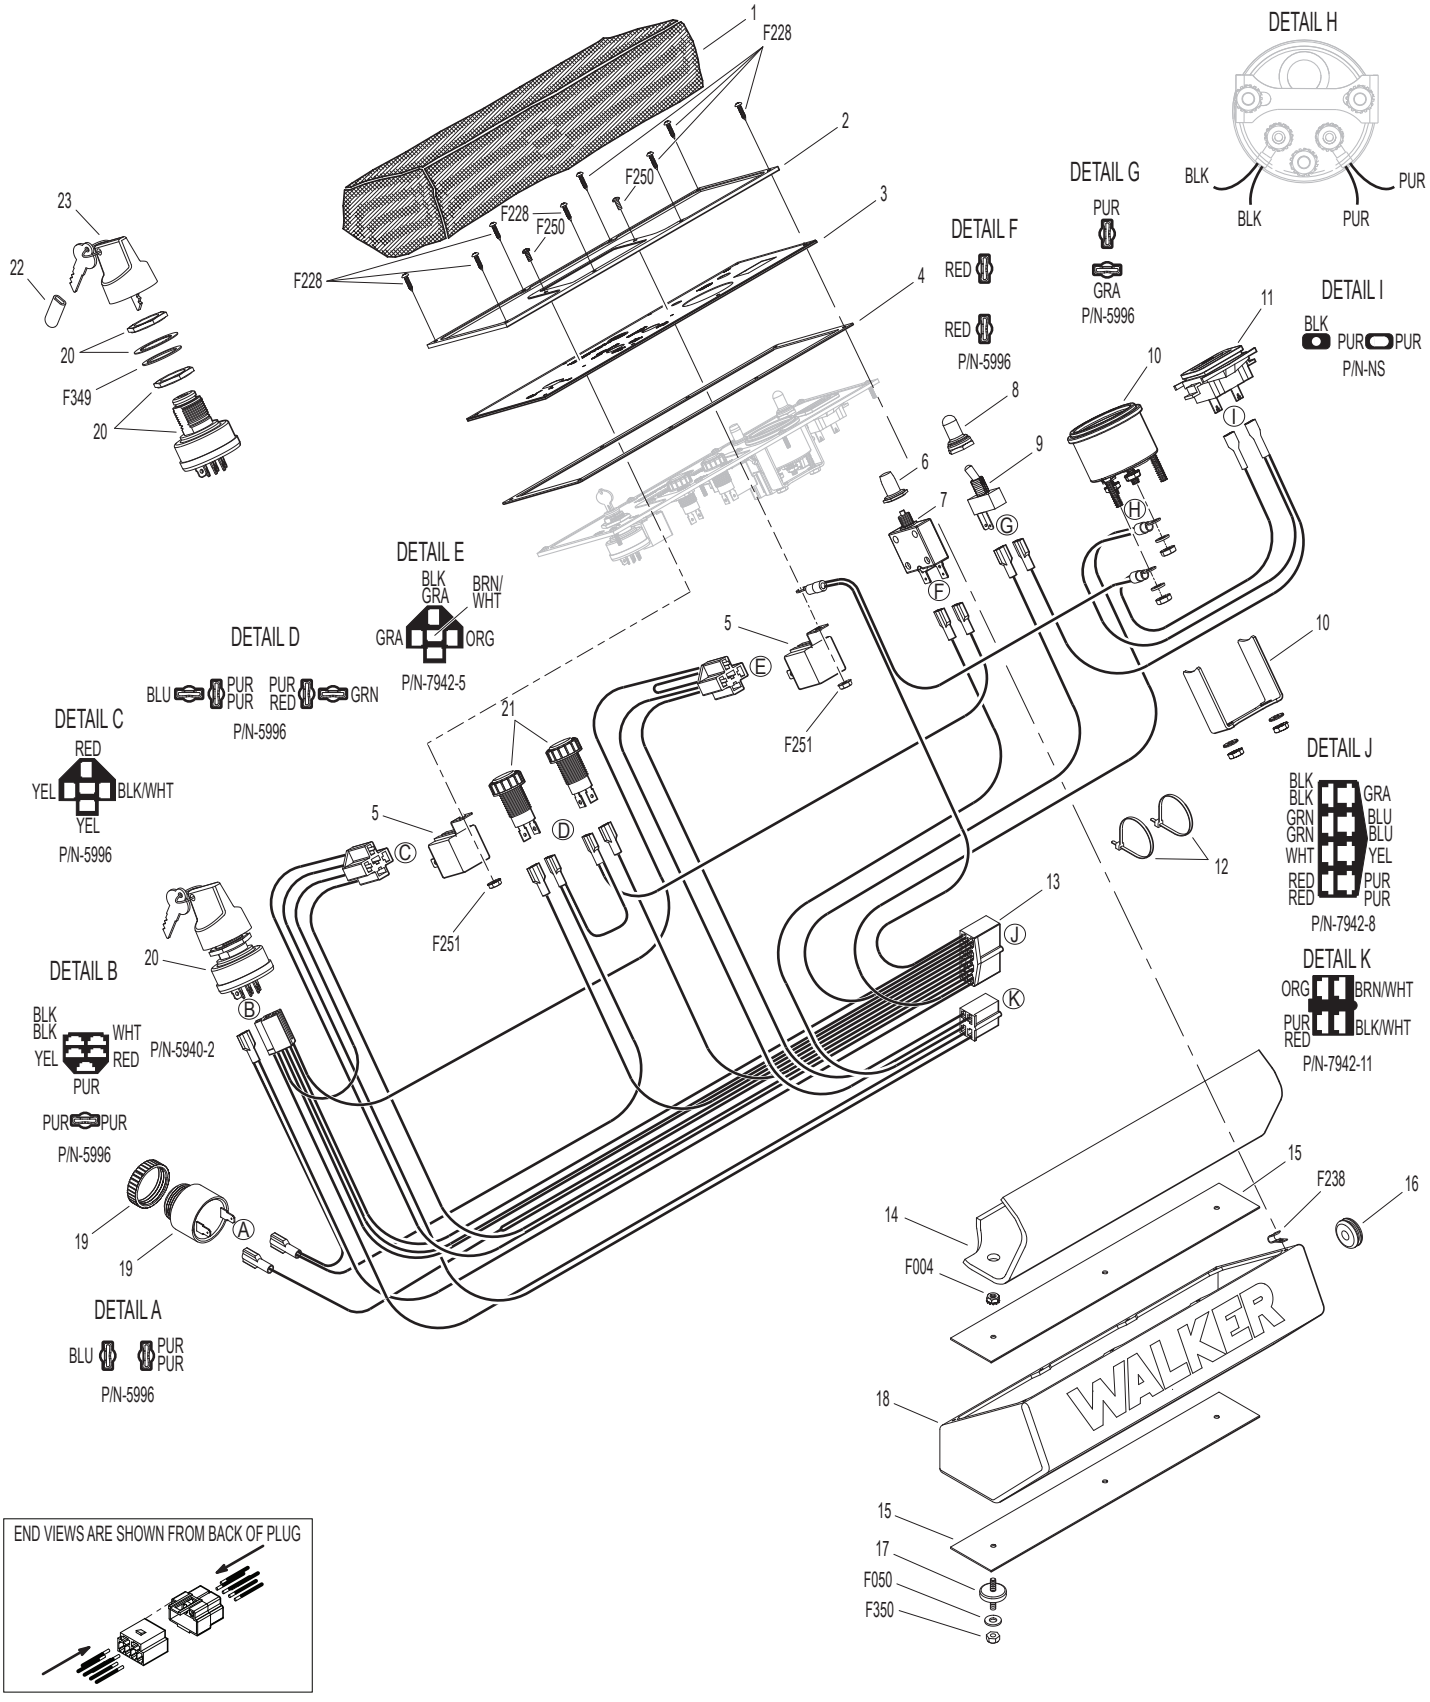


ELECTRICAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Harness Assembly			
1	5975-3	Cable Tie (50# x 7")	7
2	5942-4	Safety Switch (NO)	1
3	5833	Cable Clamp (1/4)	1
4	8940-26	Wire Harness	1
5	5832	Cable Clamp (1/2)	5
6	8012-6	Regulator Adapter Harness	1
7	7833-2	Cable Clamp (1 x 1/4)	2
8	6941-9	Relay Switch 30/40 Amp	1
9	7948-6	Time Delay Module (.5 Second Delay)	1
10	7948-5	Time Delay Harness	1
11	7941-10	Circuit Breaker Cap	1
12	8941	Circuit Breaker (30 Amp) Auto Reset / Sealed	1
13	8943	Battery Lead Wire (+)	1
14	5975-1	Cable Tie (18# x 3-3/4")	3
15	5942-16	Safety Switch (NO), Delta WP	2
16	6104-13	Adapter Harness	1
17	5977-6	Grommet (1 x 1-1/4)	1
18	6105-3	Harness Clip	1
19	6104-11	Seat Switch (NO)	1
Battery Assembly			
20	6923	Battery Cable (-)	1
21	5933	Battery Terminal Insul., Red (+)	1
22	5844-3	Battery Hold-Down Bar	1
23	5839	Hook Bolt	2
24	6390-6	Battery Pan	1
25	7910-3	Battery (12V/350A CCA)	1
26	5932	Battery Terminal Insul., Black (-)	1
27	7834-2	Wire Saddle (2 Wires)	1

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fasteners			
	F002	10-24 Keps Nut	5
	F004	1/4-20 Keps Nut	4
	F009	5/16-18 Whiz Locknut	1
	F019	1/4-20 ESNA Wing Nut	2
	F023	10-24 ESNA Nut	1
	F025	10-24 x 3/8 PPHMS	2
	F026	10-24 x 1/2 PPHMS	1
	F028	10-24 x 3/4 PPHMS	1
	F031	1/4-20 x 5/8 Hex Bolt	2
	F032	1/4-20 x 3/4 Hex Bolt	2
	F050	1/4 SAE Washer	2
	F061	1/4 Internal Star Lock Washer	1
	F079	A/A66D Aluminum Pop Rivet	4
	F085	3/16 Rivet Backup Washer	1
	F086	#10 SAE Washer	1
	F093	5/16-18 x 1 Hex Bolt	1
	F124	10-32 x 3/8 Taptite Machine Screw	2
	F129	10-24 x 1/2 PTHMS	1
	F182	1/4 x 5/8 x 1/8 Washer	2
	F232	10-32 Keps Nut	2
	F284	M6 x 1.0 x 8 SCH Screw	1
	F505	6-32 x 7/8 Hex Trim MS, SS	4
	F506	6-32 Nylock Nut	4
	F577	10-24 x 5/8 Carriage Bolt	1

ELECTRICAL ASSEMBLY

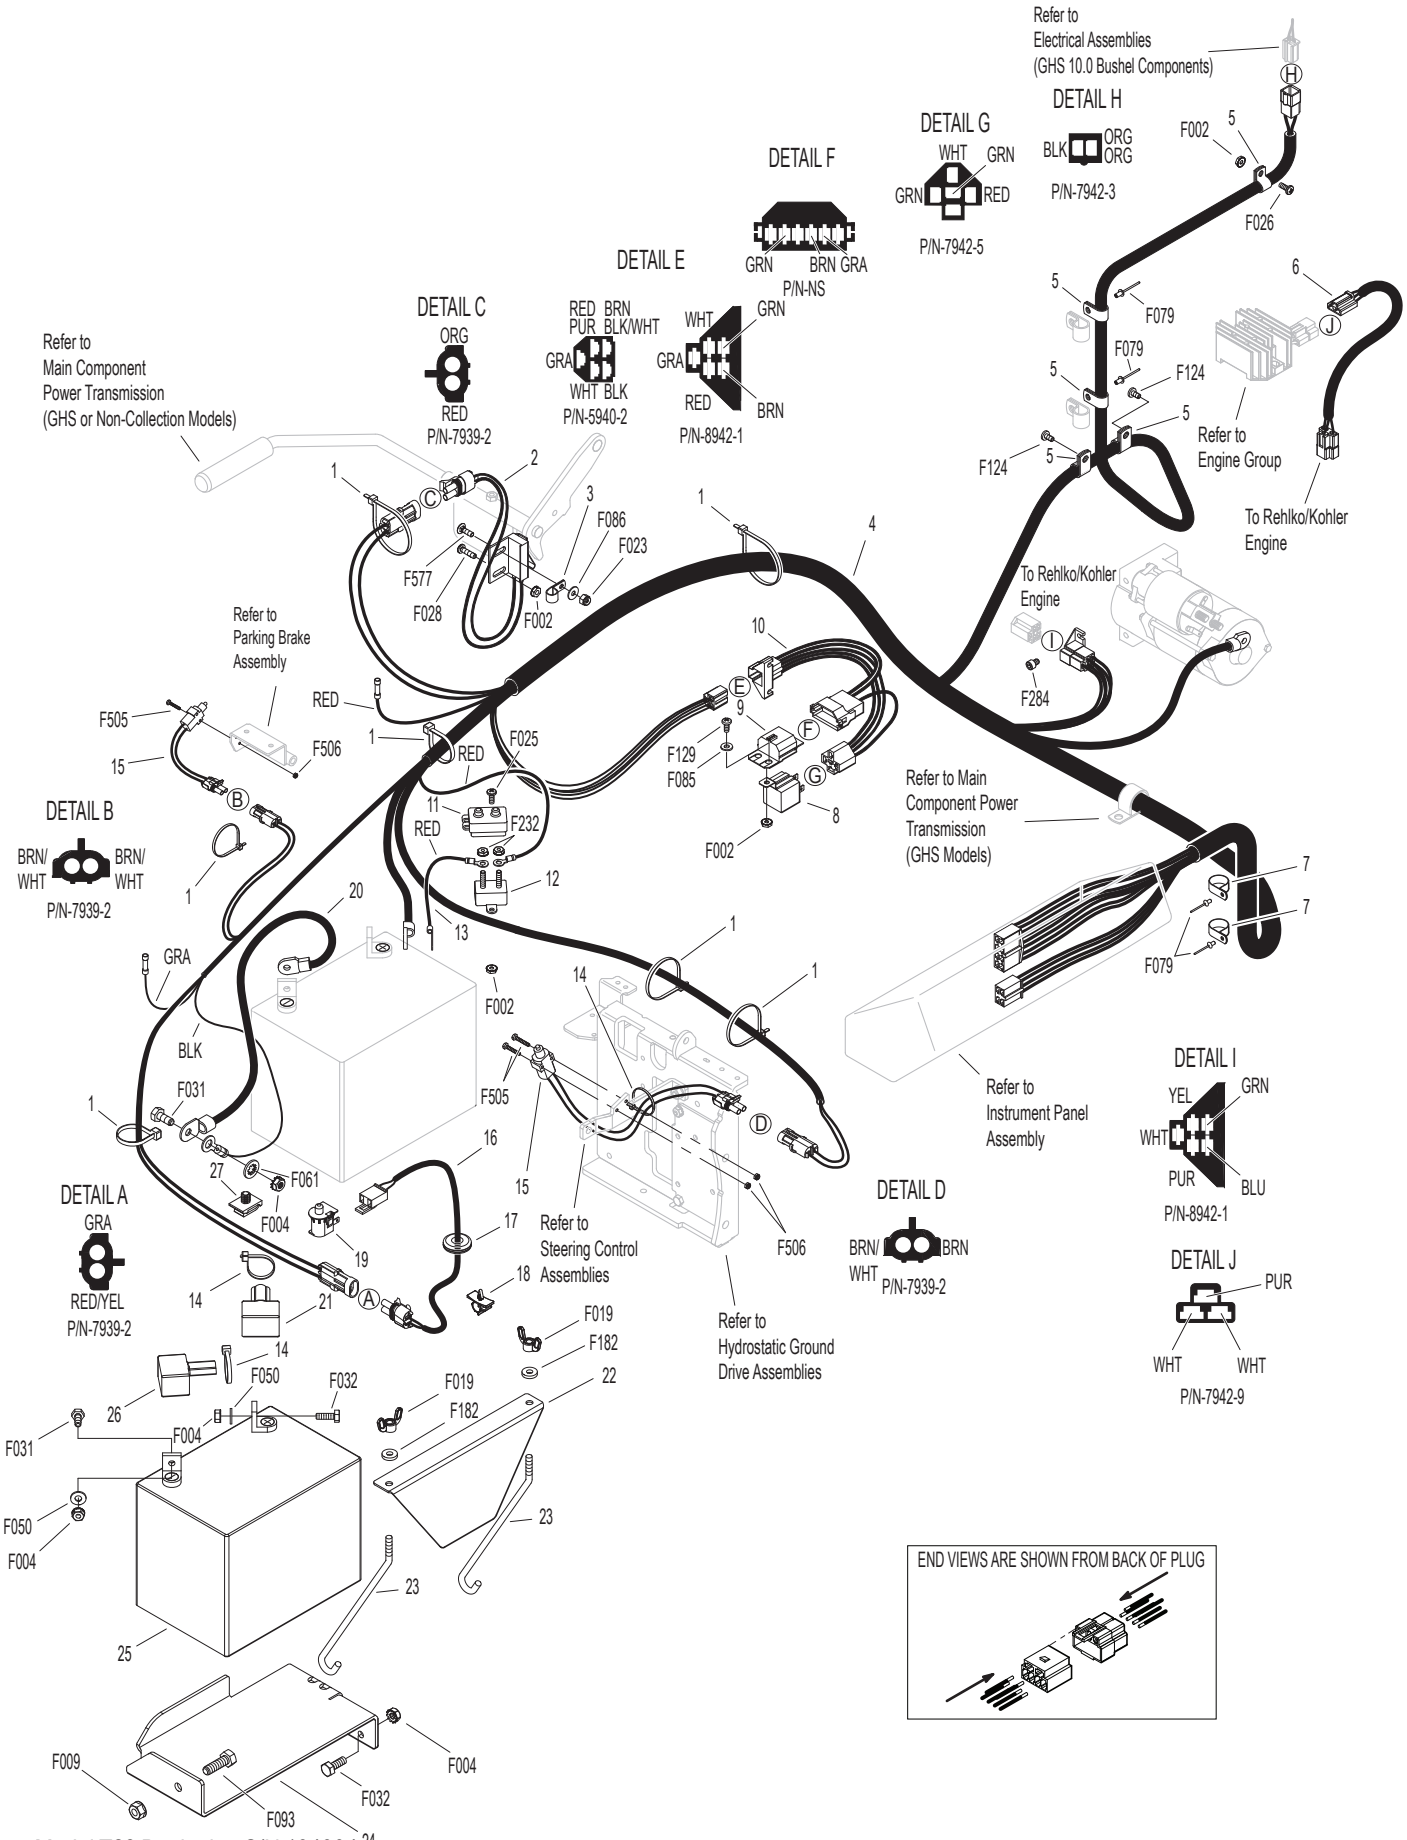


ELECTRICAL ASSEMBLIES (GHS 10.0 BUSHEL COMPONENTS)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Horn & Harness Channel Assemblies			
1	5977-2	Grommet, Cut (1/8 x 3/8)	2
2	5975-1	Cable Tie (18# x 3-3/4")	1
3	5975-3	Cable Tie (50# x 7")	1
4	5536-2	Horn, Full Signal	*
Harness & Grass-Pak® Switch Assemblies			
5	8950-4	Powerfil® Wire Harness (7.0 / 10.0)	1
6	5594-7	Grass-Pak® Vane	1
7	5592-40	Grass-Pak® Switch Assembly	1
8	5833	Cable Clamp (1/4)	2

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Fasteners			
	F002	10-24 Keps Nut	1
	F023	10-24 ESNA Nut	3
	F025	10-24 x 3/8 PPHMS	1
	F508	4-40 Keps Nut, SS	2
	F612	10-24 x 5/8 Truss Head Torx	1
	F613	10-24 x 1/2 Truss Head Torx	2
	F712	4-40 x 3/8 Hex Head, SS	2
	F713	Washer #4, SS	2

* Service Part Only

ELECTRICAL ASSEMBLIES (GHS 10.0 BUSHEL COMPONENTS)

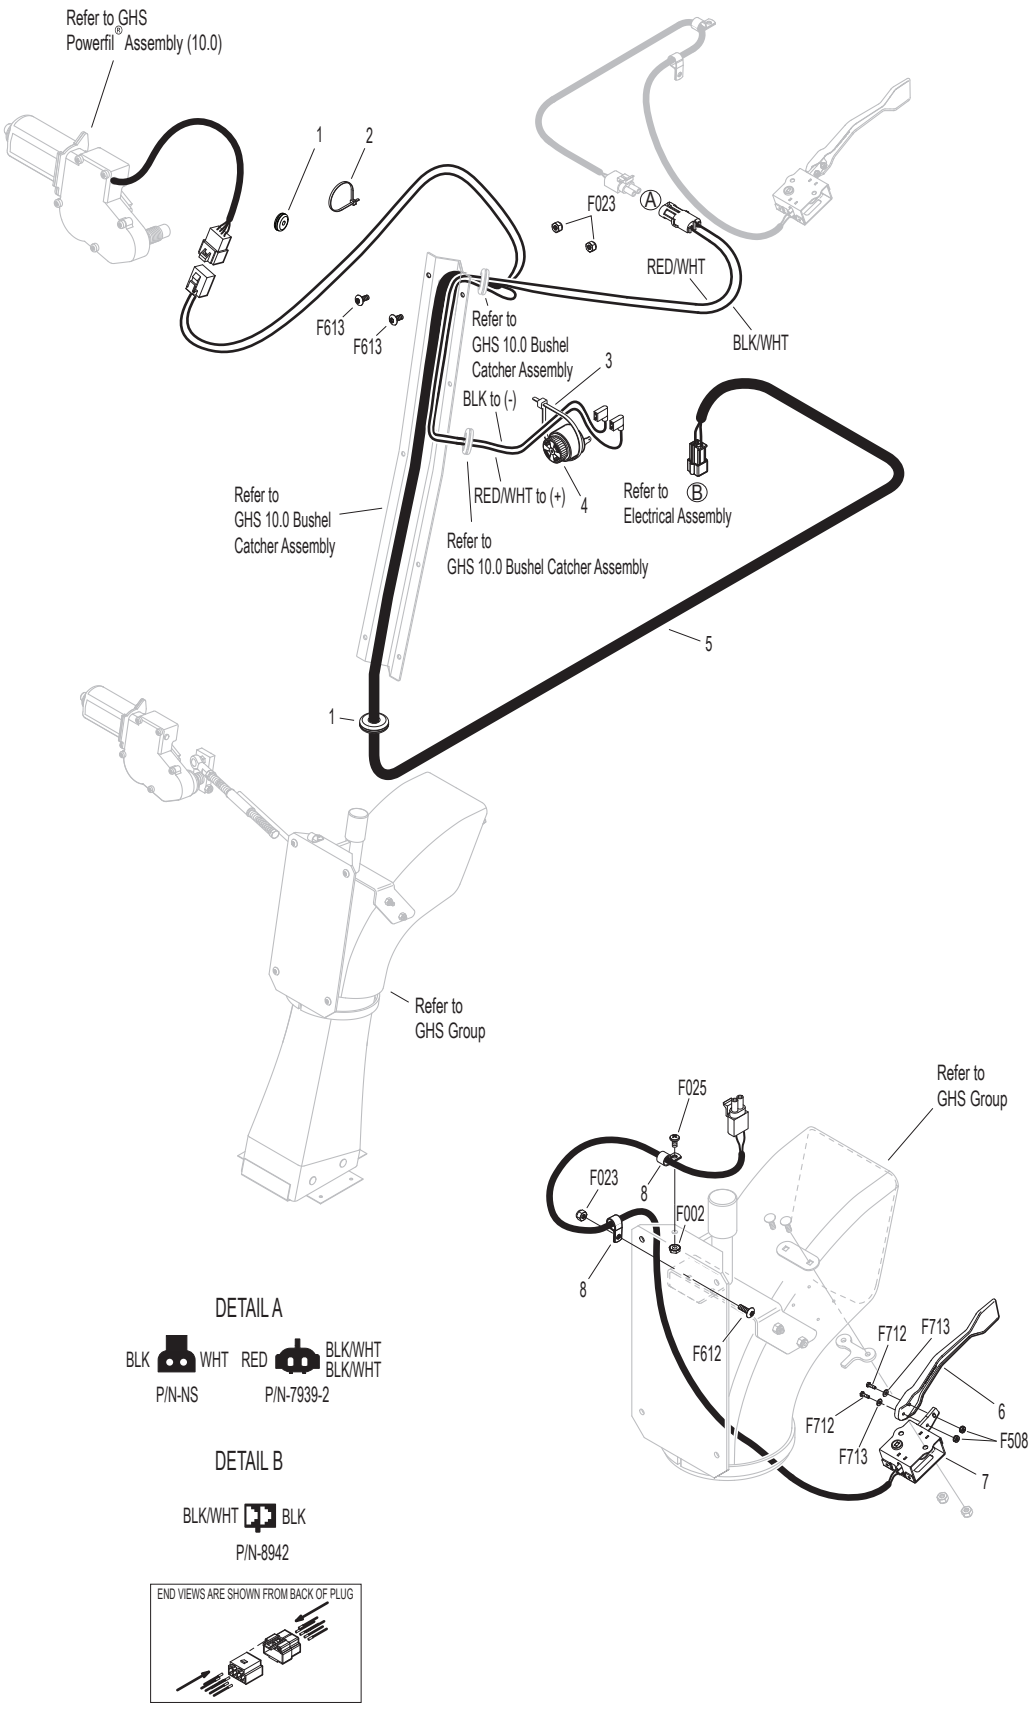

LUBRICATION POINTS


ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
Lubrication Points			
1	Steering Lever Pivot	Grease	4
2	Body Hinge Point	Oil	2
3	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1
4	FSC Actuator Rod Pivot Pins	Oil	2
5	(FSC) Friction Body Pivot	Grease	1
6	FSC Lever Pivot	Grease	1
7	Deck Support Arm Pivot	Grease	2
8	Gear Axle	Oil**	2
9	Universal Joint Tube Assembly	Grease*	1
10	Parking Brake Lever Pivot	Grease	1
11	Universal Joint Quick Connect Spline (Grease Slide Area)	Grease	1
12	Hydrostatic Drive / Oil Reservoir	Oil**	3
13	Belt Tightener Pivot, Jackshaft Drive	Grease	1
14	PTO Clutch Lever Pivot	Grease	1
15	Clutch Actuator Push Rod	Grease	2
16	Belt Tightener Pivot, PTO Clutch	Grease	1
17	Brake Actuator Rod and Brake Band Pivot Pins (Clevis)	Oil	3
18	Brake Actuator Pivot	Grease	1
19	Throttle Control Cable Ends	Oil	2
20	Catcher Hinge Point	Oil	2
21	Rear Wheel Bearing	Grease	2
22	Choke Control Cable Ends	Oil	2
23	Engine Dipstick / Oil Fill	Oil**	1
24	Belt Tightener Pivot, Blower Drive (GHS Model Only)	Grease	1
25	Belt Tightener Pivot, Ground Drive	Grease	1
26	PTO Gearbox Dipstick	Oil**	1
27	Choke Control Pivot	Oil	1
28	Throttle Control Pivot	Oil	1

* Grease every 25 hours.


** Refer to Model T23 **Operator's Manual** for procedure for checking and changing oil in Engine Crankcase, Hydrostatic Transmissions and Gear Axles.

NOTE: See Model T23 **Operator's Manual** (P/N 8000-61) for proper lubrication intervals.

LUBRICATION POINTS

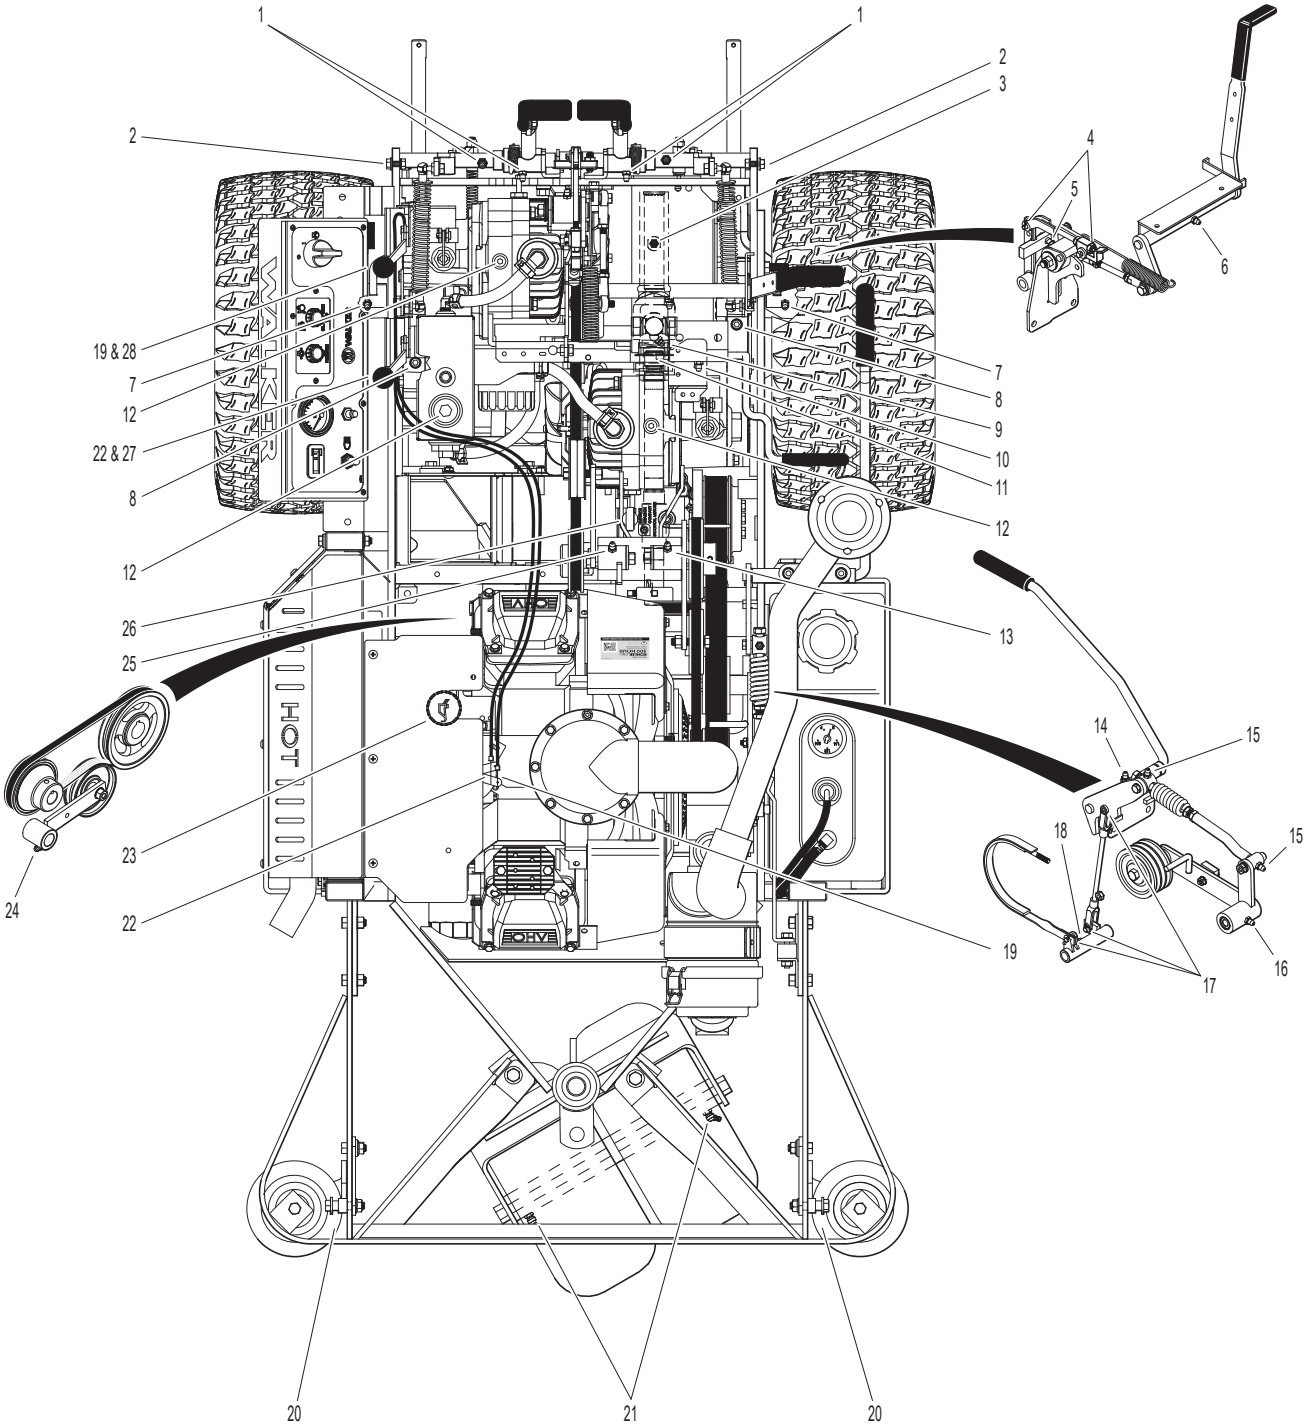

WIRING SCHEMATIC

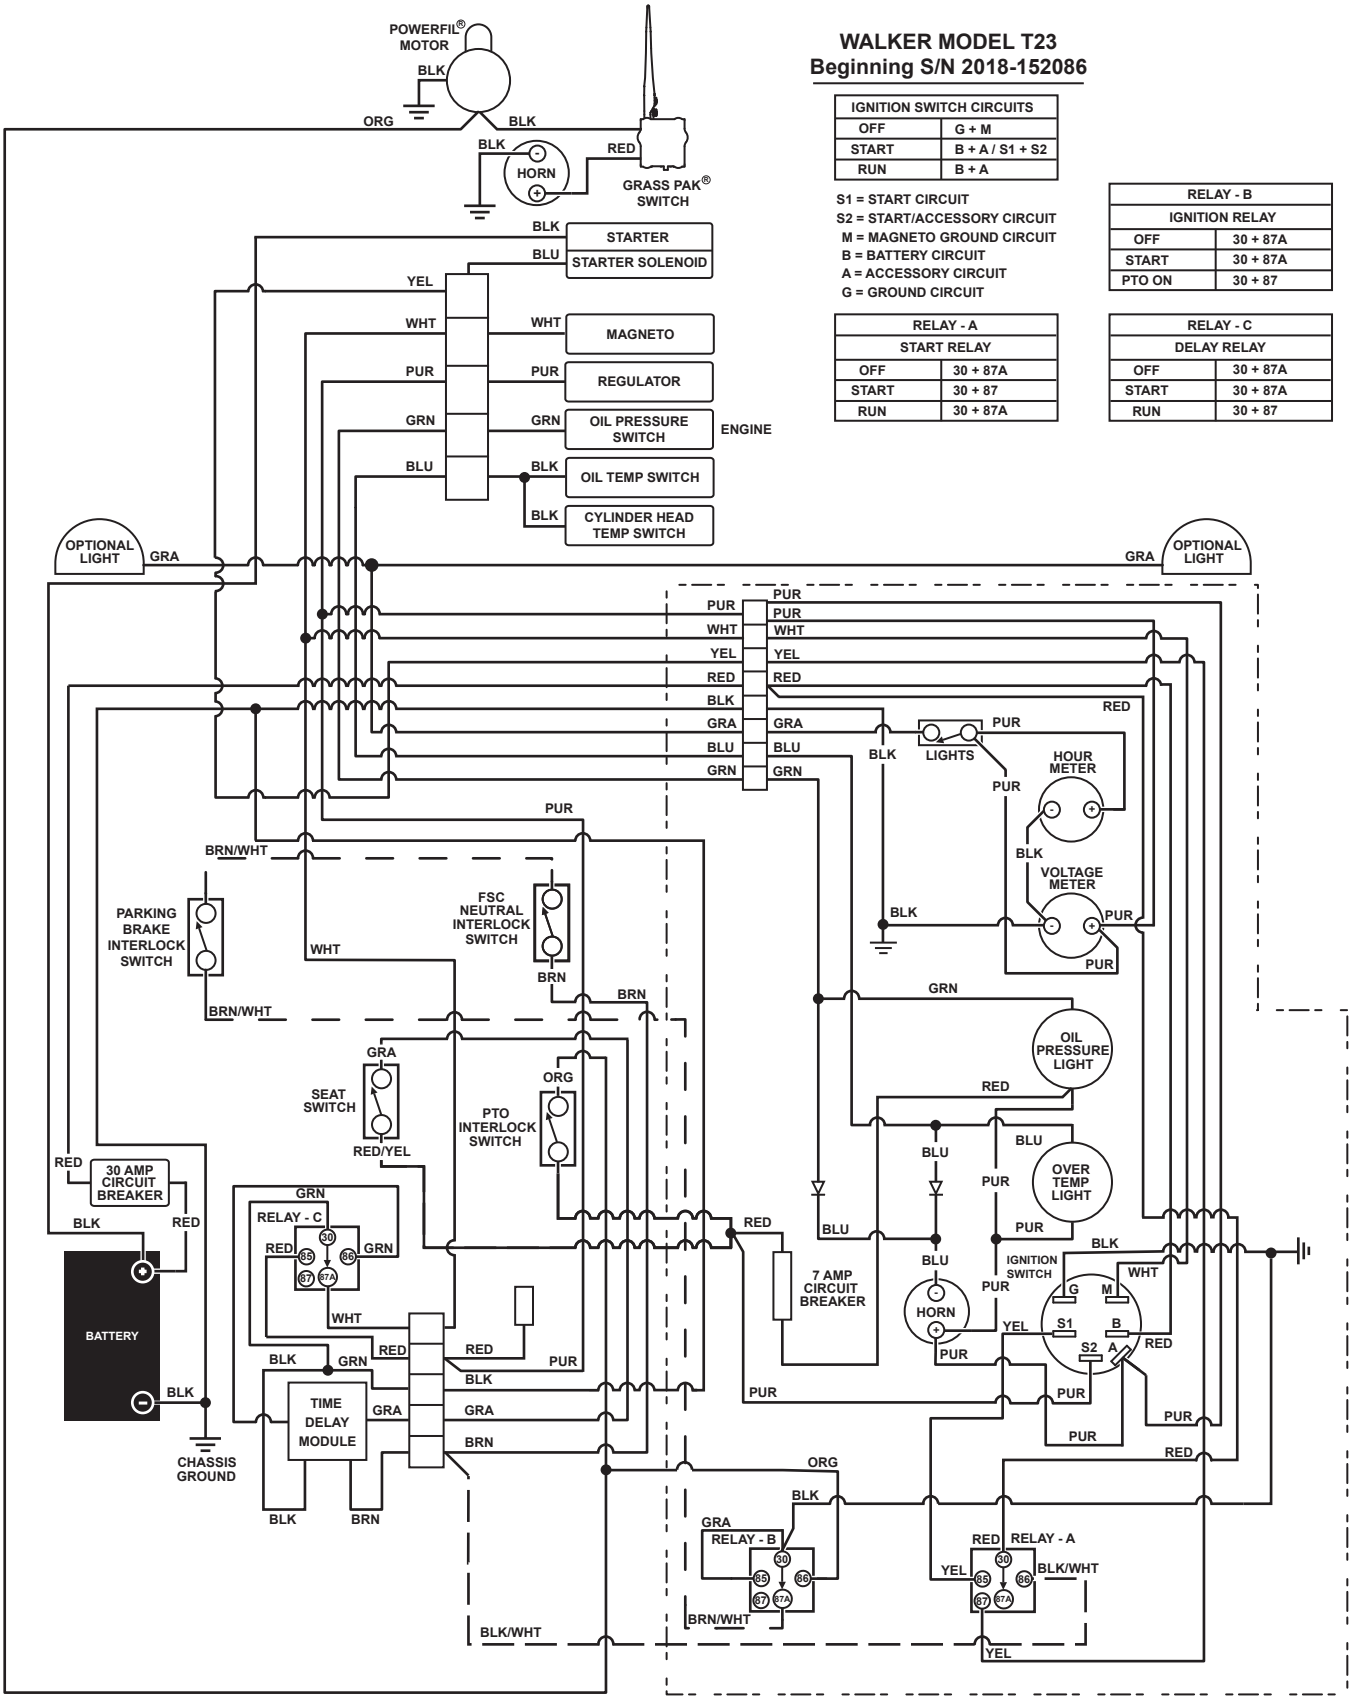

MAINTENANCE AND SERVICE RECORD SHEET

DATE	SERVICE ITEM	ENGINE HOURS

MAINTENANCE AND SERVICE RECORD SHEET

DATE	SERVICE ITEM	ENGINE HOURS

LIMITED WARRANTY
FOR
WALKER
COMMERCIAL RIDER MOWER

1. WHAT THIS WARRANTY COVERS, AND FOR HOW LONG:

Walker Manufacturing company will, at its option, repair or replace, without charge, any part covered by this warranty which is found to be defective in material and/or workmanship within two (2) years* after date of sale to the original retail purchaser unless the product is used for rental purposes, in which case this warranty is limited to ninety (90) days. At Walker's request, customer will make the defective part available for inspection by Walker and/or return the defective part to Walker, transportation charges prepaid. All parts and components of the Walker Mower are covered by this warranty **except** the following components which are warranted separately by their respective manufacturers:

Rehlko/Kohler Engine

The available warranties covering these items are furnished with each mower. Walker does not assume any warranty obligation, liability or modification for these items, which are covered exclusively by the stated warranty of the respective manufacturers noted above.

The Fulbat battery comes with a one (1) year warranty from the date of sale to the original retail purchaser. Warranty claims for the battery are administered through Walker Manufacturing.

★ Extended warranties are offered for the following powertrain components:

- A three (3) year unlimited hour warranty is offered for the Walker P/N 6200-9 Gear Axle Assembly.
- A three (3) year or 3000 hour (whichever comes first) warranty is offered for Model 7 Hydrostatic transmissions; covers full cost of replacement up to 1000 hours of use, and after 1000 hours warranty coverage is prorated against 3000 hours. If the transmissions are serviced at the recommended intervals by an authorized Walker Dealer using only Walker Model 7 Hydro Oil (P/N 6450-21) or Mobil SHC™ 630 oil (P/N 6450-20) and Walker filters (P/N 5024-13), the warranty will be extended to three (3) years, full replacement coverage, and unlimited hours.

2. WHAT THIS WARRANTY DOES NOT COVER:

A. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, alterations, or failure to follow the instructions contained in the Owner's Manual for operation and maintenance.

B. The customer shall pay any charges for making service calls and/or for transporting the mower to and from the place where the inspection and/or warranty work is performed.

3. HOW TO OBTAIN SERVICE UNDER THIS WARRANTY:

Warranty service can be arranged by contacting the dealer where you purchased the mower or by contacting Walker Manufacturing Company, 5925 East Harmony Road, Ft. Collins, CO 80528. Proof of the date of purchase may be required to verify warranty coverage.


4. WARRANTY LIMITATION:

A. **THERE IS NO OTHER EXPRESS WARRANTY. ANY WARRANTY THAT MAY BE IMPLIED FROM THIS PURCHASE INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED TO THE DURATION OF THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

B. **WALKER WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THE MOWER.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.

C. Only the warranty expressed in this limited warranty shall apply and no dealer, distributor, or individual is authorized to amend, modify, or extend this warranty in any way. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by Walker, and should not be relied upon.

D. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

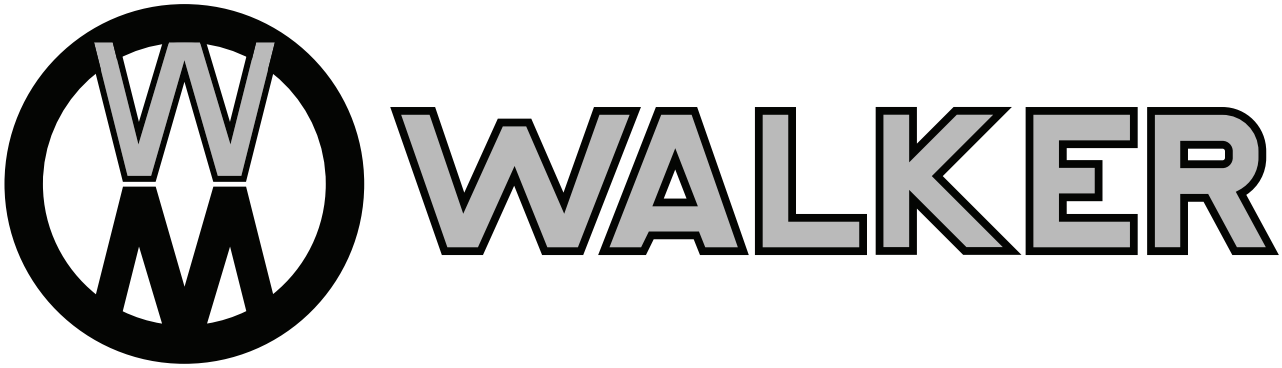

WALKER MFG. CO. • 5925 E. HARMONY ROAD, FORT COLLINS, CO 80528 • (970) 221-5614
FORM NO. 102926 PRINTED IN USA www.walker.com ©2026 WALKER MFG. CO